


Agile+ Double Sided Desk

Assembly Instructions

Agile+ Double Sided Desk

Components List

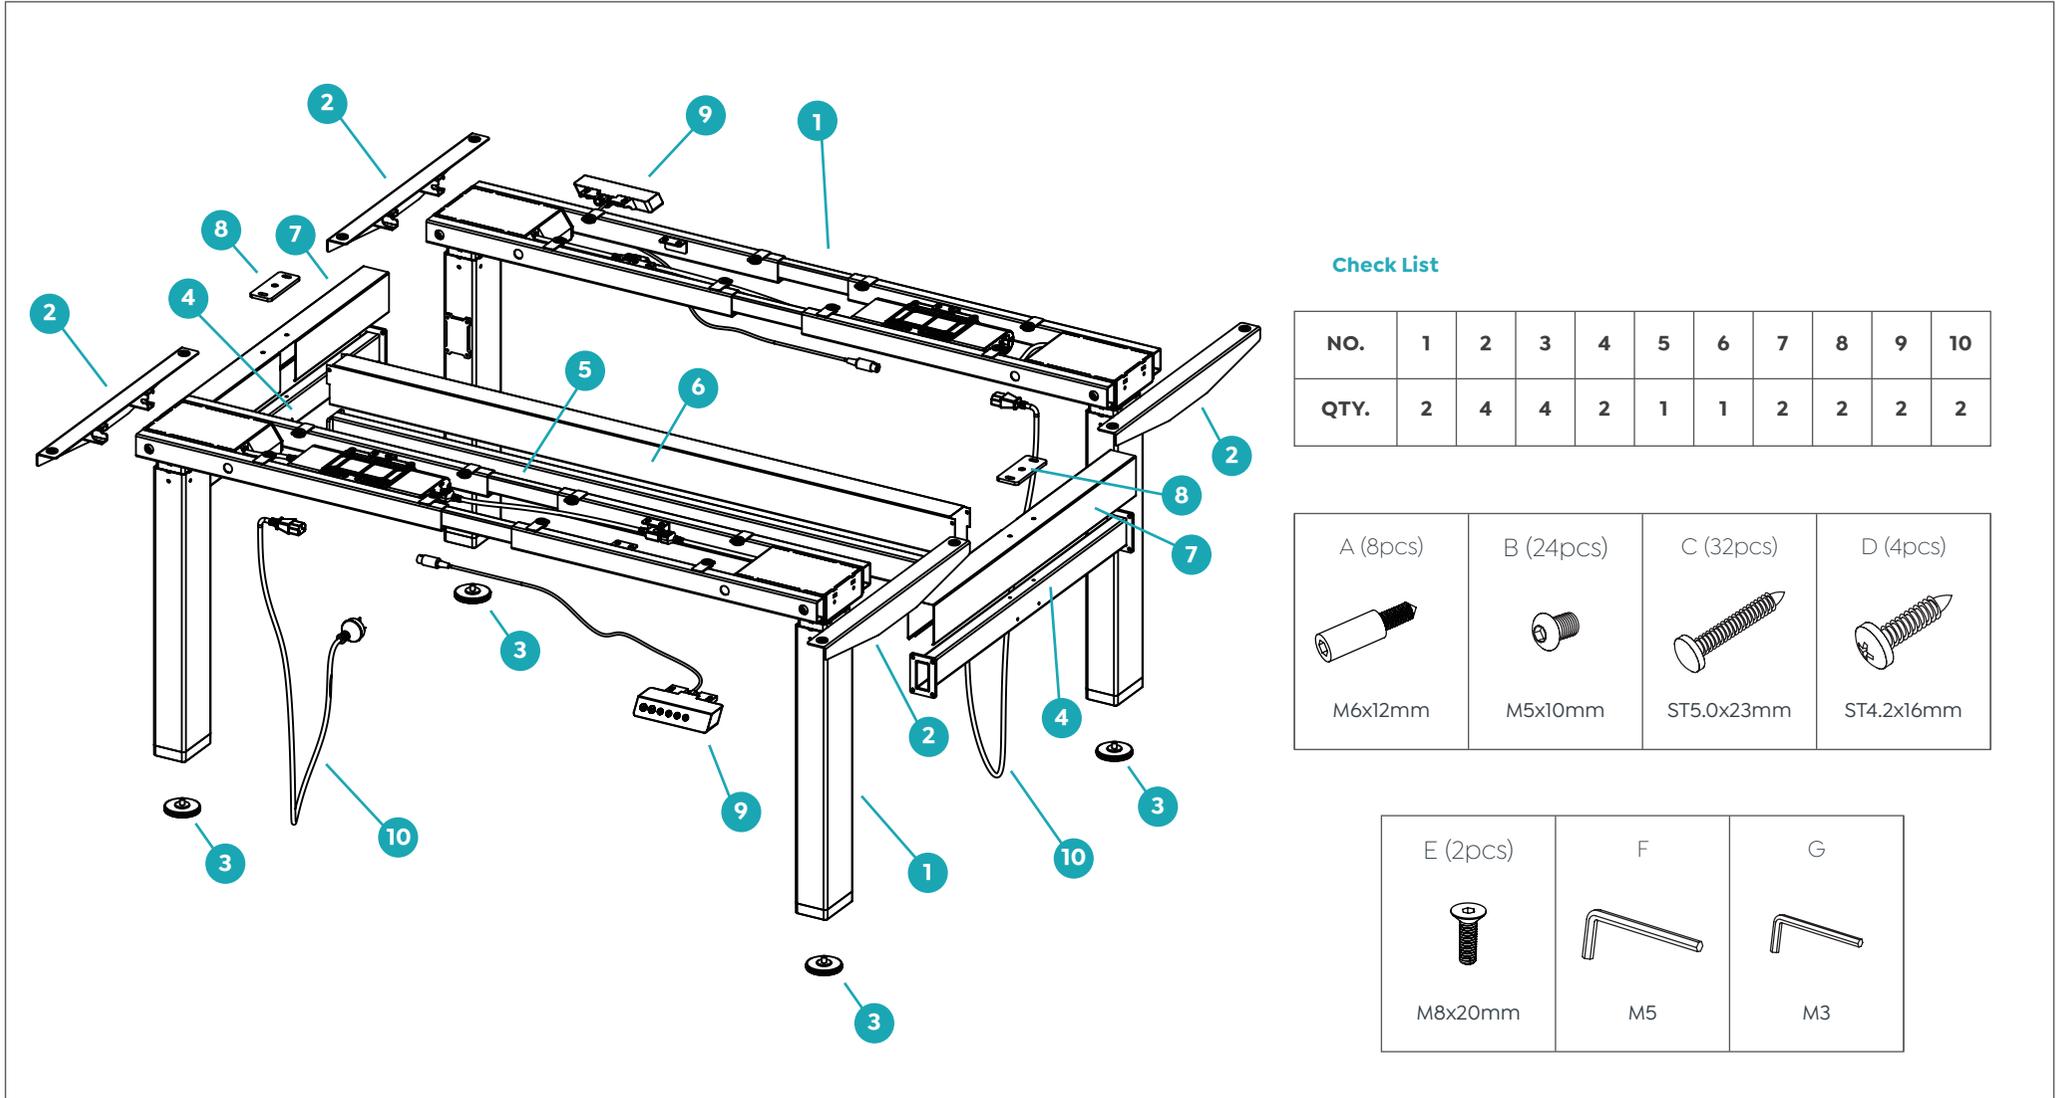


Check List

NO.	1	2	3	4	5	6	7	8	9	10
QTY.	2	4	4	2	1	1	2	2	2	2

A (8pcs)	B (24pcs)	C (32pcs)	D (4pcs)
			
M6x12mm	M5x10mm	ST5.0x23mm	ST4.2x16mm

E (2pcs)	F	G
		
M8x20mm	M5	M3

STEP 1:

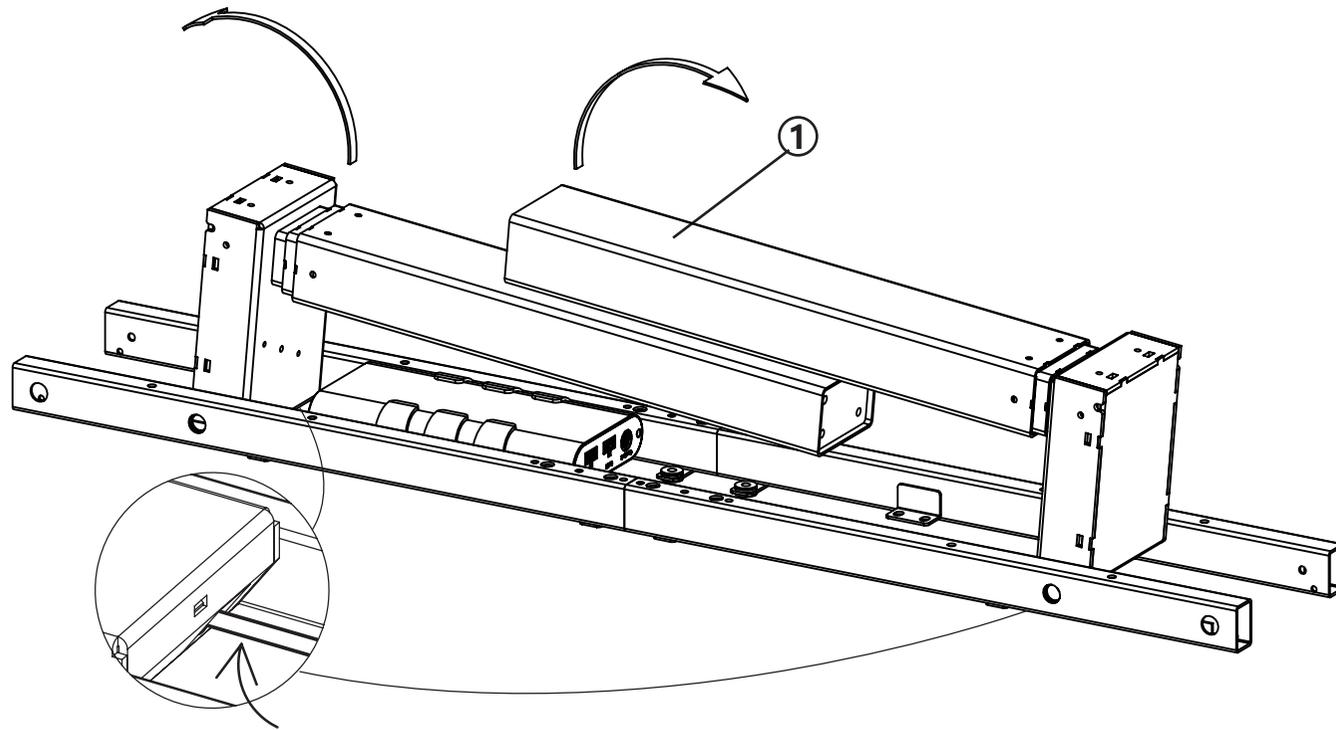


Be careful with the cable.

Agile+ Double Sided Desk


Assembly Instructions

STEP 2:

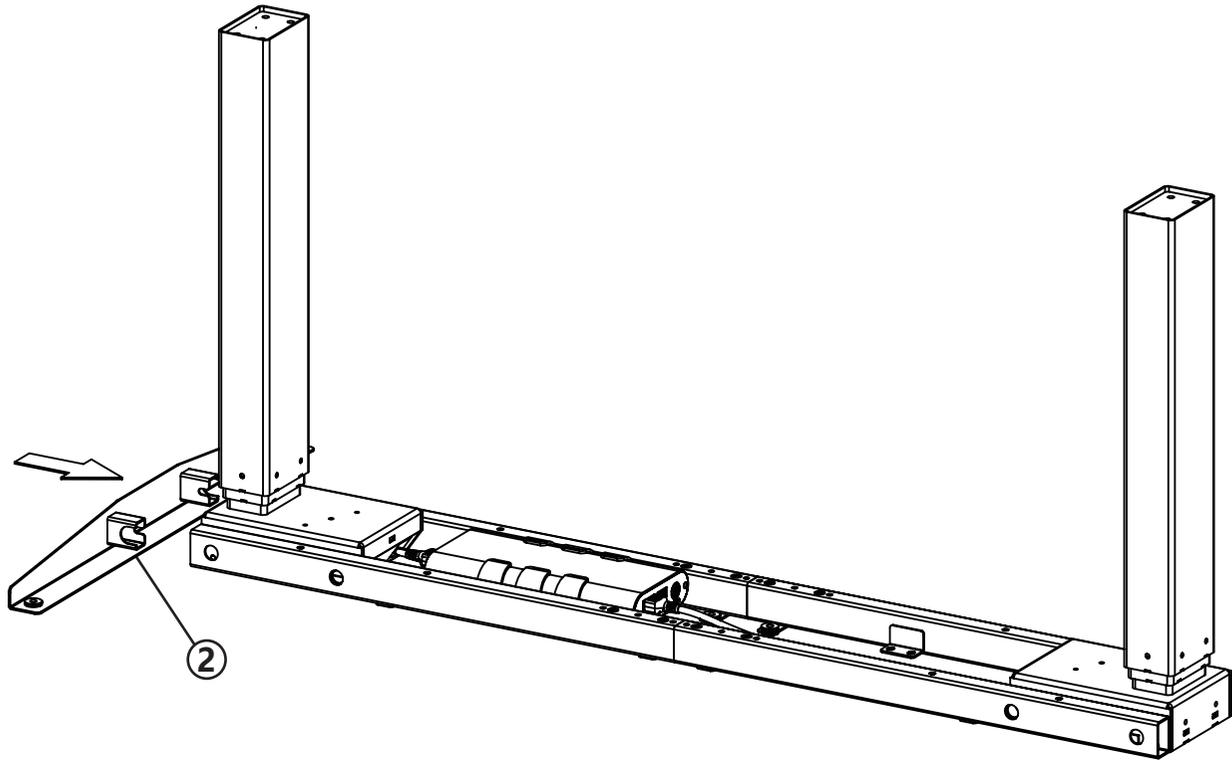

STEP 3:

A (2pcs)	F
	
M6x12mm	M5

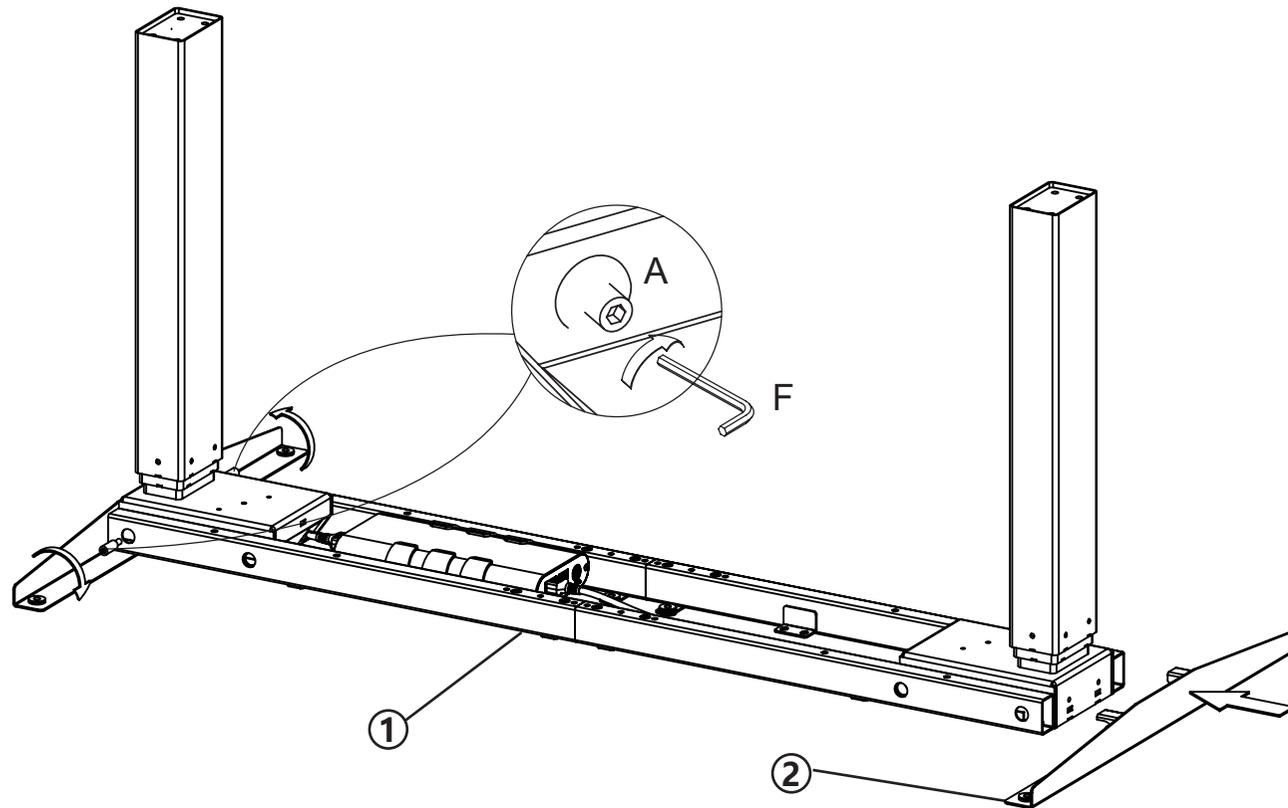


Agile+ Double Sided Desk


Assembly Instructions

STEP 4:

A (2pcs)	F
	
M6x12mm	M5

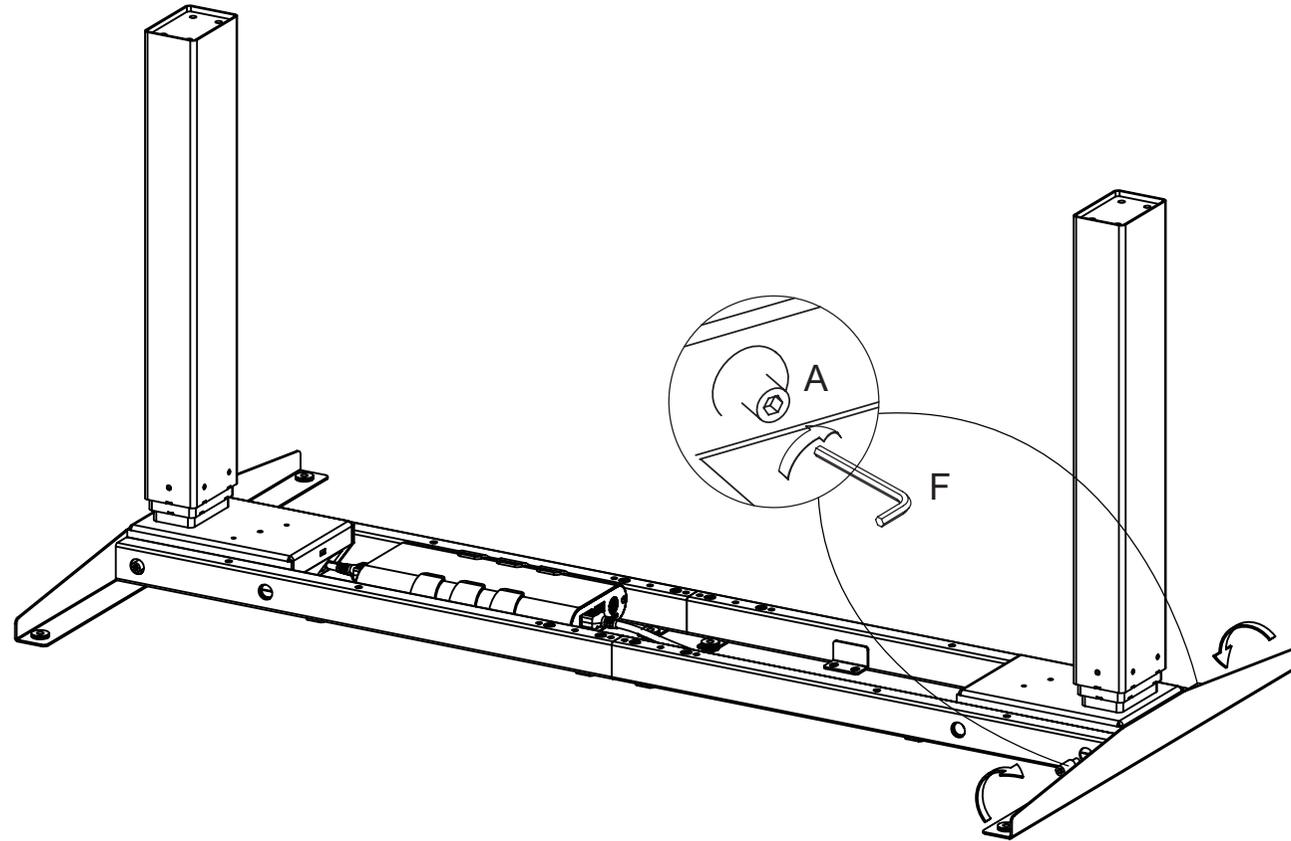


STEP 5:

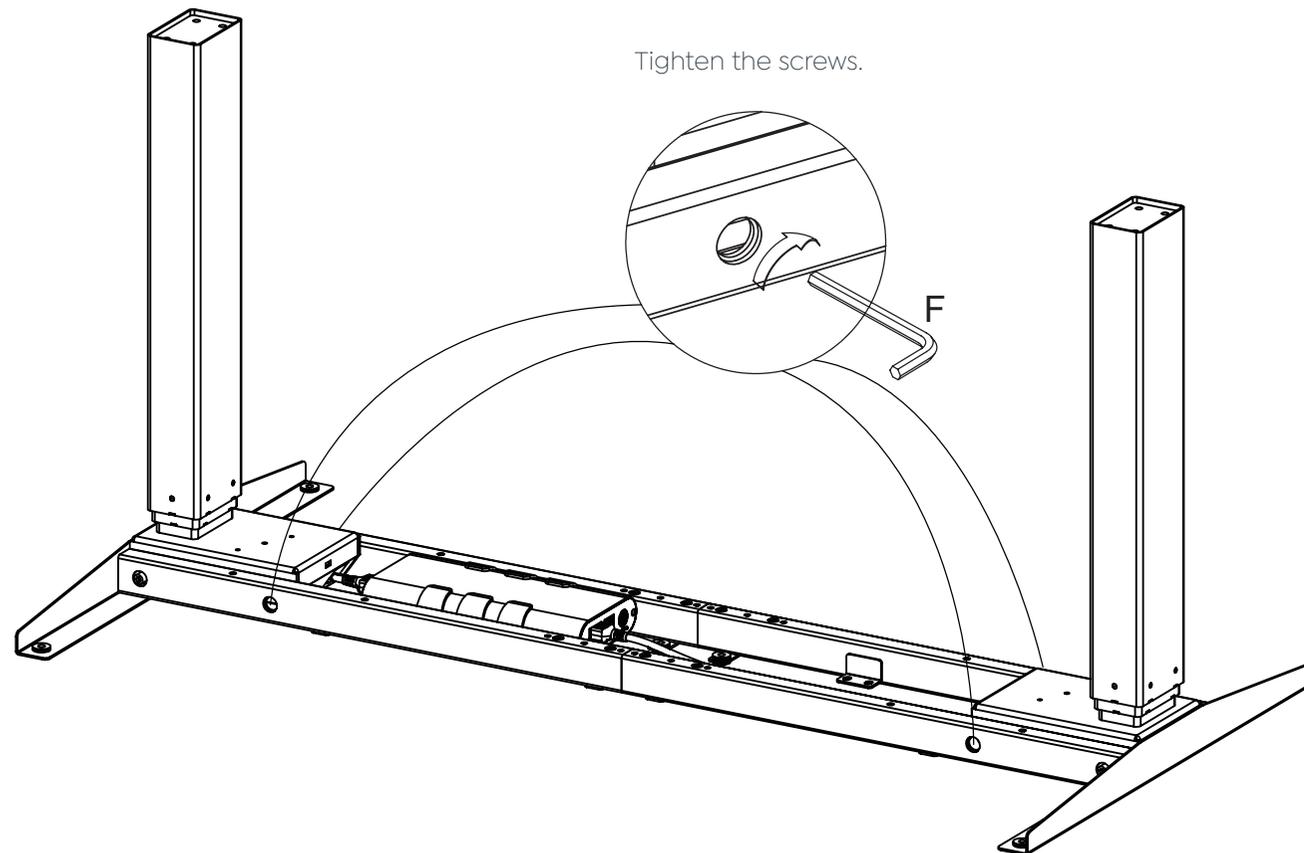

Agile+ Double Sided Desk


Assembly Instructions

STEP 6:

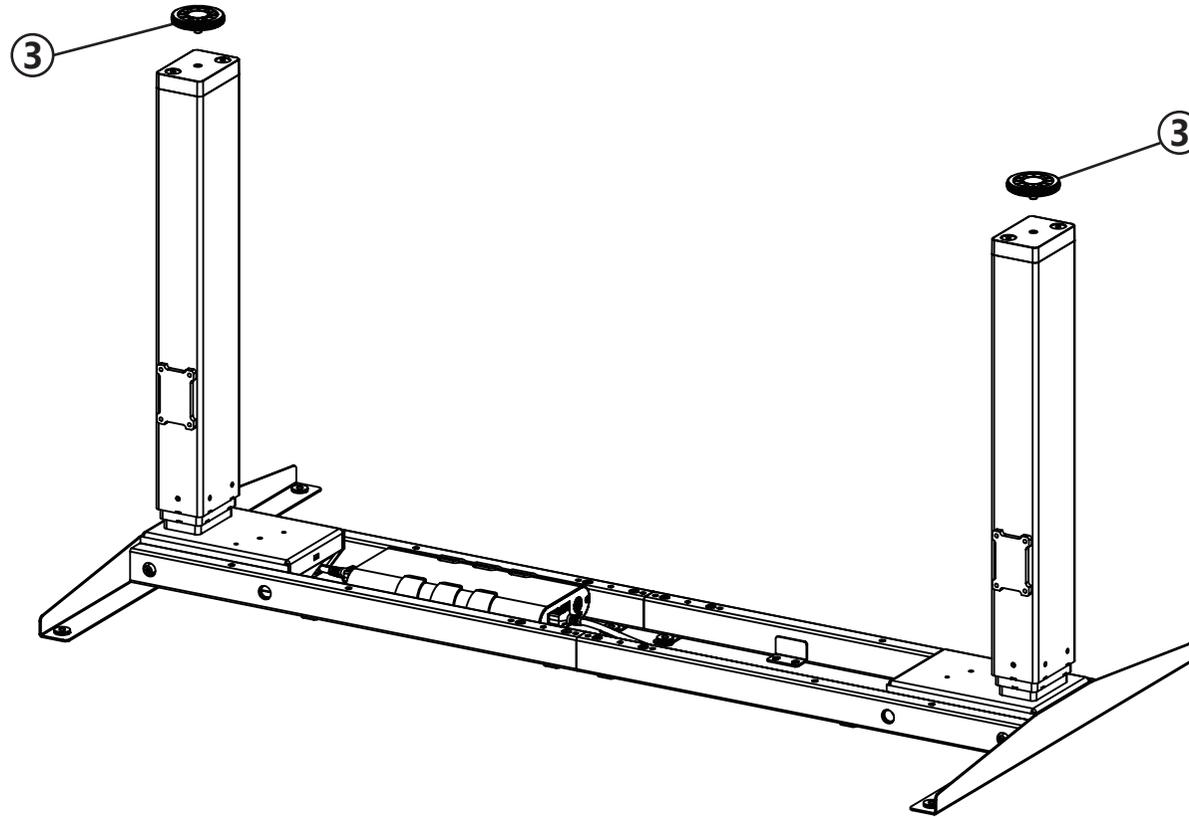

STEP 7:



B (16pcs)	G
	
M5x10mm	M3

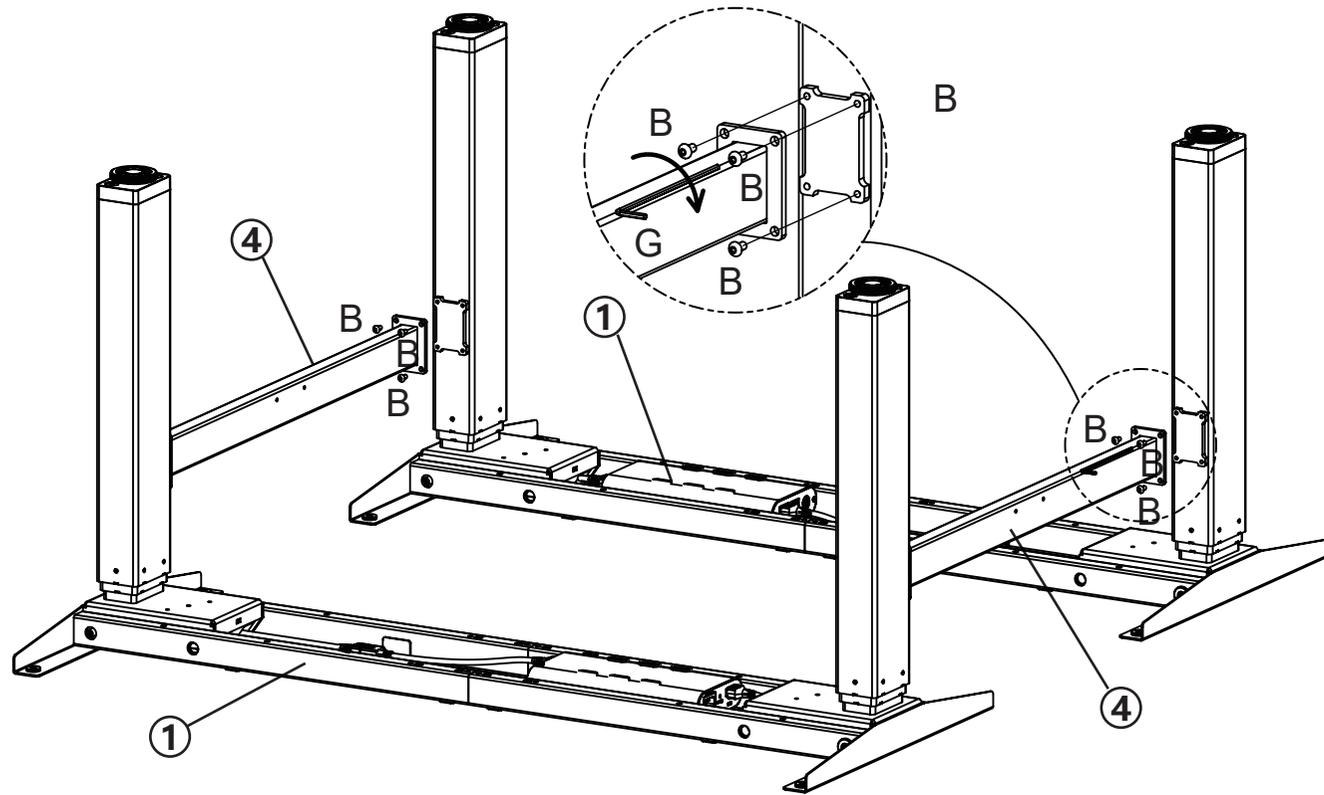

Agile+ Double Sided Desk


Assembly Instructions

STEP 8:

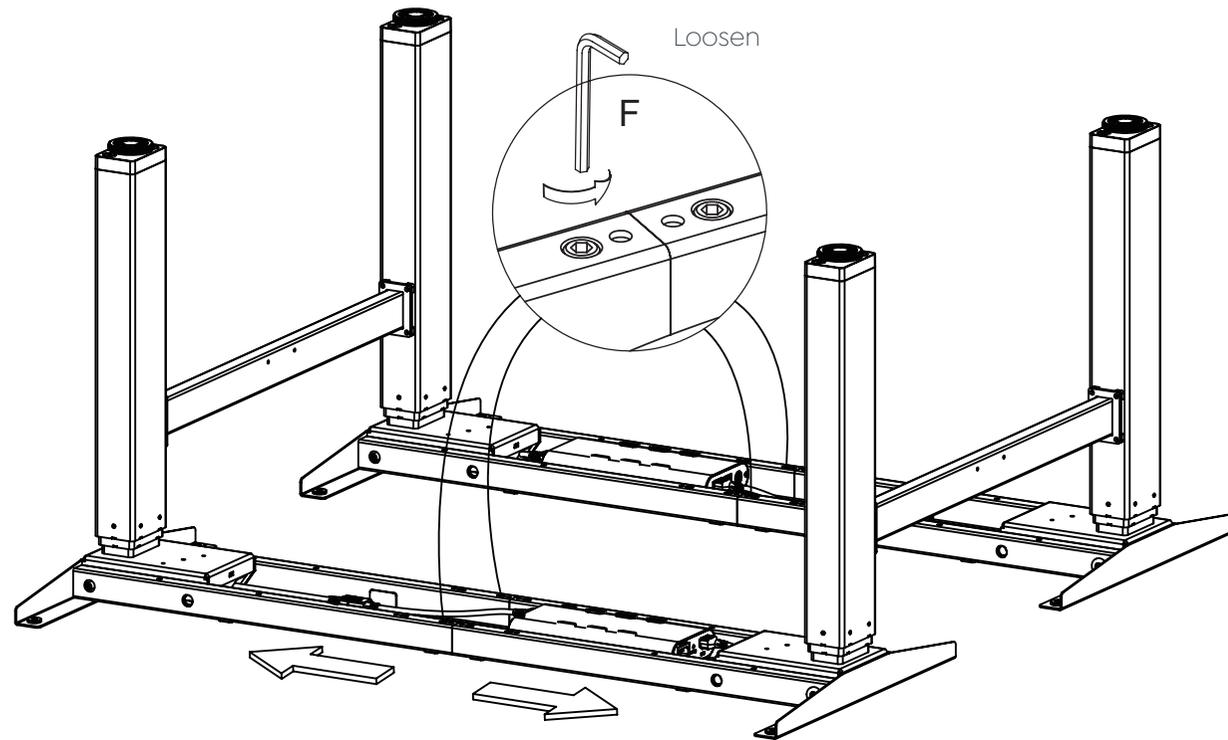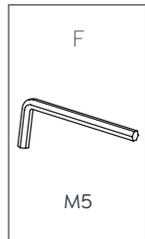

STEP 9:


B (4pcs)	G
	
M5x10mm	M3

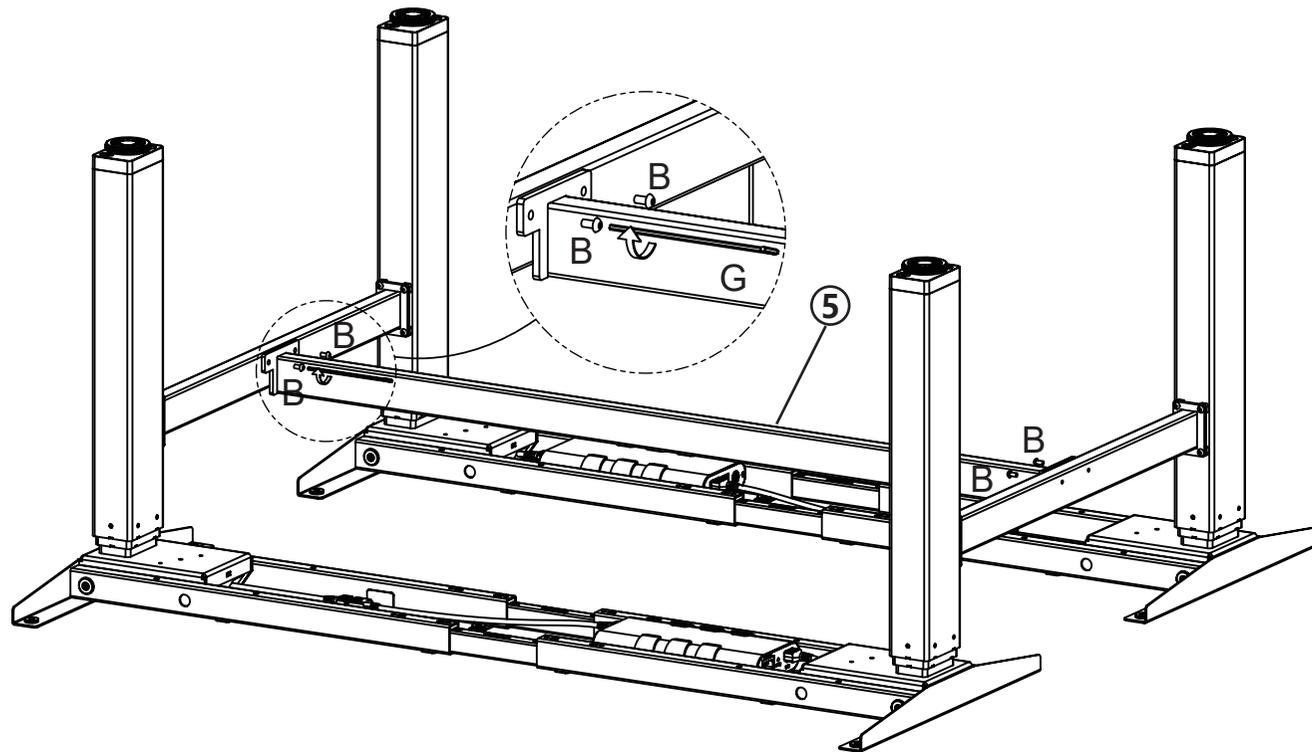


Agile+ Double Sided Desk

Assembly Instructions

STEP 10:

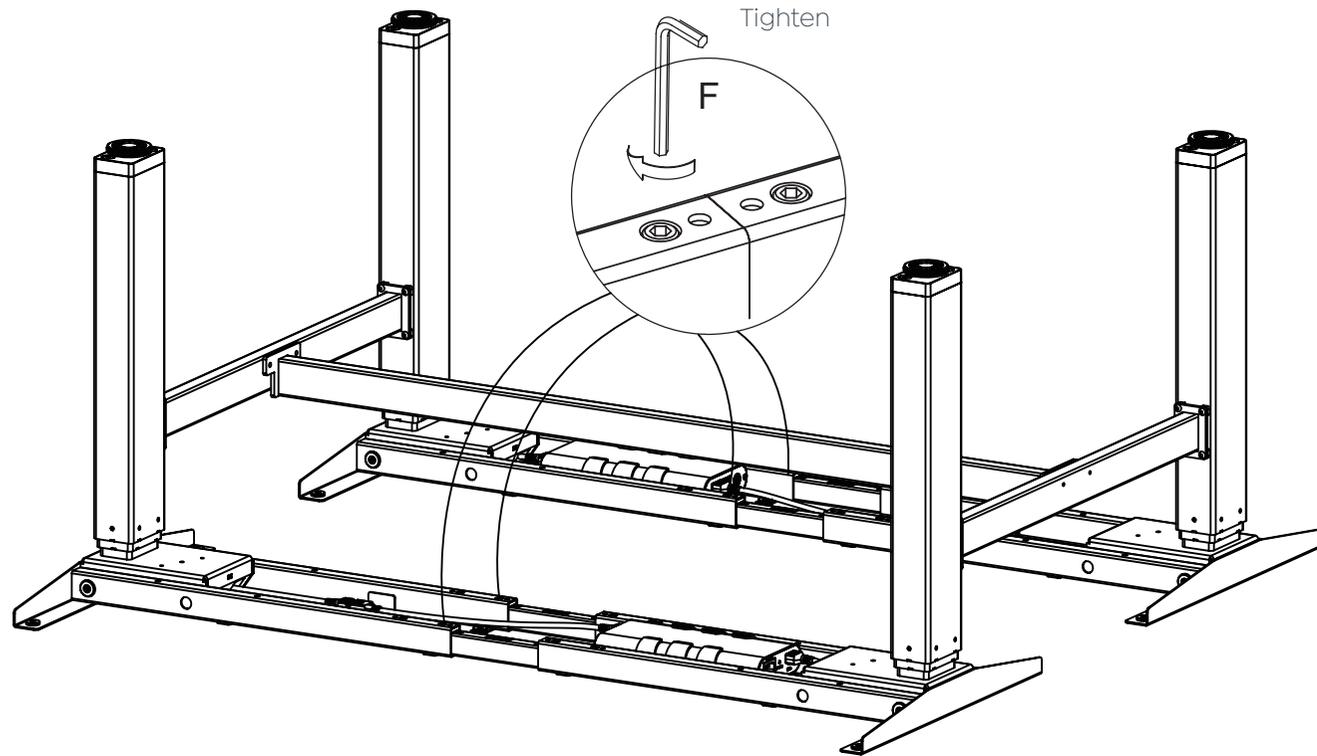


STEP 11:

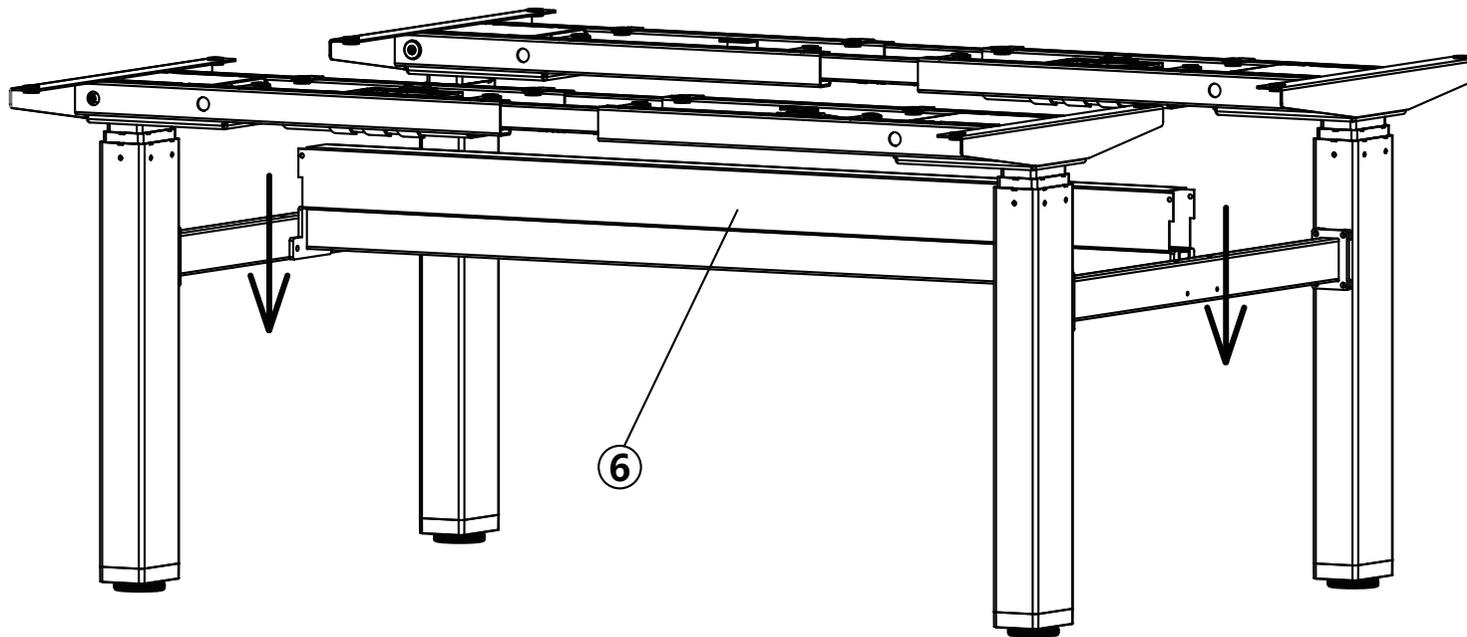



Agile+ Double Sided Desk

Assembly Instructions

STEP 12:

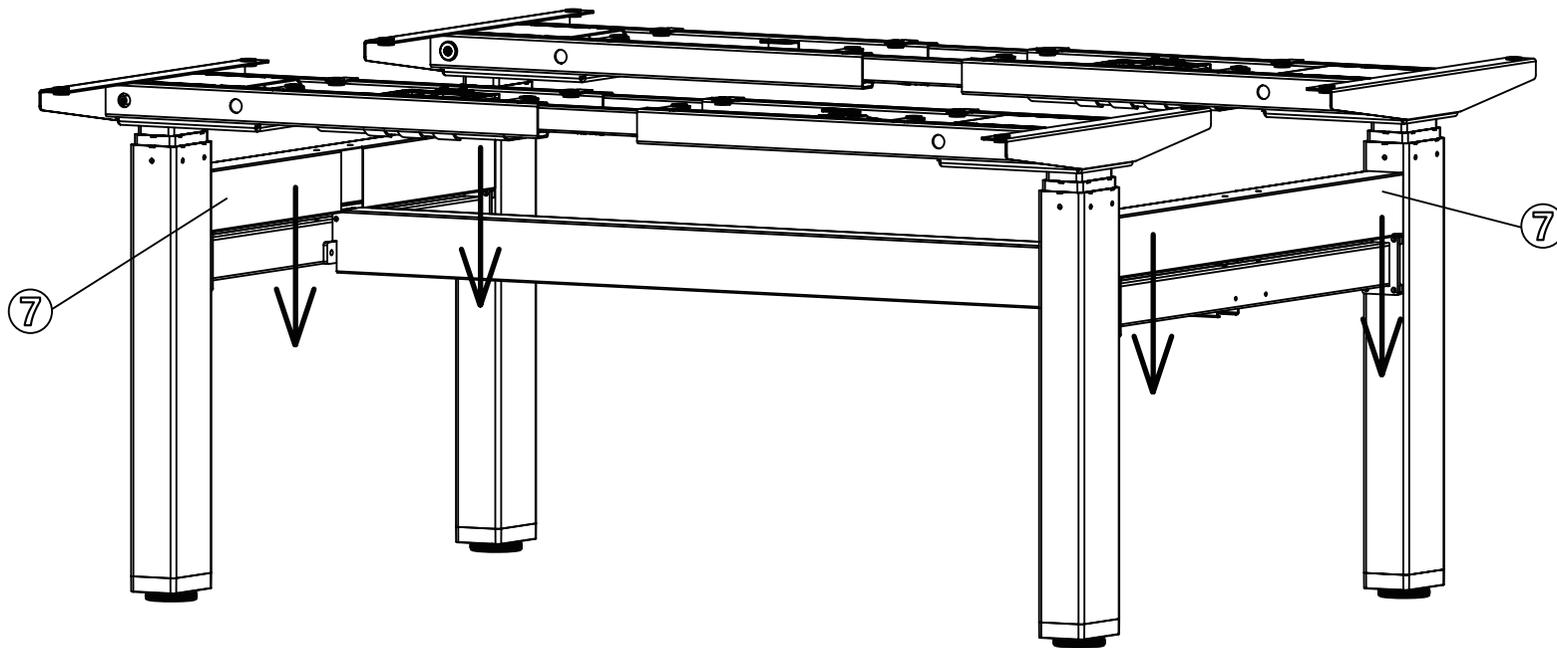



STEP 13:

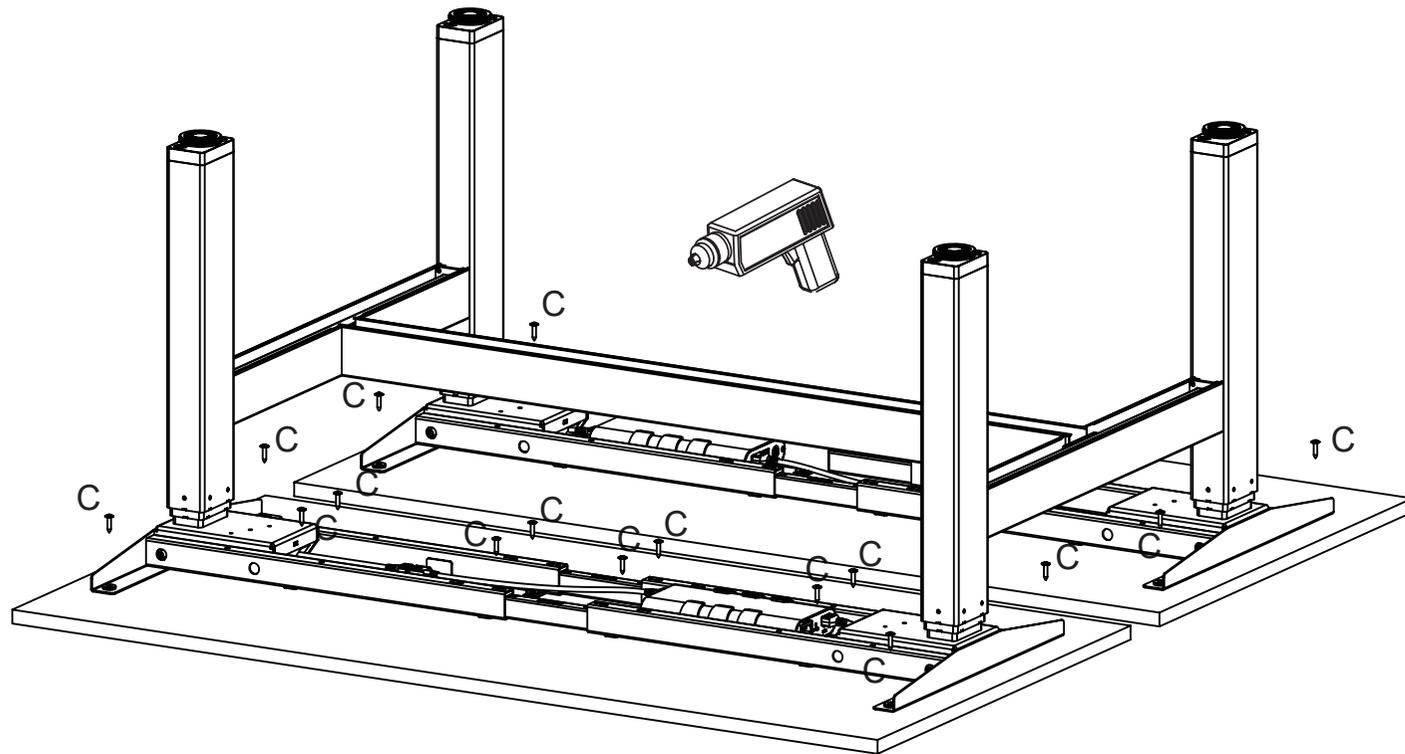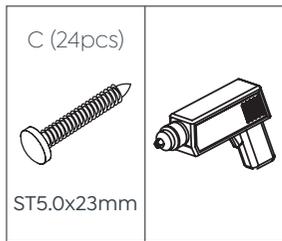


Agile+ Double Sided Desk

Assembly Instructions

STEP 14:

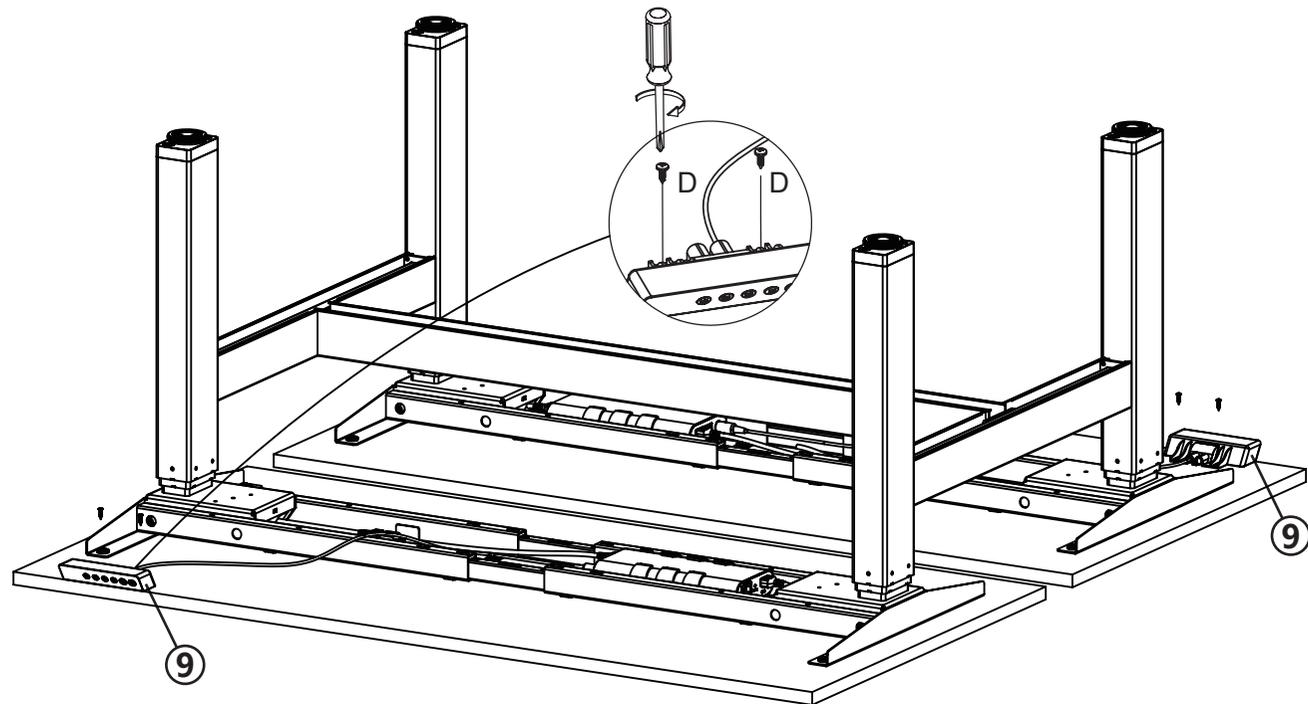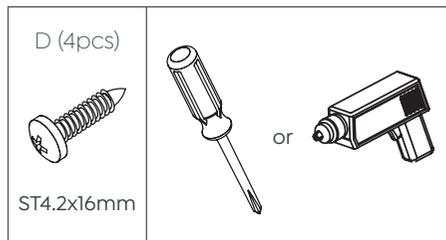

STEP 15:

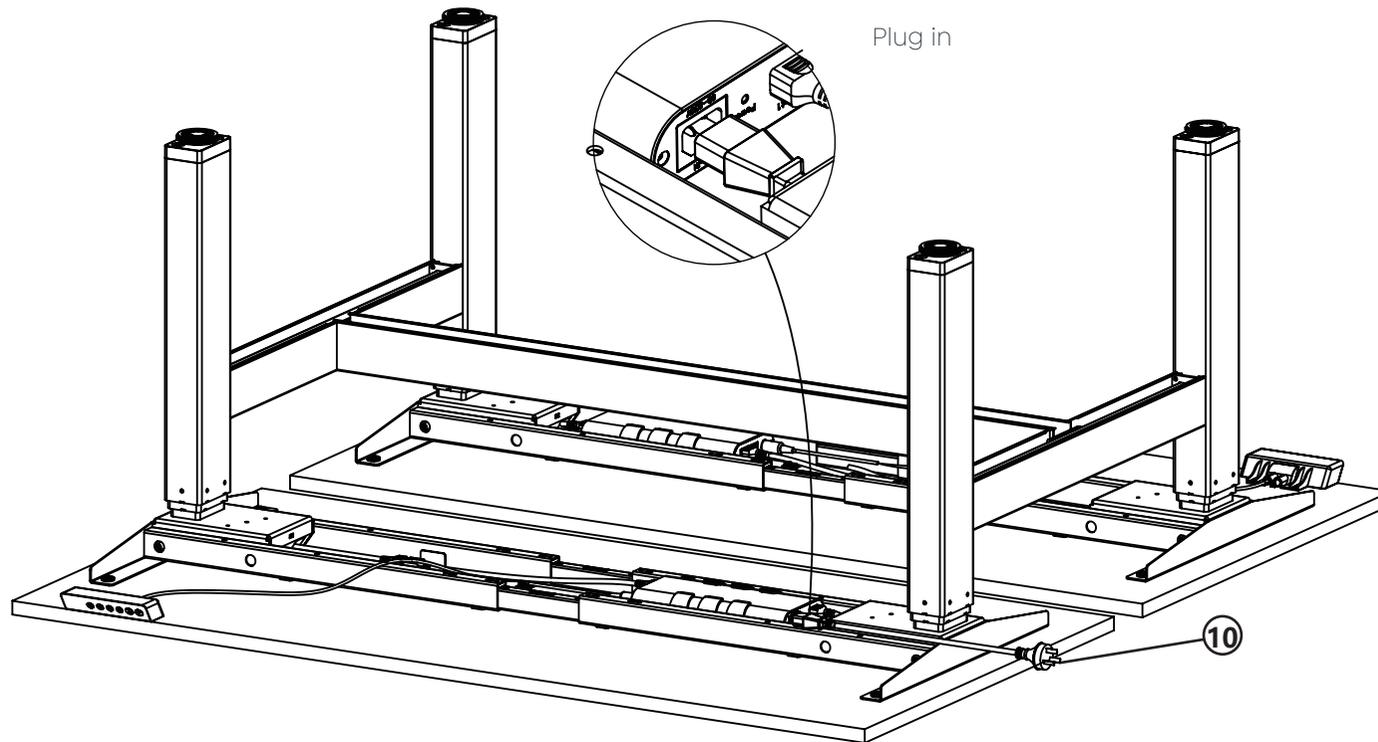


Agile+ Double Sided Desk

Assembly Instructions


STEP 16:

E (2pcs)	F
	
M8x20mm	M5

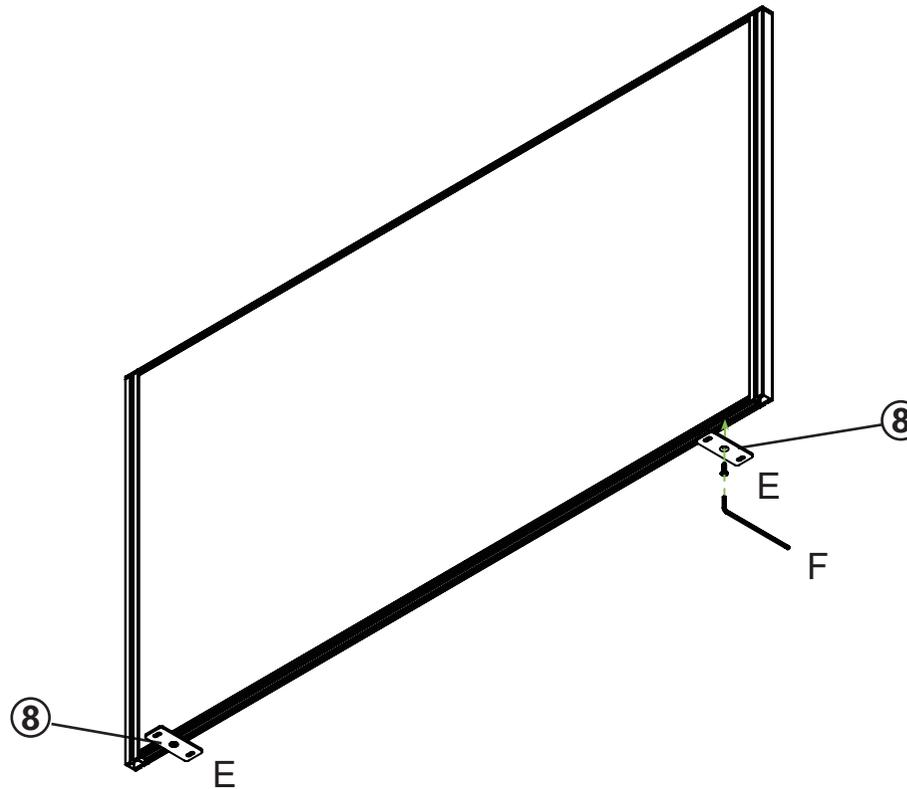

STEP 17:



B (4pcs)	F
	
M5x10mm	M5

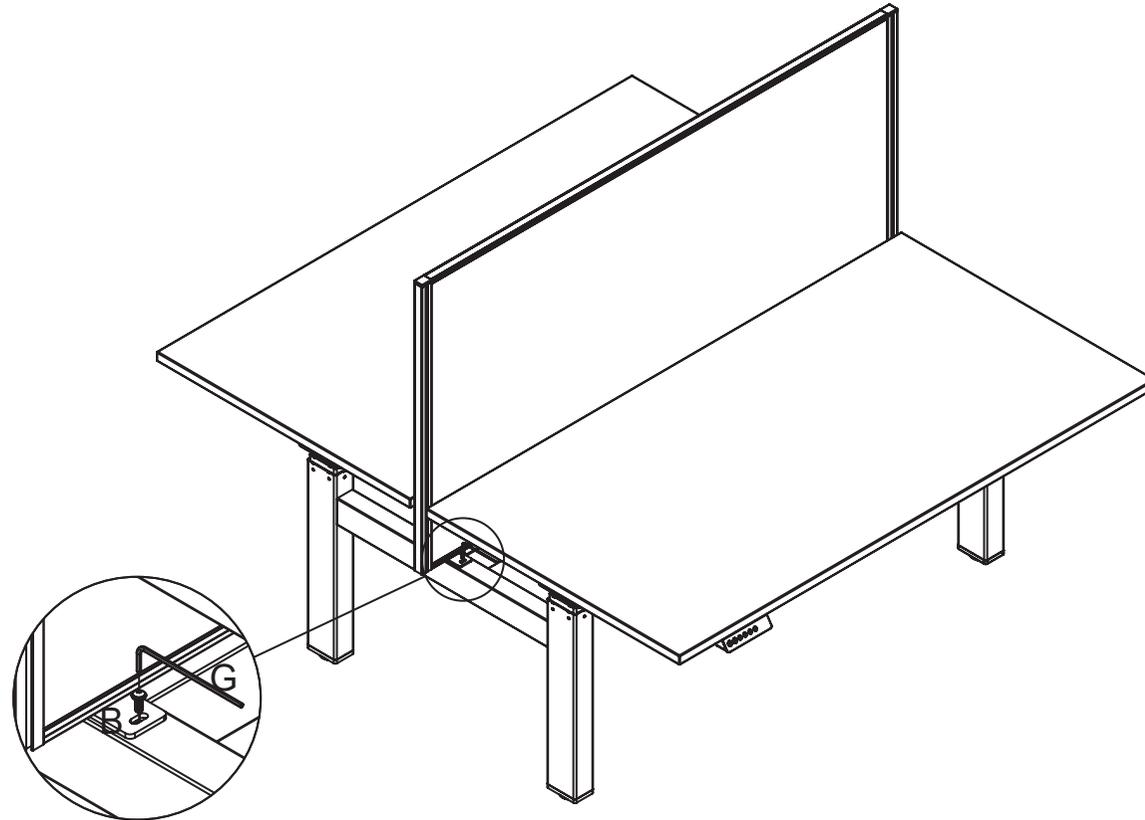


Agile+ Double Sided Desk

Assembly Instructions

STEP 18:

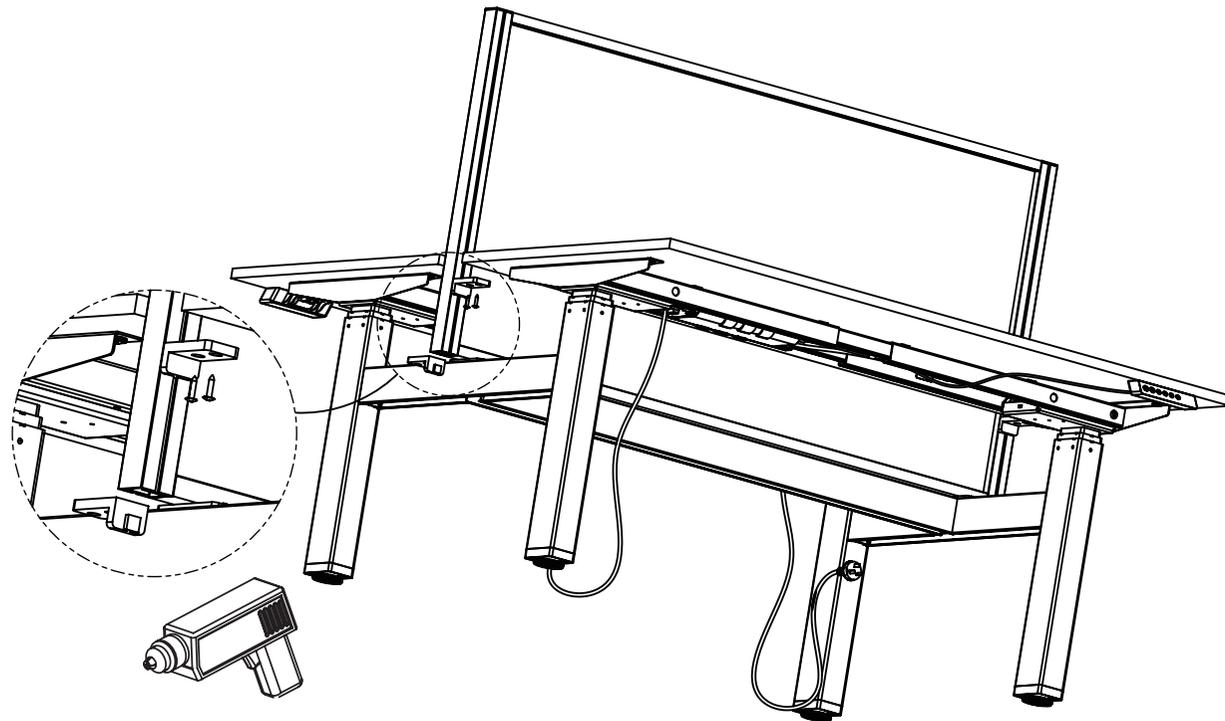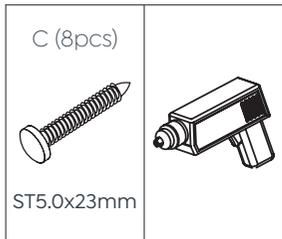


STEP 19:

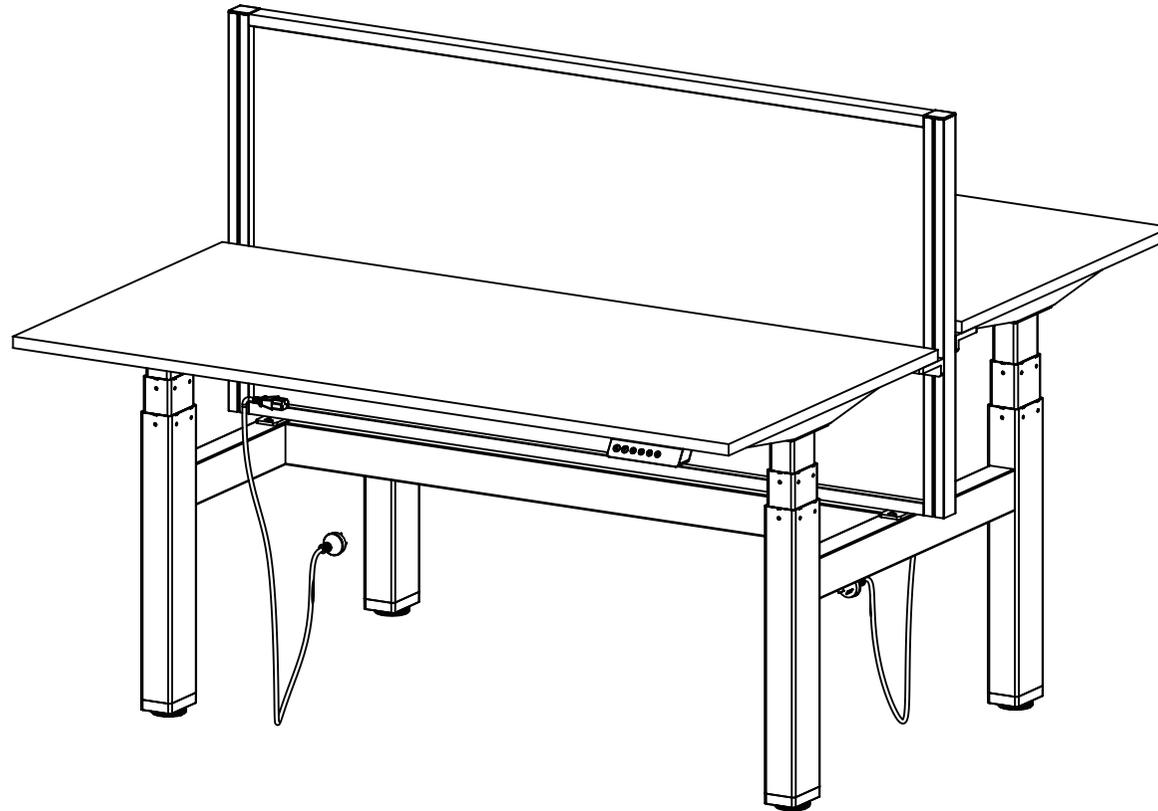

Agile+ Double Sided Desk

Assembly Instructions

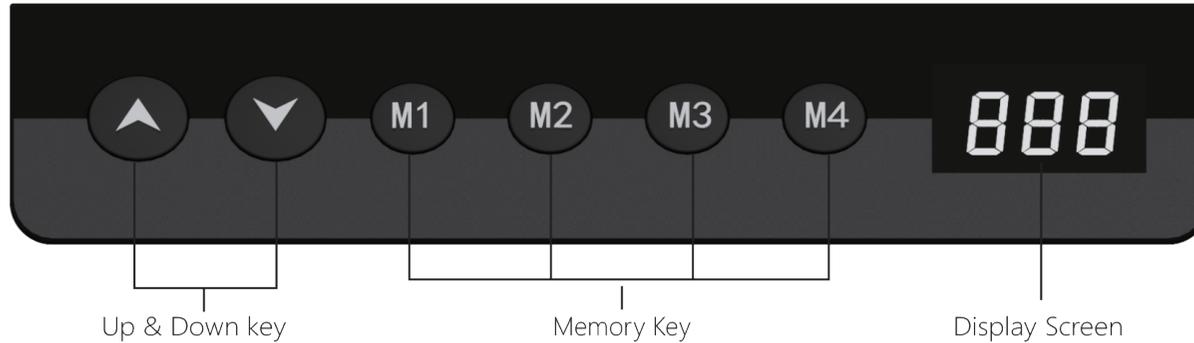

The whole handset surface is a button panel. If there is no press within 30 seconds, the screen is locked and M1/M2/M3/M4 keys are locked correspondingly, you should press Up or Down key first, it can be used when the display screen light up.

■ Up or Down Key

To adjust the height of the desk, keep pressing on "up" or "down" until it fits your best position.

■ Display Screen

Display the height value of the desk.

■ Memory Key (M1/ M2/ M3/ M4)

After setting memory keys, the desk can lift automatically to memory height.

※ How to set memory mode

Please keep pressing M1/M2/M3/M4 key for 5 seconds, until "be" sound, the memory height is successfully saved. Then press M1/M2/M3/M4, the desk moves to memory height automatically.


■ Safety Function

When the desktop is on the rise or down, encountered reverse resistance, the desk will rebound.

■ Handset shows error code and solution

Error code	Fault cause	Solution
ER1	Motor stop	Power off and restart. If fault still exists, it is motor problem.
ER2	Synchro error beyond 15mm	Power off and restart. If handset display RST(DOWN key unlocked), keep touching DOWN key to the lowest normal number.
ER3	Cable fault	Check motor cable off or broken, power off and restart.
ER4	Communication fault	Check cables for handset and controller, power off and restart.
ER5	Overload protection	2 legs Load>180kg or 3 legs load>160kg, display ER5. Lighten loads, power off and restart.
Hot	Run continuously for 2.5 to 5 minutes.	Overload, power protection, automatic recovery after five minutes

■ Setting solution for desk function

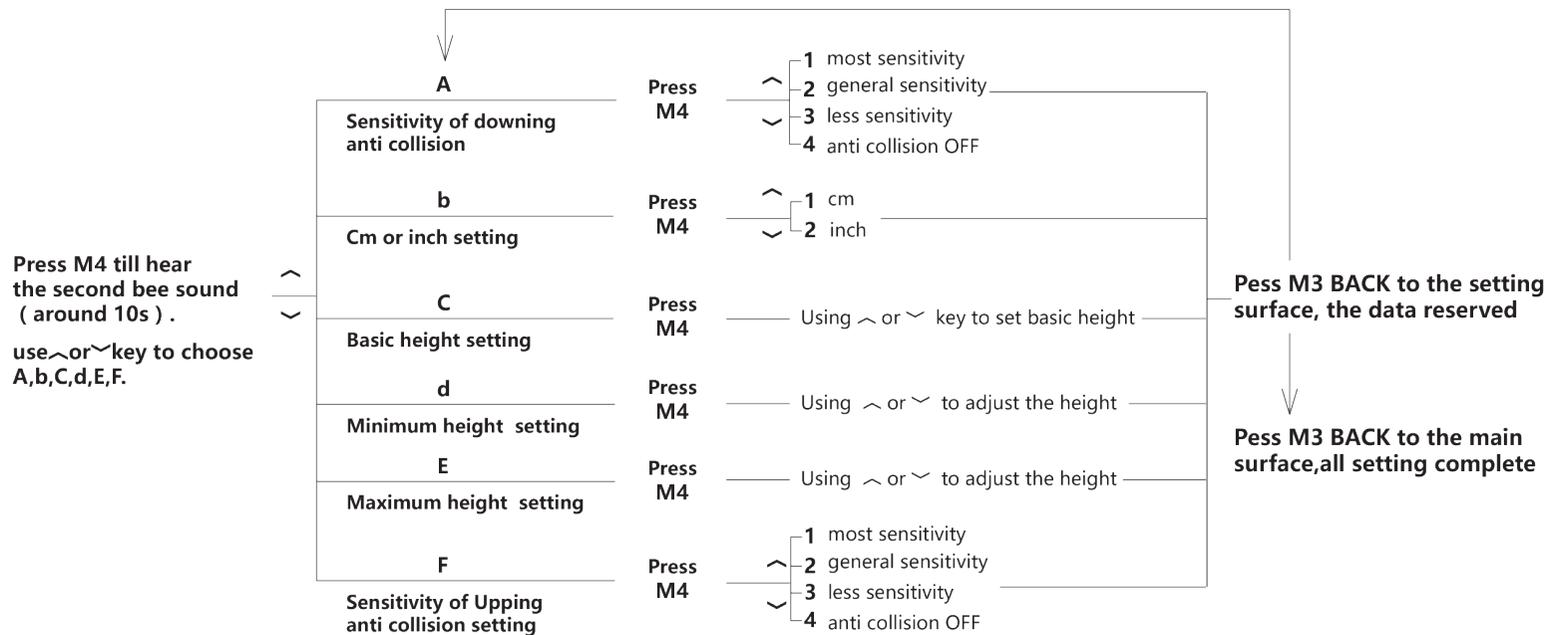




Sydney 02 8188 2732
Melbourne 03 9111 0315
Brisbane 07 3733 1923
Adelaide 08 7111 0810
Perth 08 9468 2707

info@olgoffice.com

myolg.online | olgoffice.com | officedesigner.net | motionoffice.com

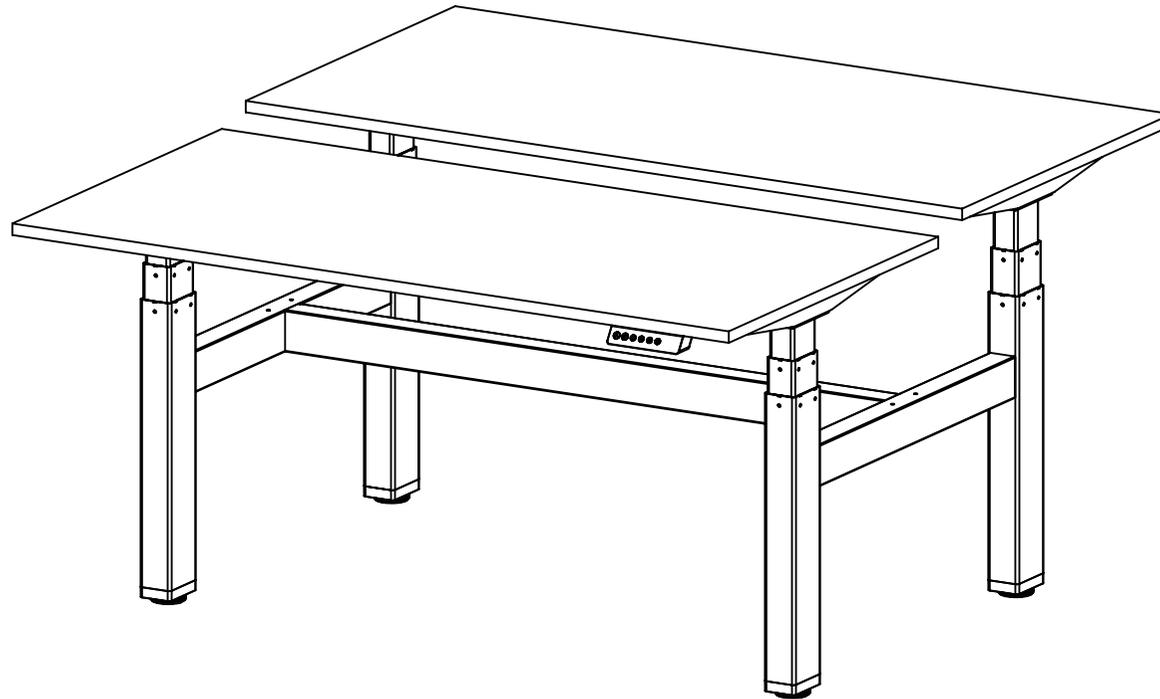


Agile+ Double Sided Desk

Assembly Instructions

Agile+ Double Sided Desk

Components List

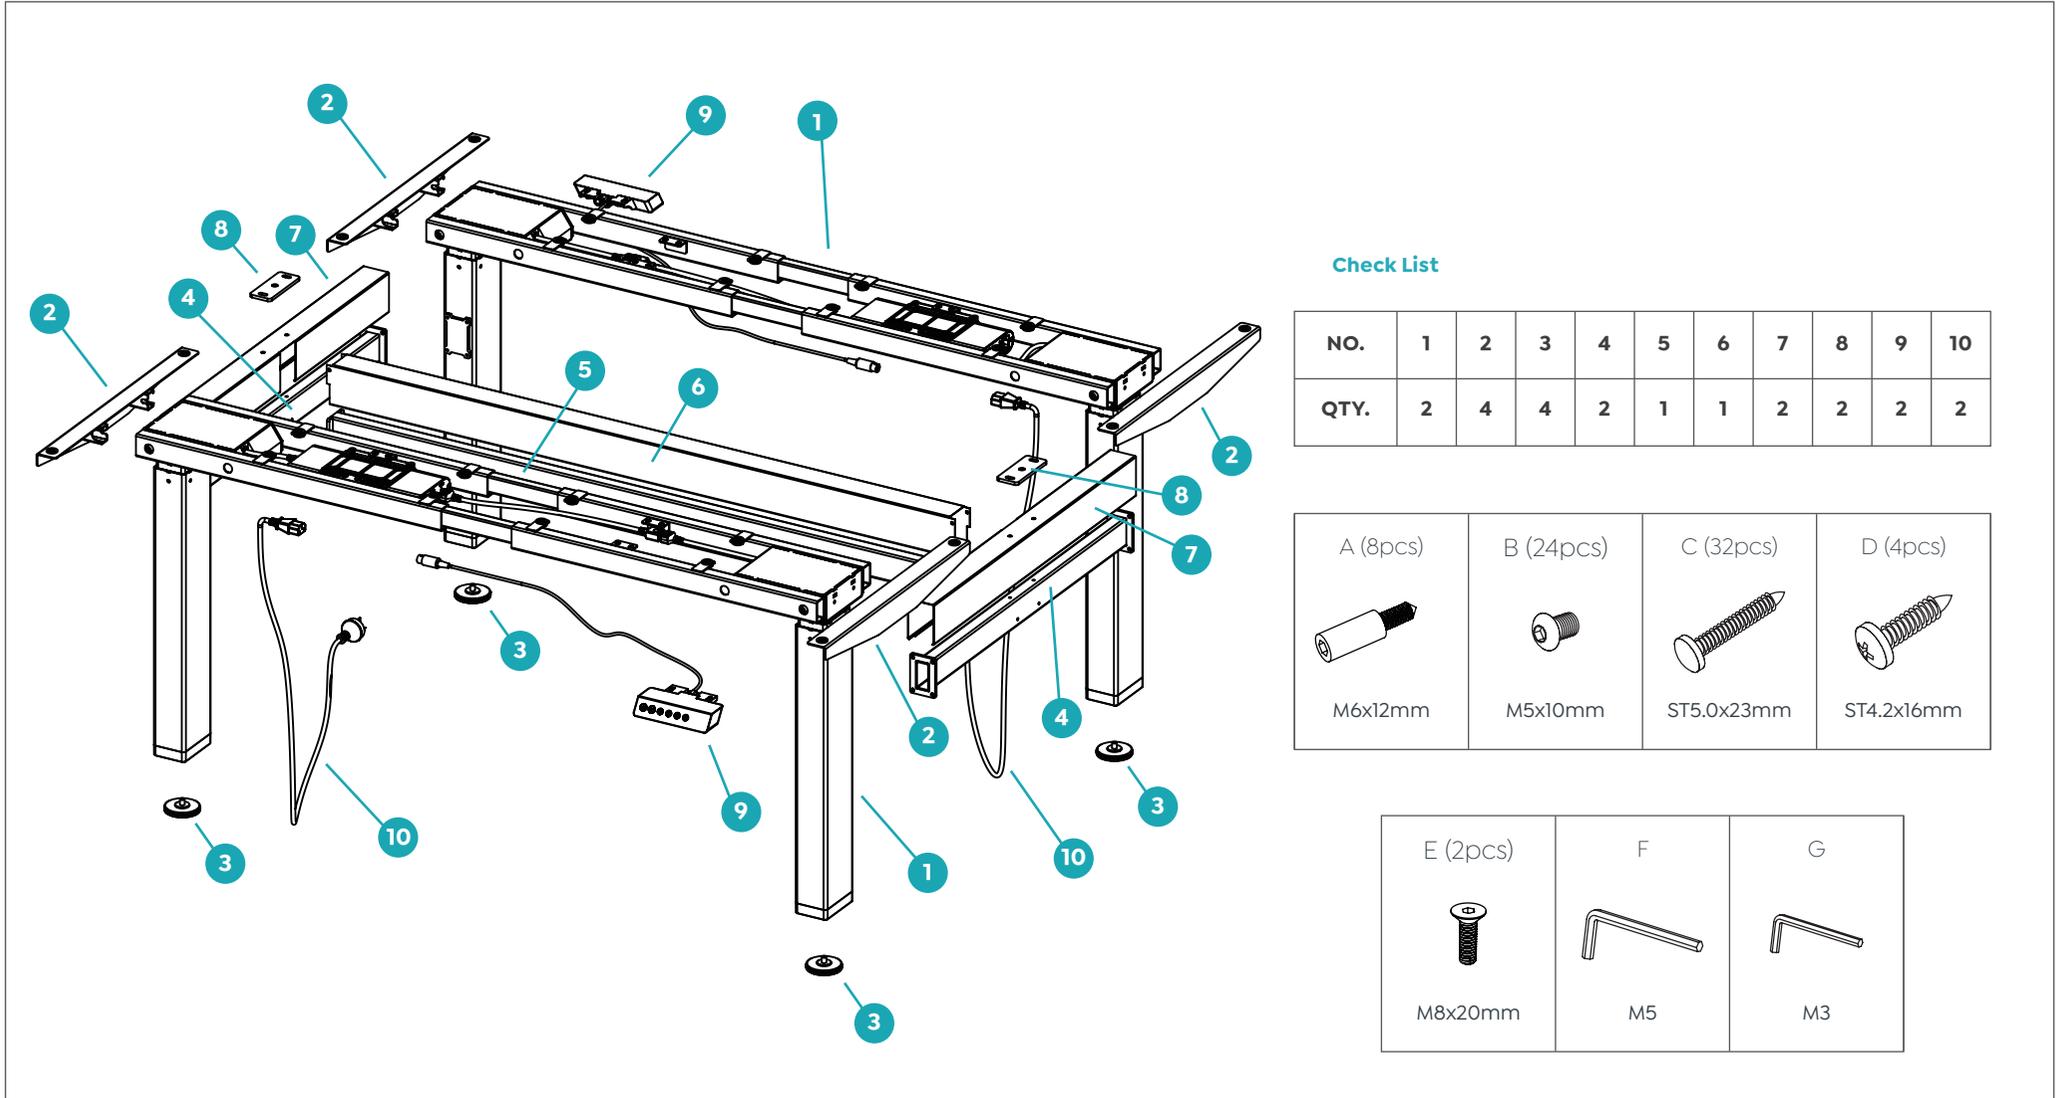


Check List

NO.	1	2	3	4	5	6	7	8	9	10
QTY.	2	4	4	2	1	1	2	2	2	2

A (8pcs)	B (24pcs)	C (32pcs)	D (4pcs)
			
M6x12mm	M5x10mm	ST5.0x23mm	ST4.2x16mm

E (2pcs)	F	G
		
M8x20mm	M5	M3

STEP 1:

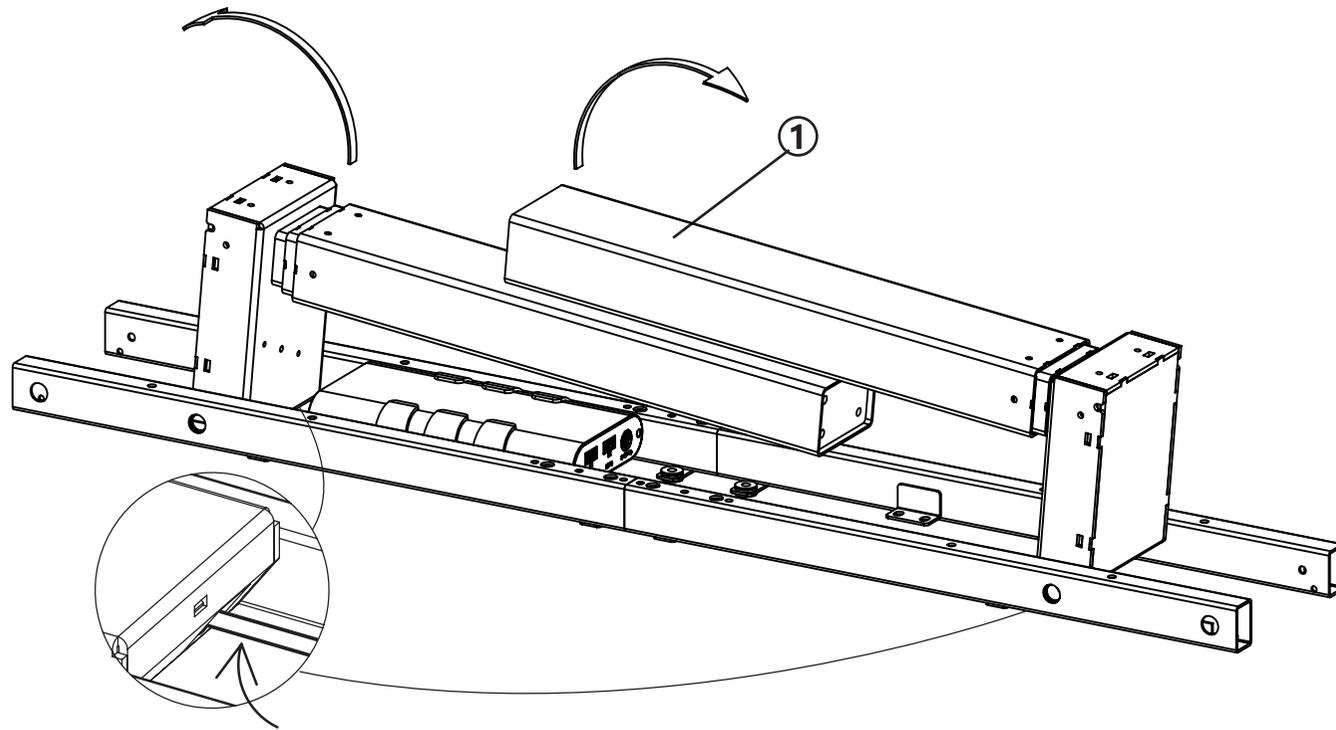


Be careful with the cable.

Agile+ Double Sided Desk


Assembly Instructions

STEP 2:

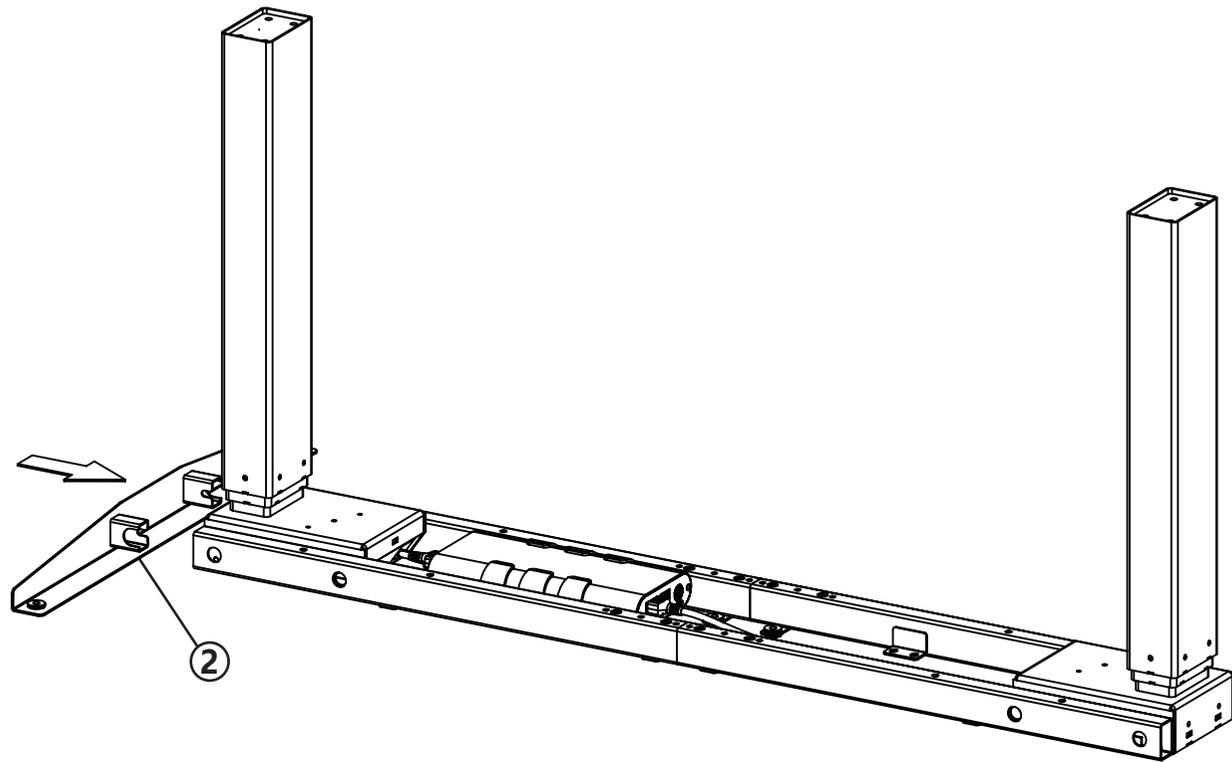

STEP 3:

A (2pcs)	F
	
M6x12mm	M5

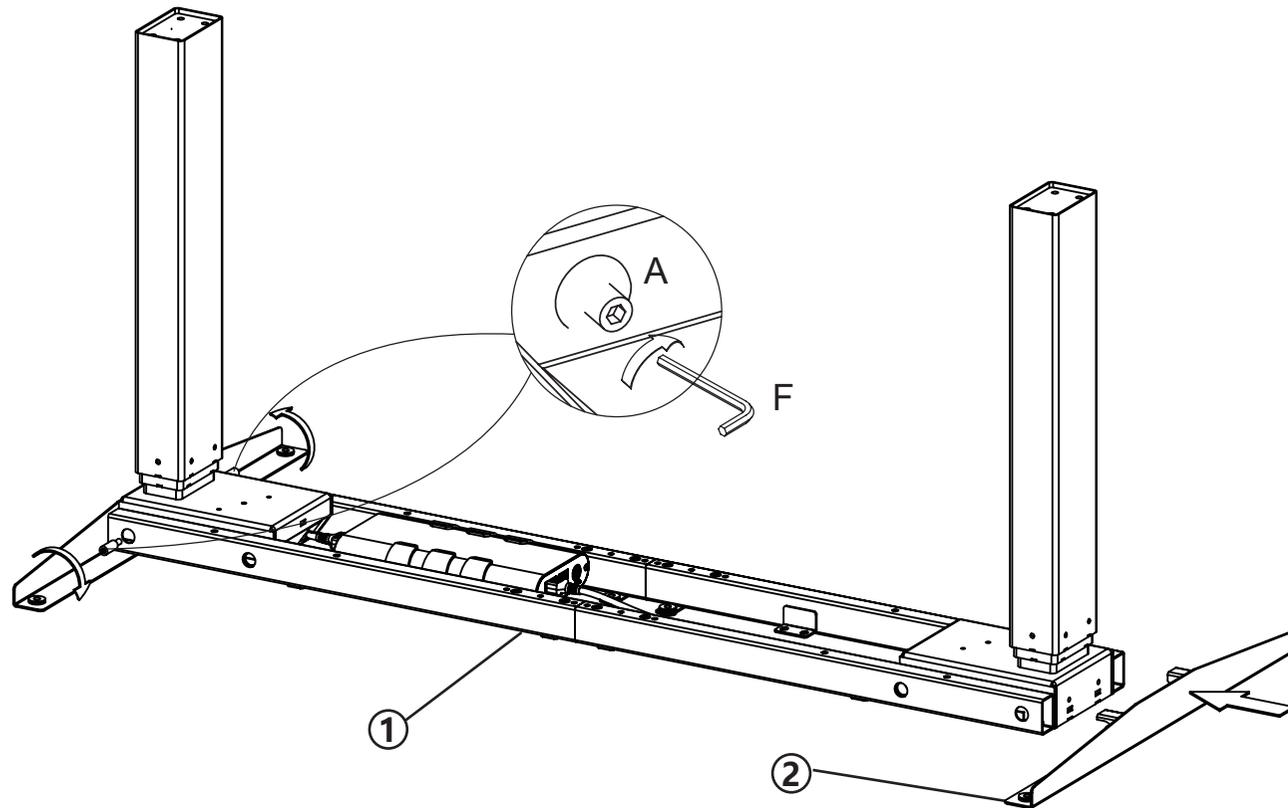


Agile+ Double Sided Desk


Assembly Instructions

STEP 4:

A (2pcs)	F
	
M6x12mm	M5

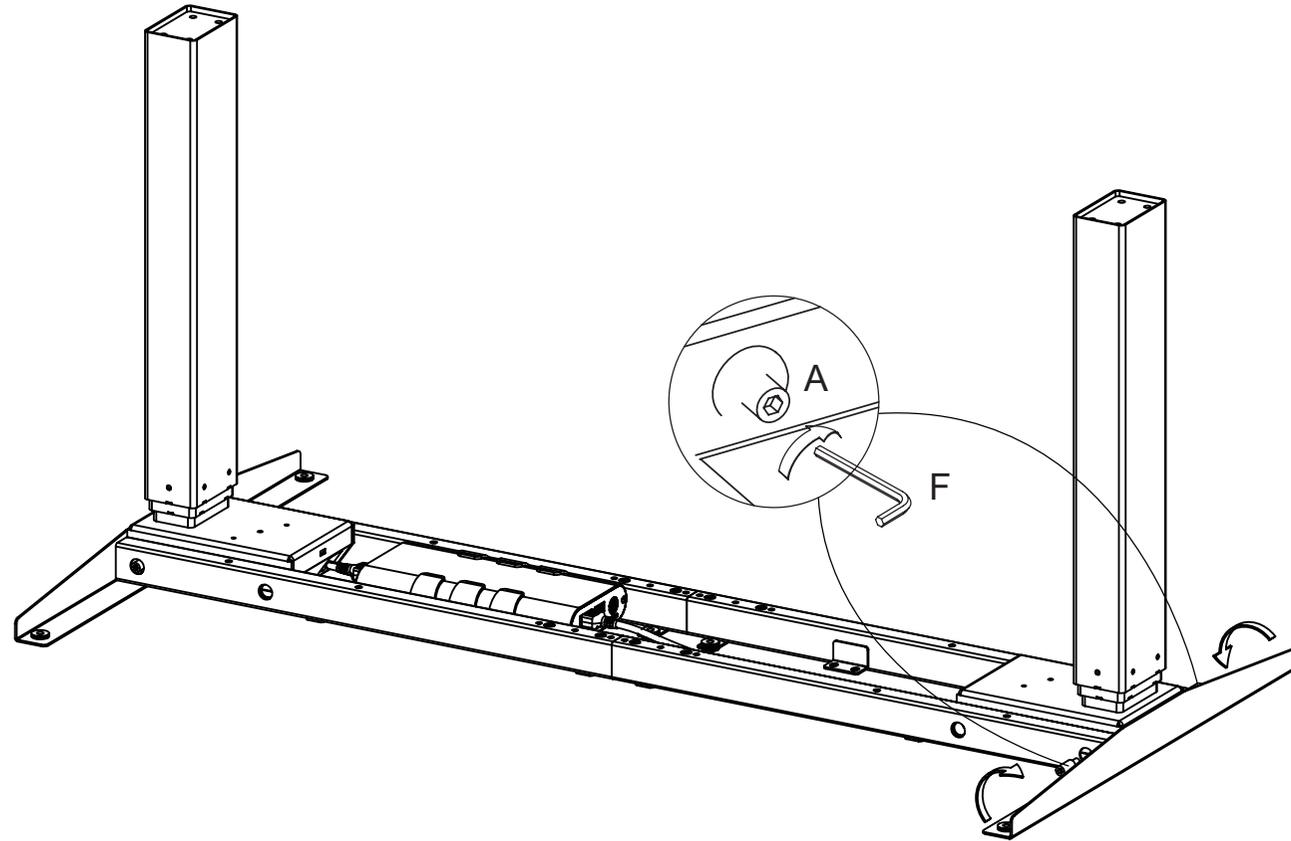


STEP 5:

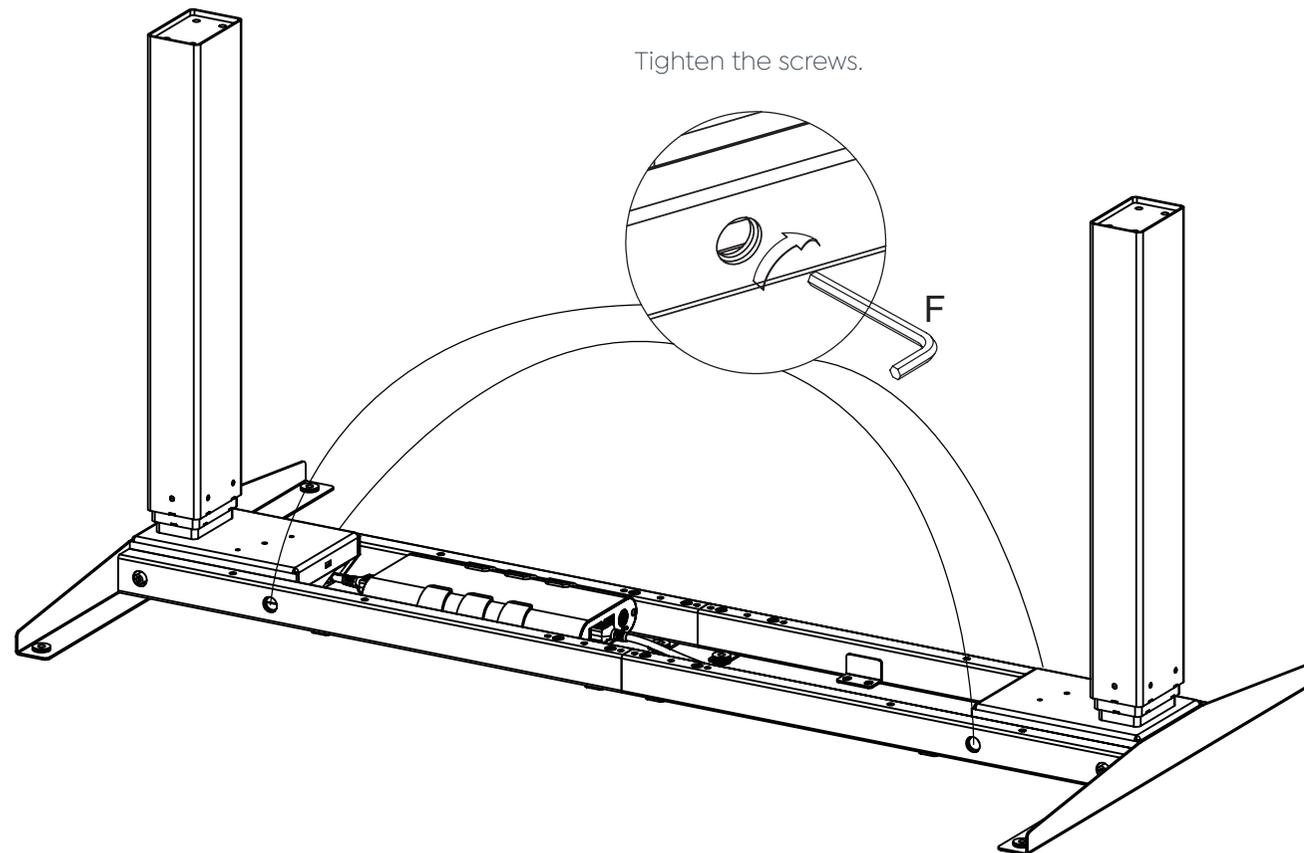

Agile+ Double Sided Desk


Assembly Instructions

STEP 6:

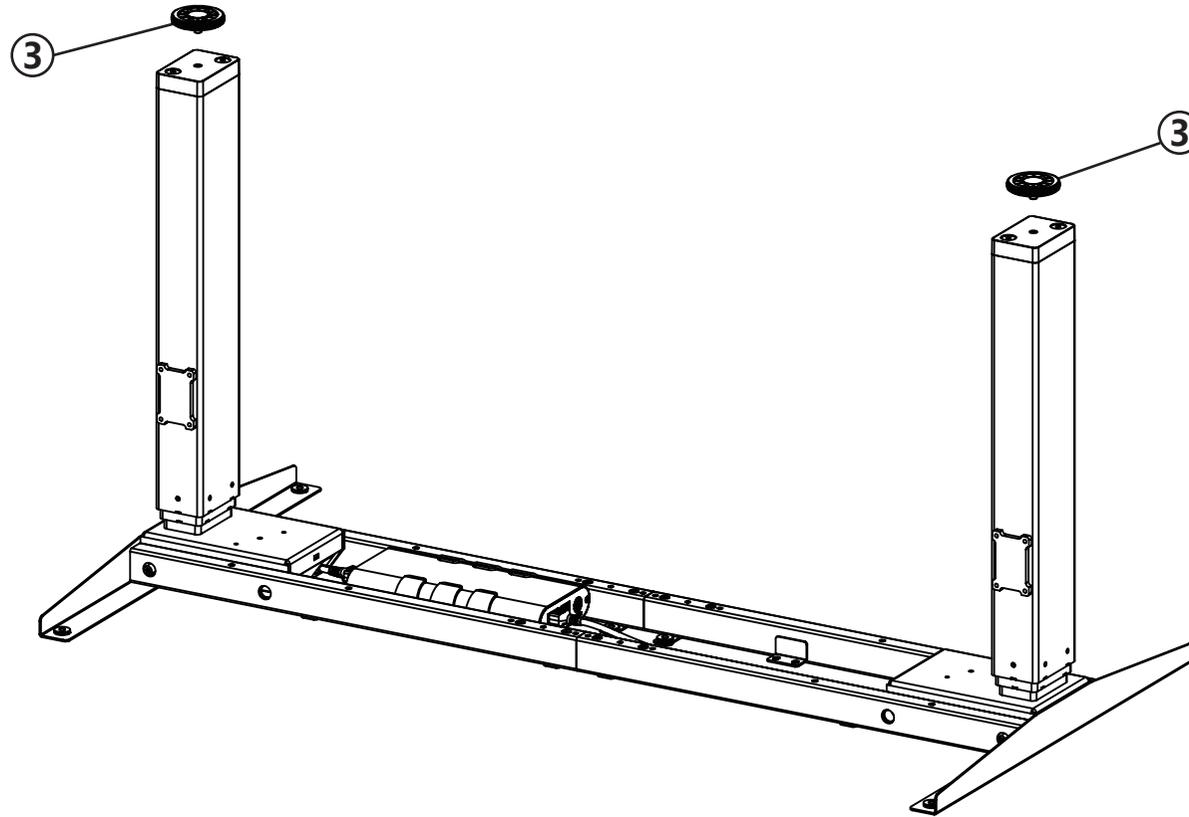

STEP 7:


B (16pcs)	G
	
M5x10mm	M3

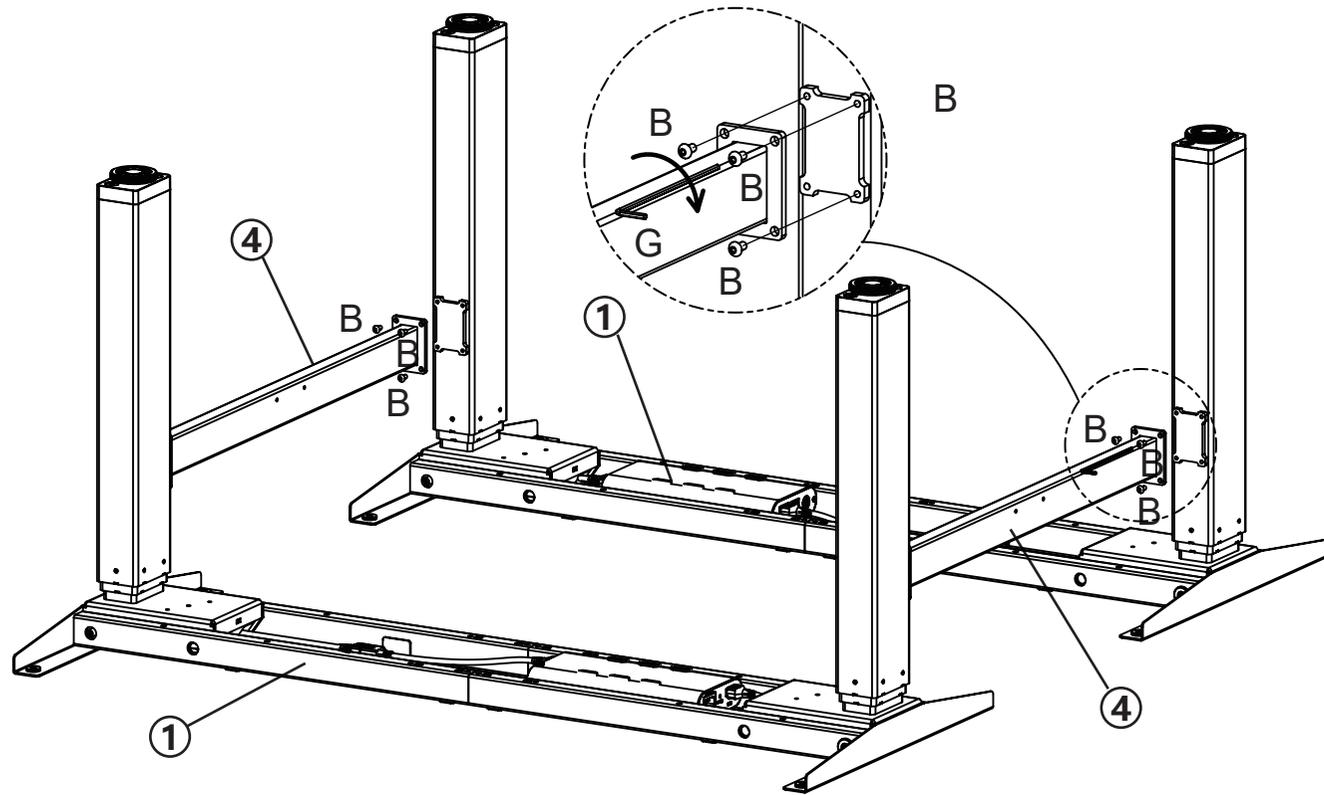

Agile+ Double Sided Desk


Assembly Instructions

STEP 8:

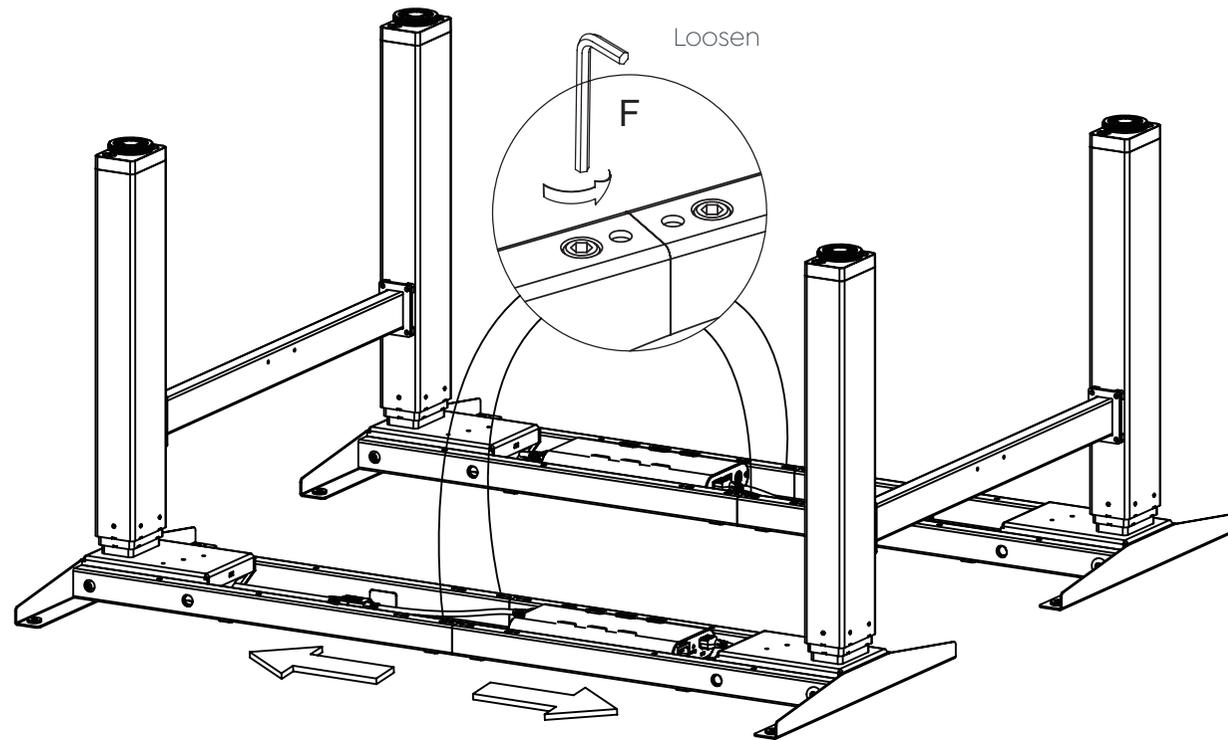

STEP 9:


B (4pcs)	G
	
M5x10mm	M3

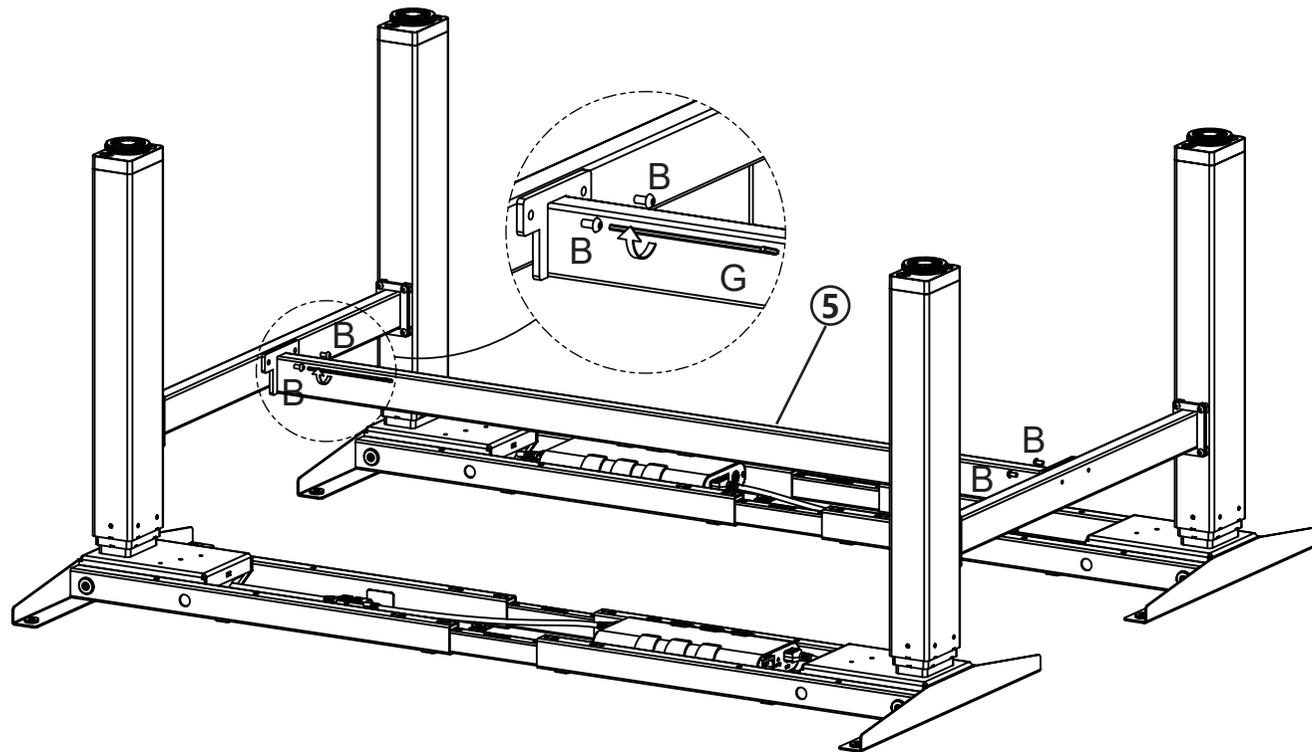


Agile+ Double Sided Desk

Assembly Instructions

STEP 10:

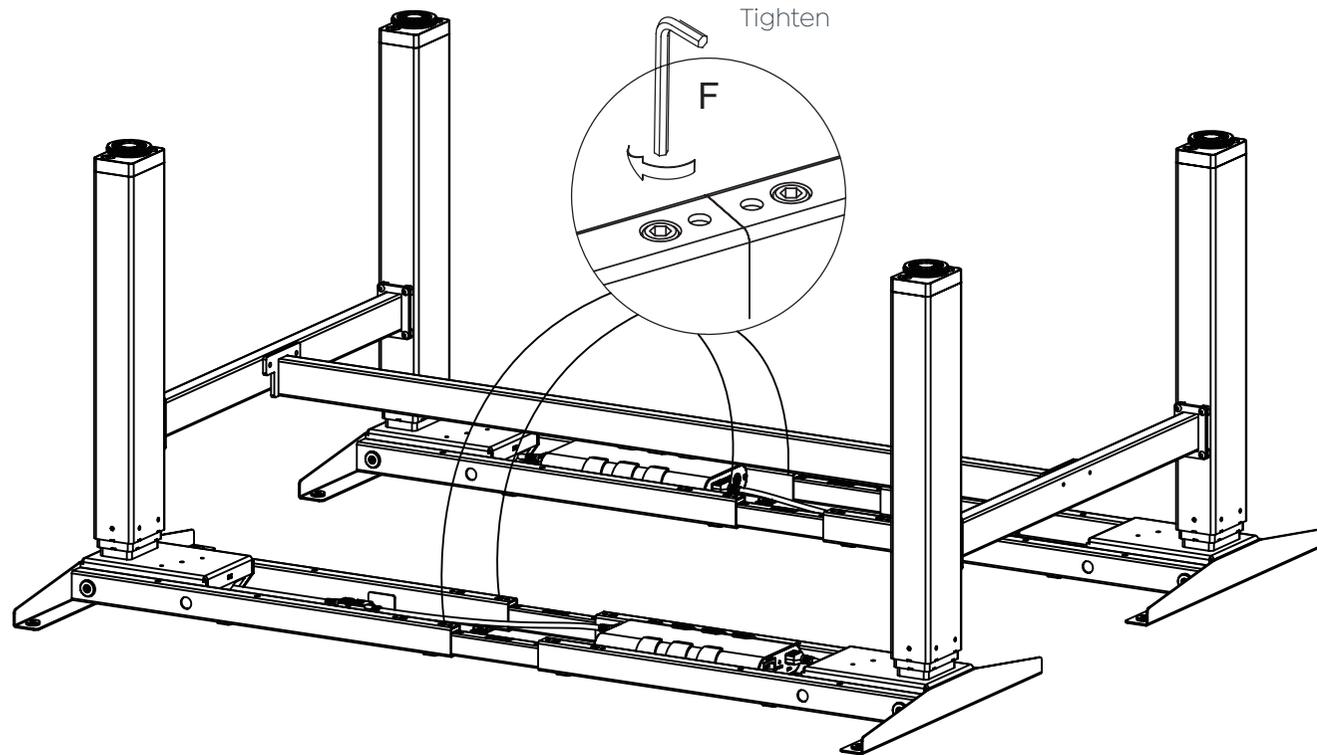


STEP 11:

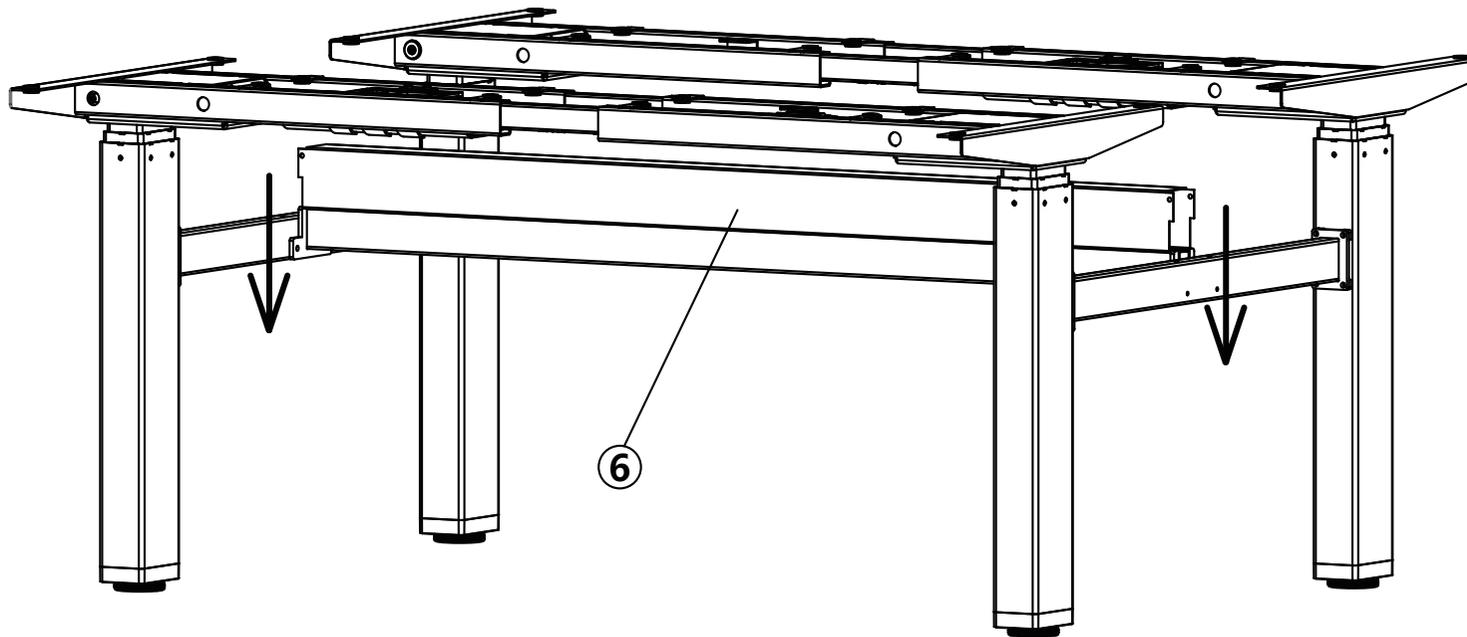



Agile+ Double Sided Desk

Assembly Instructions

STEP 12:

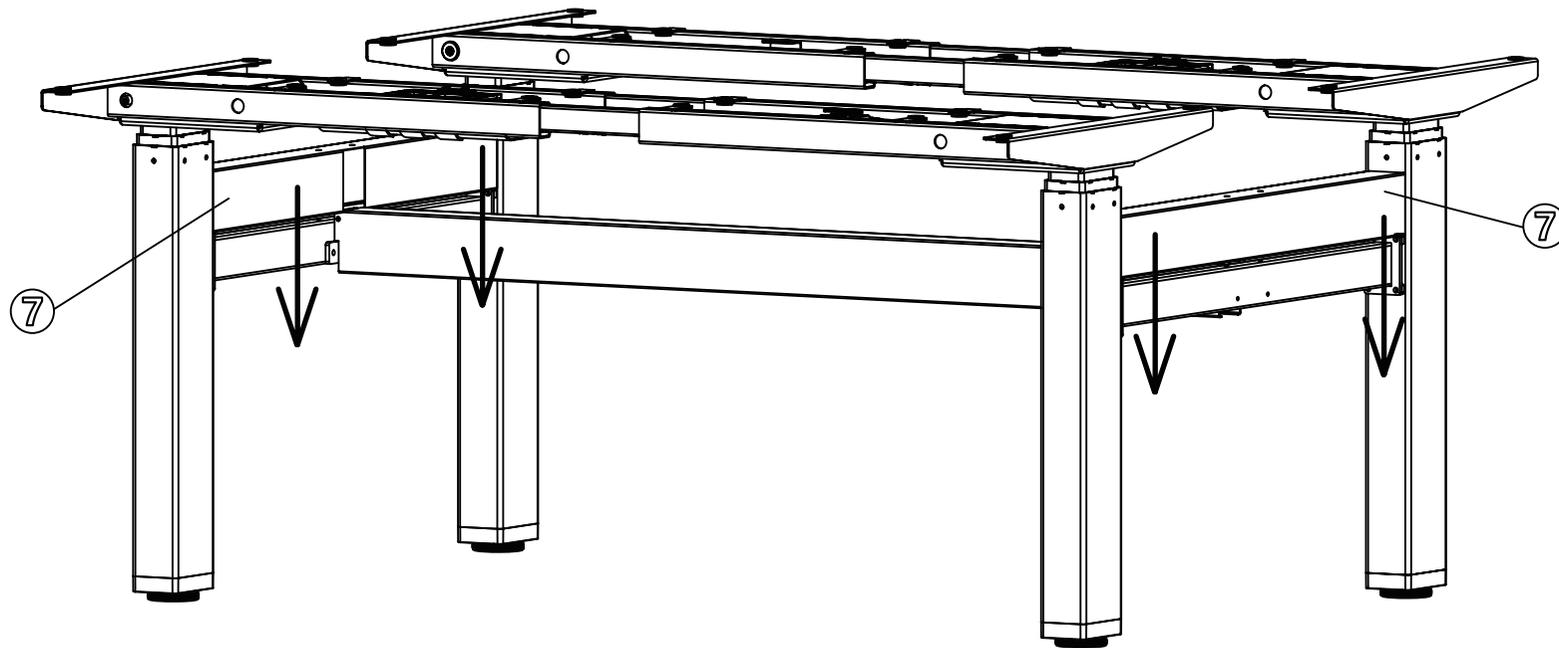



STEP 13:

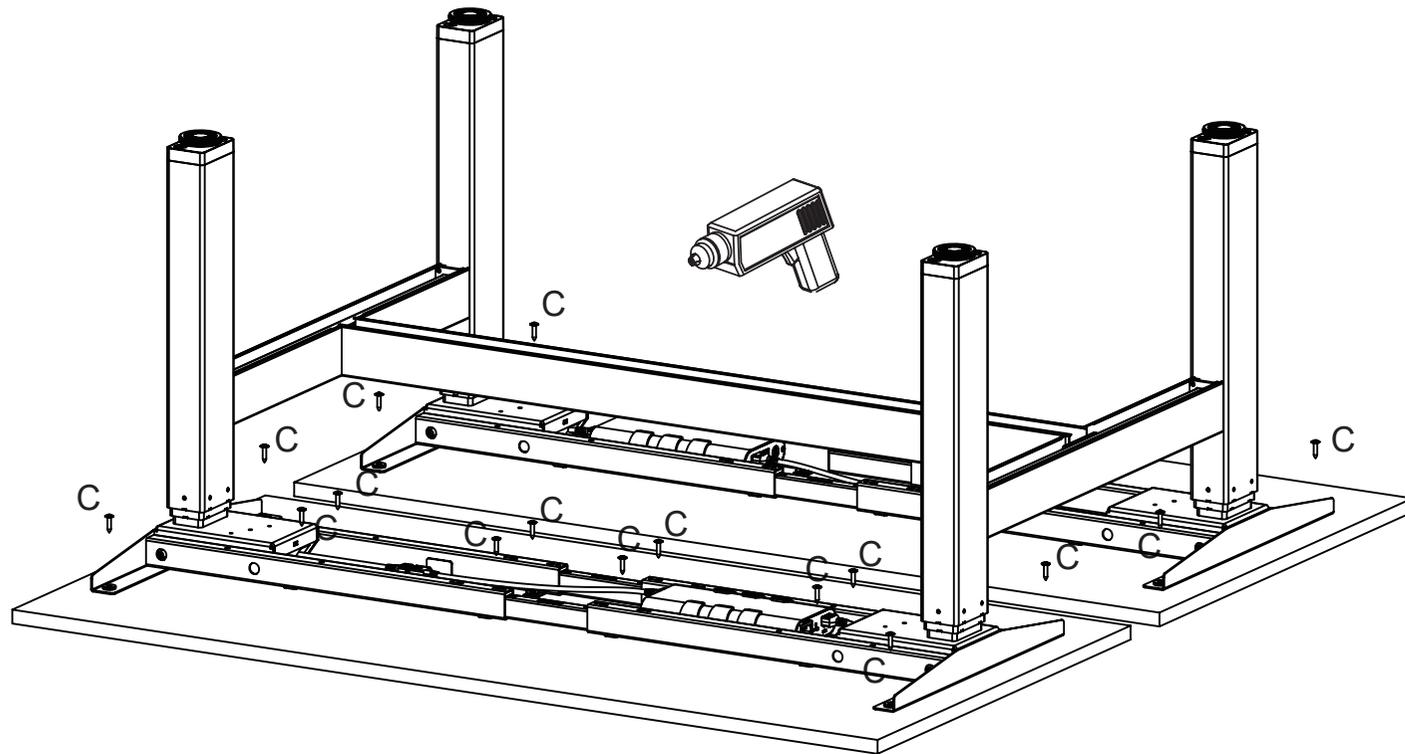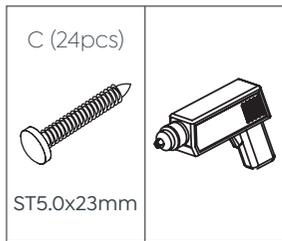


Agile+ Double Sided Desk

Assembly Instructions

STEP 14:

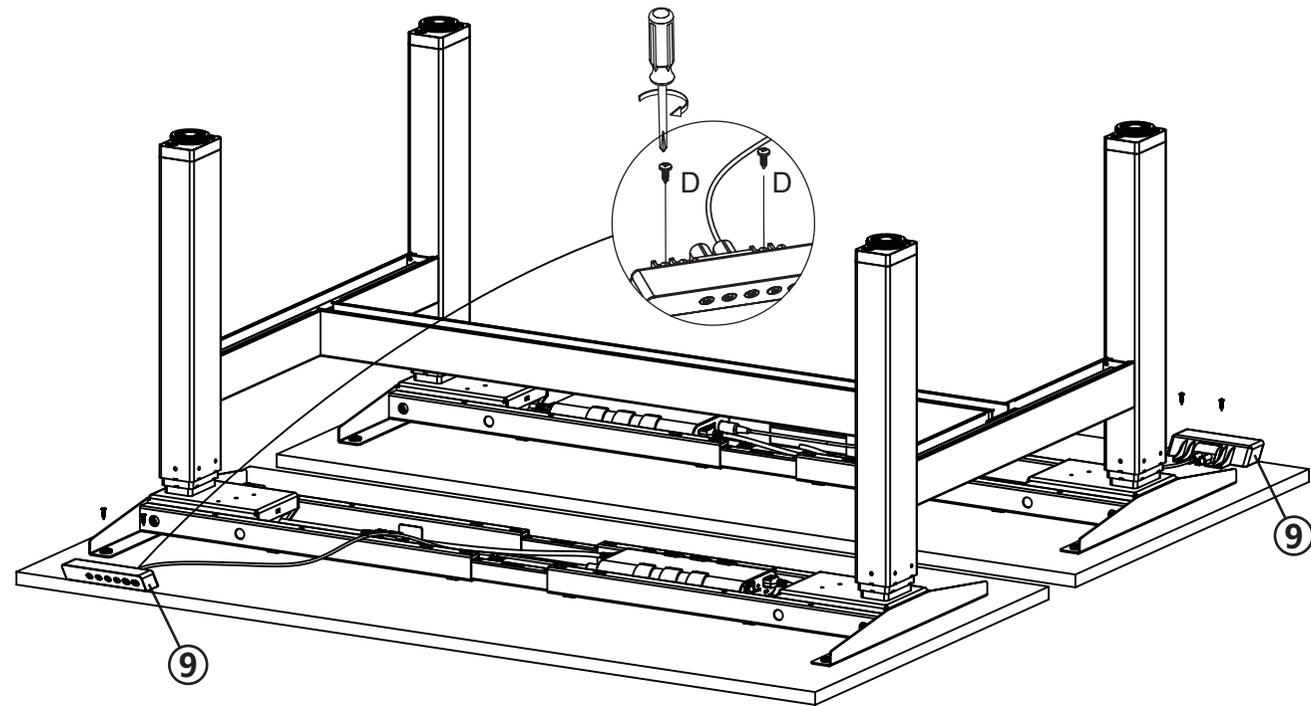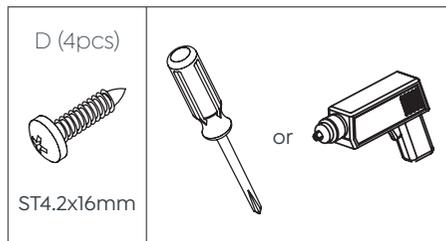

STEP 15:

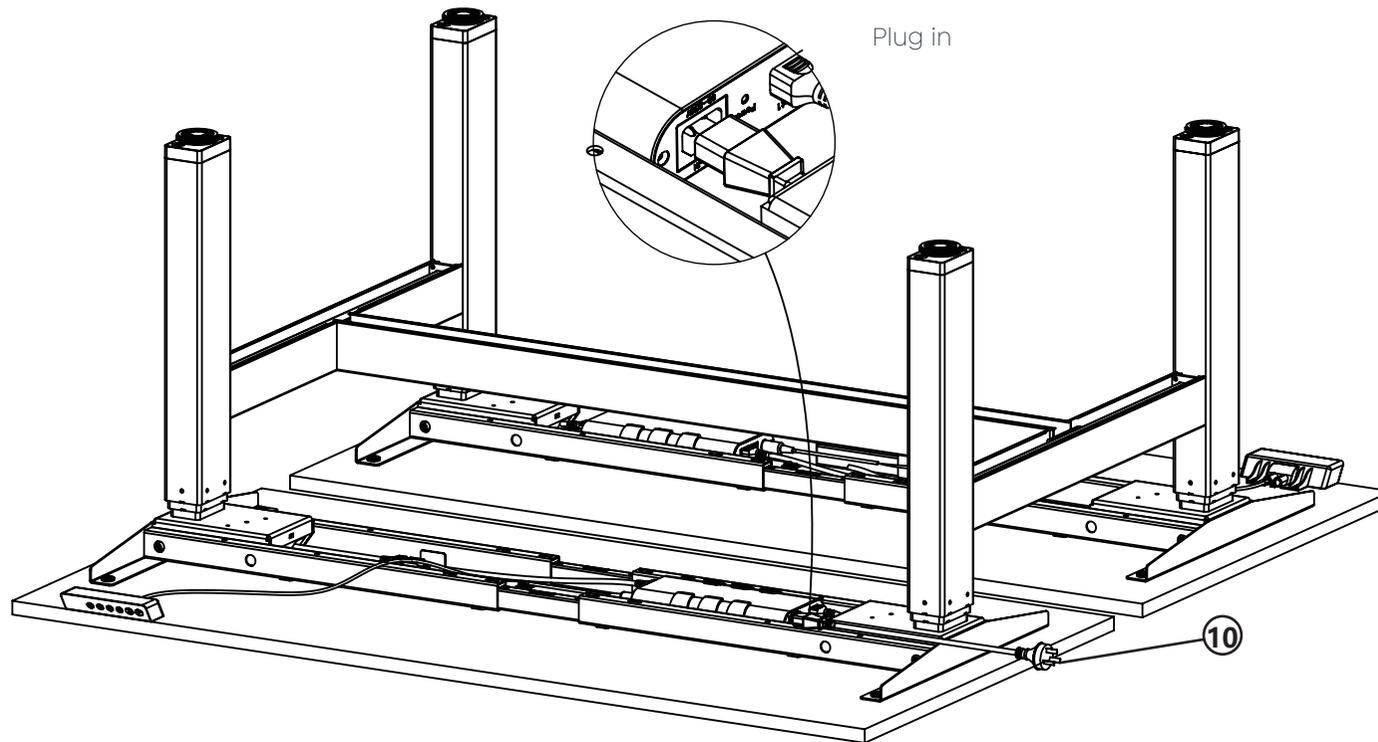


Agile+ Double Sided Desk

Assembly Instructions


STEP 16:

E (2pcs)	F
	
M8x20mm	M5

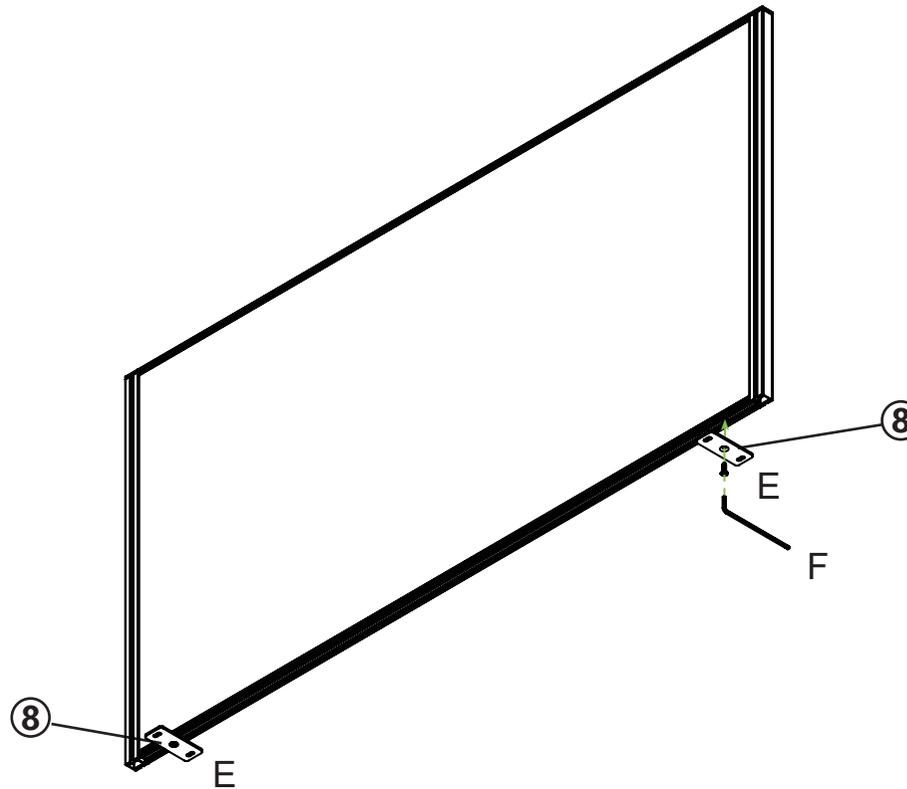

STEP 17:



B (4pcs)	F
	
M5x10mm	M5

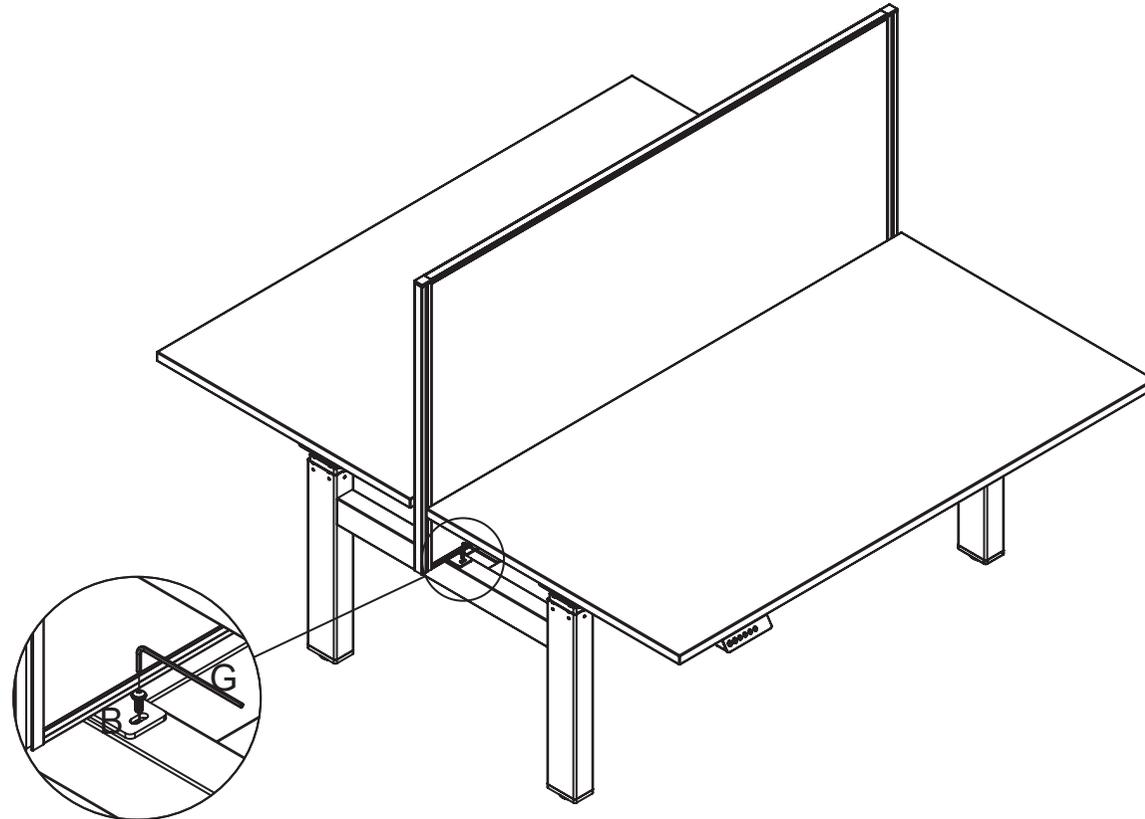


Agile+ Double Sided Desk

Assembly Instructions

STEP 18:

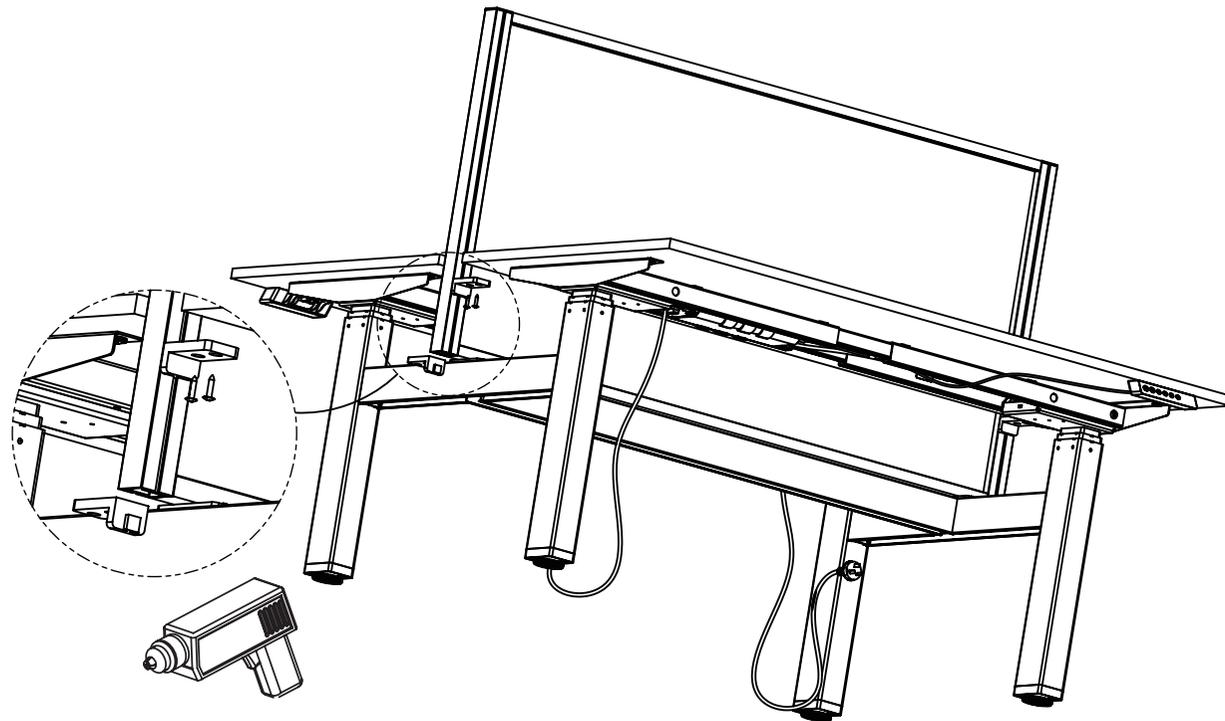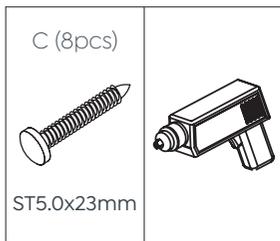


STEP 19:

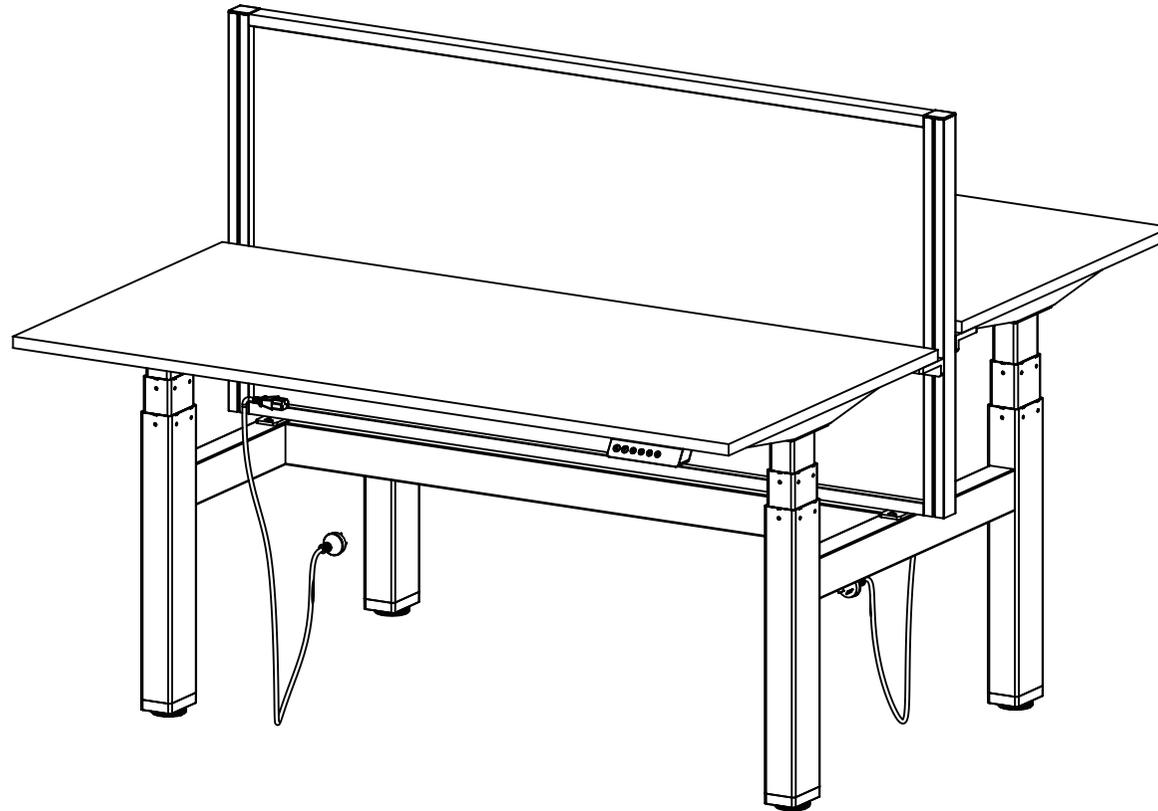

Agile+ Double Sided Desk

Assembly Instructions

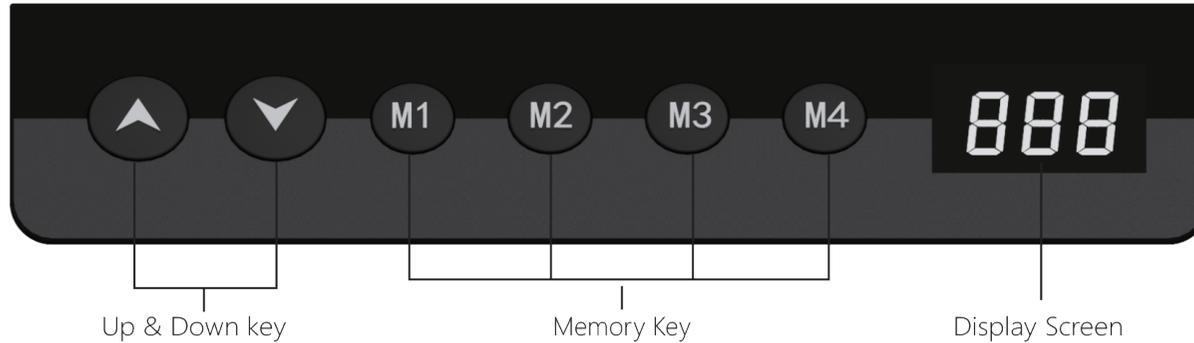

The whole handset surface is a button panel. If there is no press within 30 seconds, the screen is locked and M1/M2/M3/M4 keys are locked correspondingly, you should press Up or Down key first, it can be used when the display screen light up.

■ Up or Down Key

To adjust the height of the desk, keep pressing on "up" or "down" until it fits your best position.

■ Display Screen

Display the height value of the desk.

■ Memory Key (M1/ M2/ M3/ M4)

After setting memory keys, the desk can lift automatically to memory height.

※ How to set memory mode

Please keep pressing M1/M2/M3/M4 key for 5 seconds, until "be" sound, the memory height is successfully saved. Then press M1/M2/M3/M4, the desk moves to memory height automatically.


■ Safety Function

When the desktop is on the rise or down, encountered reverse resistance, the desk will rebound.

■ Handset shows error code and solution

Error code	Fault cause	Solution
ER1	Motor stop	Power off and restart. If fault still exists, it is motor problem.
ER2	Synchro error beyond 15mm	Power off and restart. If handset display RST(DOWN key unlocked), keep touching DOWN key to the lowest normal number.
ER3	Cable fault	Check motor cable off or broken, power off and restart.
ER4	Communication fault	Check cables for handset and controller, power off and restart.
ER5	Overload protection	2 legs Load>180kg or 3 legs load>160kg, display ER5. Lighten loads, power off and restart.
Hot	Run continuously for 2.5 to 5 minutes.	Overload, power protection, automatic recovery after five minutes

■ Setting solution for desk function

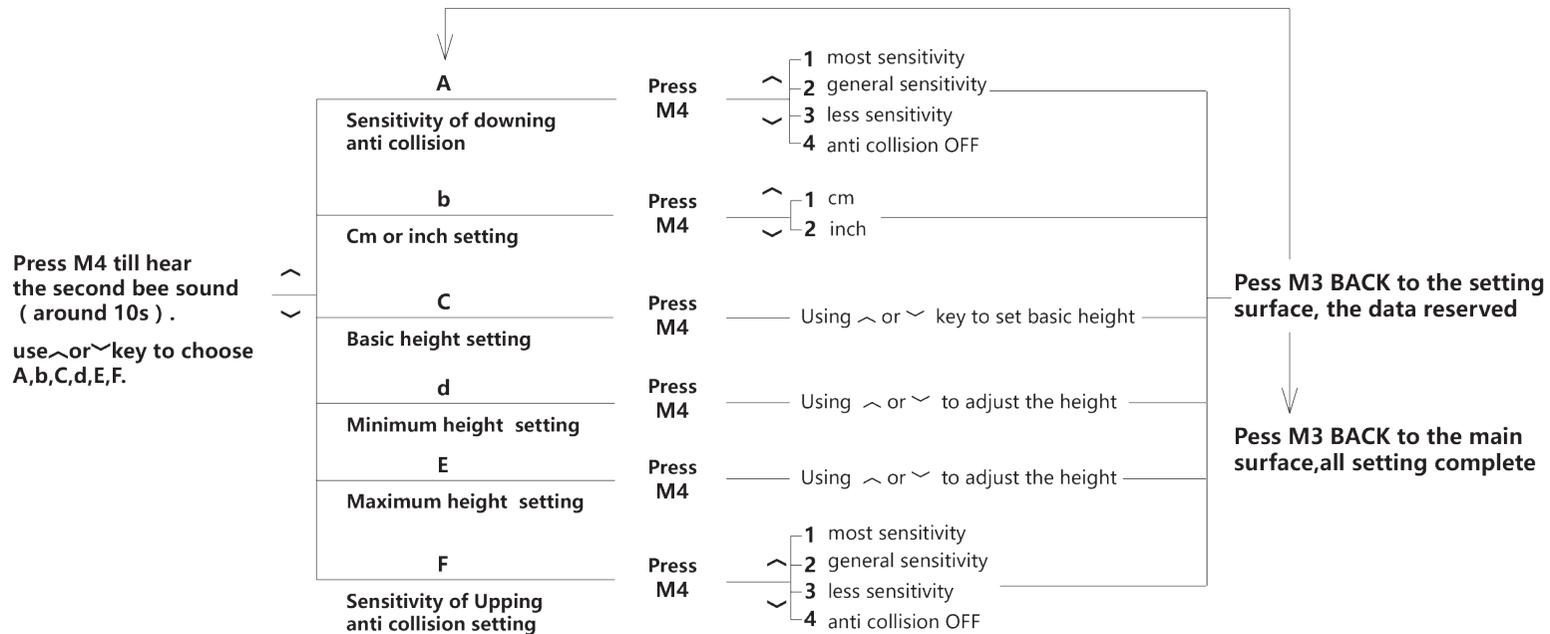




Sydney 02 8188 2732
Melbourne 03 9111 0315
Brisbane 07 3733 1923
Adelaide 08 7111 0810
Perth 08 9468 2707

info@olgoffice.com

myolg.online | olgoffice.com | officedesigner.net | motionoffice.com

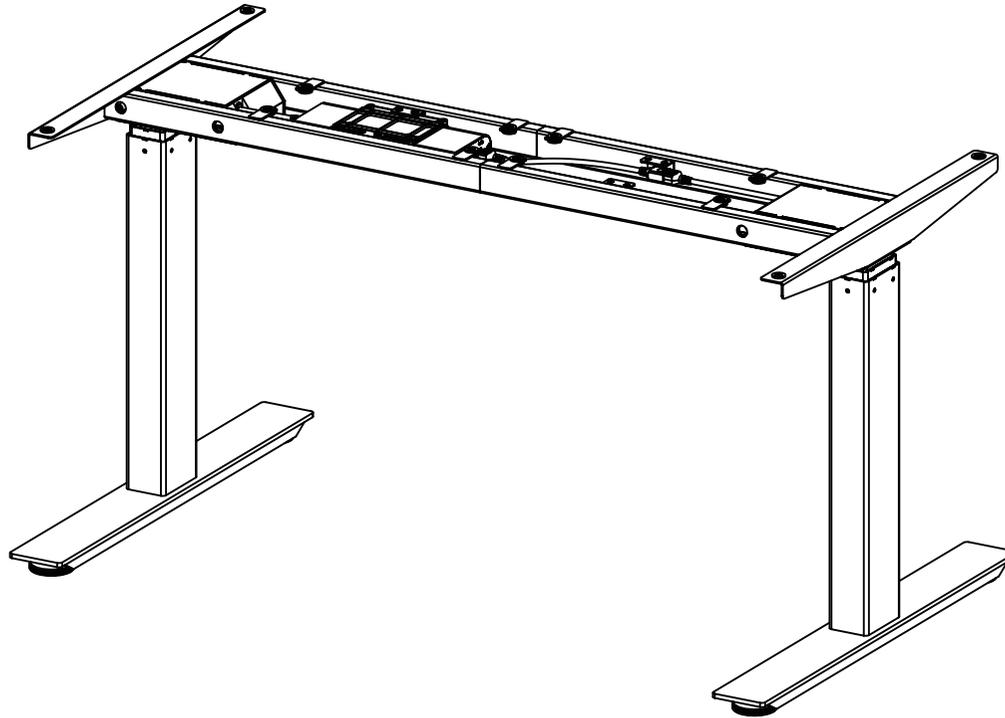


Agile+ Single Sided Desk

Assembly Instructions


Agile+ Single Sided Desk

Components List

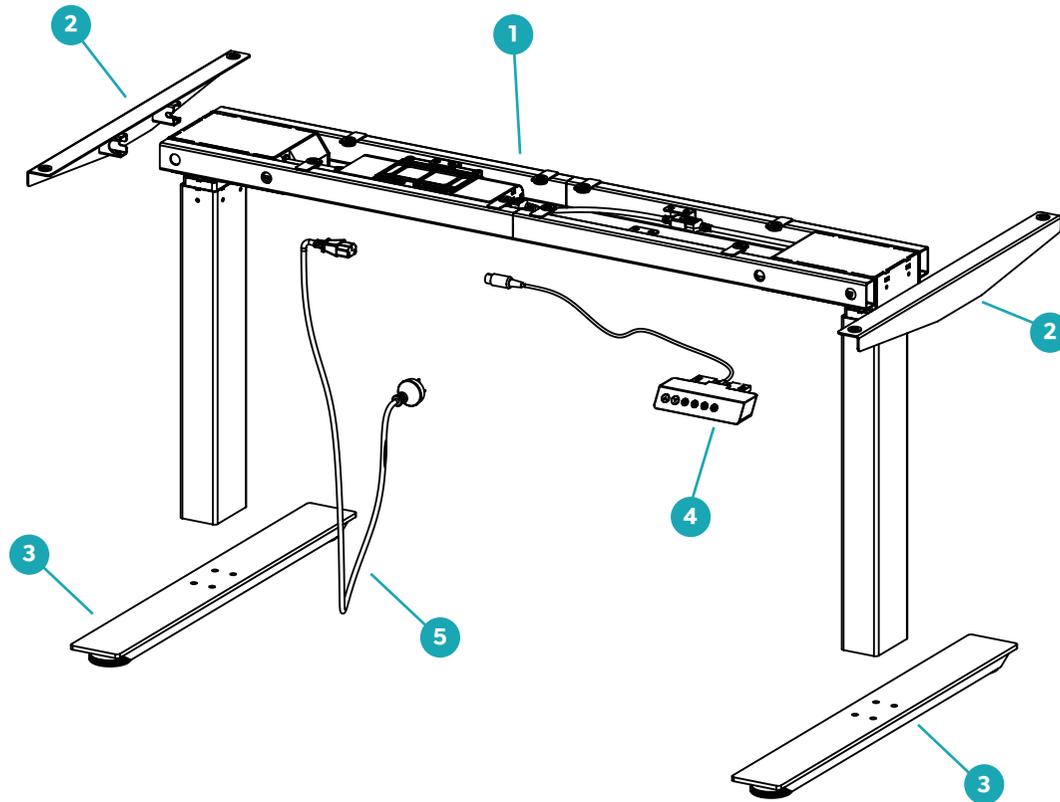


Check List

NO.	1	2	3	4	5
QTY.	1	2	2	1	1

 A (4pcs)	B (8pcs)	C (12pcs)	D (2pcs)	E
				
M6x12mm	M8x20mm	ST5.0x23mm	ST4.2x16mm	M5

STEP 1:

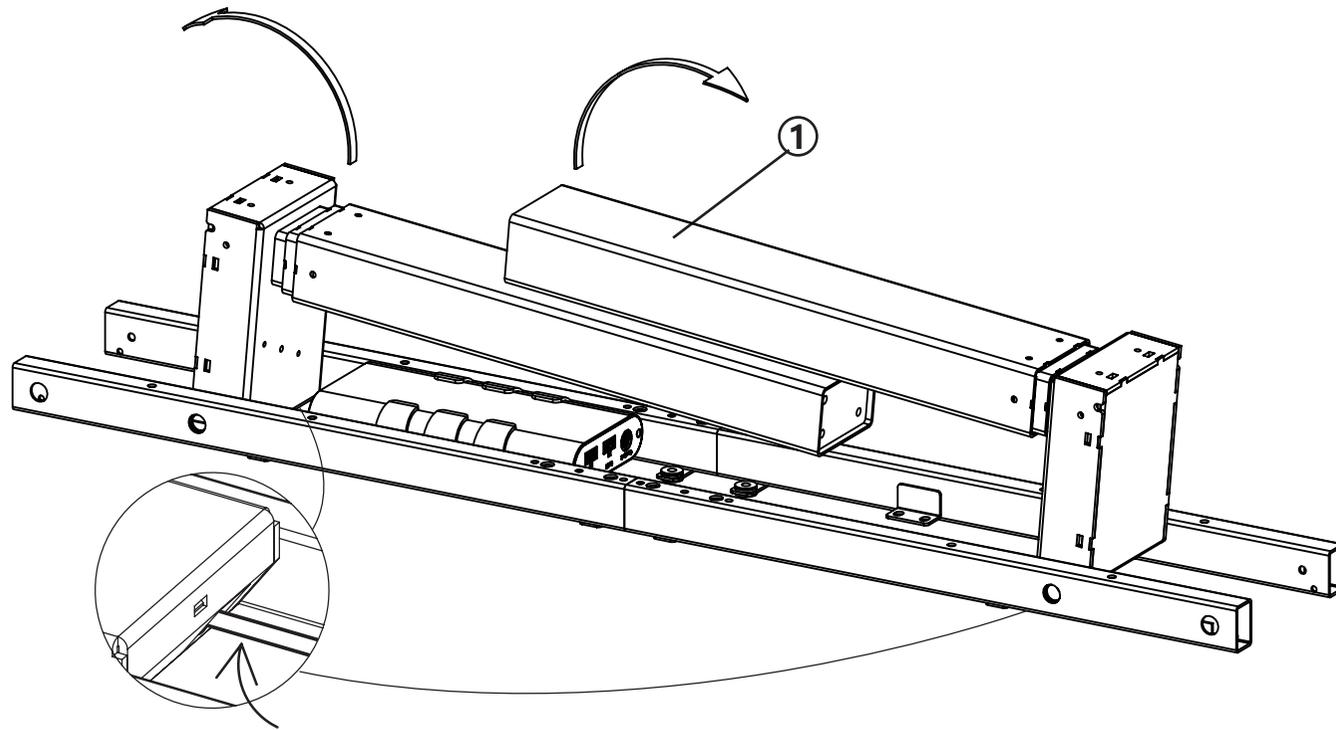


Be careful with the cable.

Agile+ Single Sided Desk


Assembly Instructions

STEP 2:

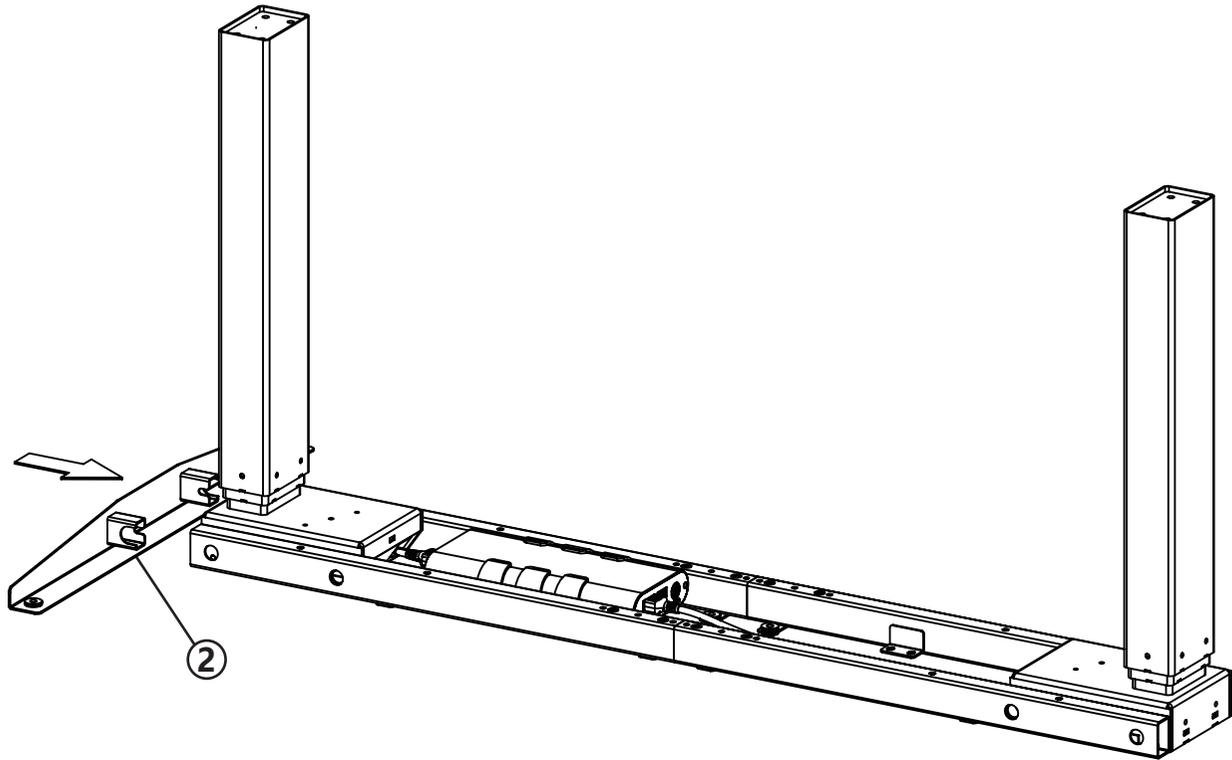

STEP 3:

A (2pcs)	E
	
M6x12mm	M5

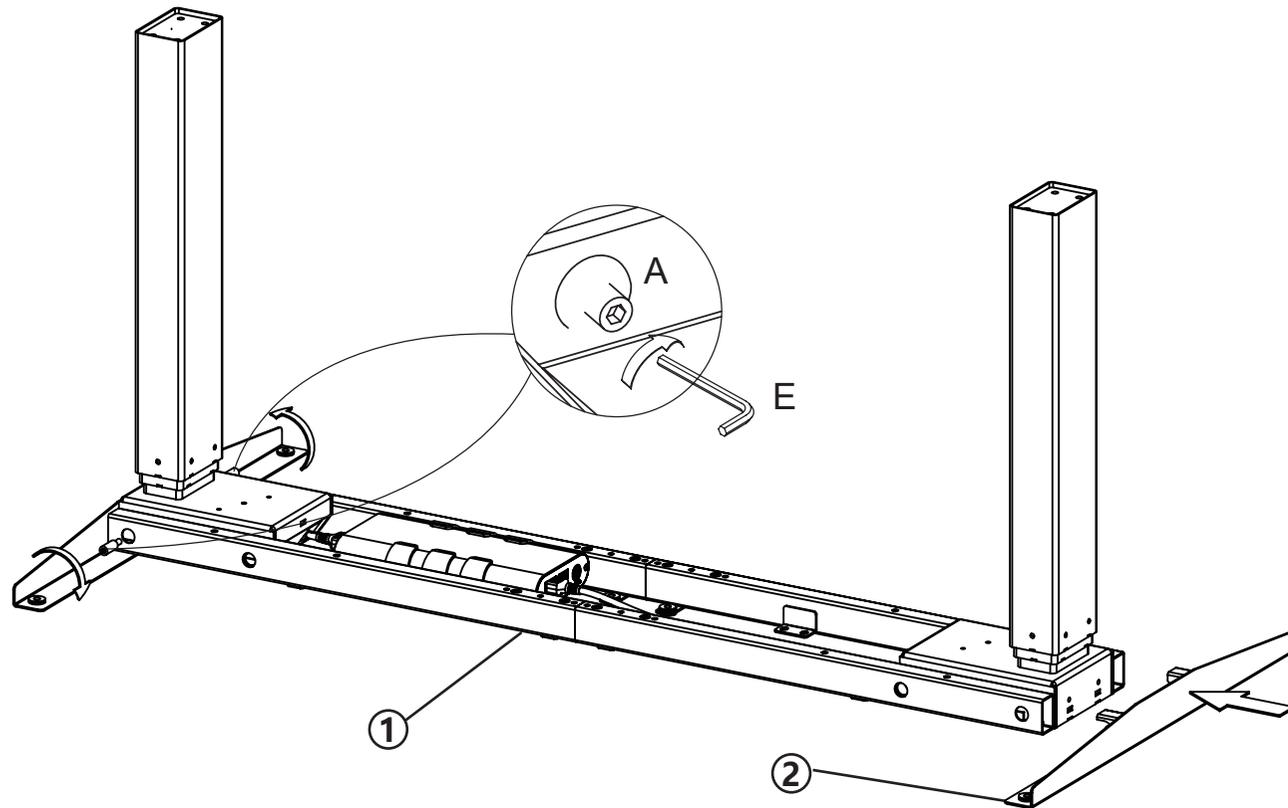


Agile+ Single Sided Desk


Assembly Instructions

STEP 4:

A (2pcs)	E
	
M6x12mm	M5

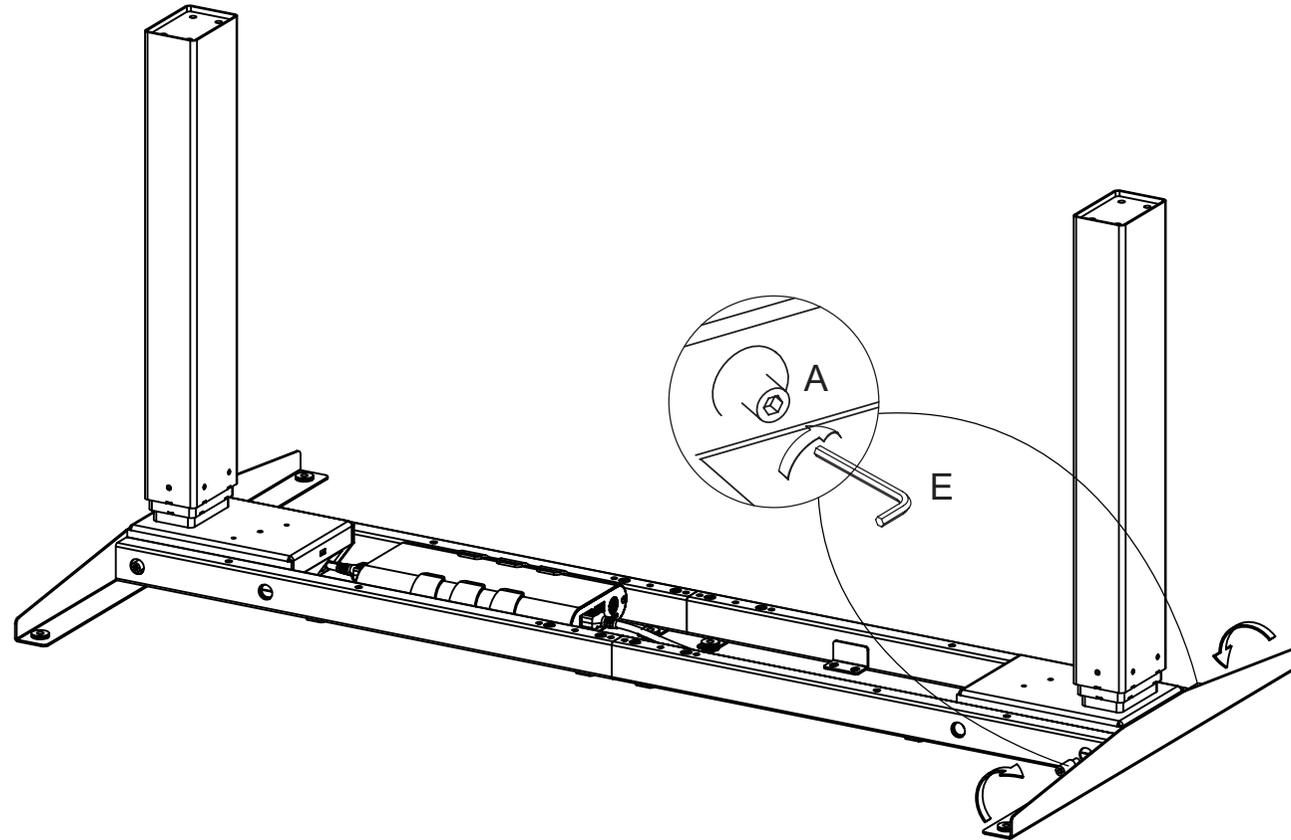



STEP 5:

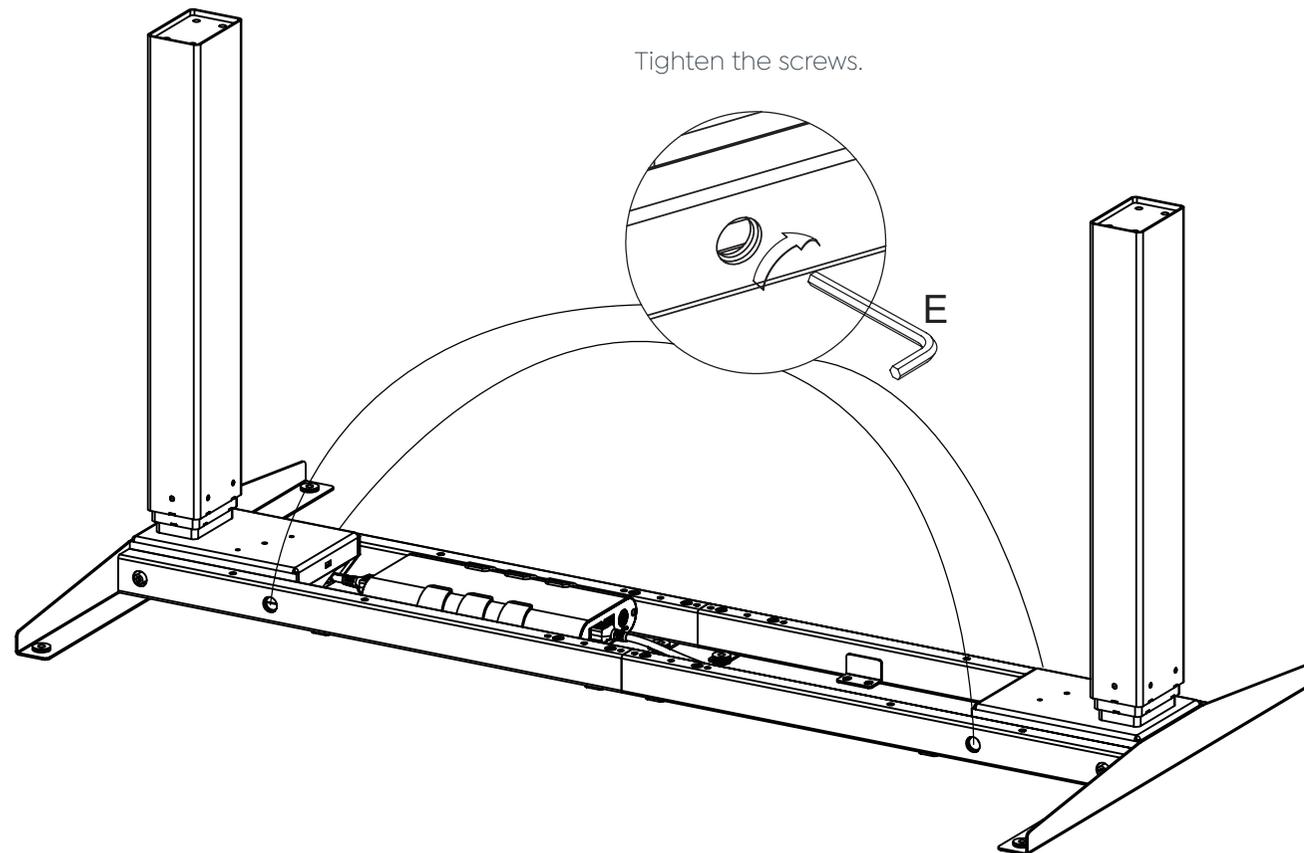


Agile+ Single Sided Desk

Assembly Instructions

STEP 6:

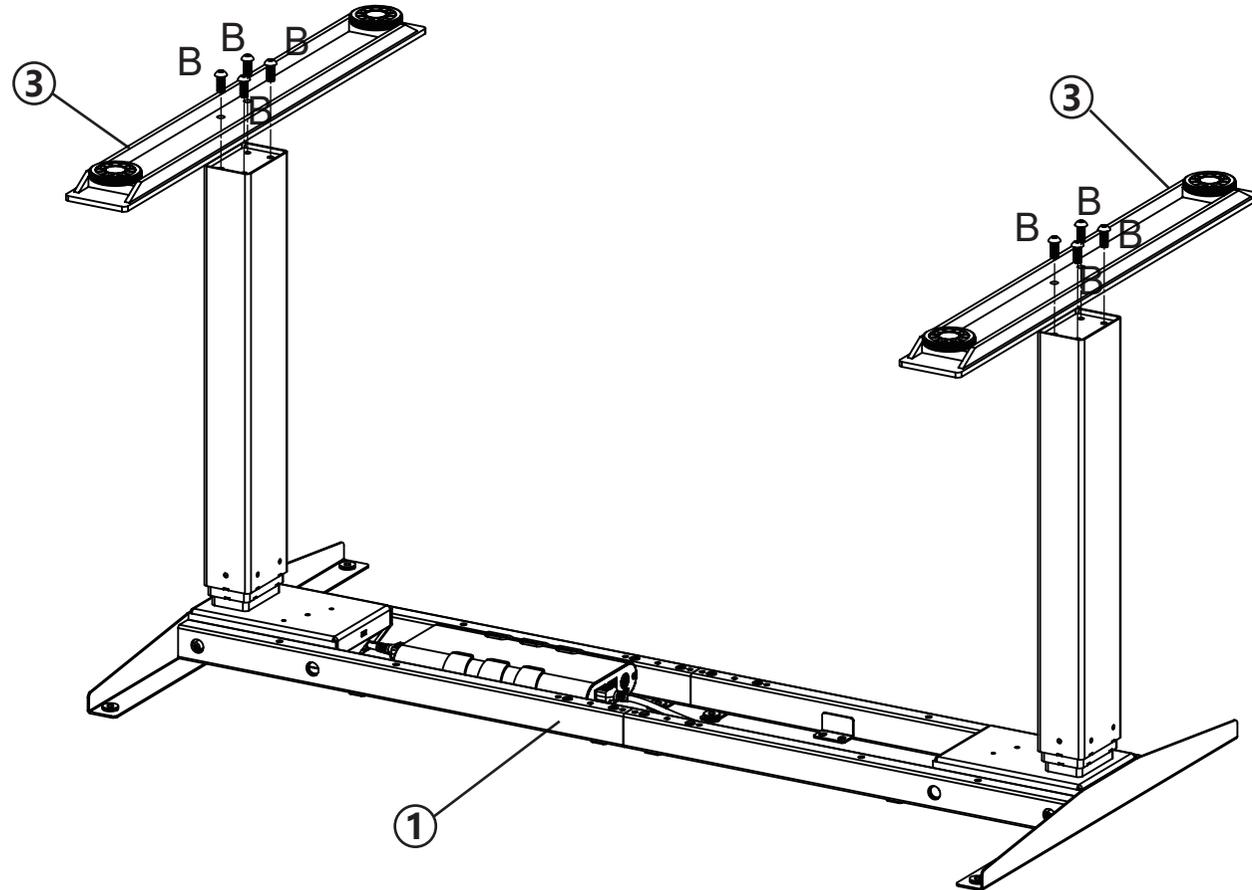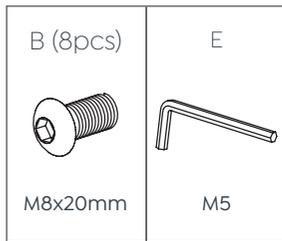


STEP 7:

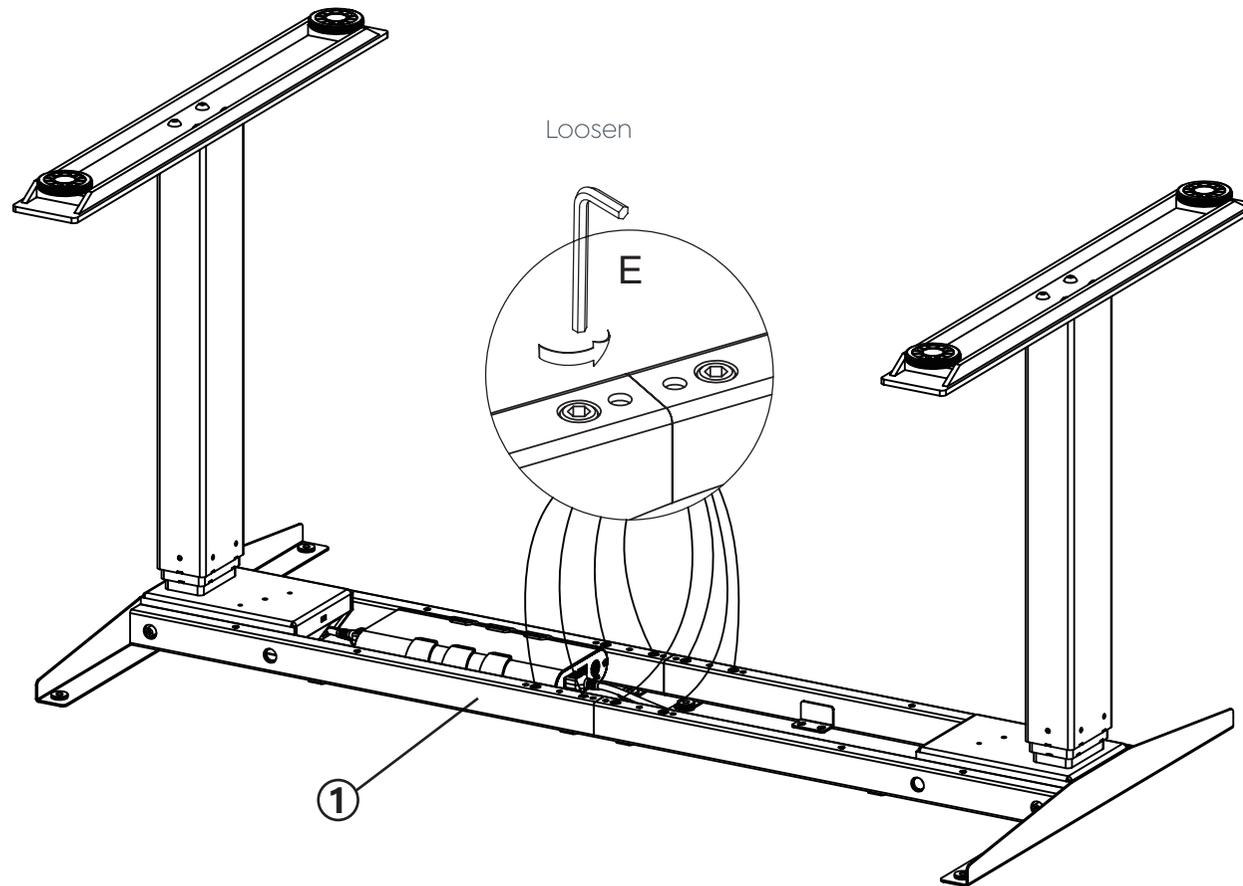



Agile+ Single Sided Desk

Assembly Instructions

STEP 8:

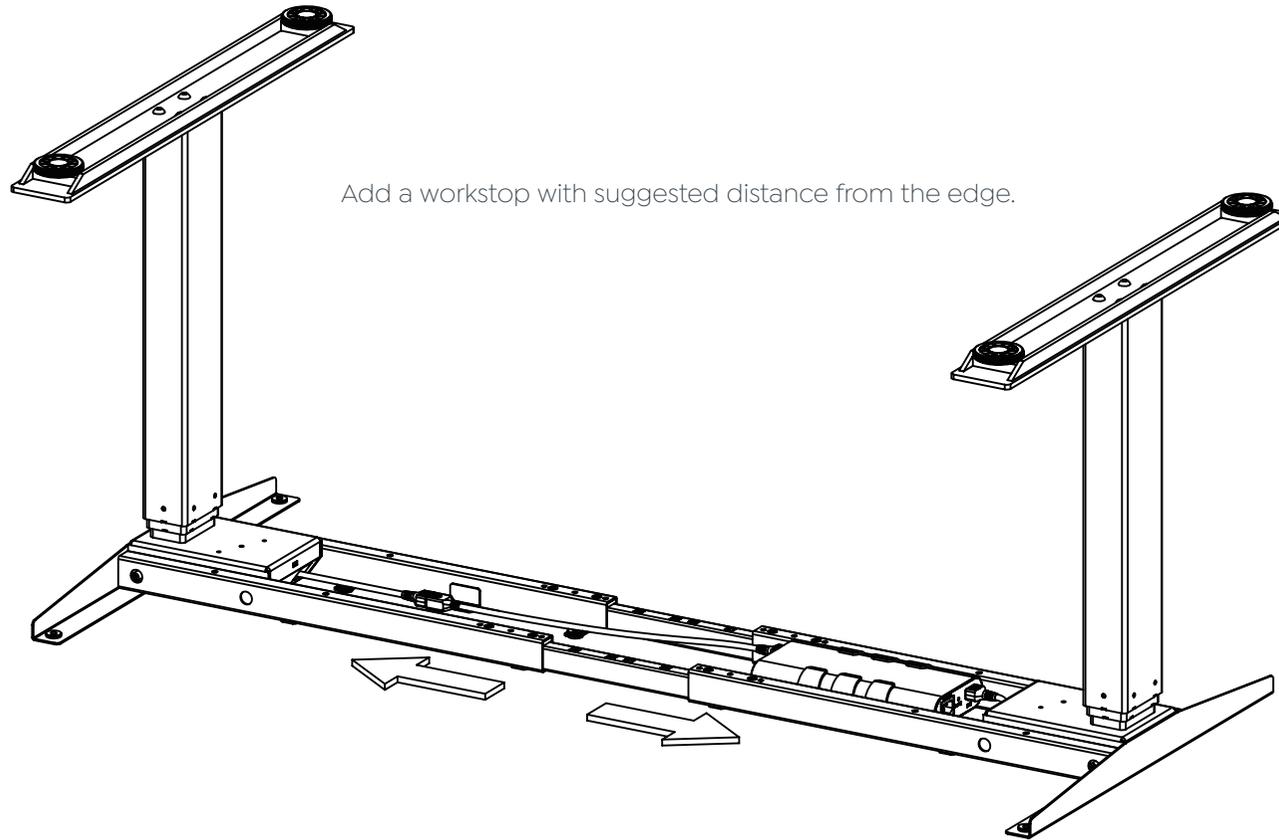



STEP 9:

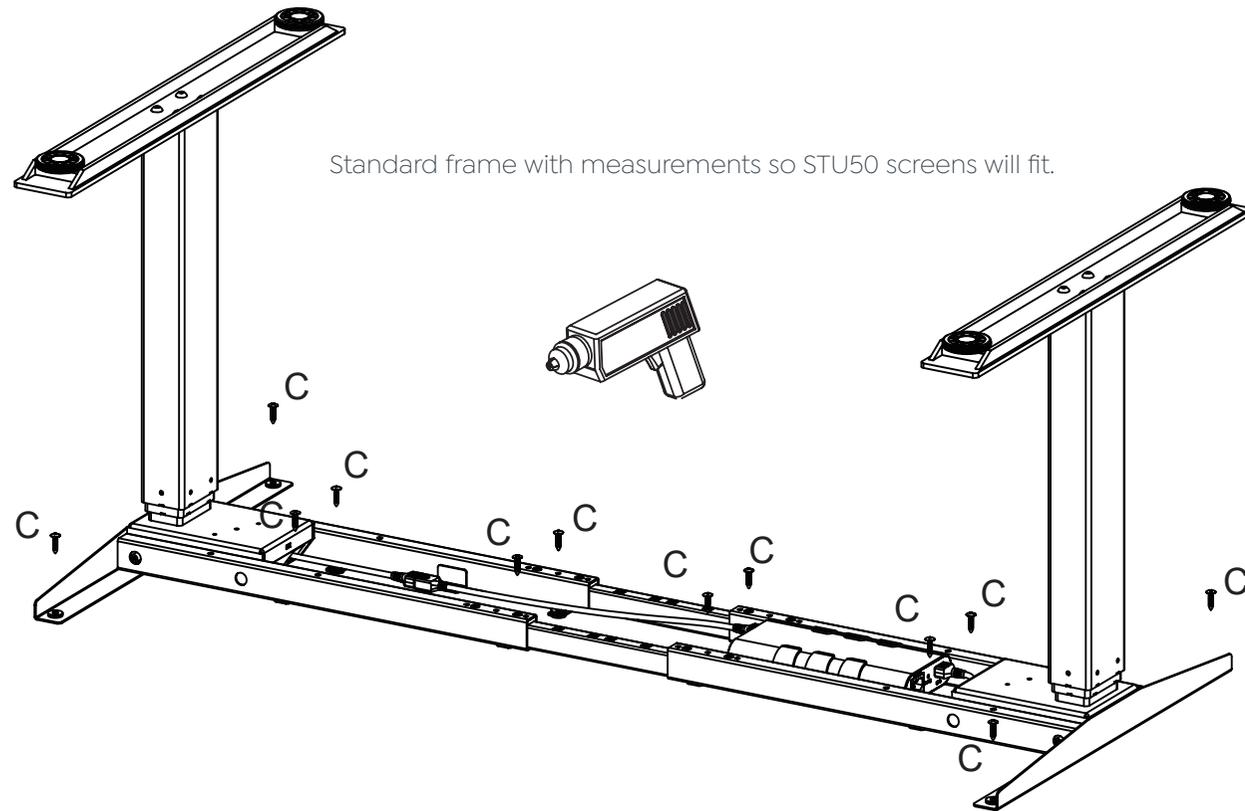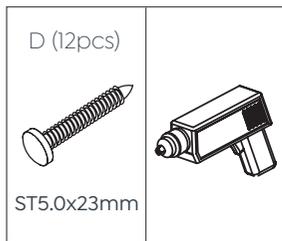


Agile+ Single Sided Desk

Assembly Instructions

STEP 10:

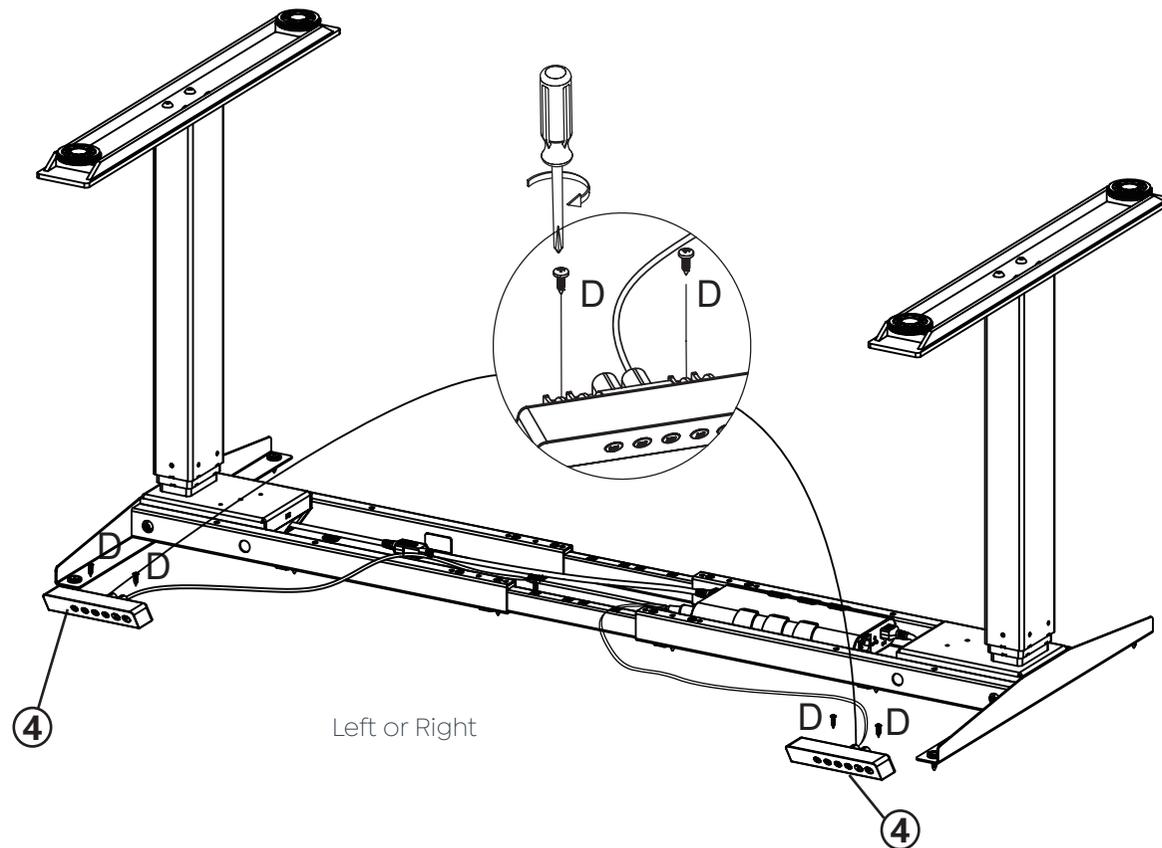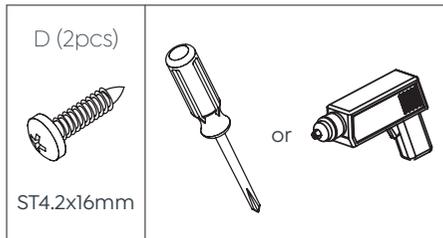


STEP 11:

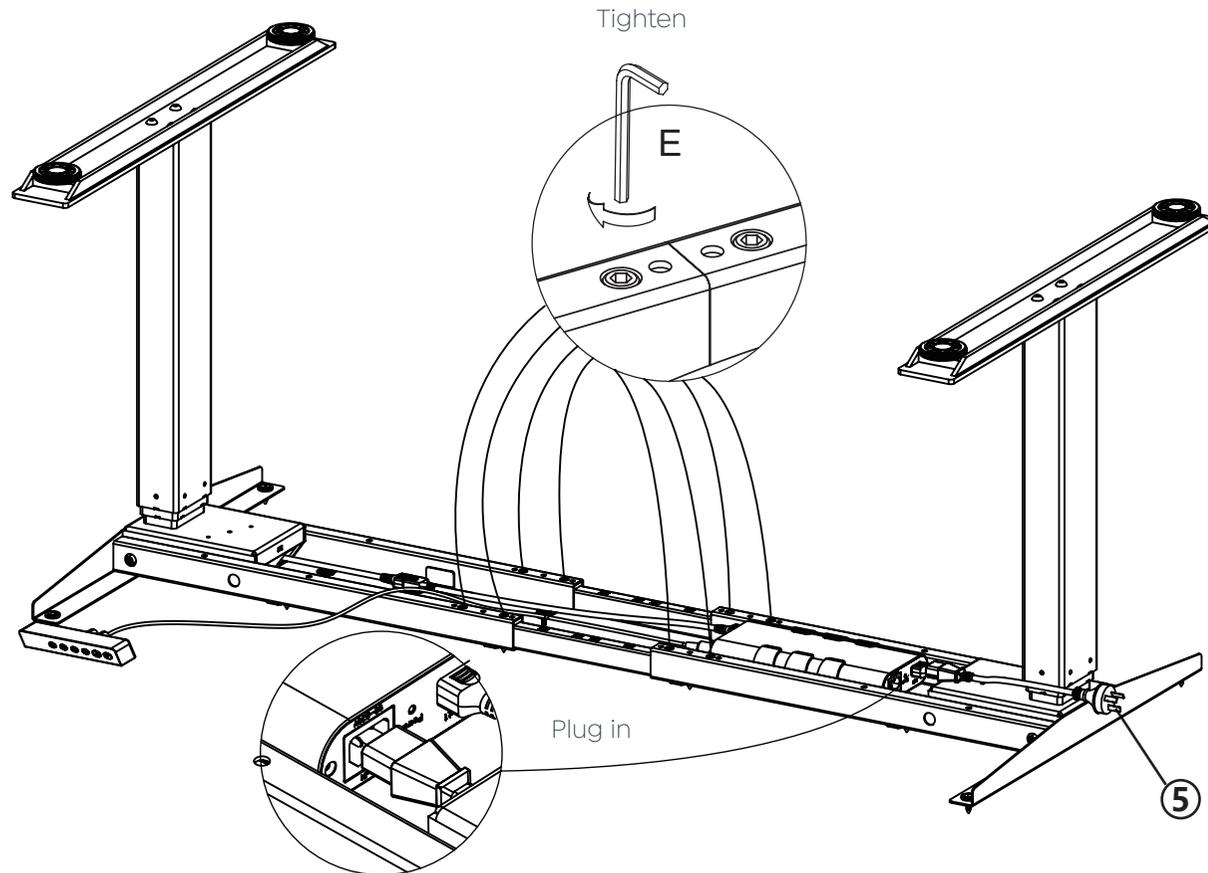


Agile+ Single Sided Desk

Assembly Instructions

STEP 12:

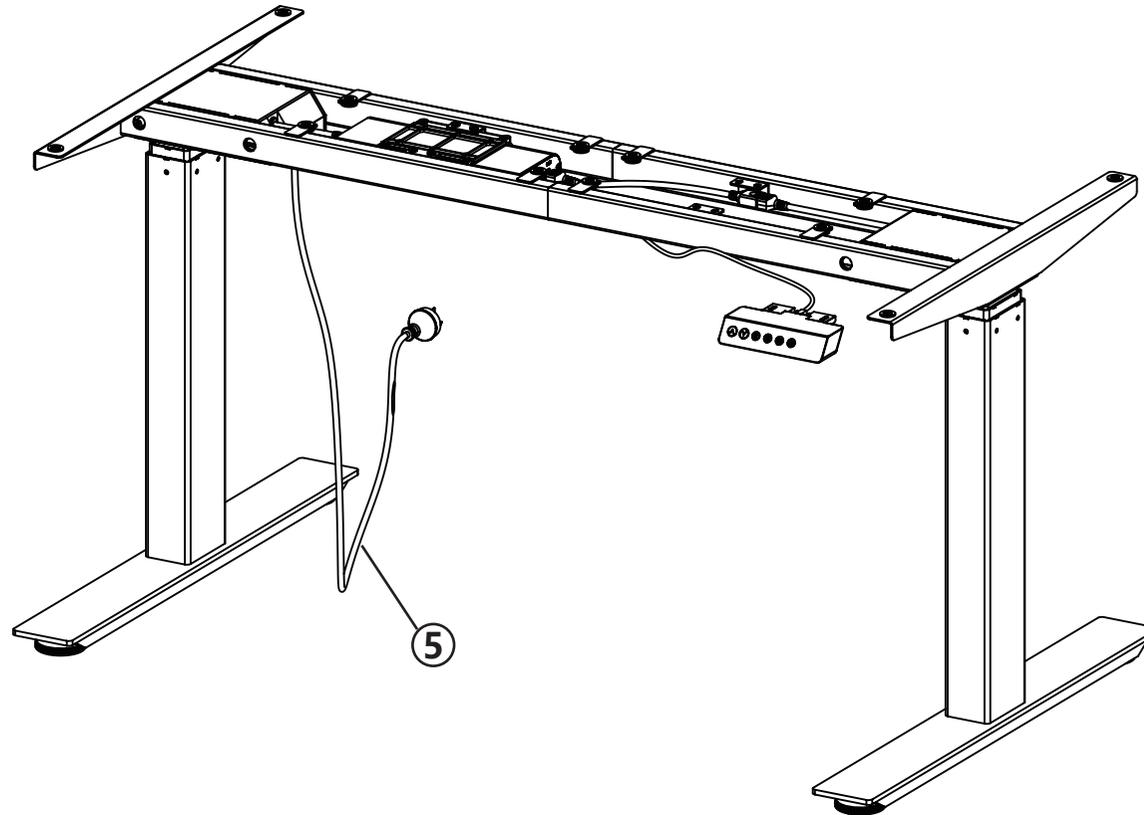

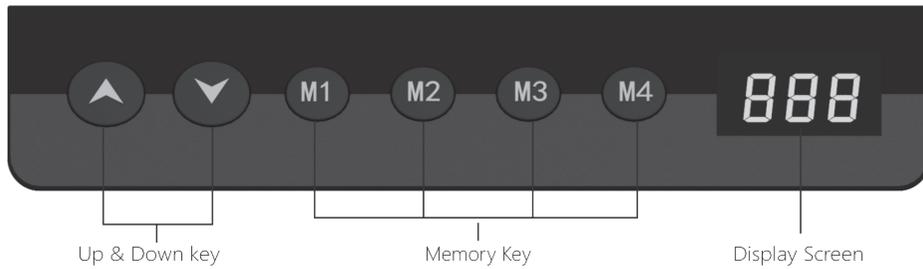

The whole handset surface is a button panel. If there is no press within 30 seconds, the screen is locked and M1/M2/M3/M4 keys are locked correspondingly, you should press Up or Down key first, it can be used when the display screen light up.

■ Up or Down Key

To adjust the height of the desk, keep pressing on "up" or "down" until it fits your best position.

■ Display Screen

Display the height value of the desk.

■ Memory Key (M1/ M2/ M3/ M4)

After setting memory keys, the desk can lift automatically to memory height.

※ How to set memory mode

Please keep pressing M1/M2/M3/M4 key for 5 seconds, until "be" sound, the memory height is successfully saved. Then press M1/M2/M3/M4, the desk moves to memory height automatically.


■ Safety Function

When the desktop is on the rise or down, encountered reverse resistance, the desk will rebound.

■ Handset shows error code and solution

Error code	Fault cause	Solution
ER1	Motor stop	Power off and restart. If fault still exists, it is motor problem.
ER2	Synchro error beyond 15mm	Power off and restart. If handset display RST(DOWN key unlocked), keep touching DOWN key to the lowest normal number.
ER3	Cable fault:	Check motor cable off or broken, power off and restart.
ER4	Communication fault	Check cables for handset and controller, power off and restart.
ER5	Overload protection	2 legs Load>180kg or 3 legs load>160kg, display ER5. Lighten loads, power off and restart.
Hot	Run continuously for 2.5 to 5 minutes.	Overload, power protection, automatic recovery after five minutes

■ Setting solution for desk function

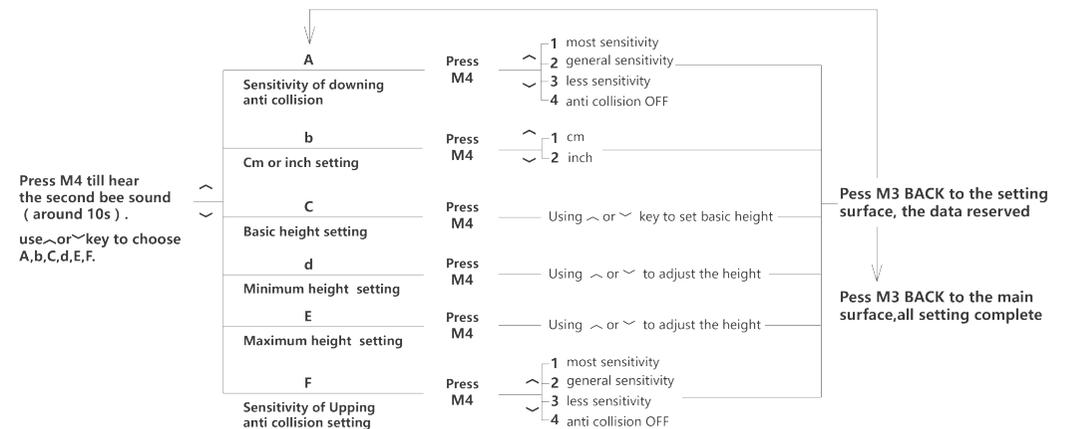



Sydney 02 8188 2732
Melbourne 03 9111 0315
Brisbane 07 3733 1923
Adelaide 08 7111 0810
Perth 08 9468 2707

info@olgoffice.com


myolg.online | olgoffice.com | officedesigner.net | motionoffice.com




freeway

Agile


Installation Guide - Electric 3 Column

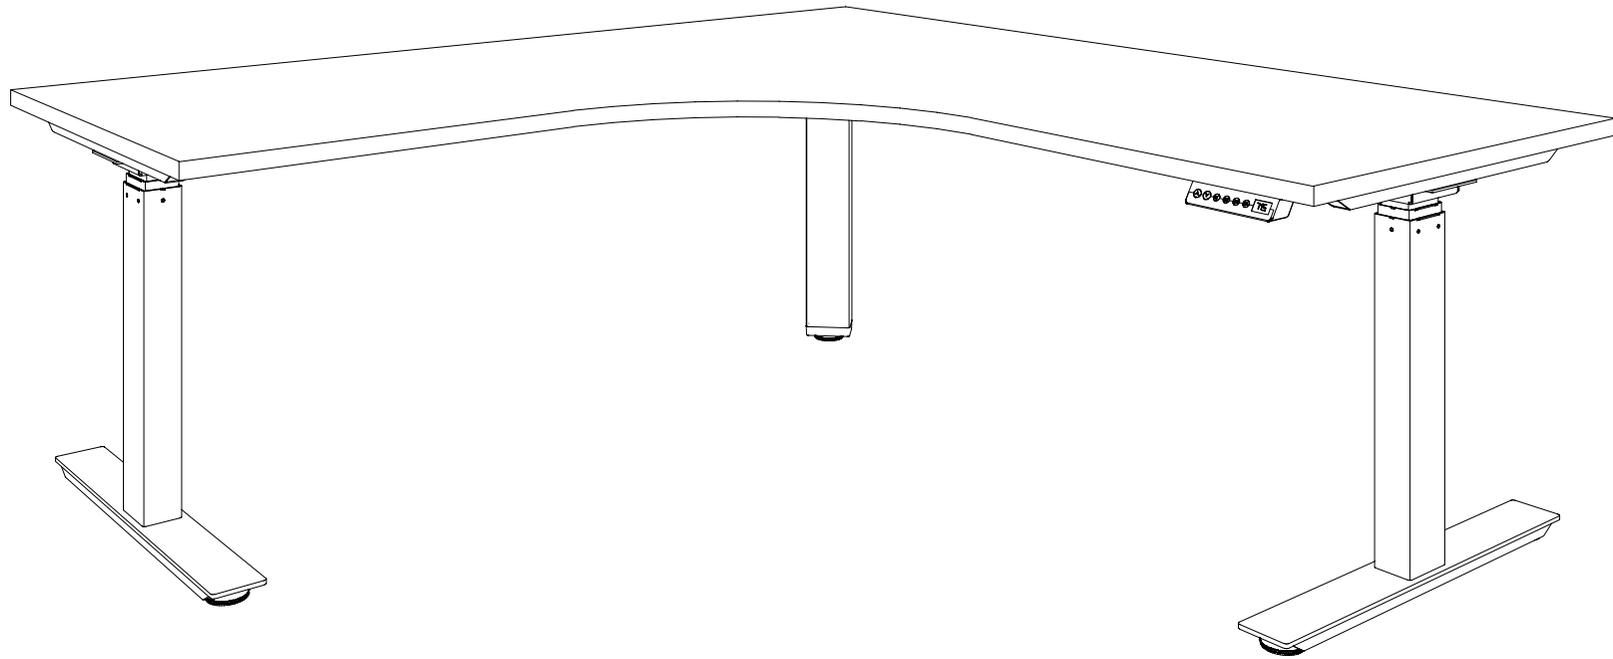


Parts:

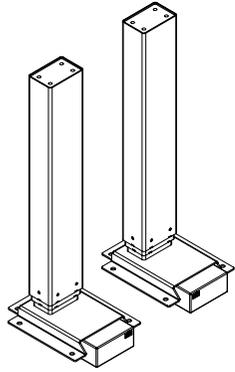


2 x End Leg

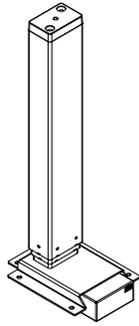


1 x Corner Leg

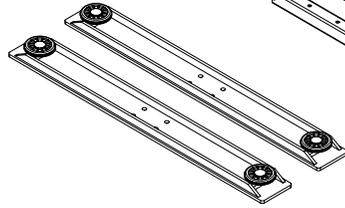


2 x Feet

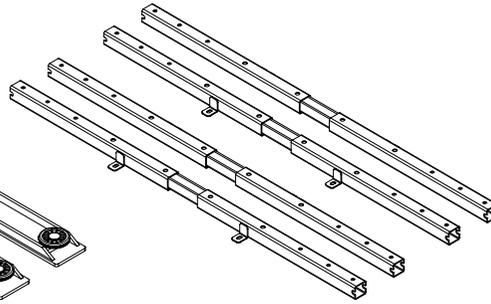

4 x Rail Sets

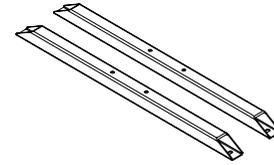


2 x Worktop Support

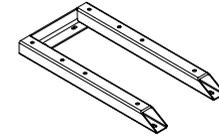


1 x Worktop Support




2 x Rail Plate

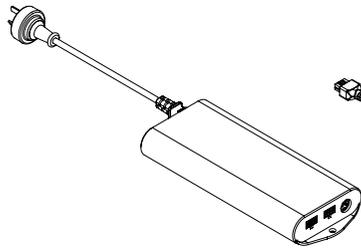


1 x Power Supply

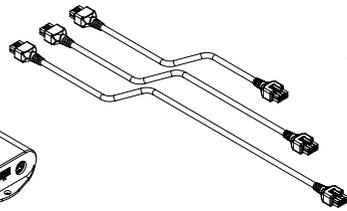


1 x Short Motor Cable
1 x Medium Motor Cable
1 x Long Motor Cable

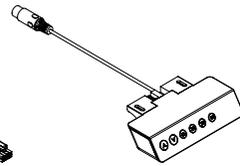

1 x Handset

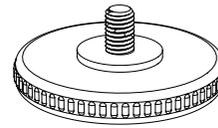

5 x Levelling Foot

 

8 x M8x25



28 x M8x10



16 x ST5.0x23



2 x ST4.2x16




2 x ST3.5x16

Step 1




8 x M8x10

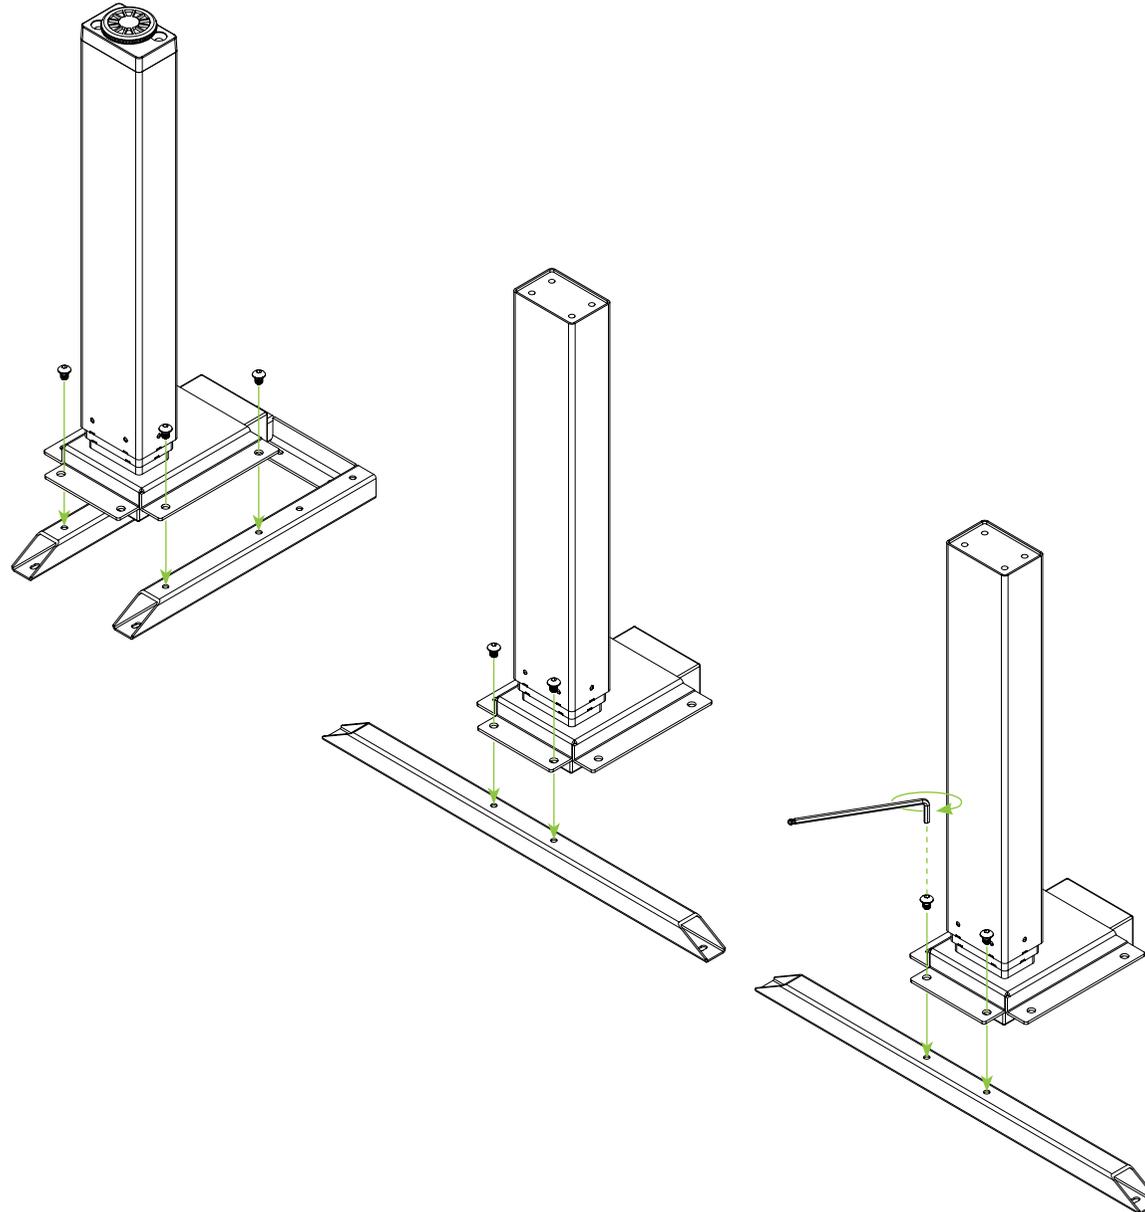

Step 2




4 x M8x10

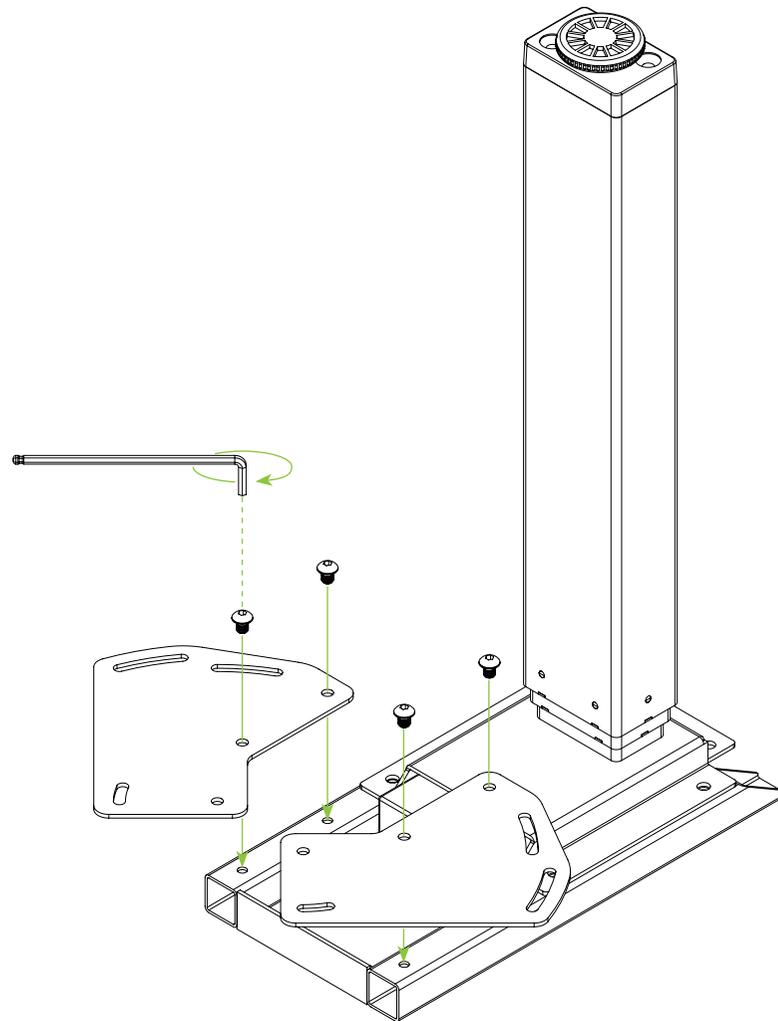


Step 3




16 x M8x10

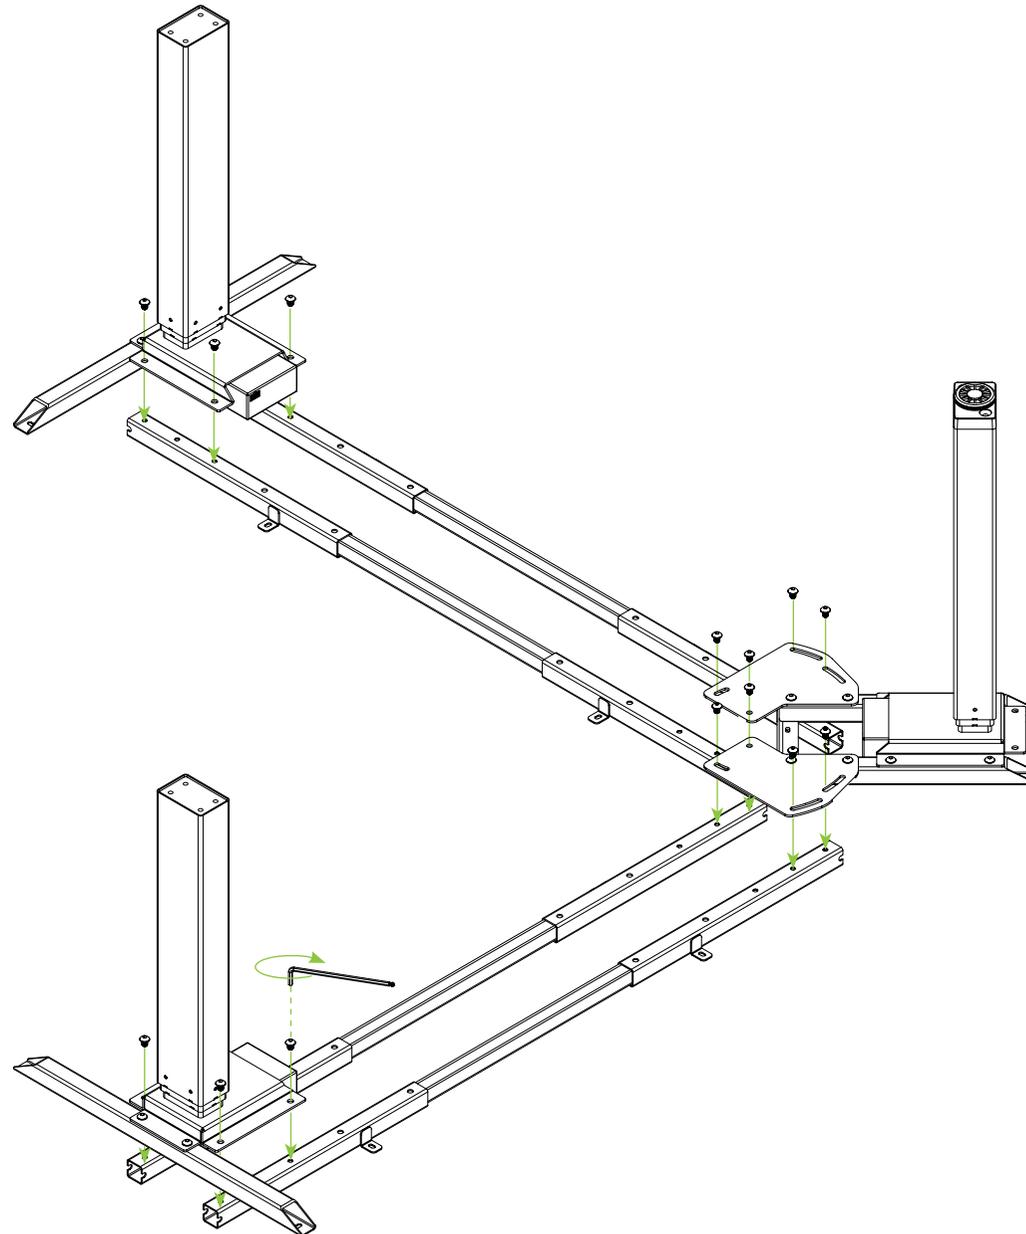

 Step 4





8 x M8x25

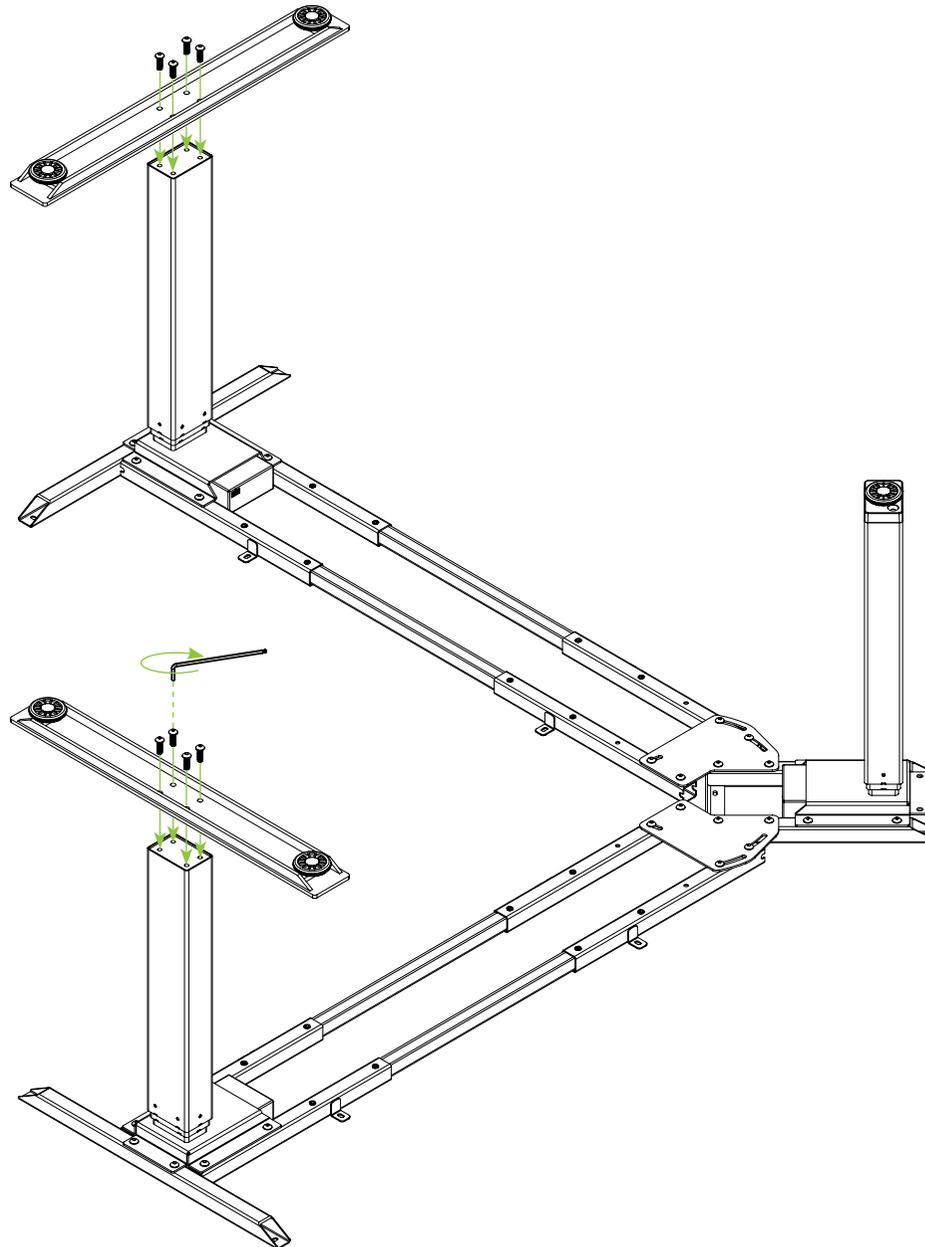



Step 5




16 x ST5.0x23

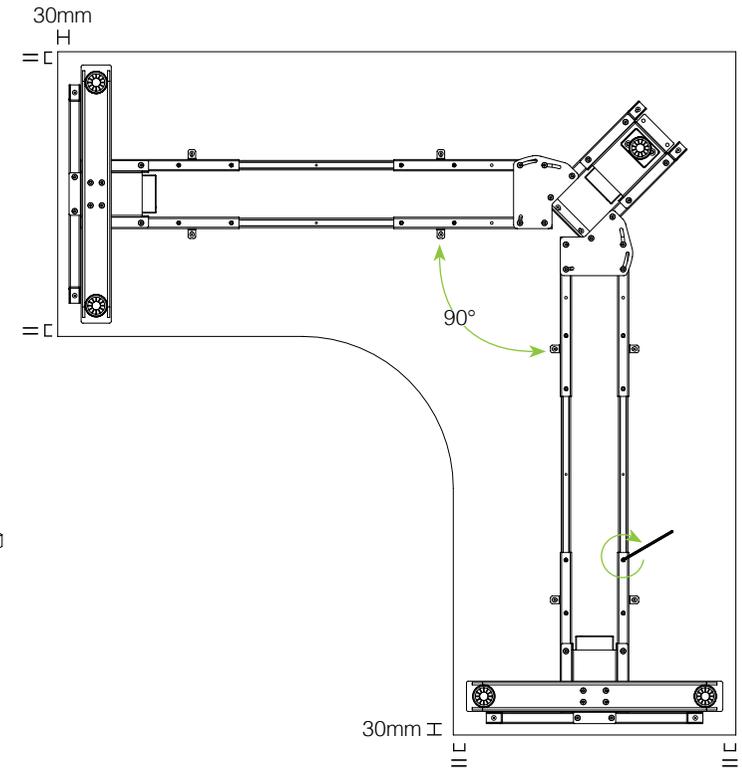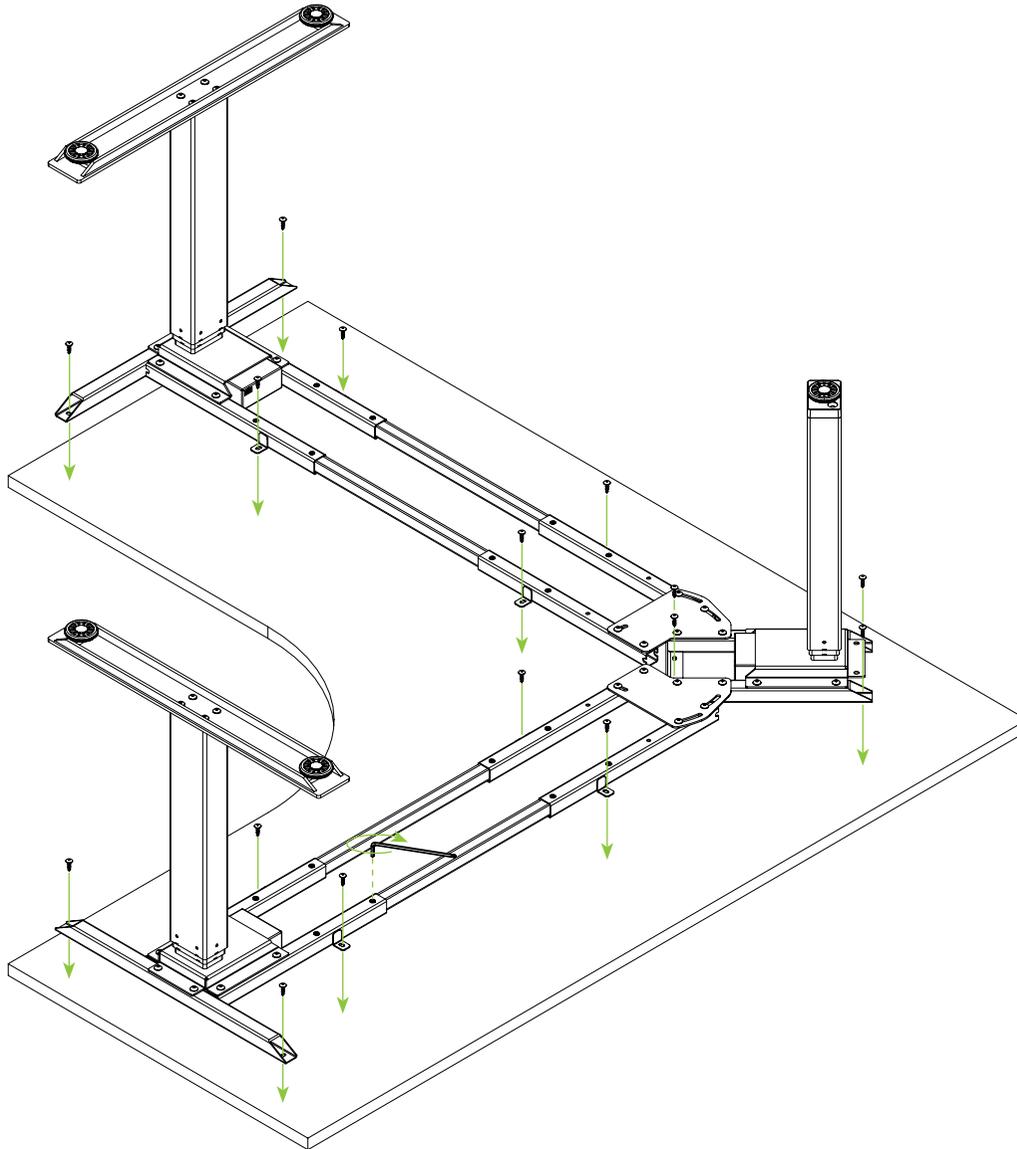

Step 5a

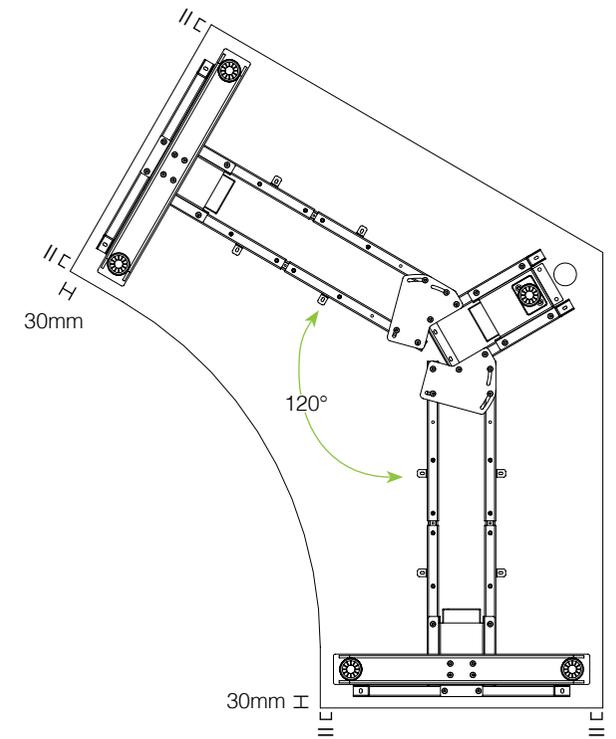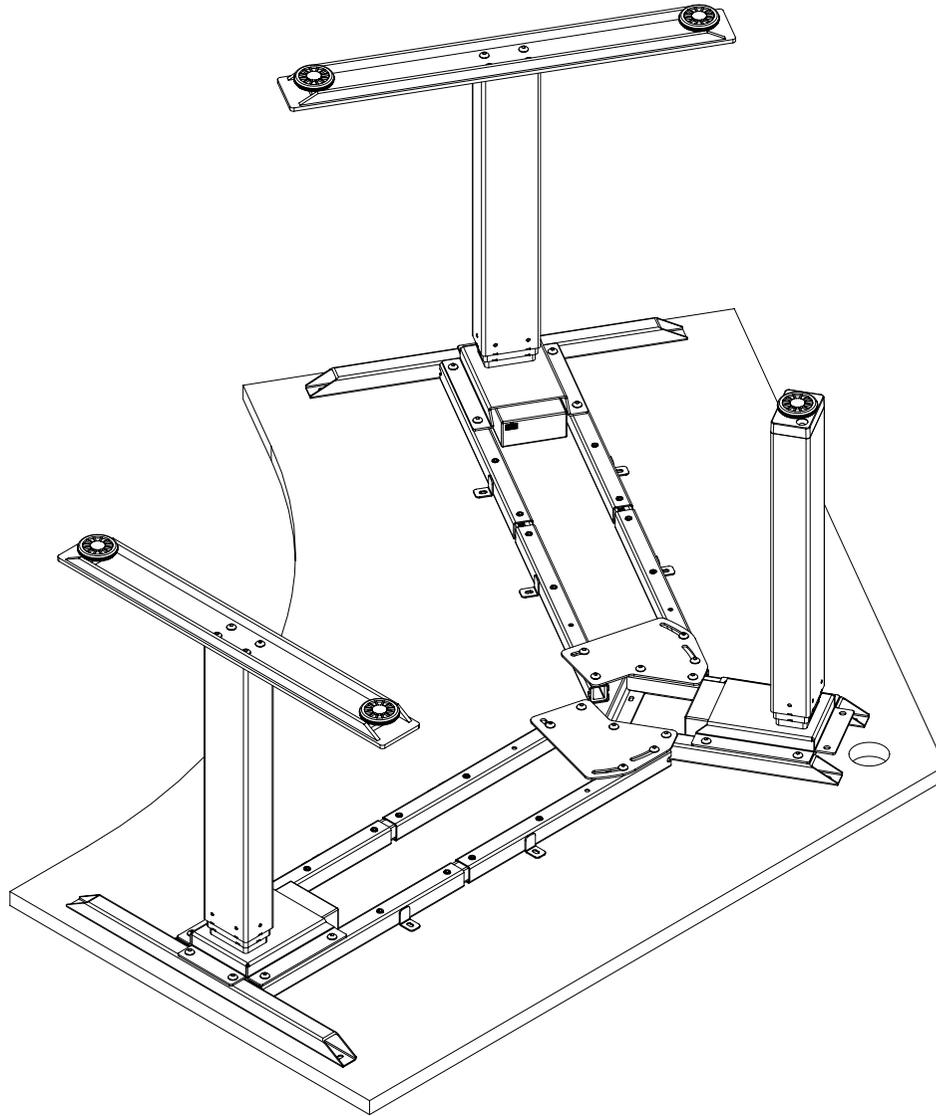


Step 6

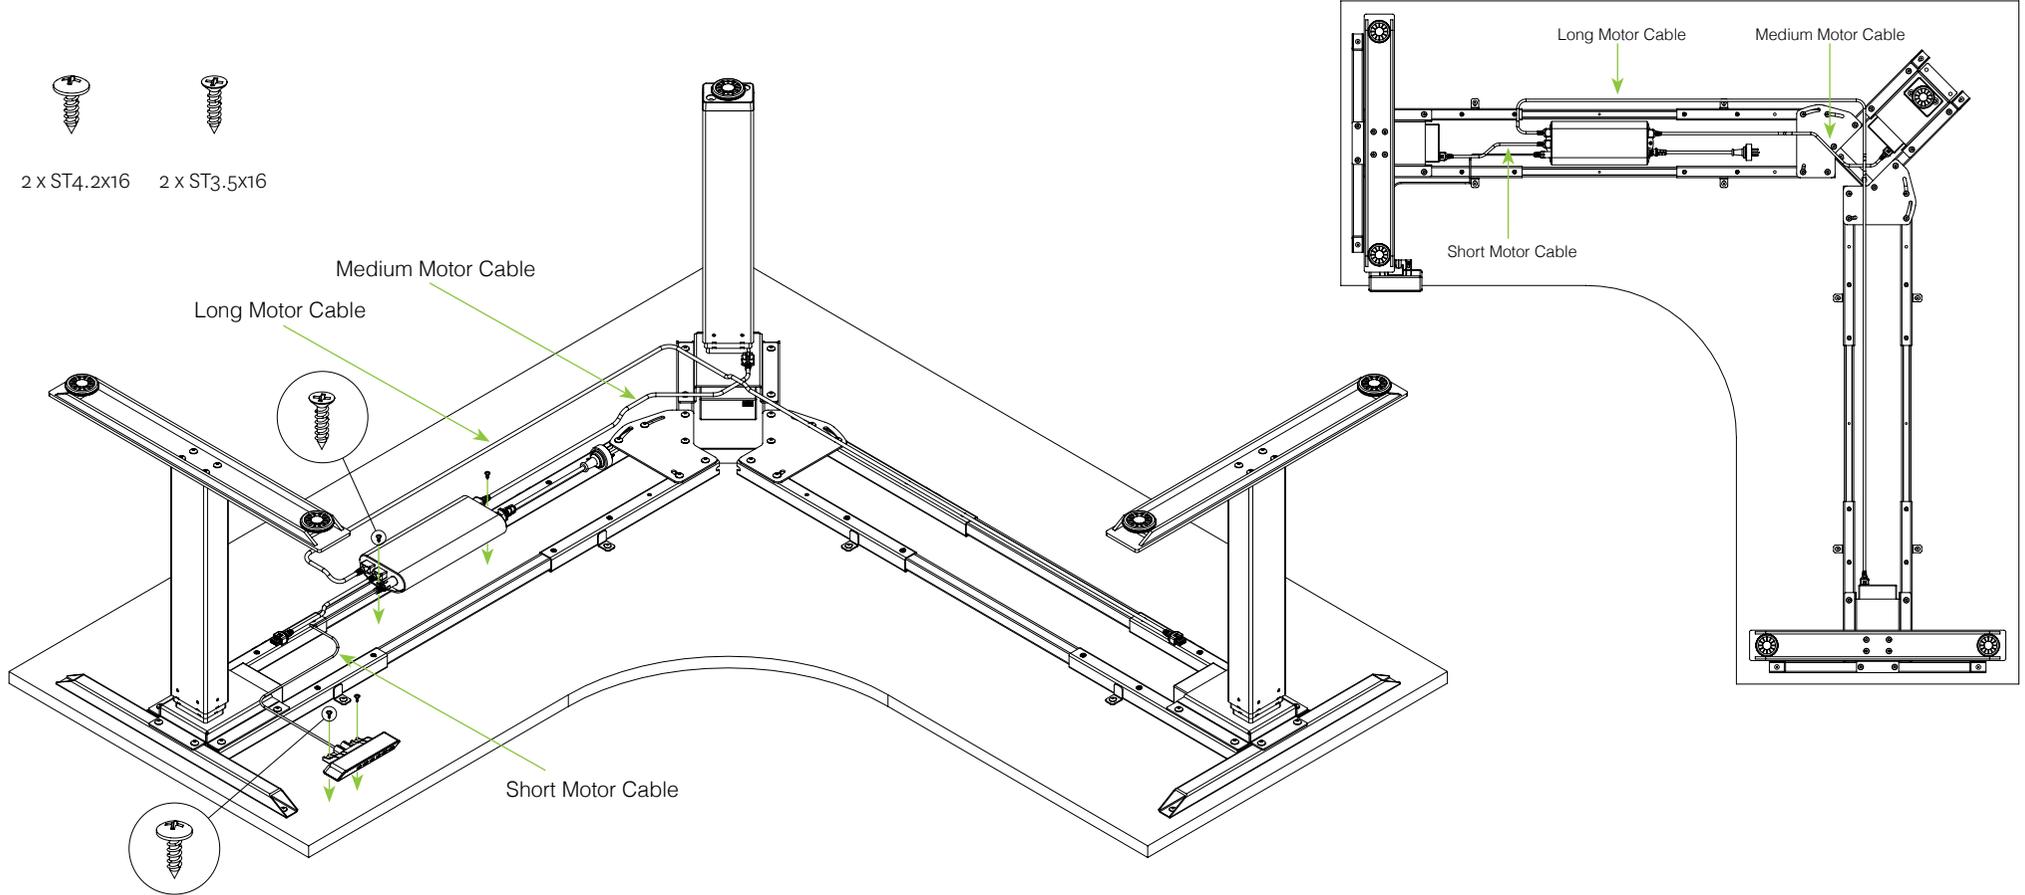


Agile - Optional Screen Brackets

Installation Guide

Step 1

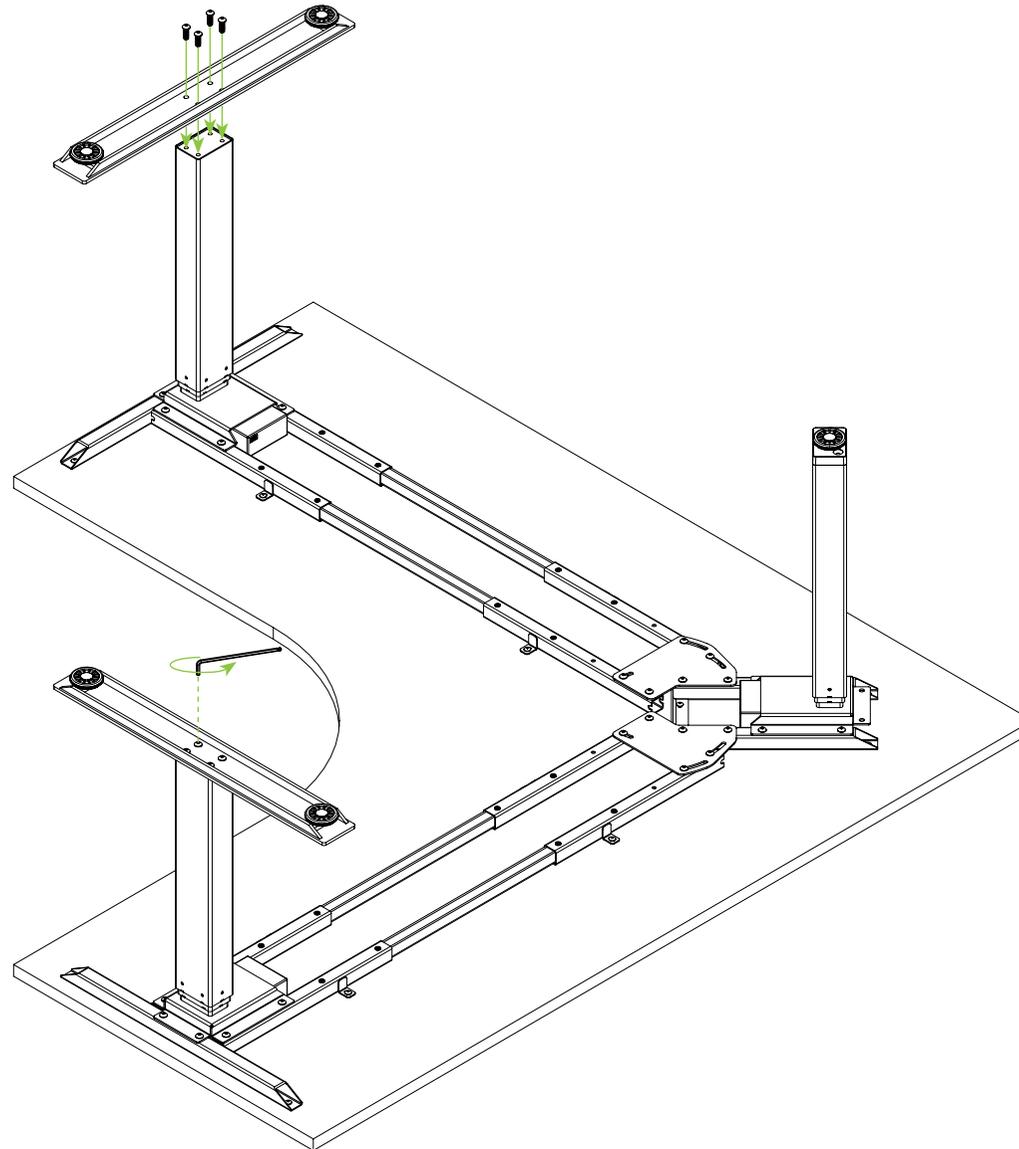


Step 2

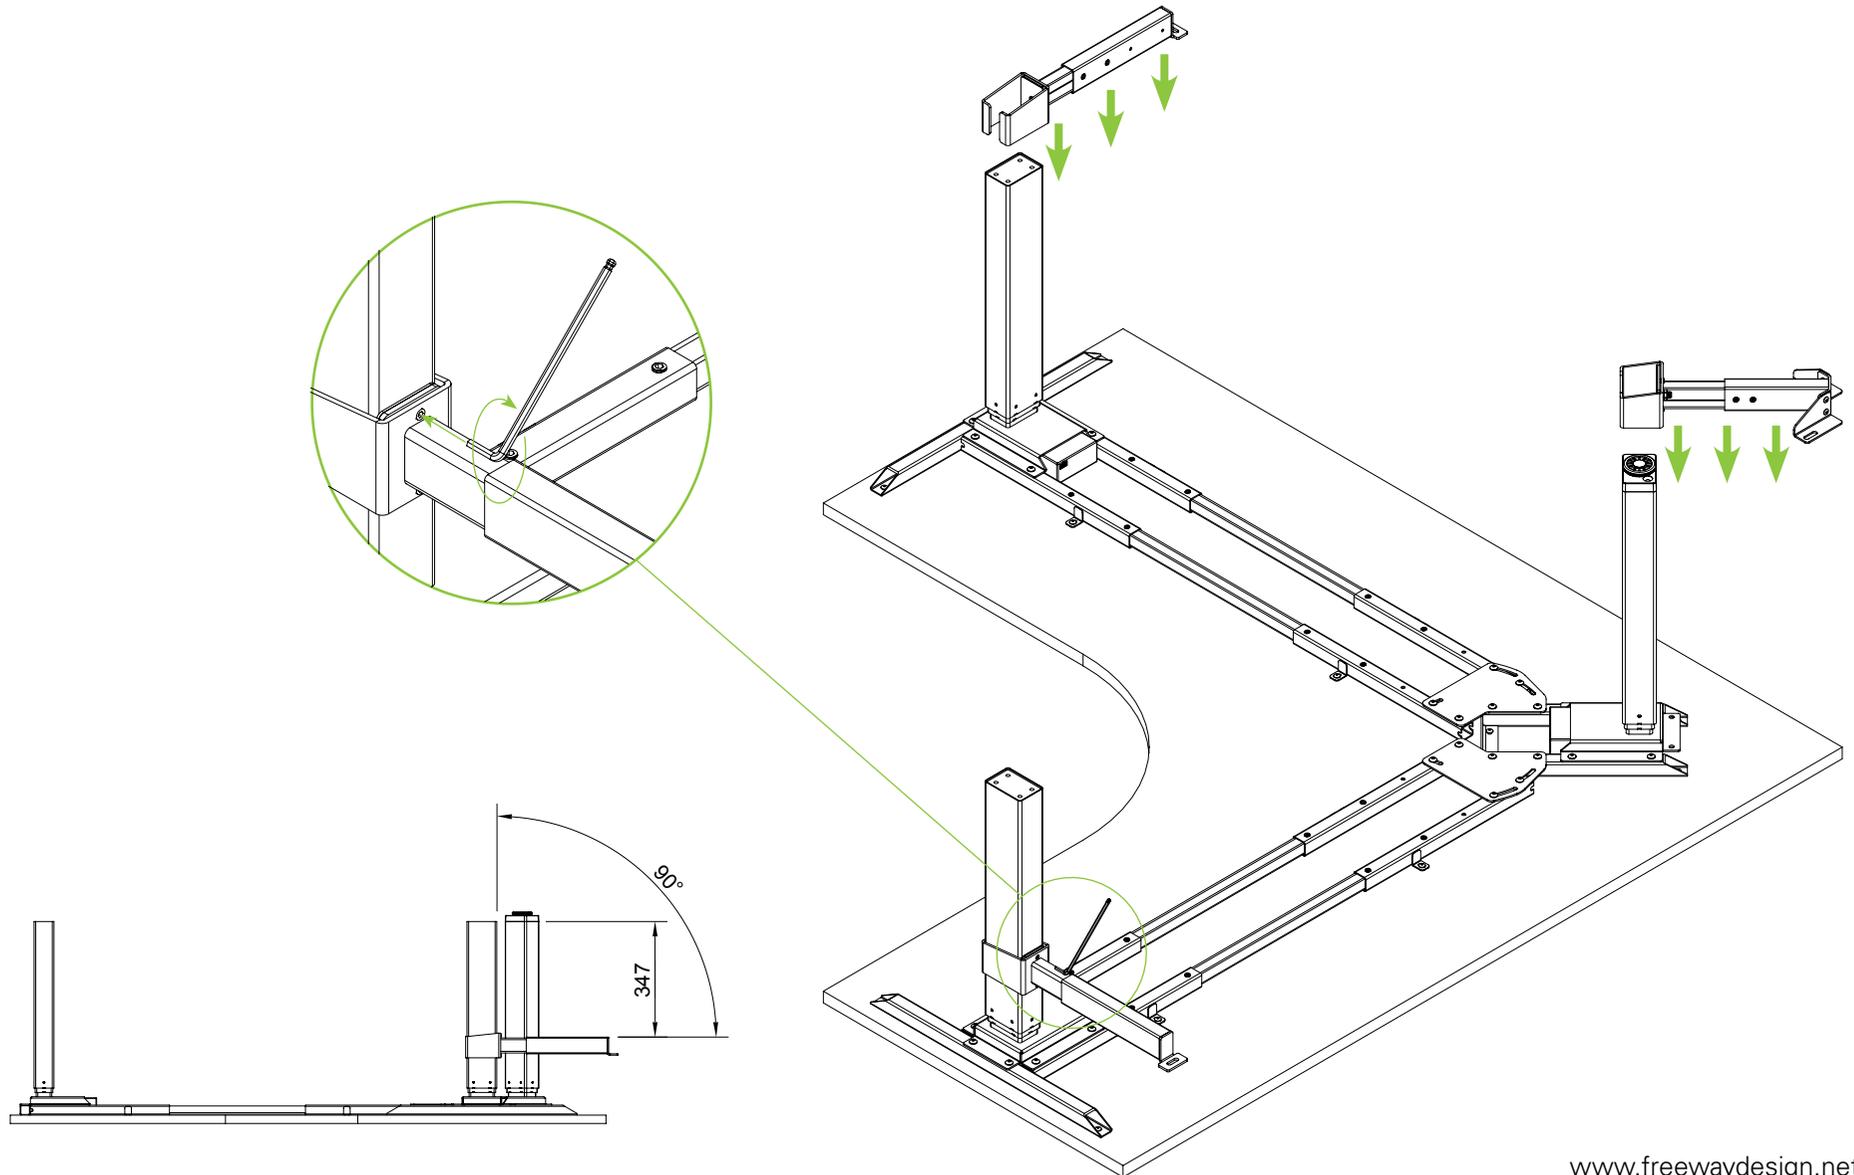


Agile - Optional Screen Brackets

Installation Guide


Step 3

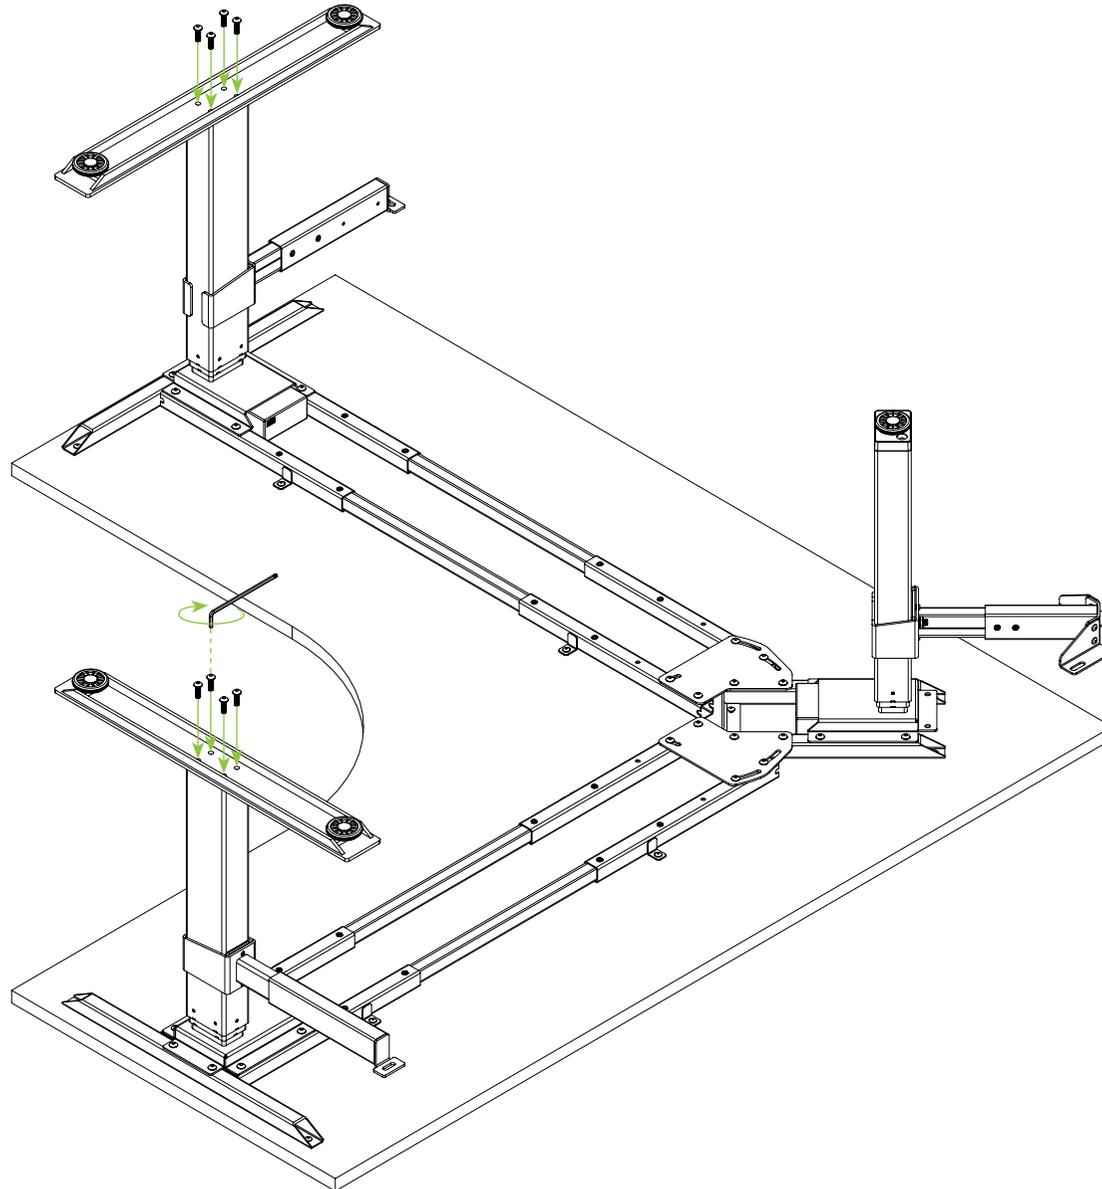

 Step 4



2 x M8x25

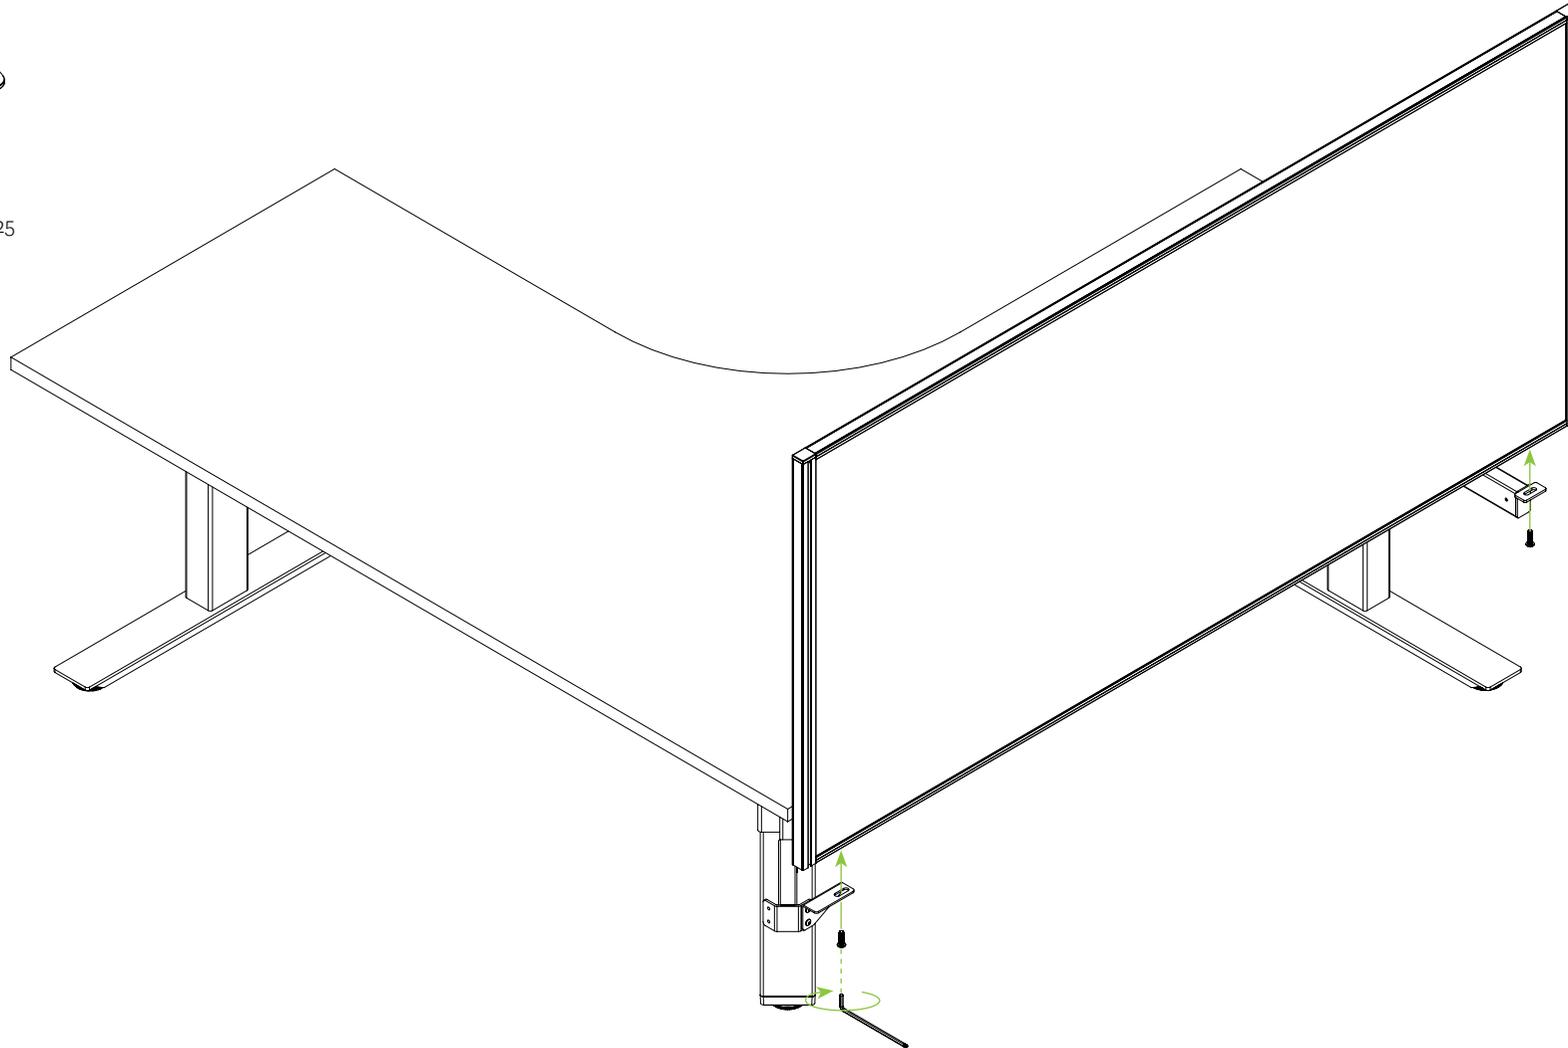


Agile - Optional Screen Brackets

Installation Guide

Step 5




4 x ST5.0x23

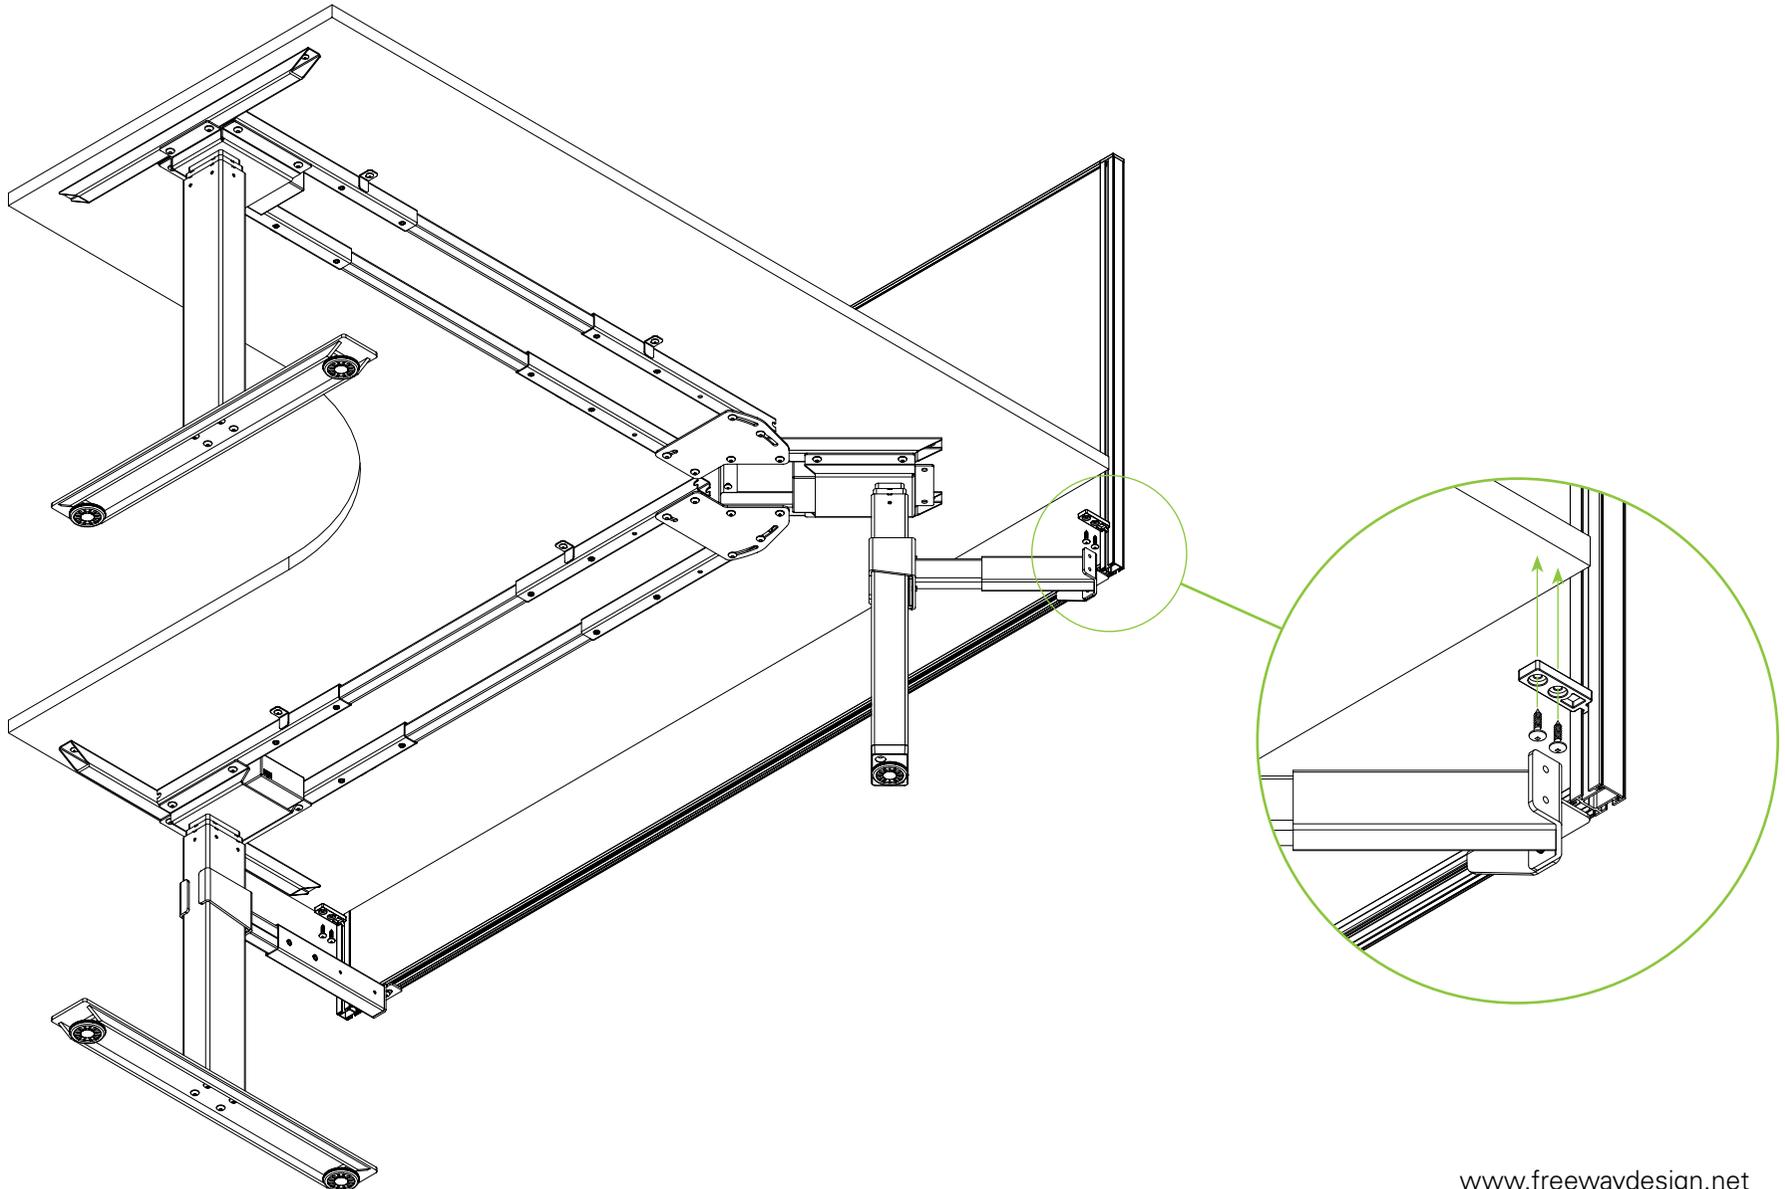

Agile - Optional Screen Brackets

Installation Guide

Step 6

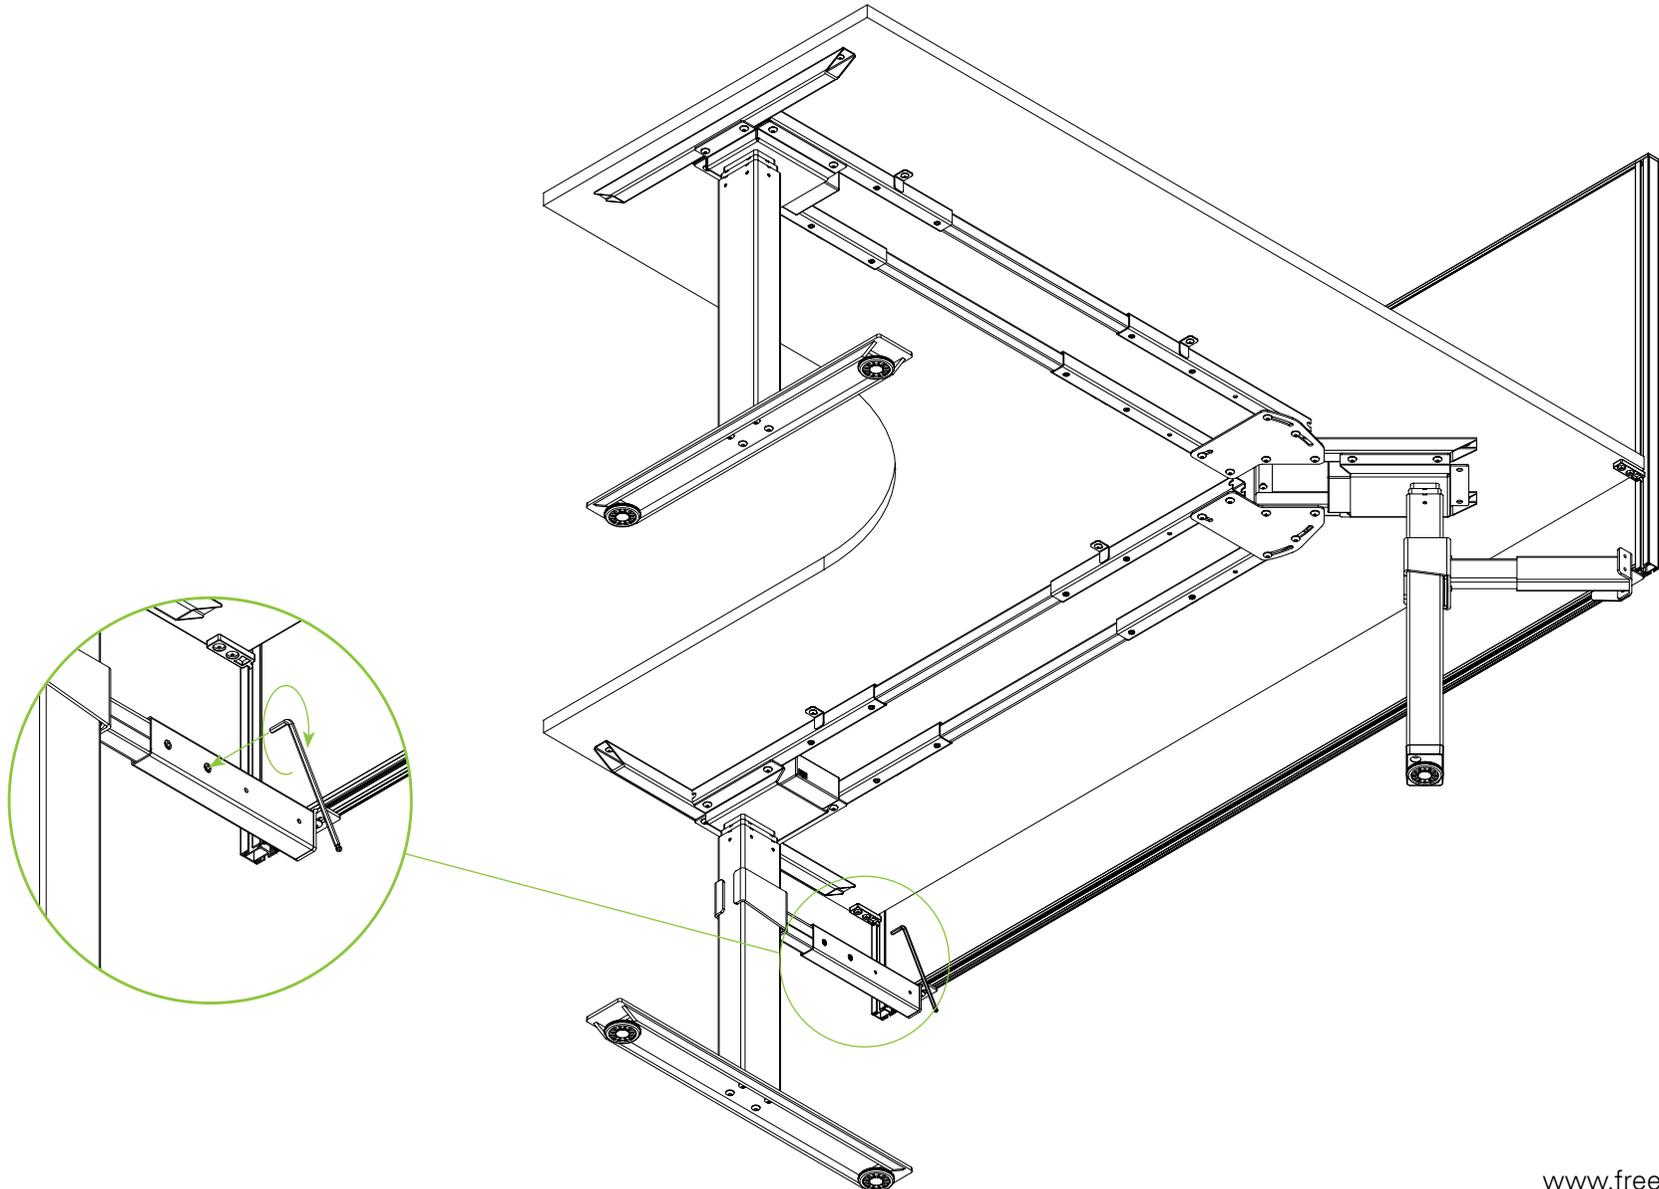

Directions For Use

IMPORTANT

Please carefully read the assembly manual and direction for use prior to instalment, use and maintenance of the table frame to gain a complete understanding of its contents. It provides you with important information about the safety, use, installation and maintenance of the table.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

SAFETY

- The table must be used in a safe manner. Inappropriate use may cause damage to the table and/or cause bodily harm to the user or persons nearby.
- Do not tamper with electrical components as this may lead to serious bodily harm.
- Only connect the electric table frames to the prescribed mains power voltage
- Do not use the table frame to lift people.
- Please retain this operation manual and pass it on to any future owner.

USAGE

- The height-adjustable table is designed for use in dry work environments only.
- The table height is infinitely adjustable within its height range so that it can be set to the user's most ergonomic working height. The user should seek professional help to establish their optimum working height.
- The table has been designed as a devise to elevate the users work surface and associated office peripherals. Do not use the table frame for any other purposes than that which it has been designed for. Any other use is at user's own risk!
- Do not crawl, lie or move around under the table frame, and do not sit or stand on the table frame.
- CHILDREN should only use the table when supervised by adults.
- Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damages arising from improper use or handling of the table frame other than that described in this operation manual.

SET UP AND INSTALLATION

Assemble the table frame according to the assembly instructions on pages 3 - 9.

- Place the table in a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.
- Level the table with the adjustable feet ensuring that the table is stable.
- Check that no cables can get jammed.
- Connect the table to the 110 or 230 VAC power outlet.

The table is now ready for use.

Directions For Use

MAINTENANCE

- The table does not require any maintenance by the user
- The table is only to be cleaned with a wrung cloth.

TECHNICAL DATA

Height Range: 635-1290mm including worktop

Speed: ~30mm/s

Input Voltage: 90-230V AC 50-60Hz, 300VA

Output Voltage: 24V DC Max.10A

Duty Cycle: 10% max. 2min on/18min off

