 


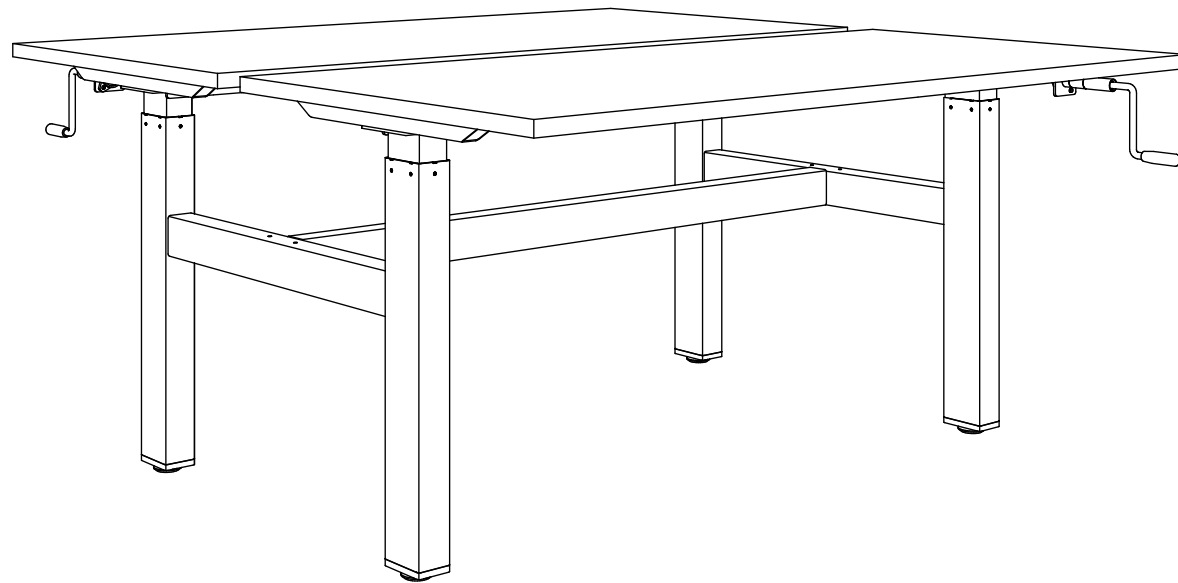


freeway

Agile


Installation Guide - Winder 2 Column



 
Parts:

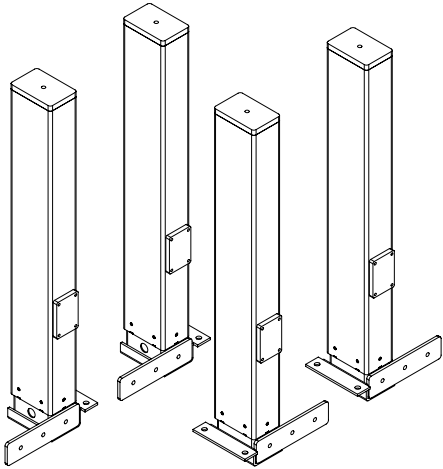


2 x L&R Leg Pair

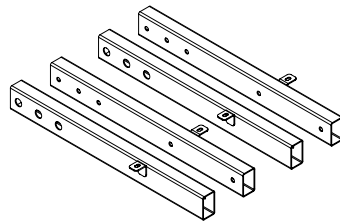 


2 x L&R Leg Rail Pair

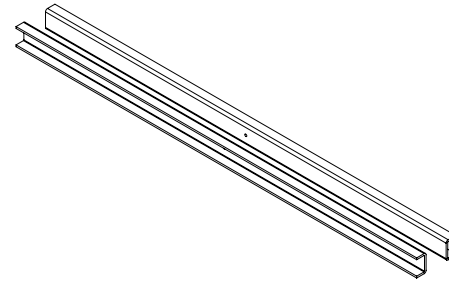 


2 x Cross Rail

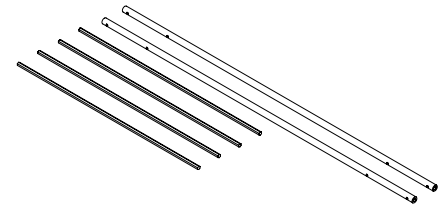 


2 x Drive Shaft

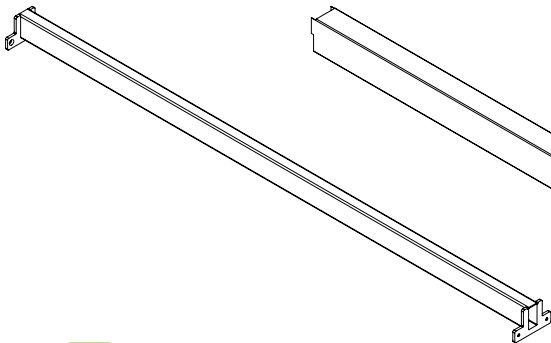 


1 x Cross Beam

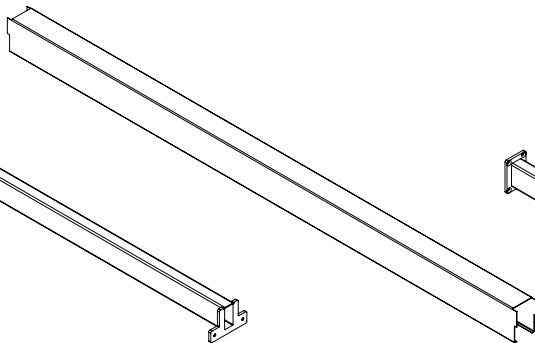 


1 x Cross Beam Cover

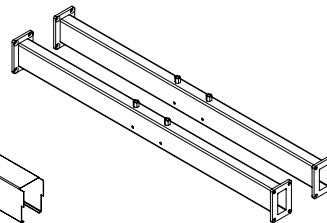 

2 x Leg Beam

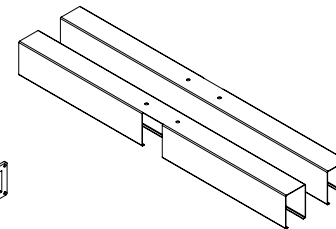 


2 x Leg Beam Cover

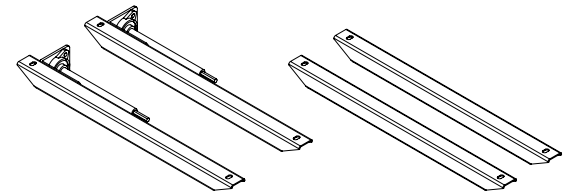 


2 x L&R Support Bar Pair

 
Parts:

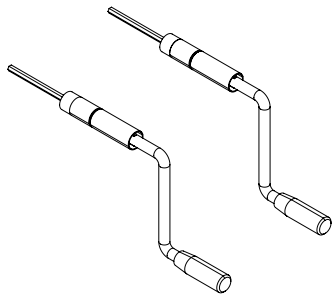

2 x Winder

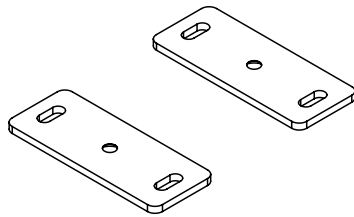 

2 x Screen Bracket

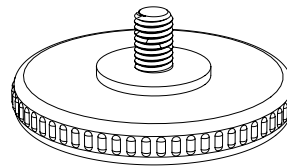 


4 x Levelling Foot



16 x M8x10



 
20 x ST5.0x23



2 x M8x20



 4 x M5x15




20 x M5x10

Step 1



 
8 x M8x10

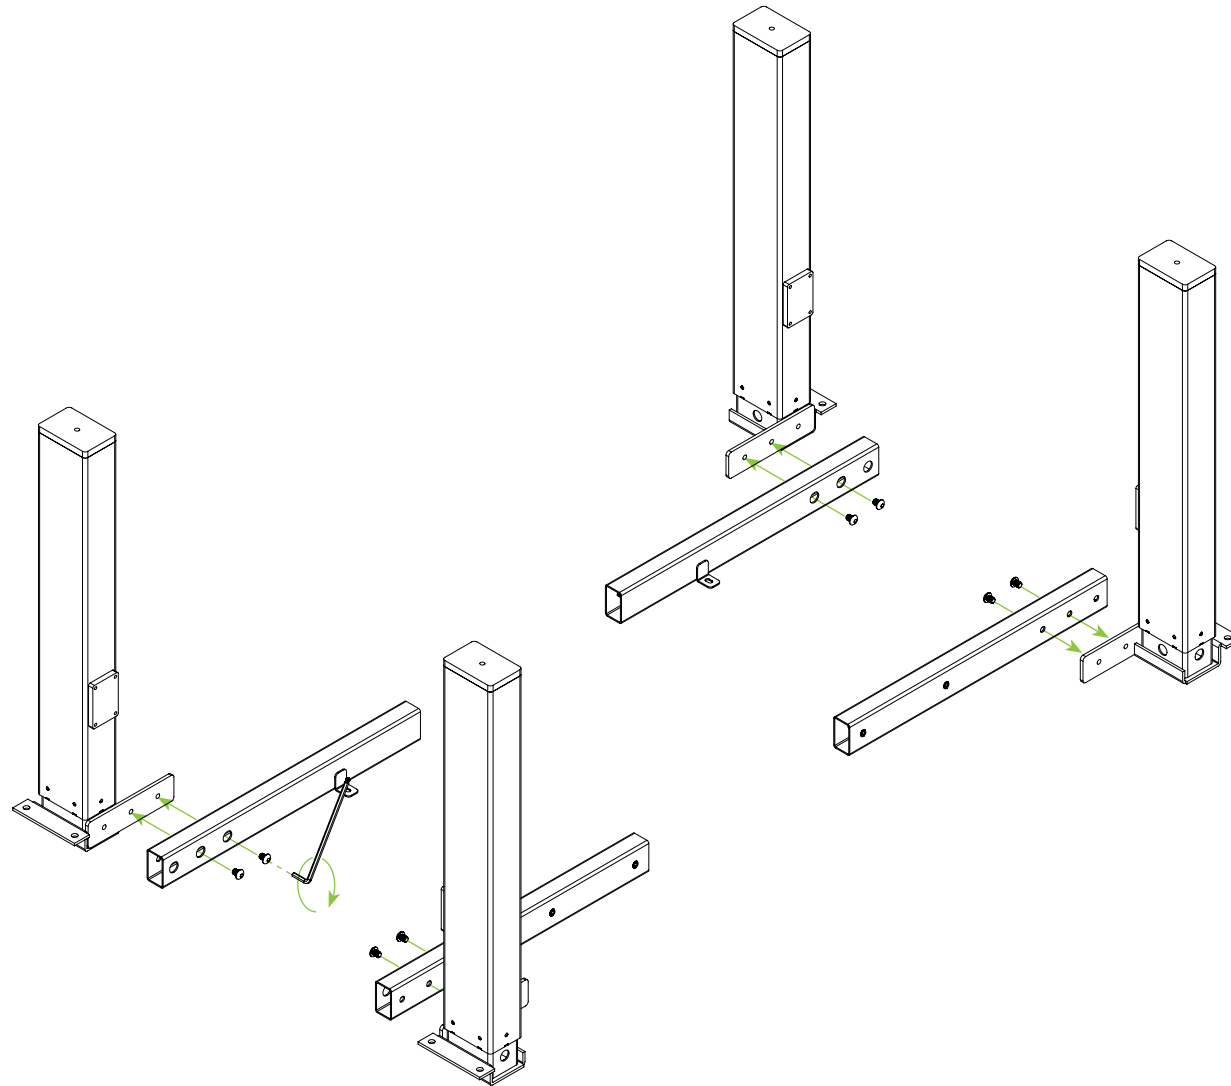


Step 2



 
8 x M8x10

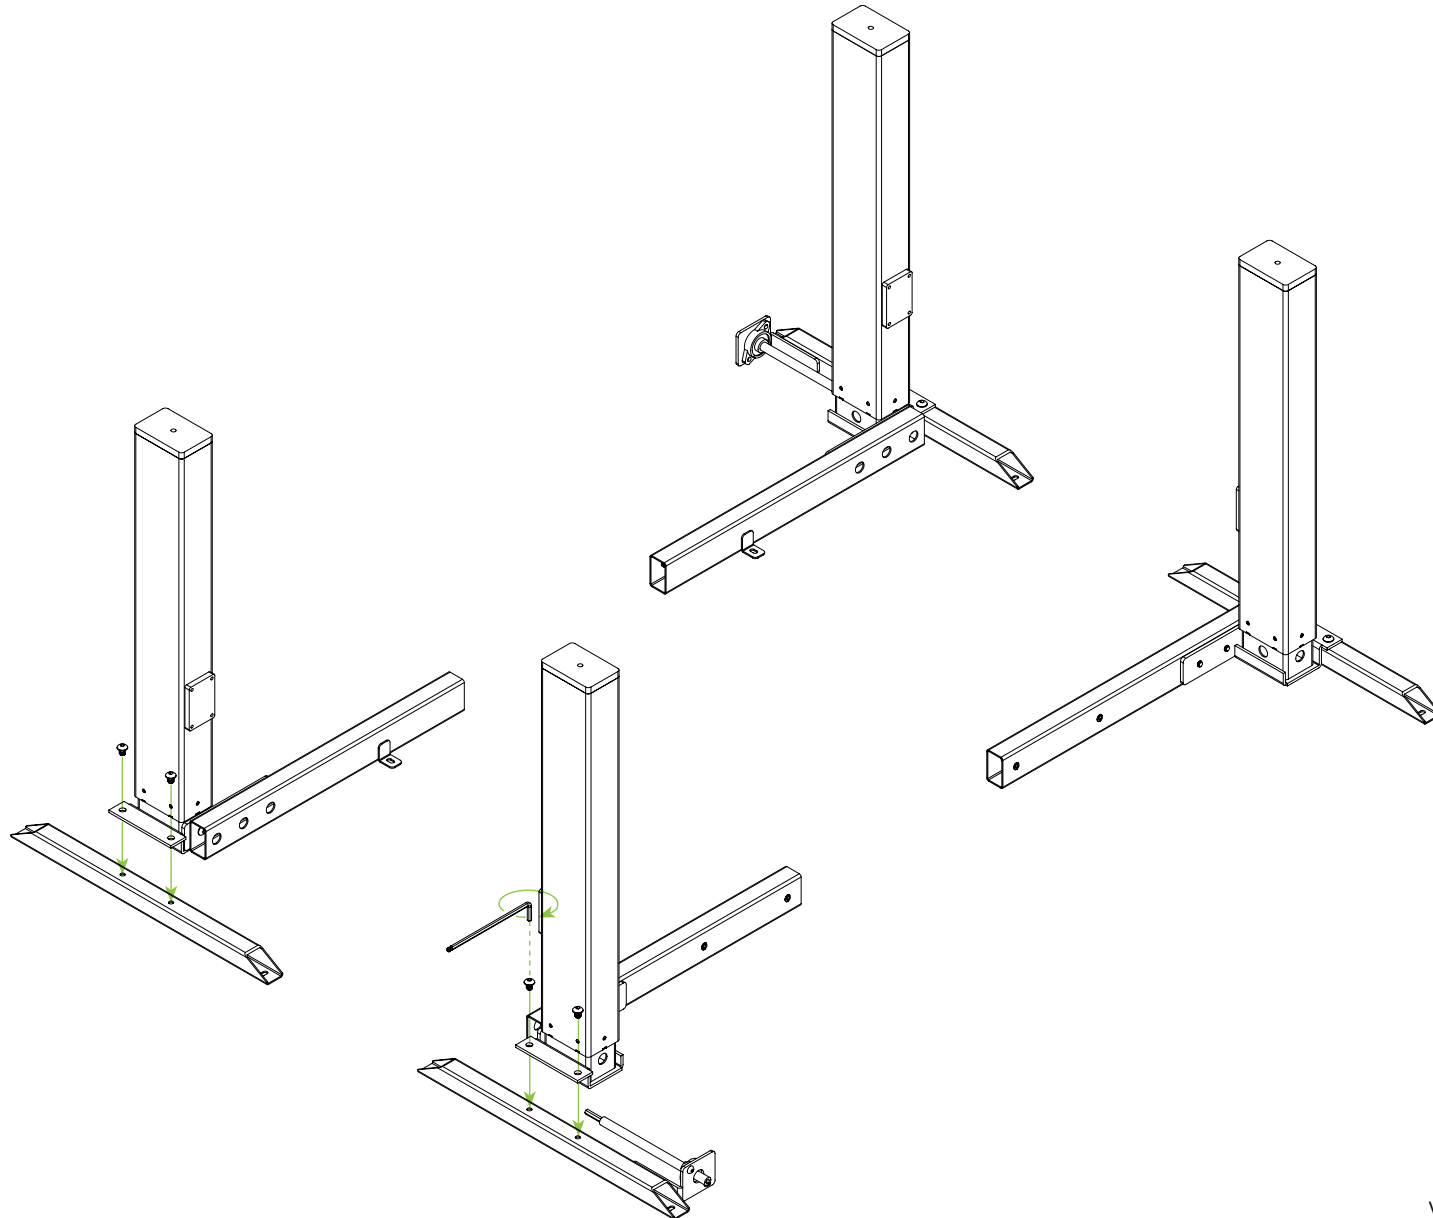

 
Step 3

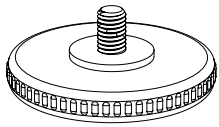


4 x Levelling Foot

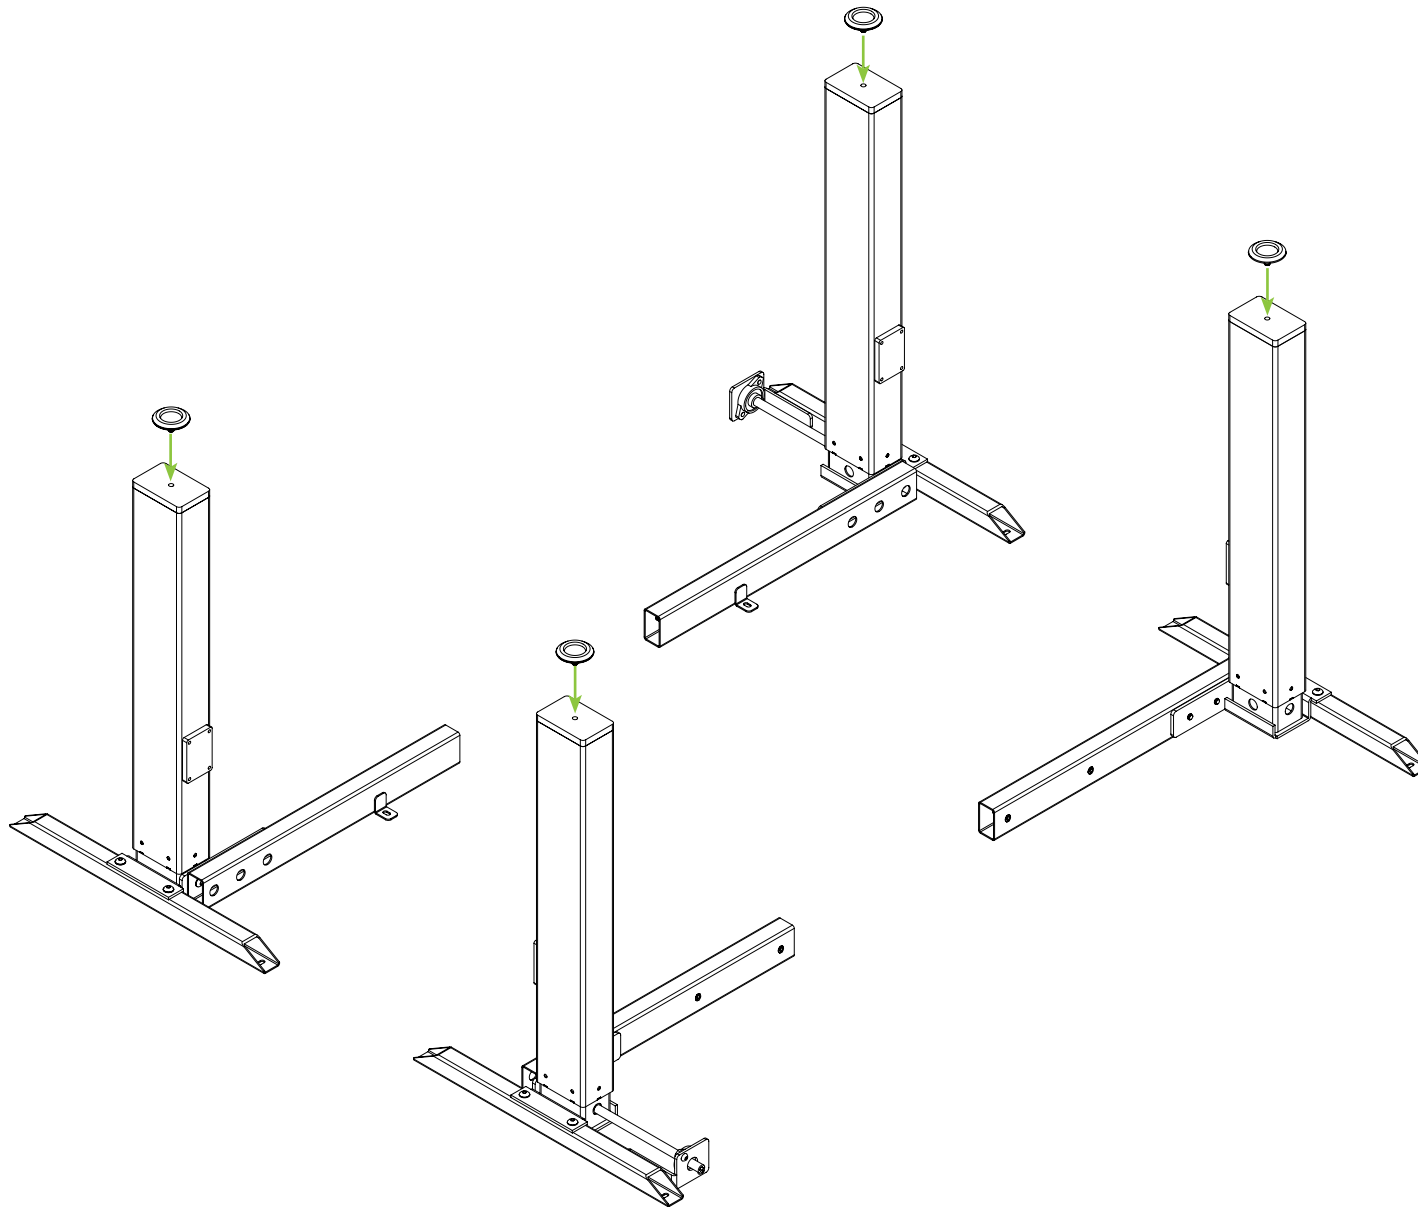 

 
Step 4




16 x M5x10

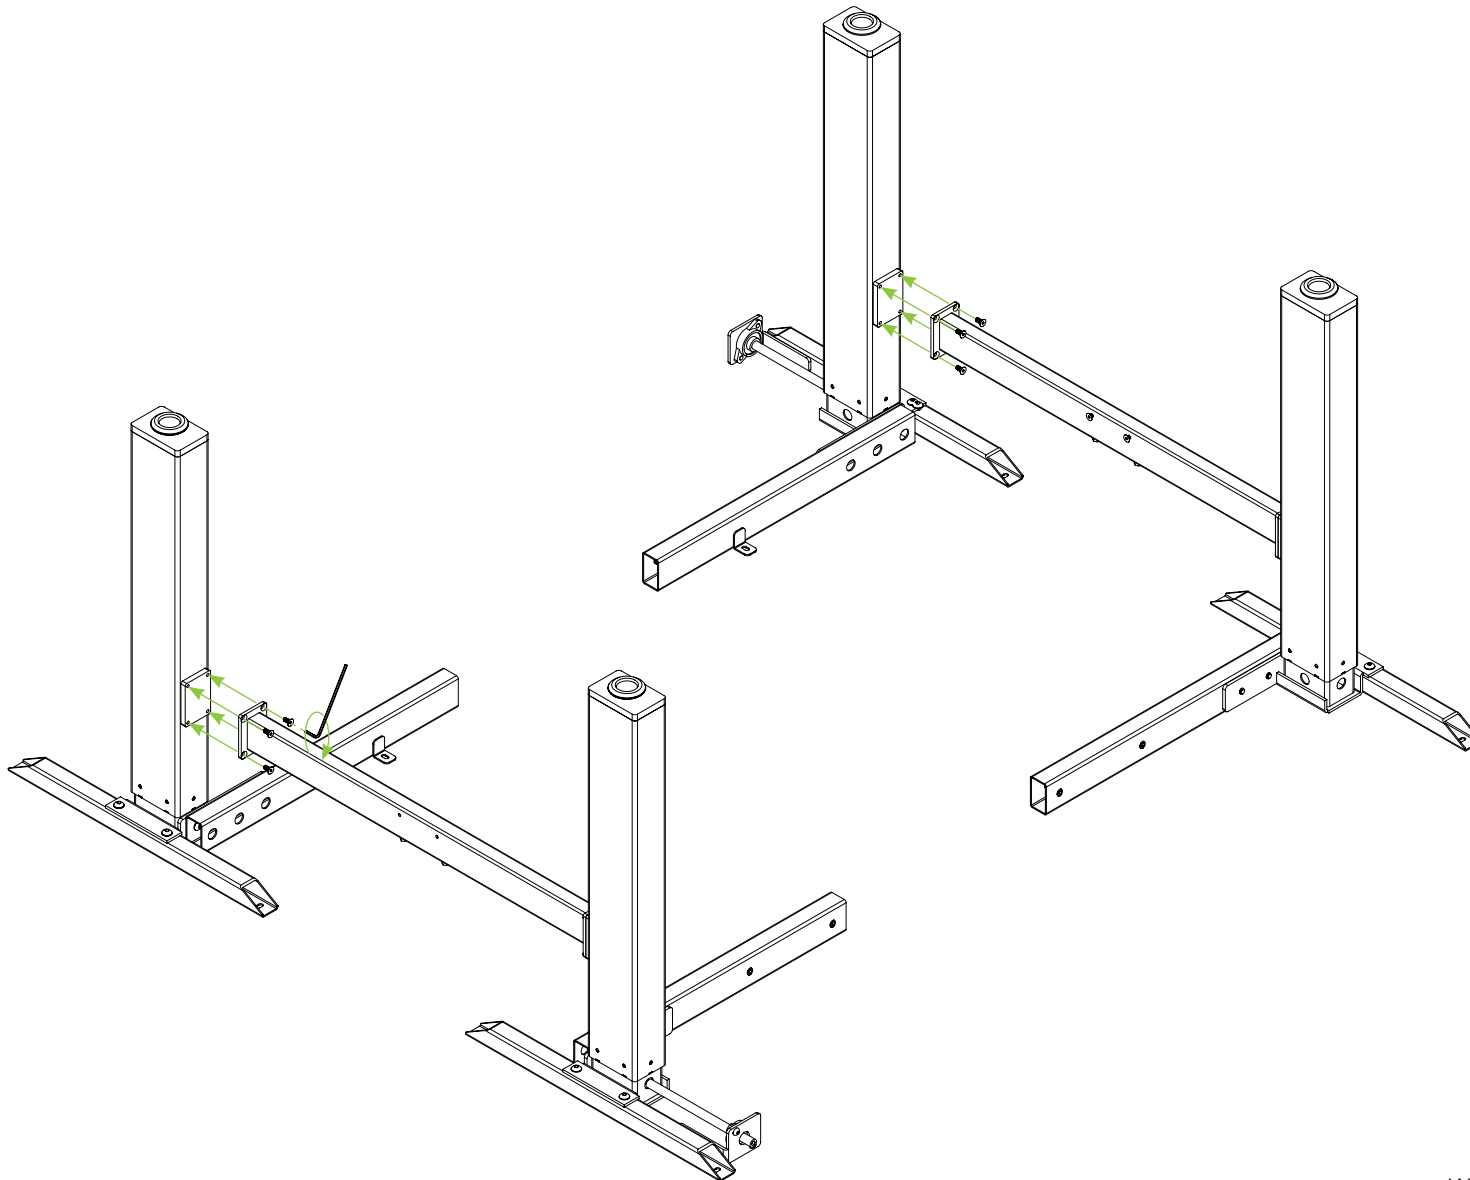 

 
Step 5




4 x M5x10

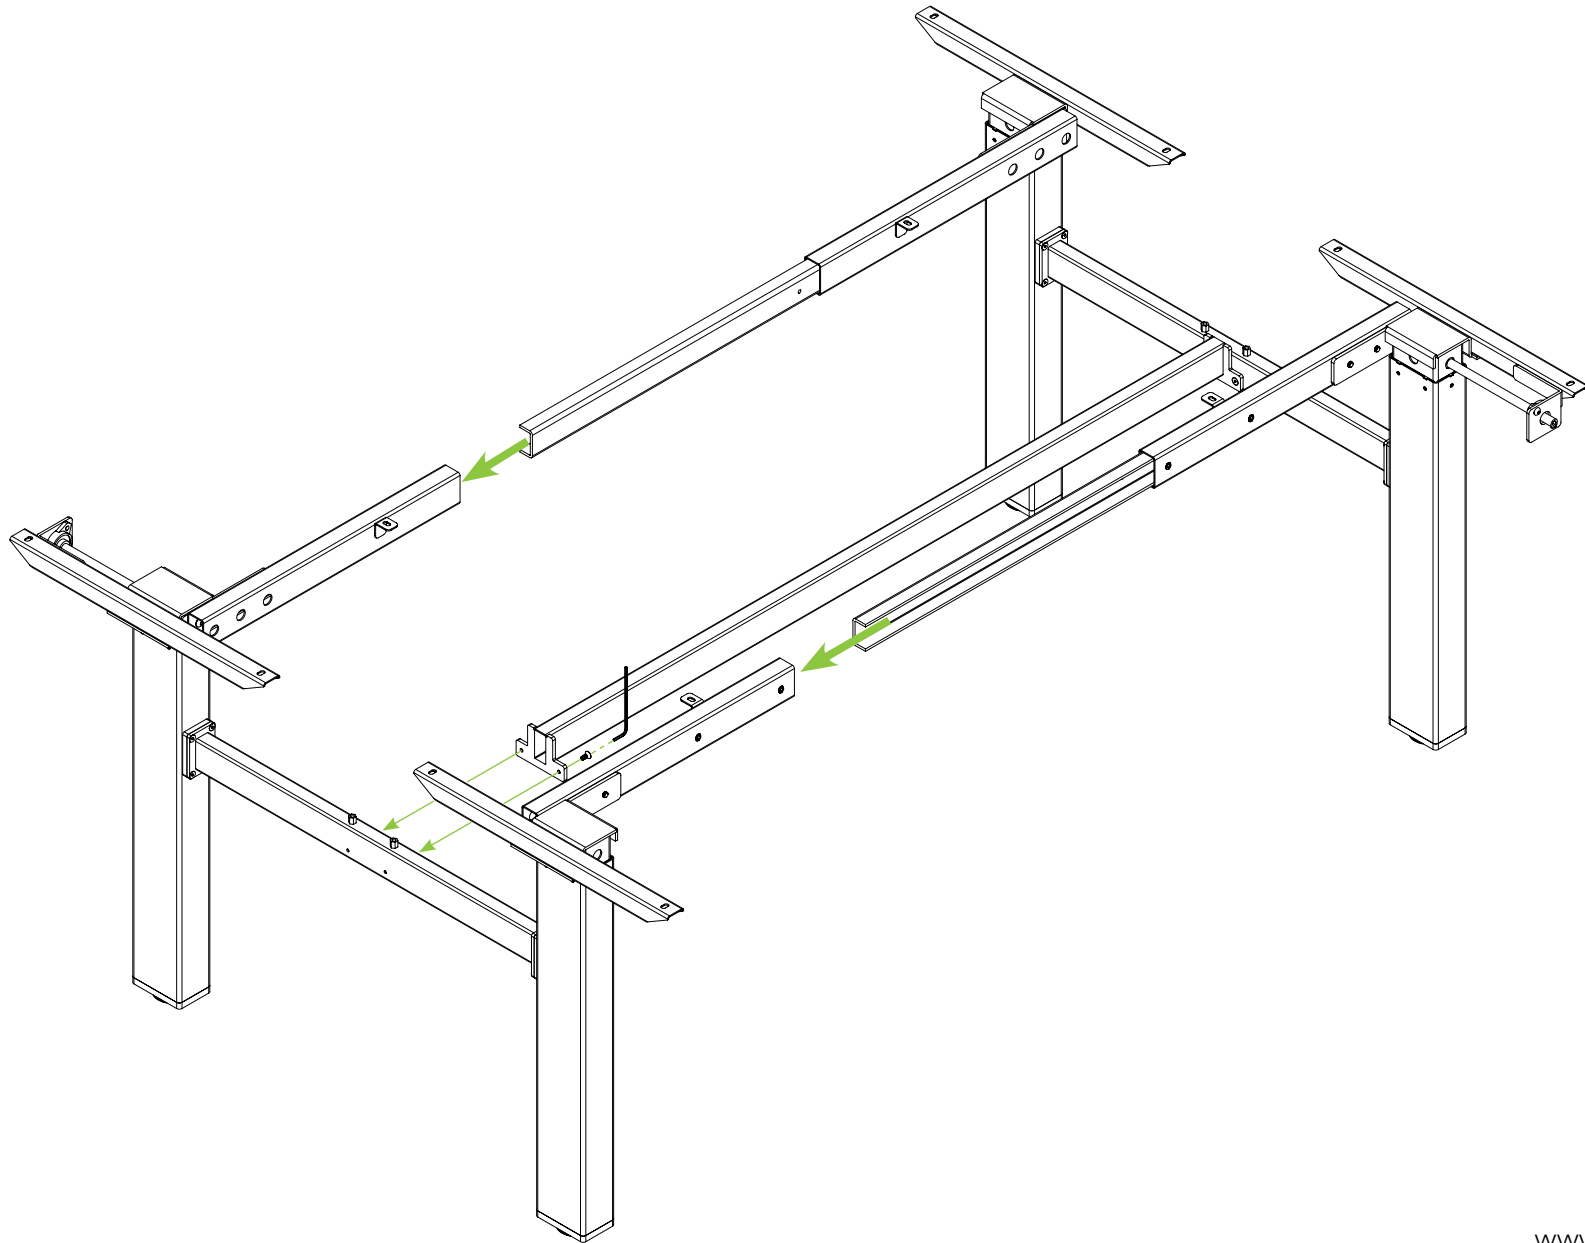 

 
Step 6

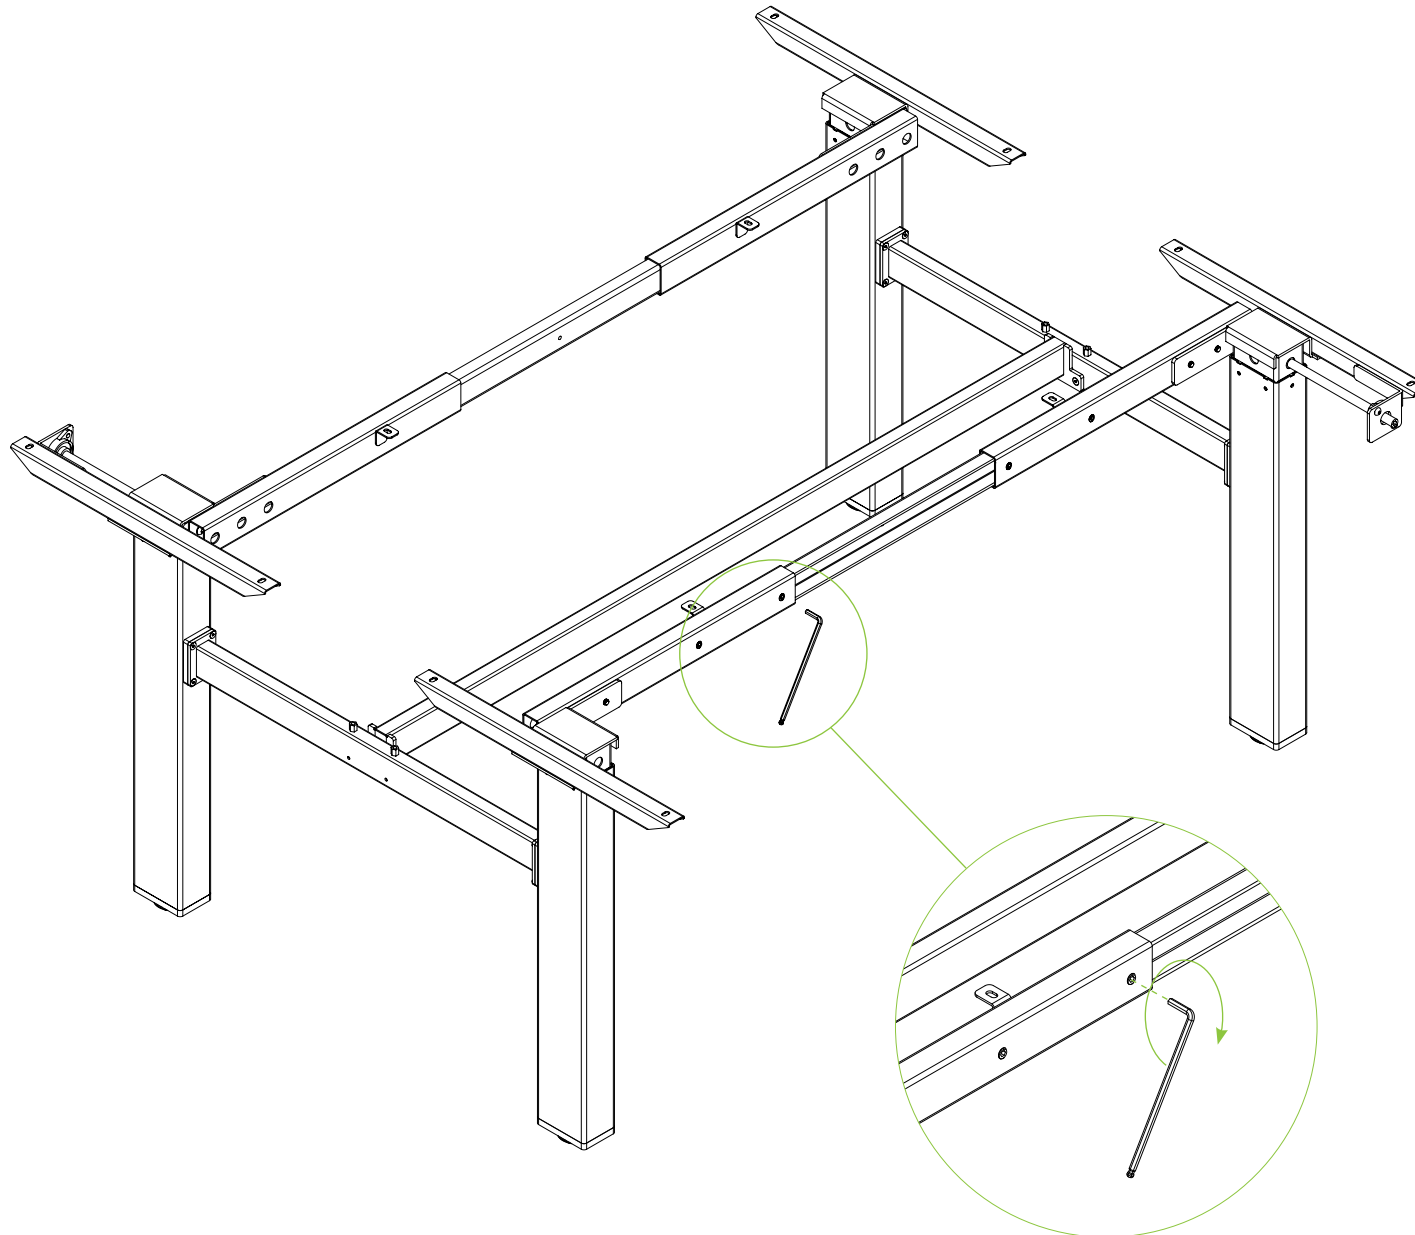

 
Step 7

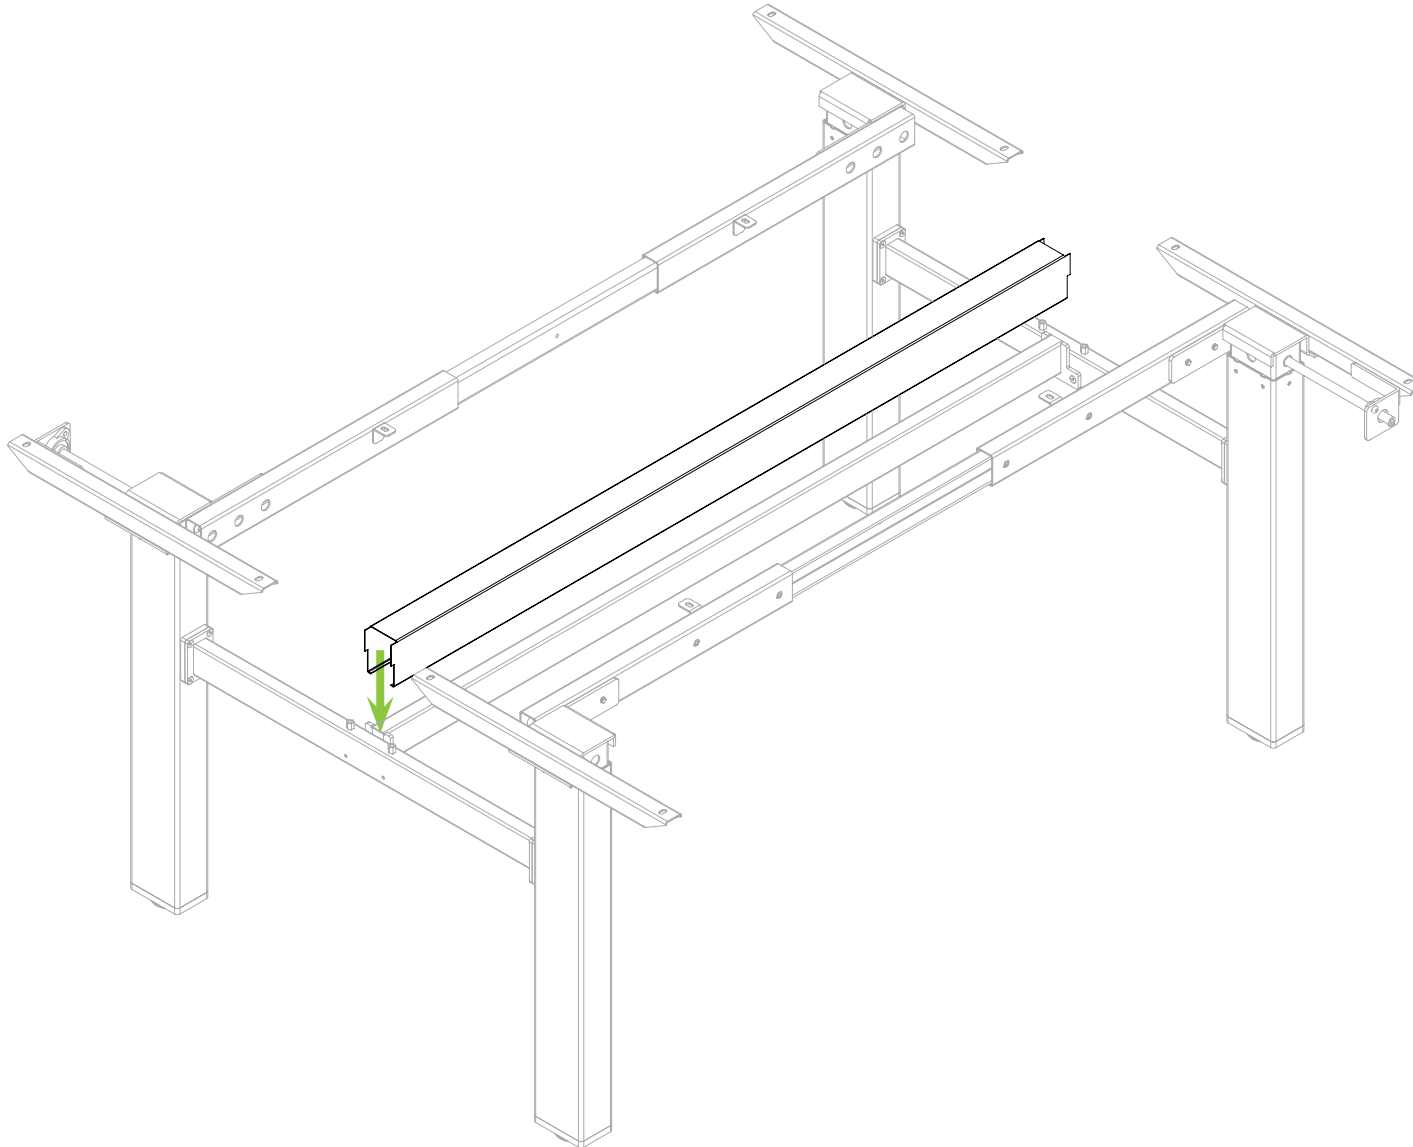

 
Step 8

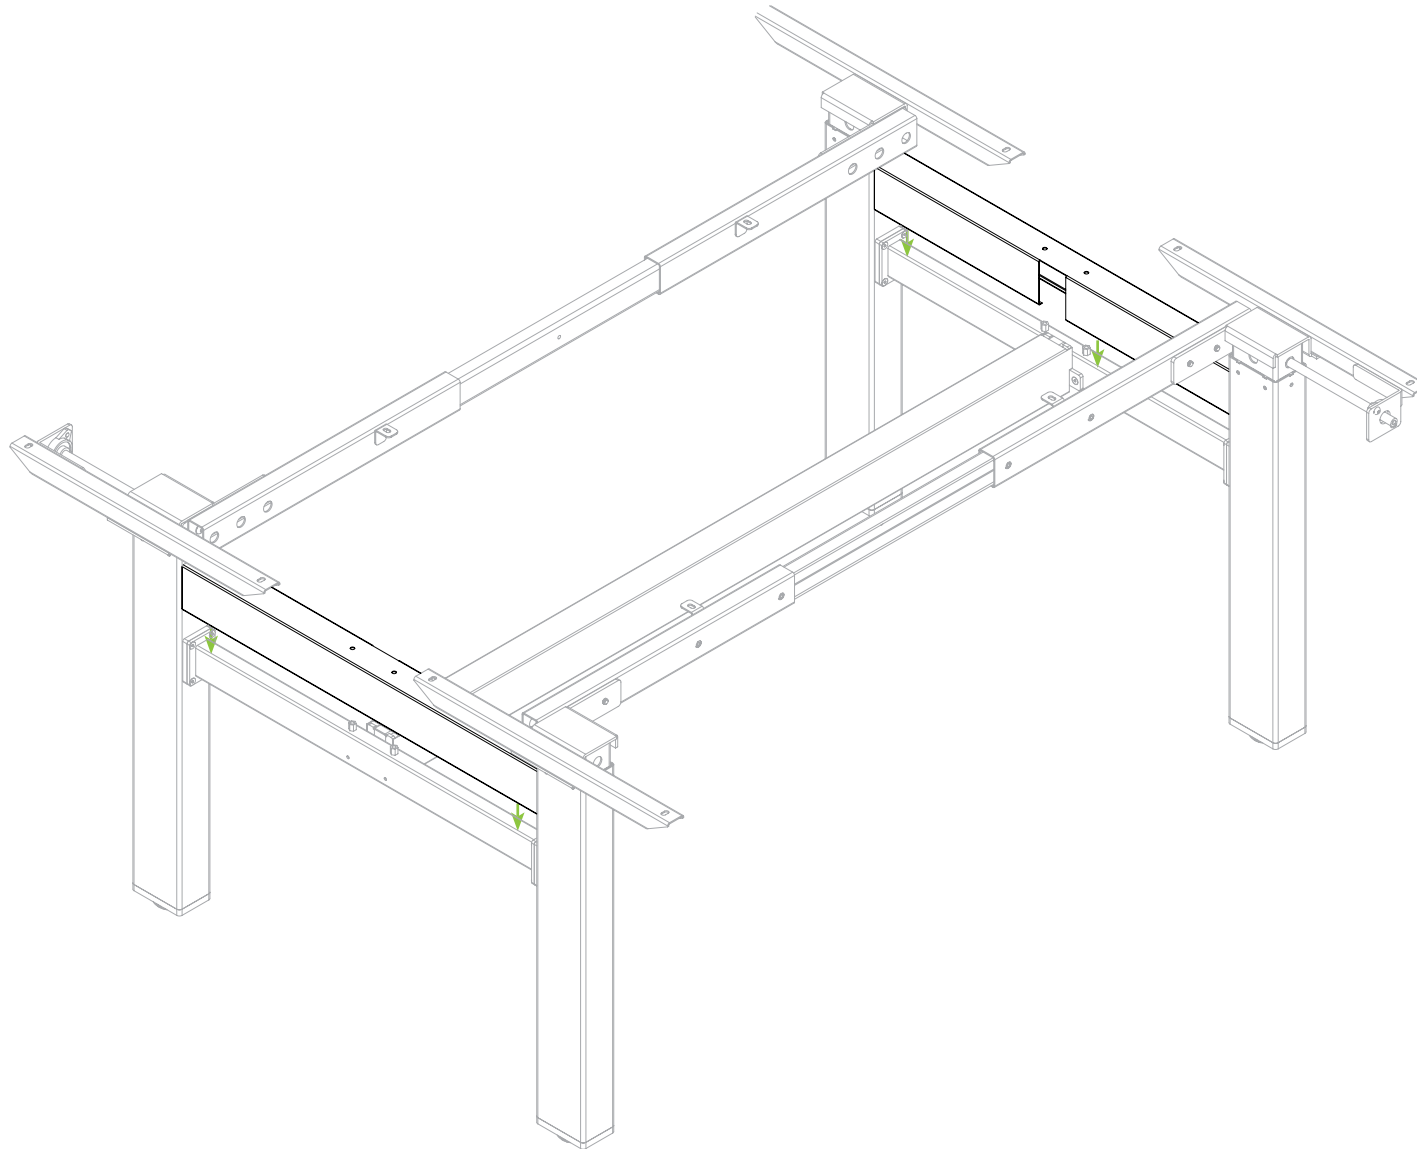

 
Step 9

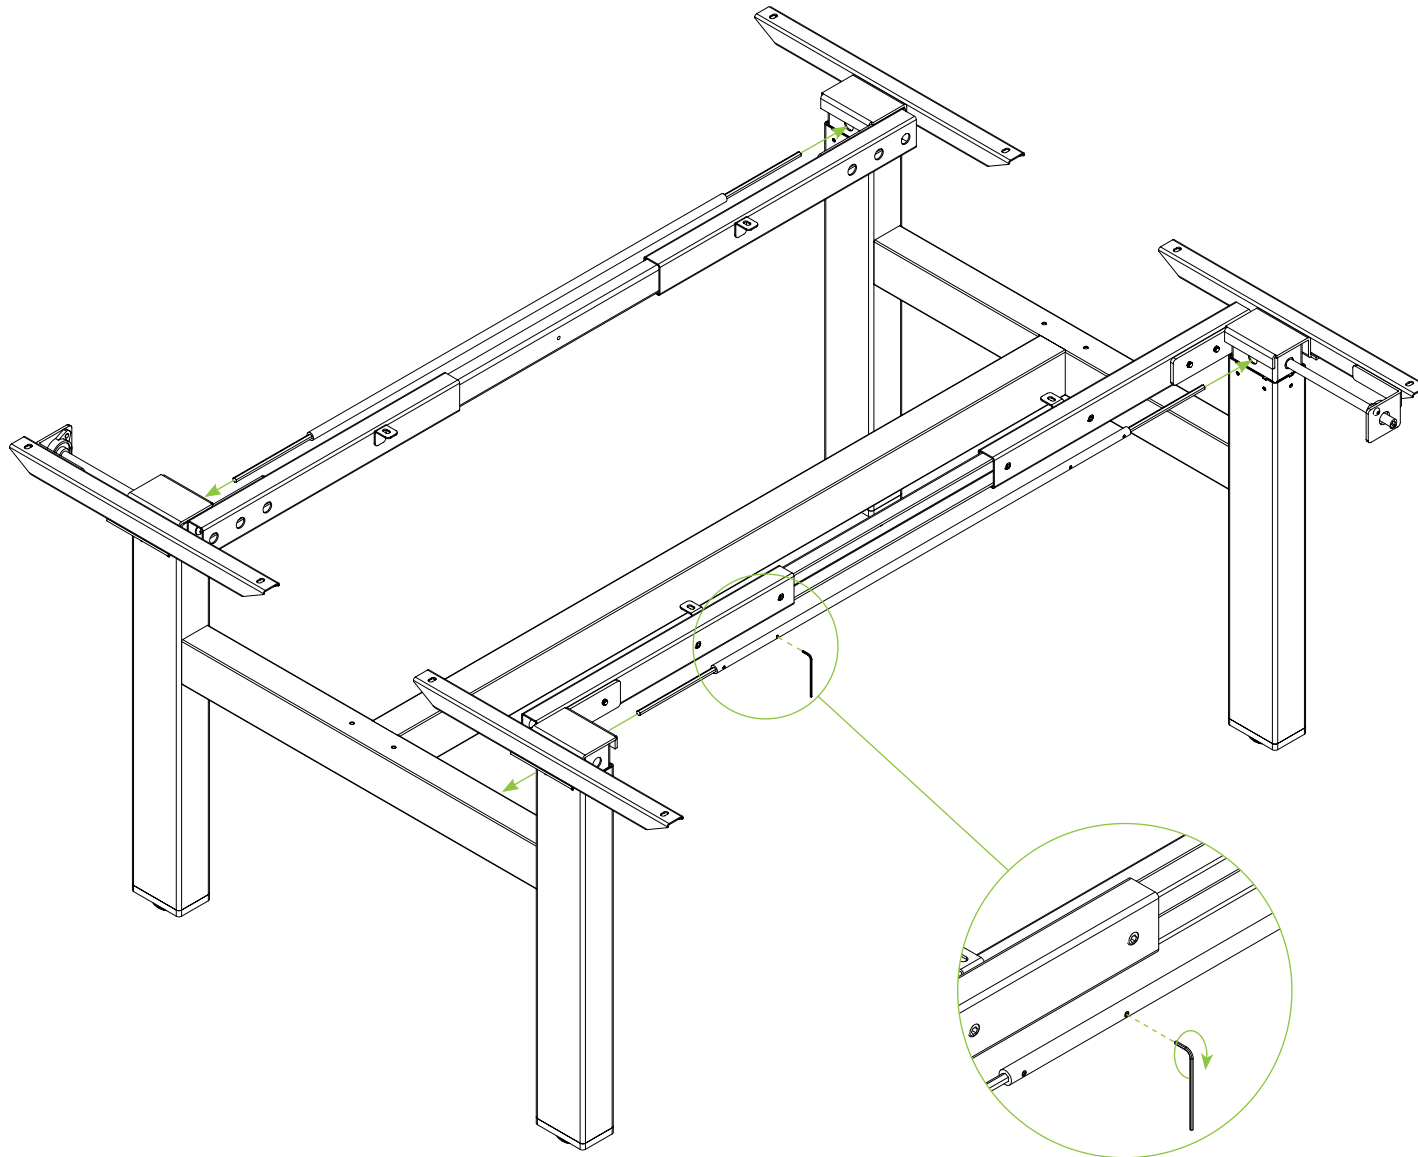

 
Step 10

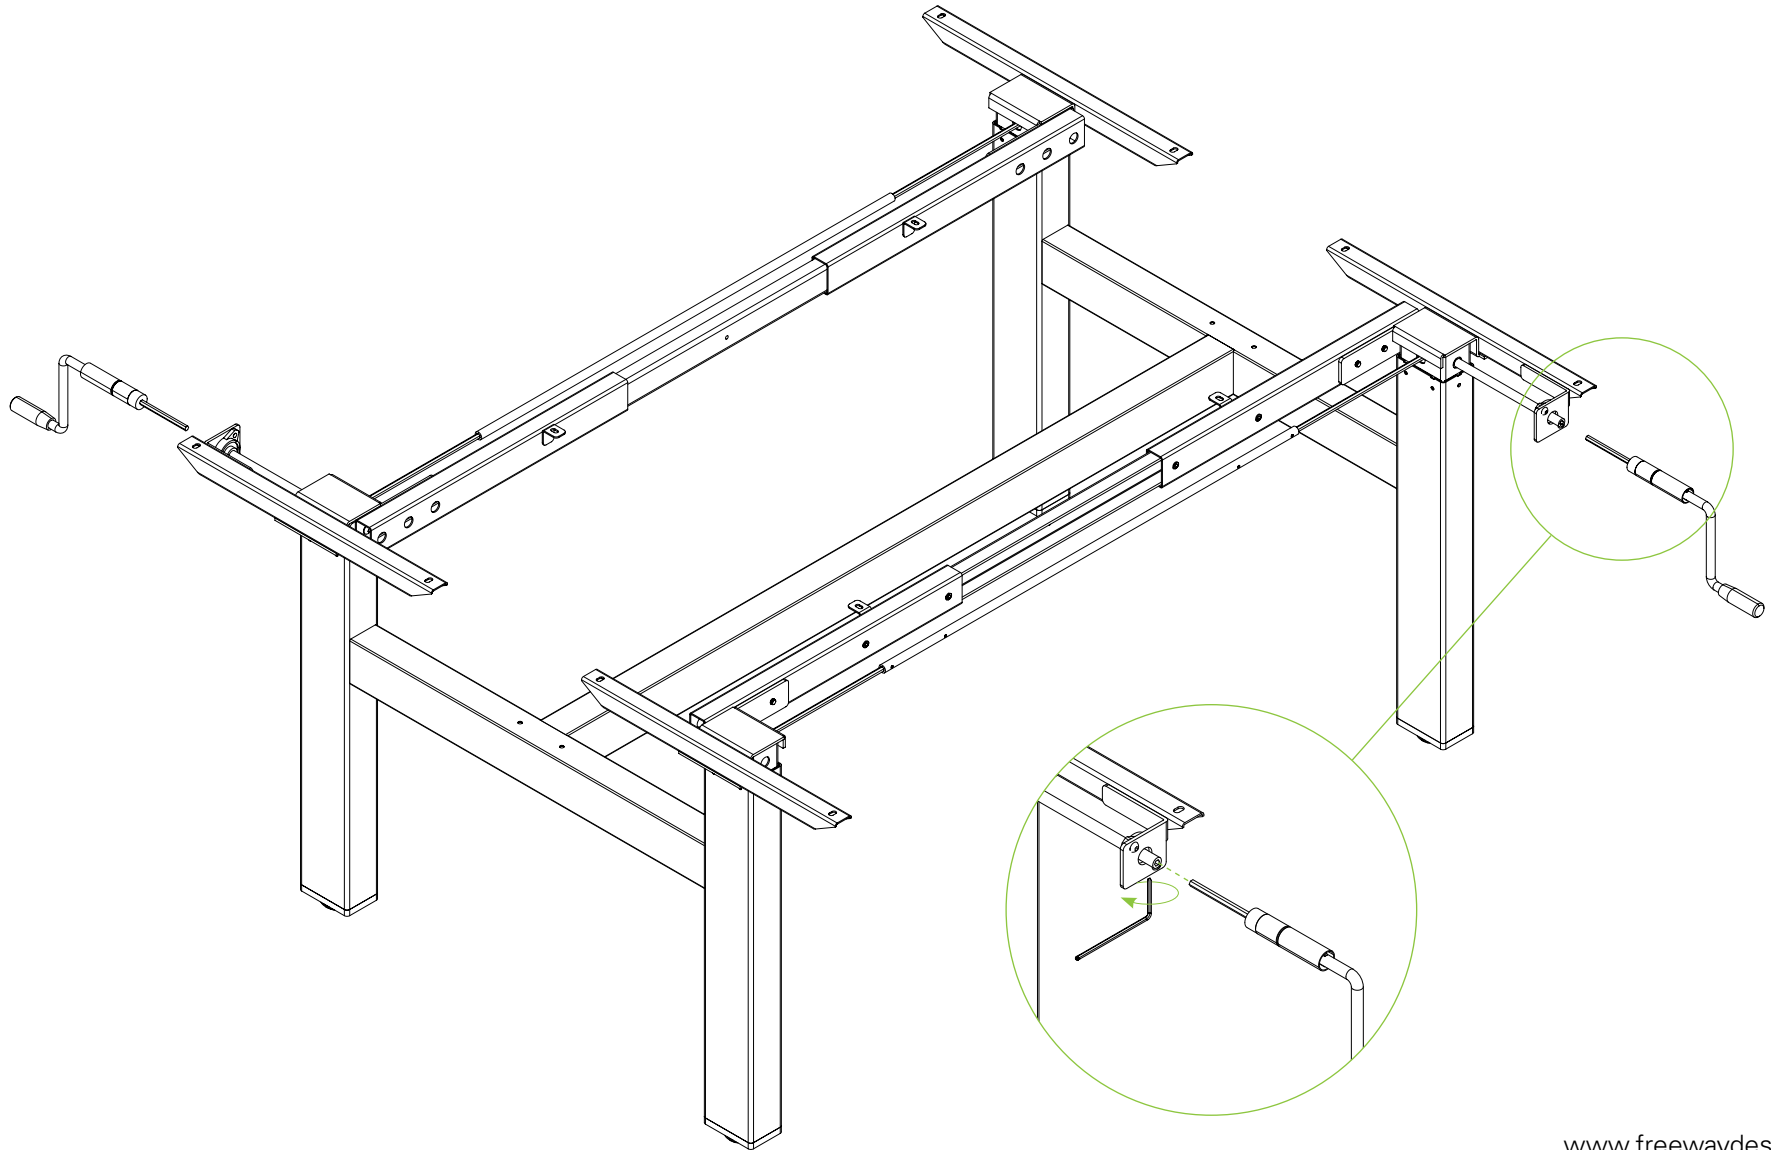

 
Step 11




12 x ST5.0x23

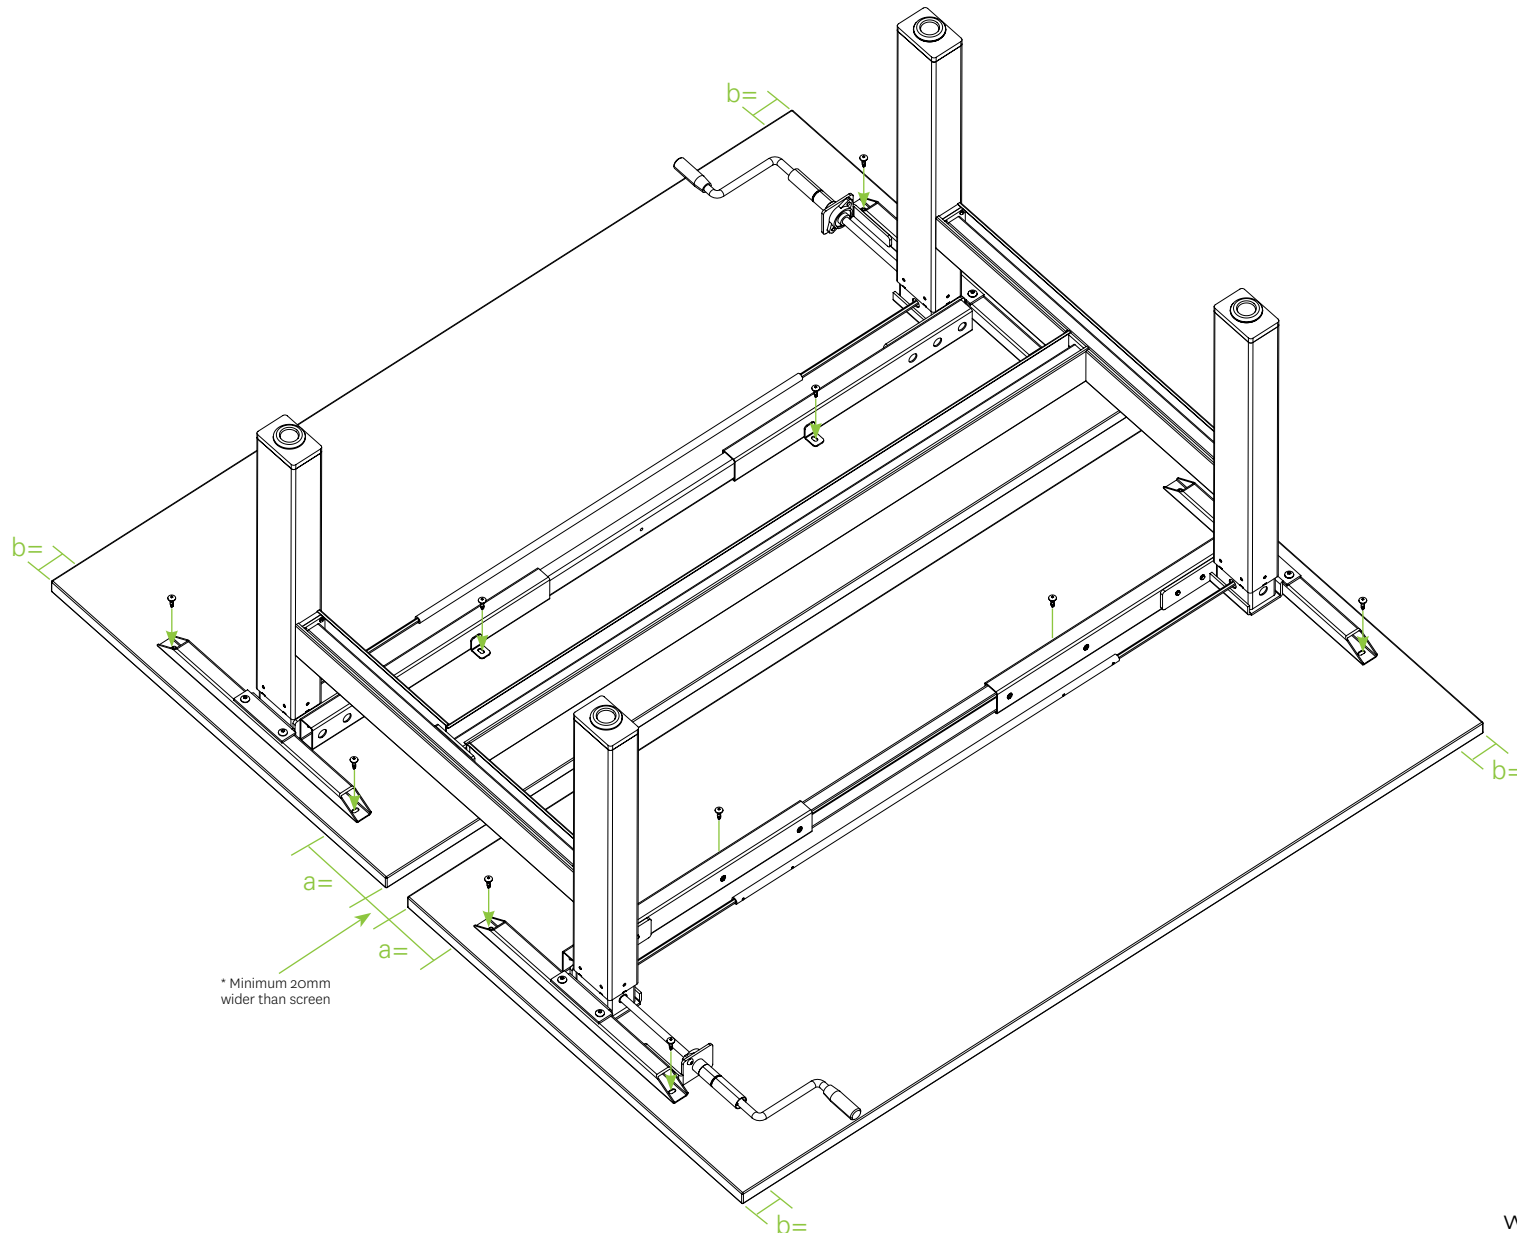 

 
Step 12




2 x M8x20

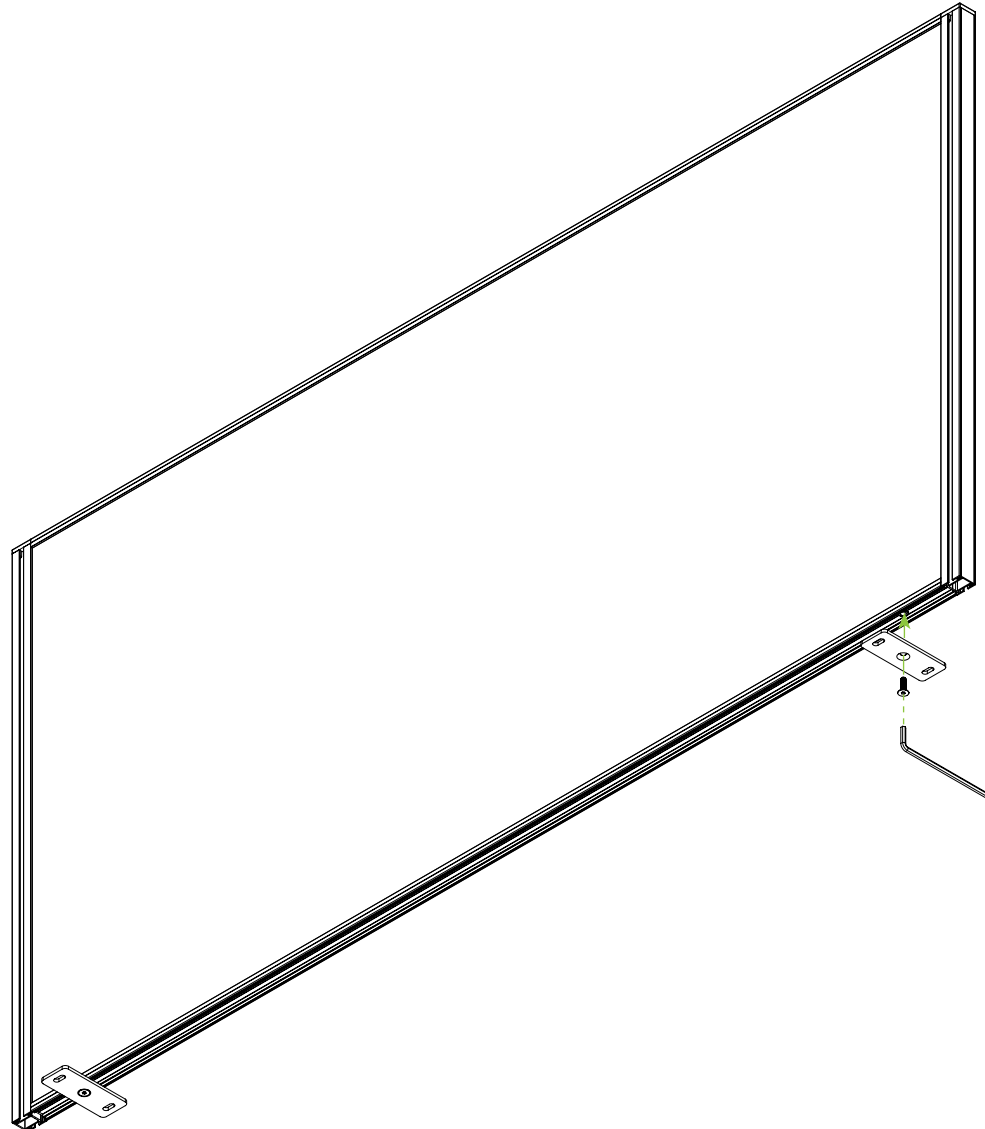 

 
Step 13




4 x M5x15

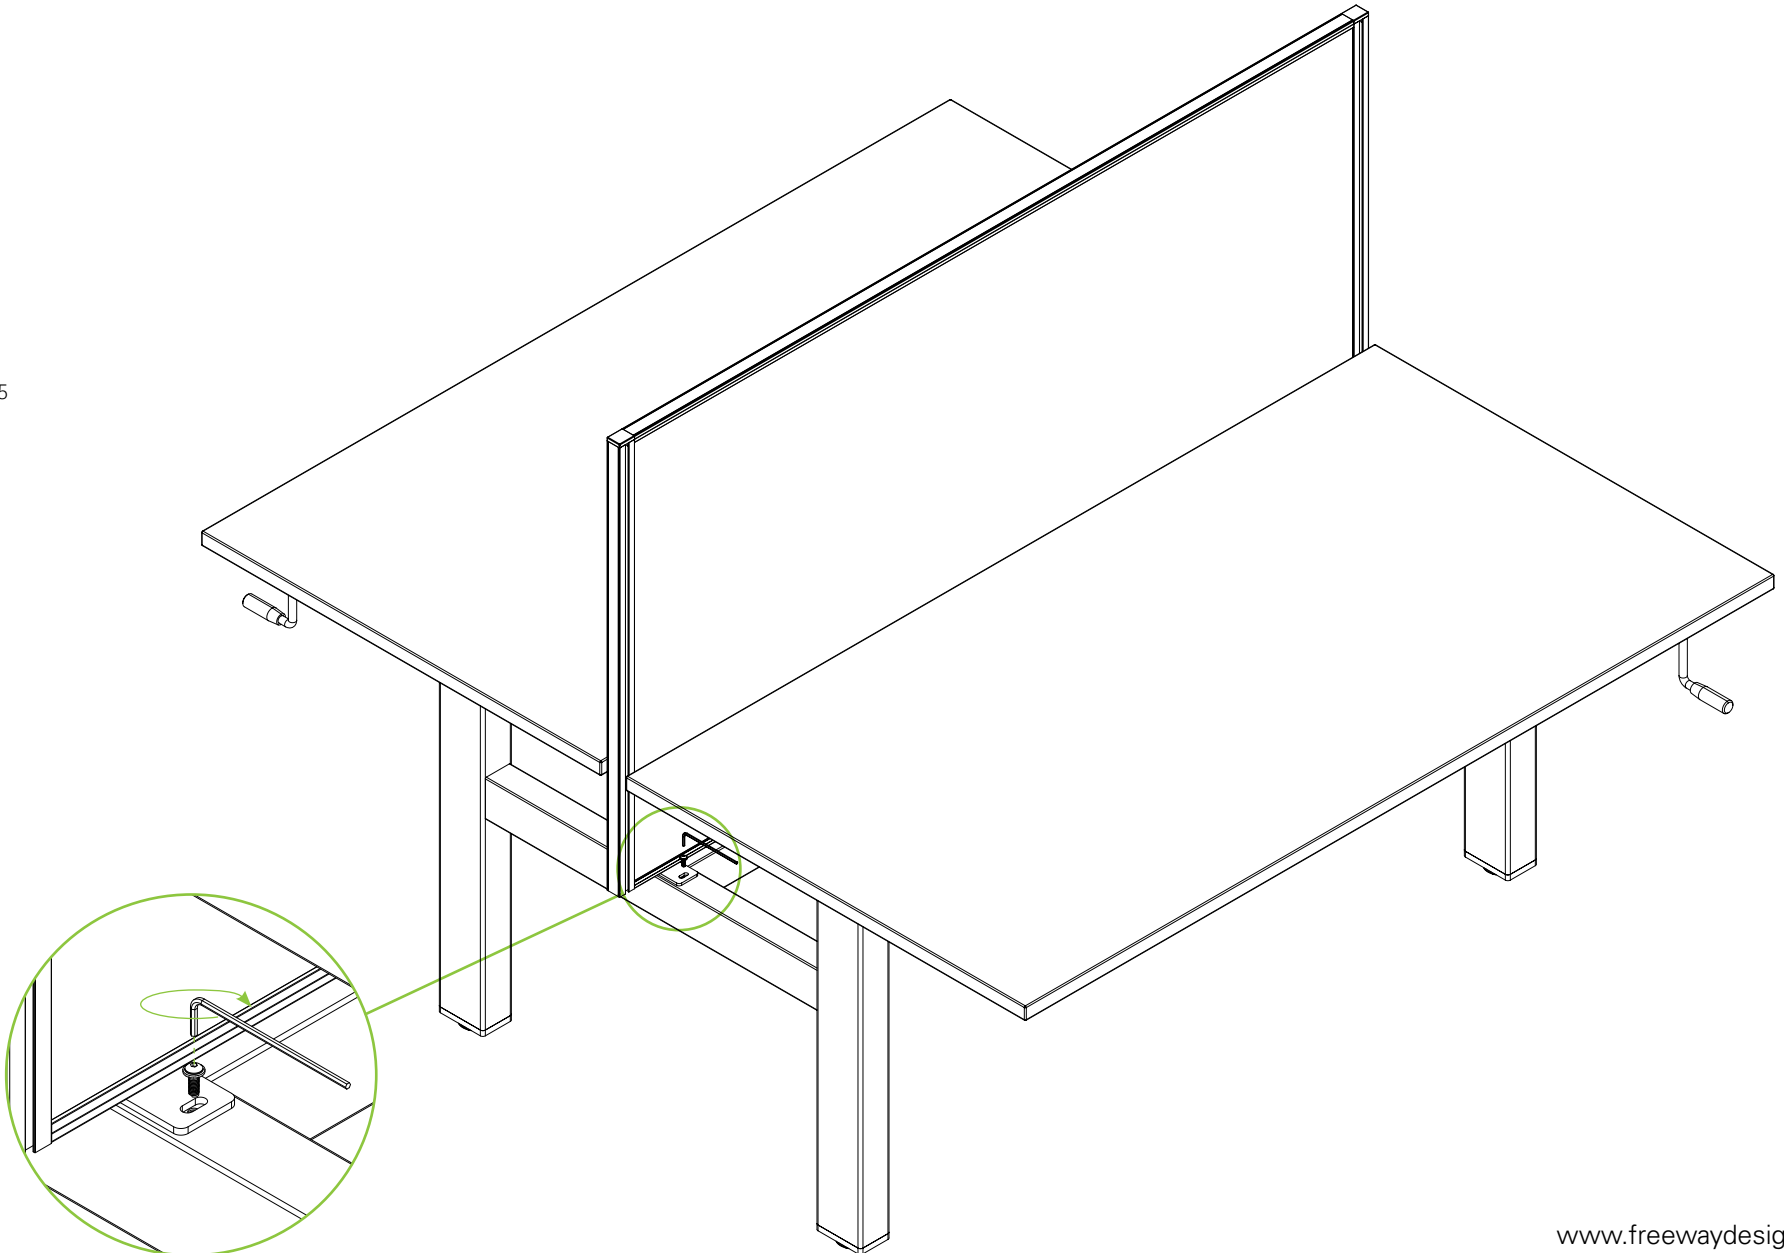 

 
Step 14



8 x ST5.0x23

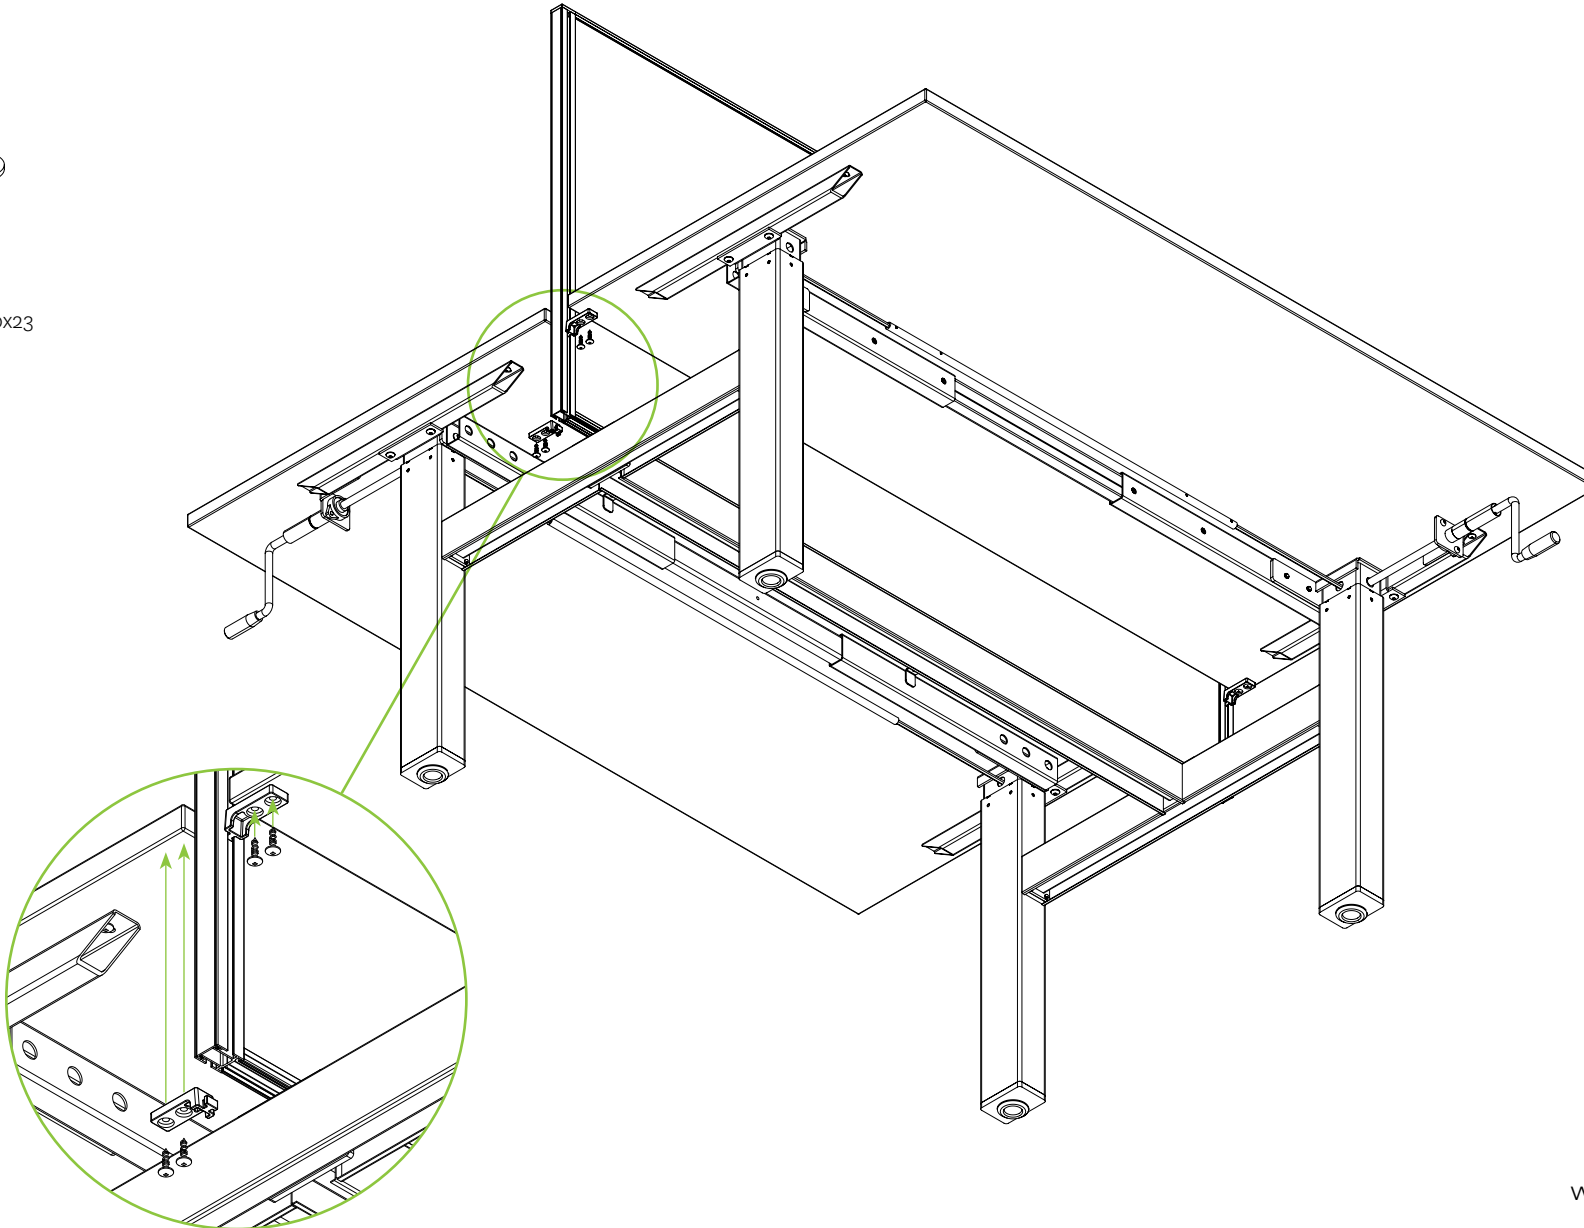 

Completed

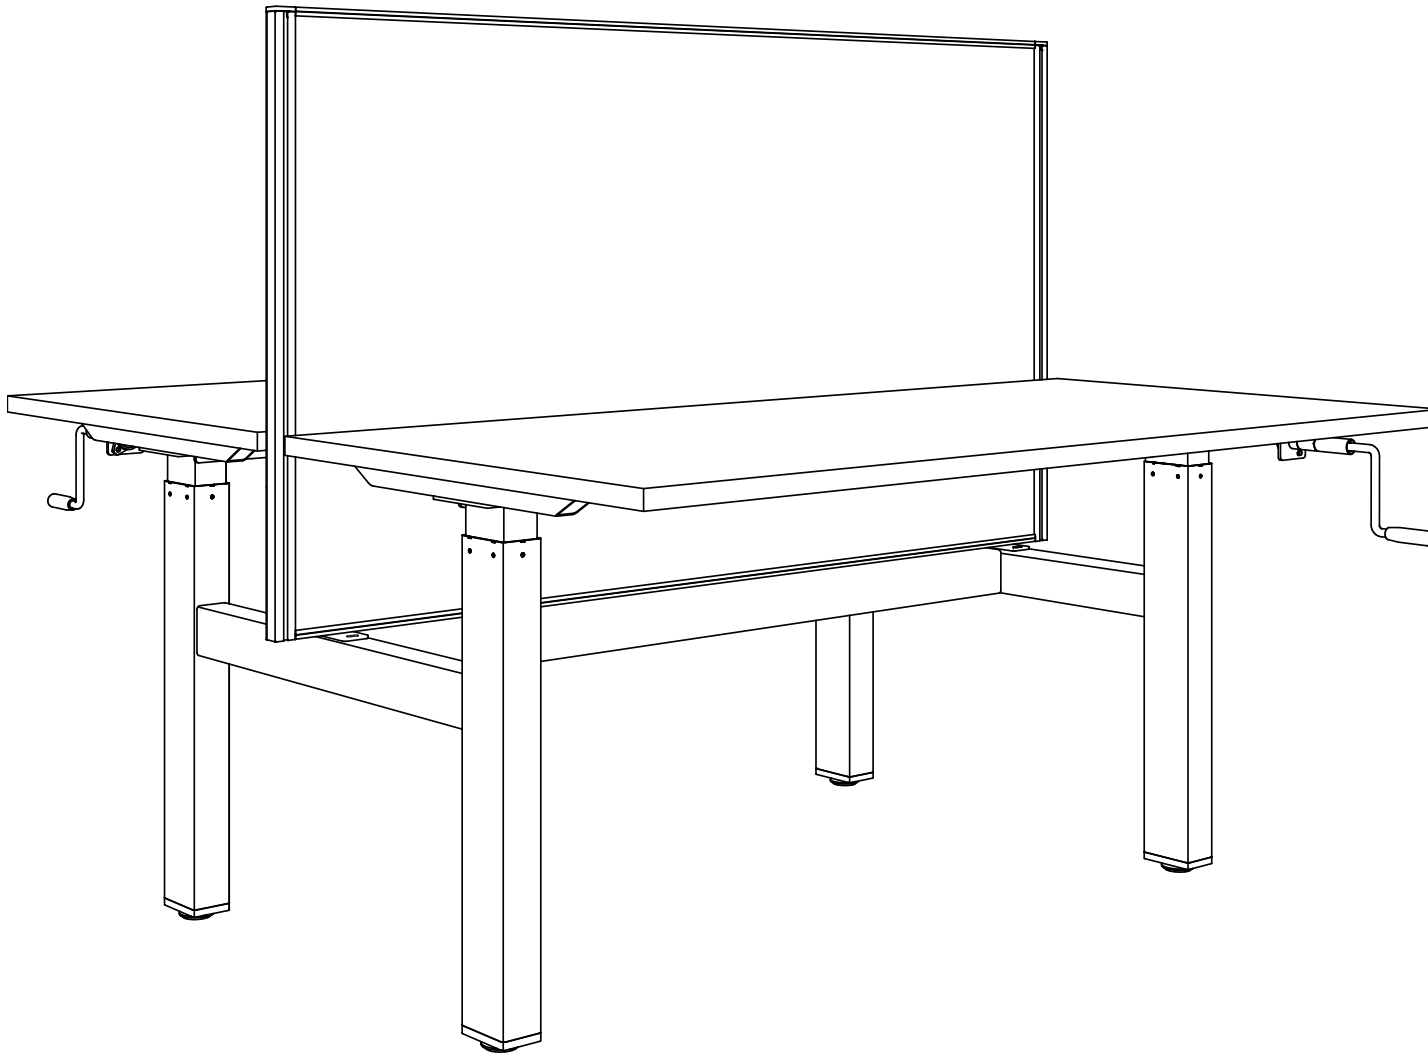 


Changing crank handle from right to left operation

Installation Guide - Winder 2 Column

Page 19

 Step 1

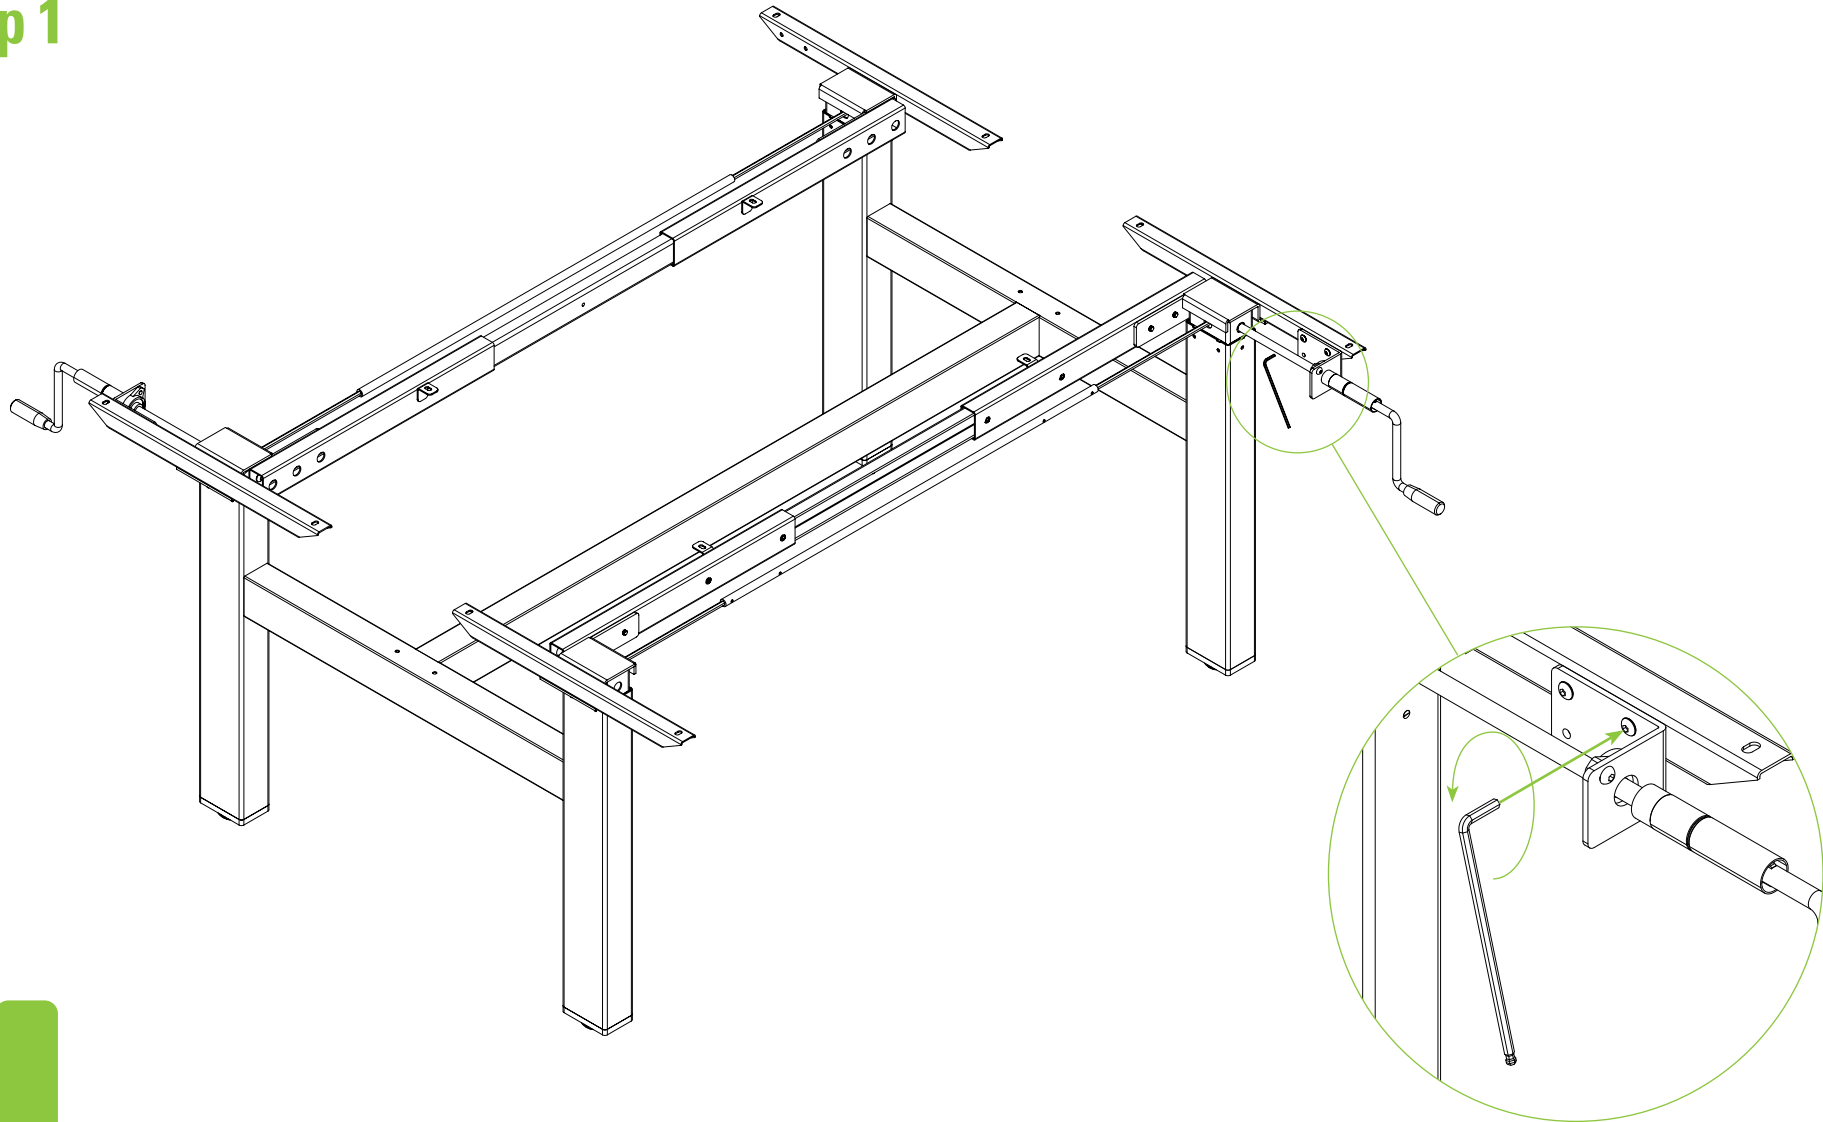


Changing crank handle from right to left operation

Installation Guide - Winder 2 Column


Page 20

 Step 2

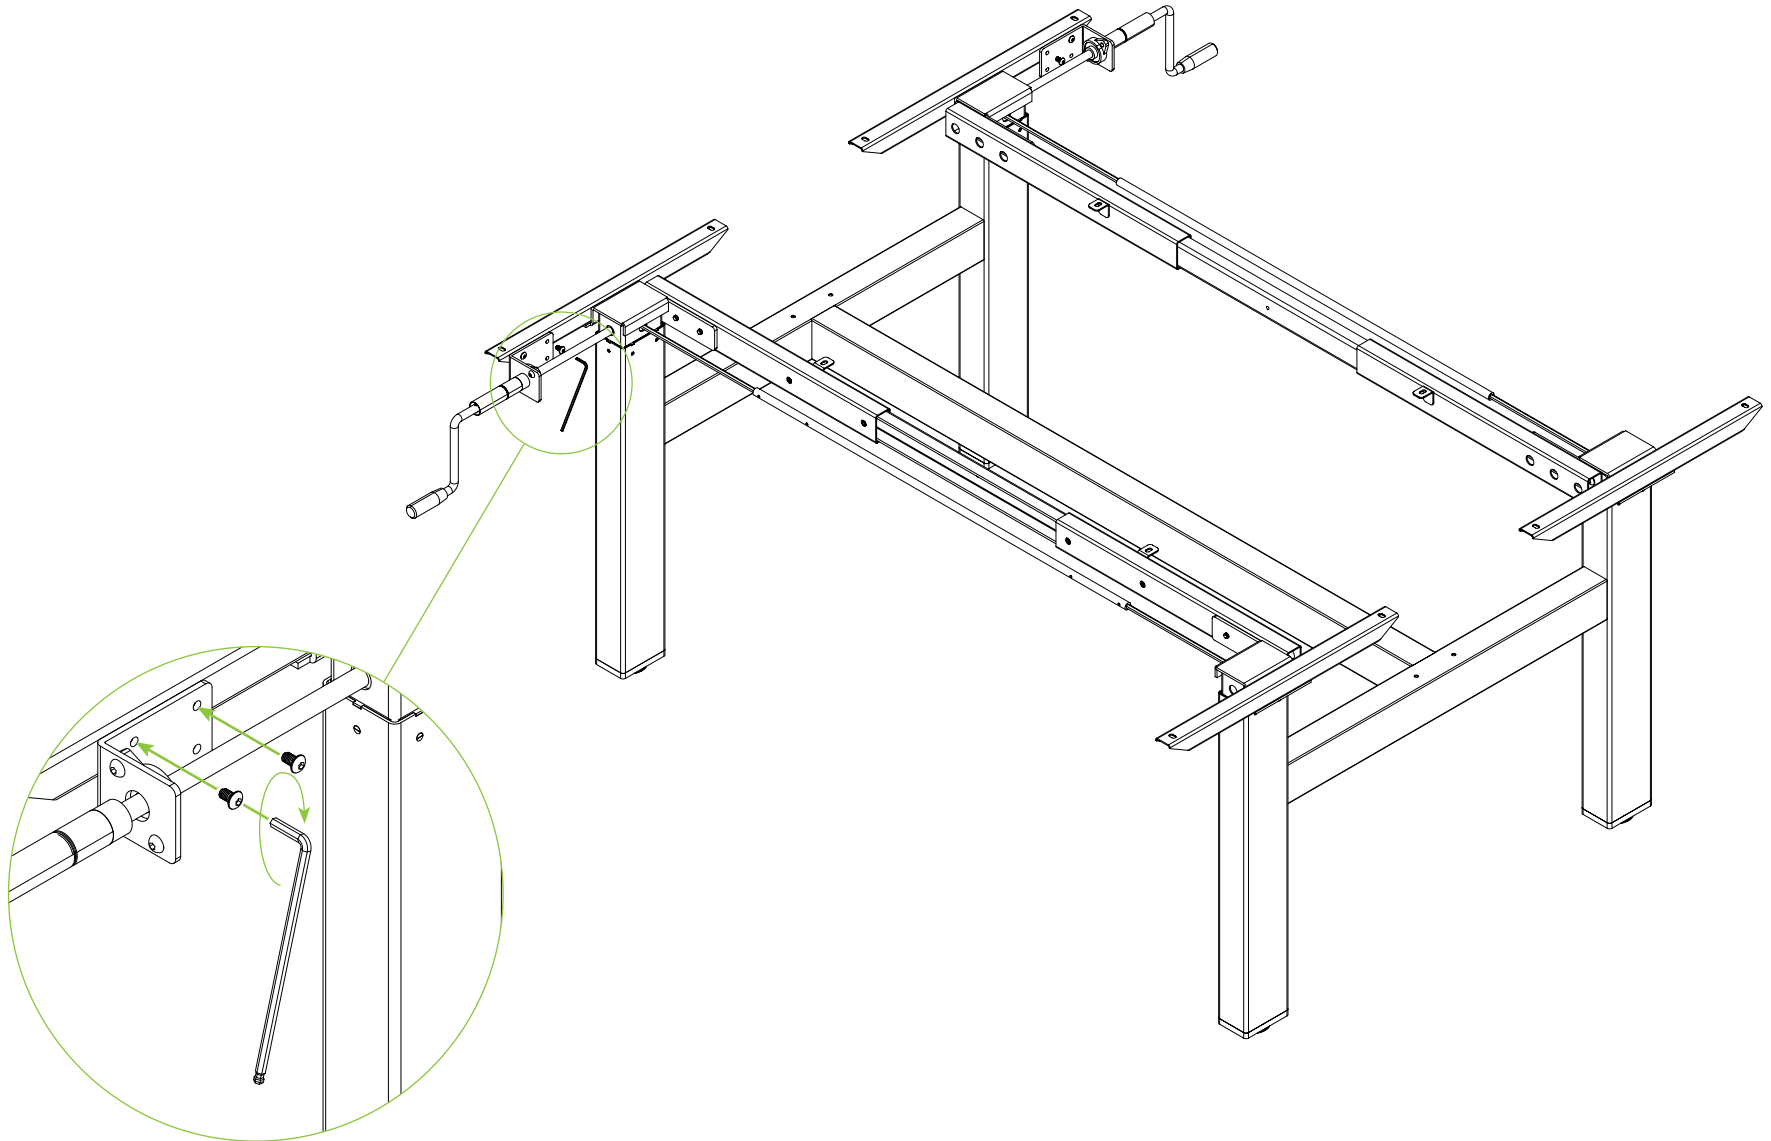

Optional Cable Tray

 Installation Guide

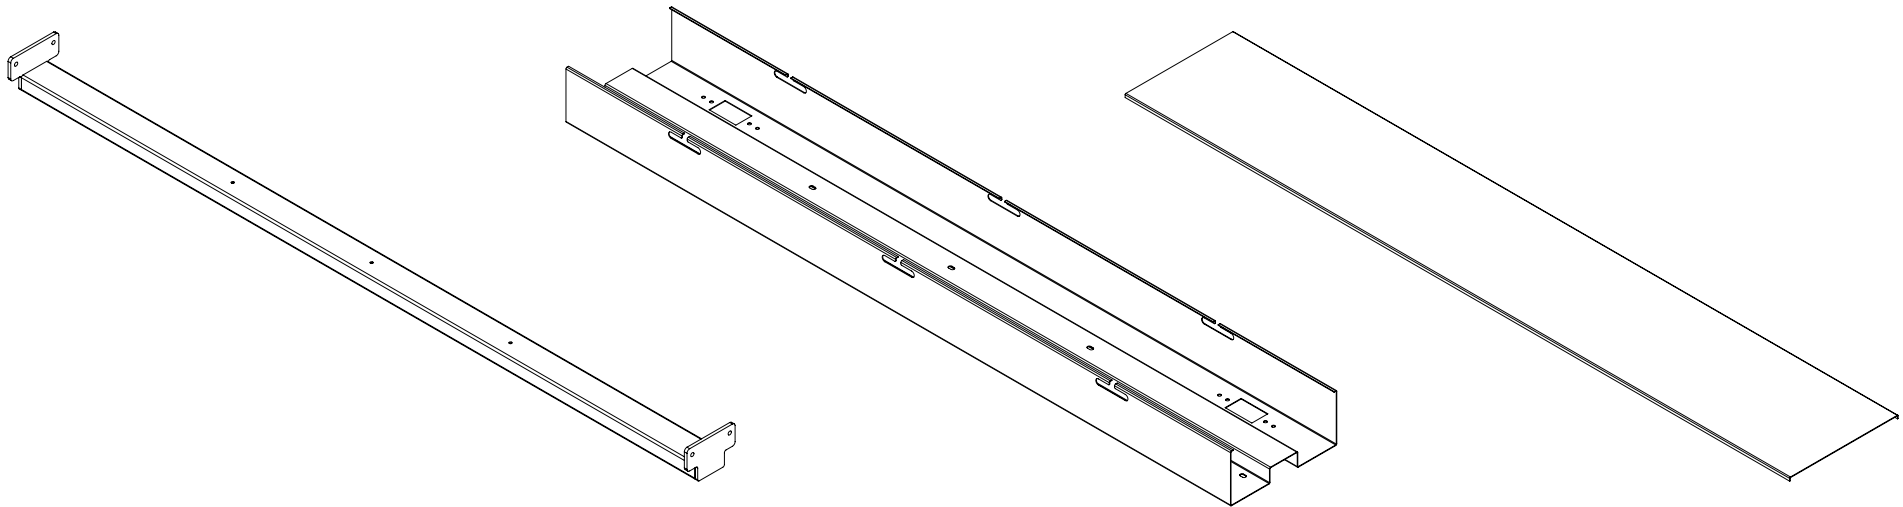


Optional Cable Tray


Installation Guide

Page 22

 
Step 1

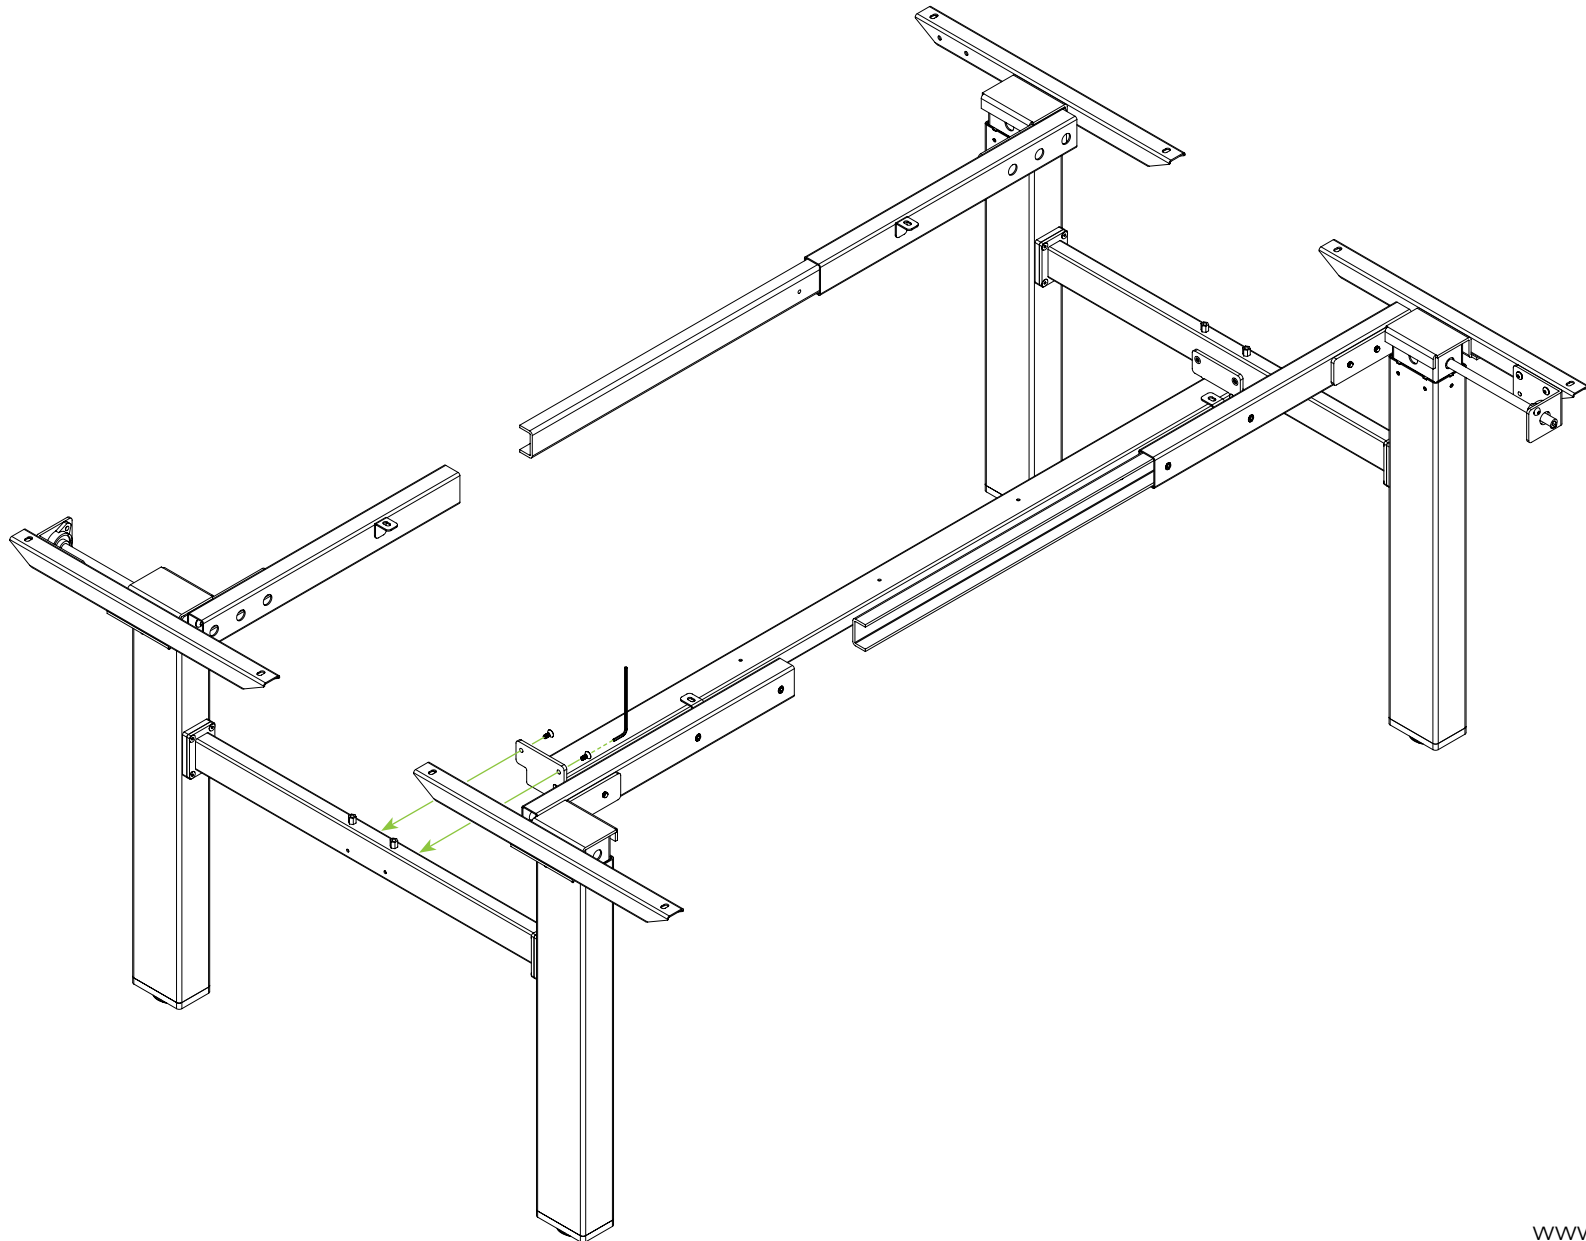

 
Step 2

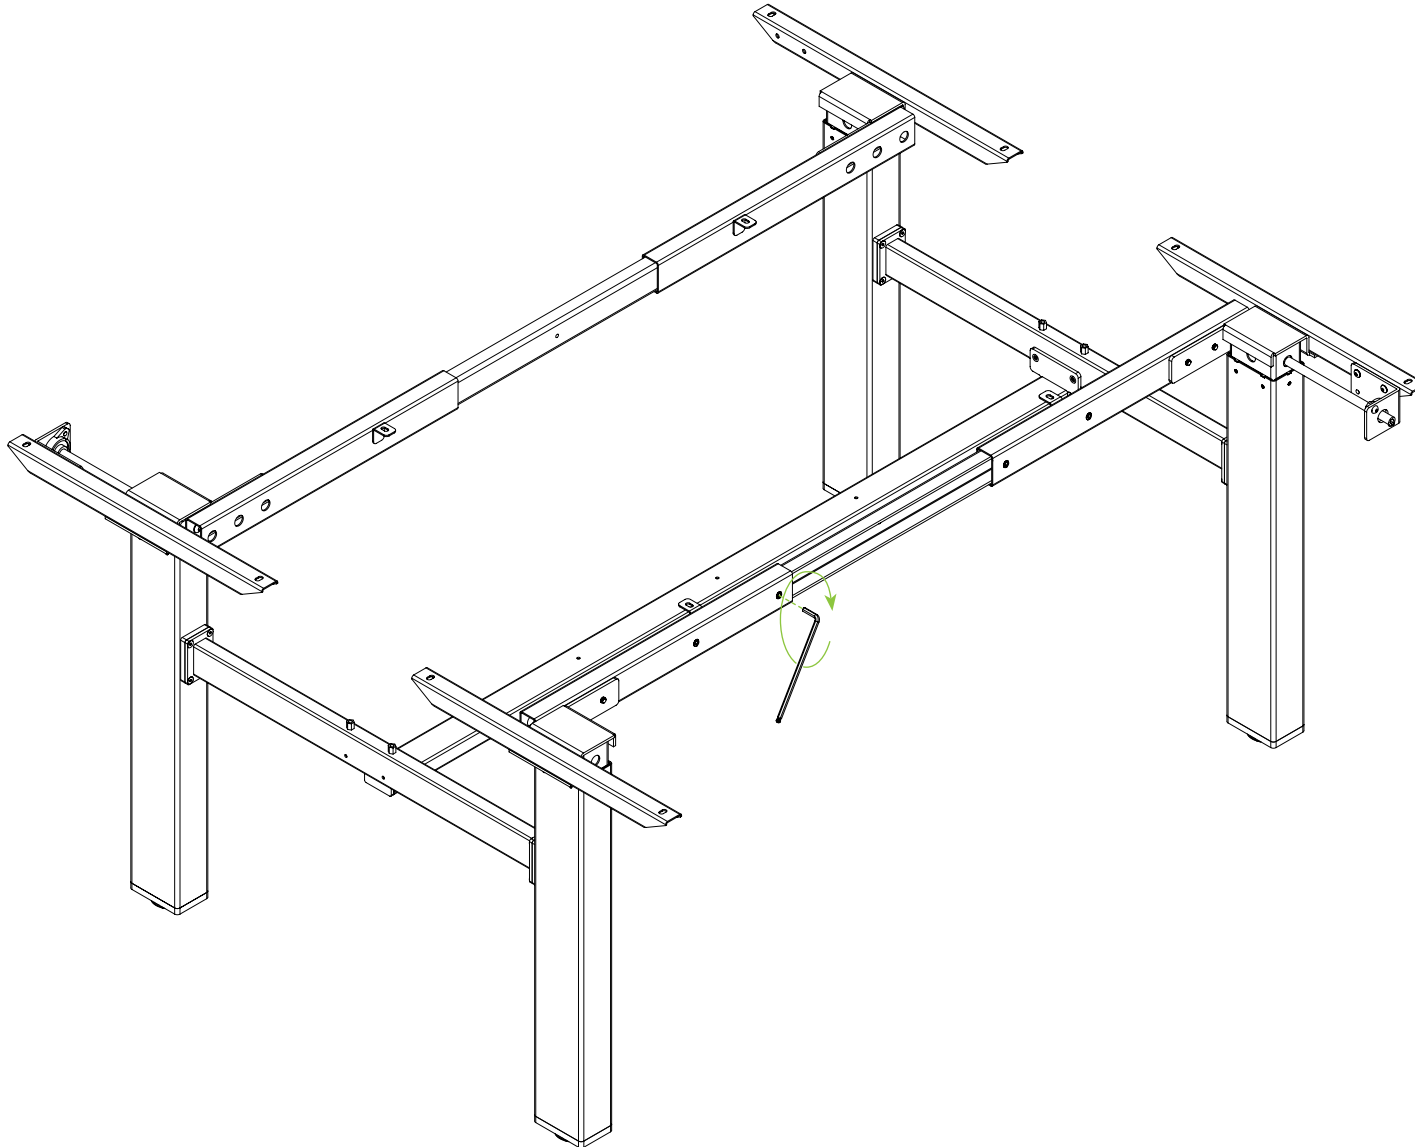

 Step 3

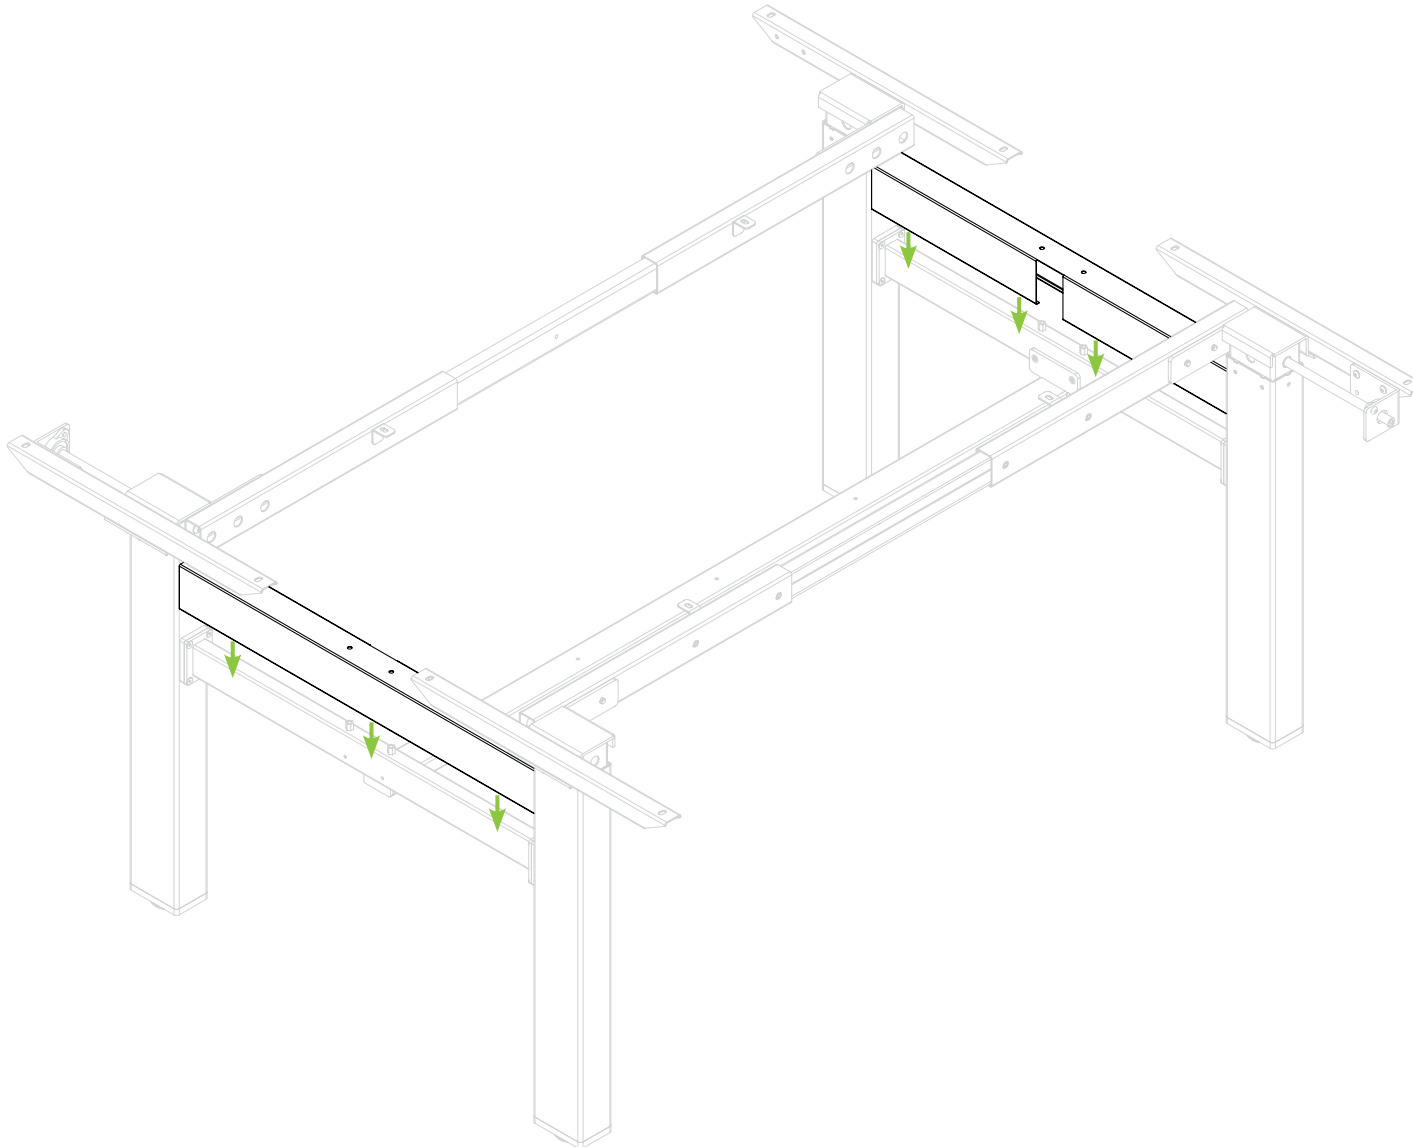

 Step 4

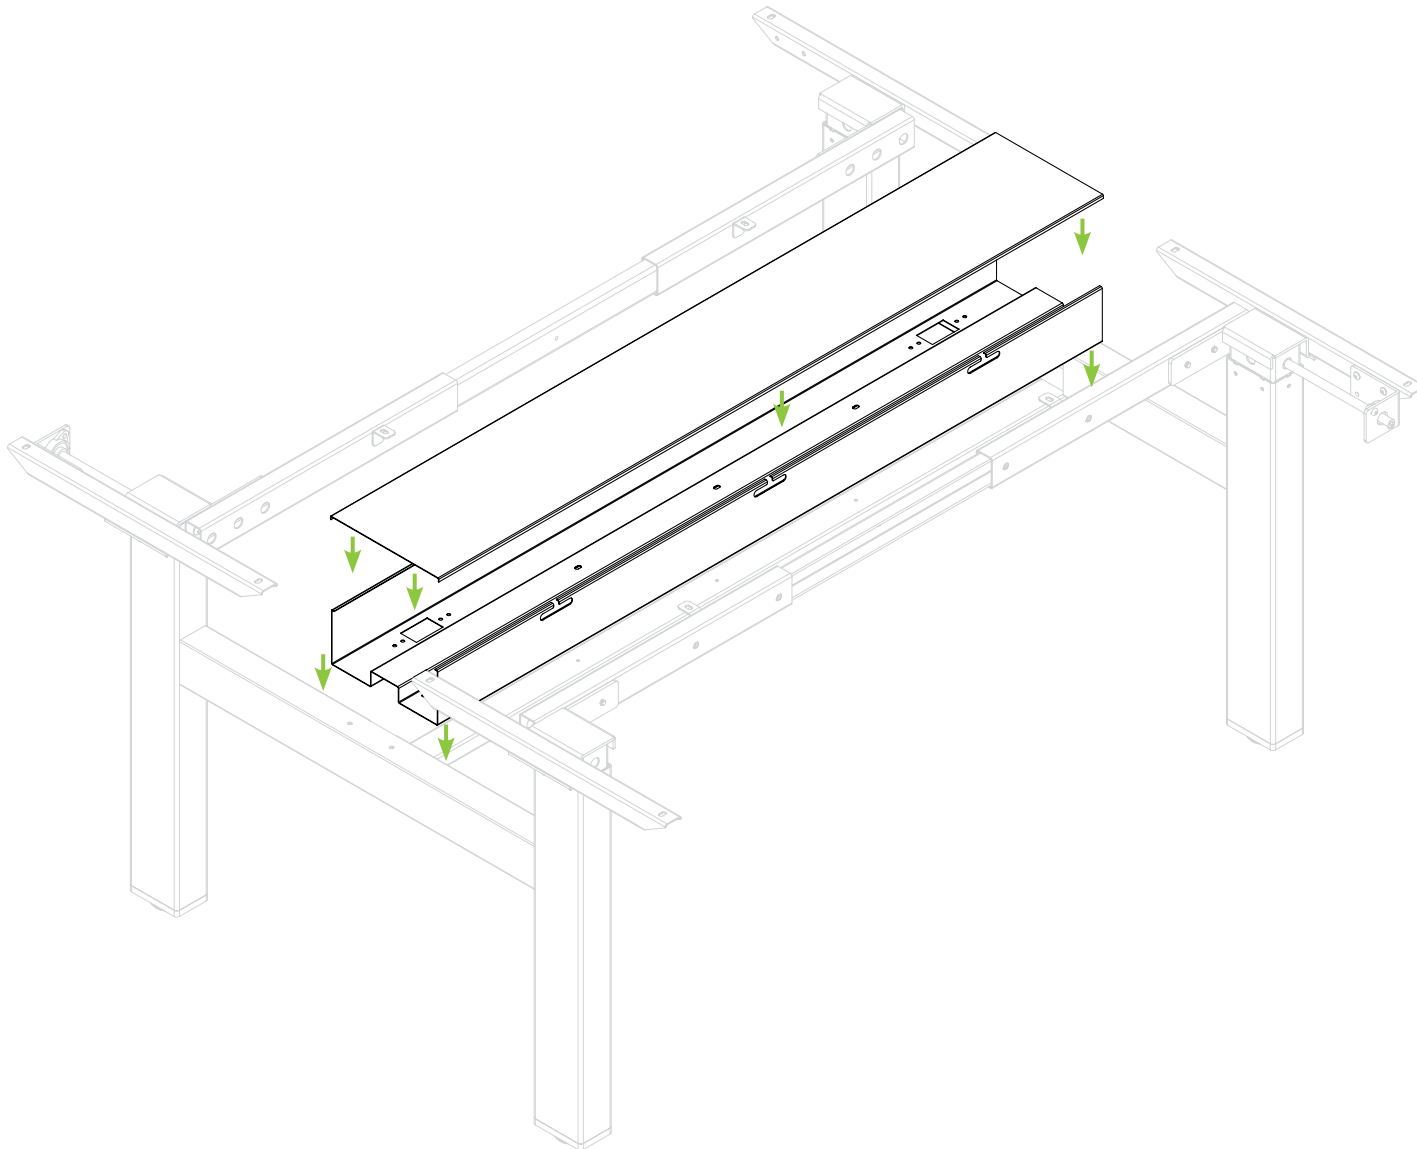

Directions For Use

IMPORTANT

Please carefully read the assembly manual and direction for use prior to instalment, use and maintenance of the table frame to gain a complete understanding of its contents. It provides you with important information about the safety, use, installation and maintenance of the table.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

SAFETY

- The table must be used in a safe manner. Inappropriate use may cause damage to the table and/or cause bodily harm to the user or persons nearby.
- Do not use the table frame to lift people.
- Please retain this operation manual and pass it on to any future owner.

USAGE

- The height-adjustable table is designed for use in dry work environments only.
- The table height is infinitely adjustable within its height range so that it can be set to the user's most ergonomic working height. The user should seek professional help to establish their optimum working height.
- The table has been designed as a devise to elevate the users work surface and associated office peripherals. Do not use the table frame for any other purposes than that which it has been designed for. Any other use is at user's own risk!
- Do not crawl, lie or move around under the table frame, and do not sit or stand on the table frame.
- CHILDREN should only use the table when supervised by adults.
- Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damages arising from improper use or handling of the table frame other than that described in this operation manual.

SET UP AND INSTALLATION

Assemble the table frame according to the assembly instructions on pages #-#.

- Place the table in a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.
- Level the table with the adjustable feet ensuring that the table is stable.

The table is now ready for use.

MAINTENANCE

- The table does not require any maintenance by the user
- The table is only to be cleaned with a wrung cloth.

TECHNICAL DATA

 
Height Range: 680-1130mm

Agile


Installation Guide - Winder 2 Column




freeway

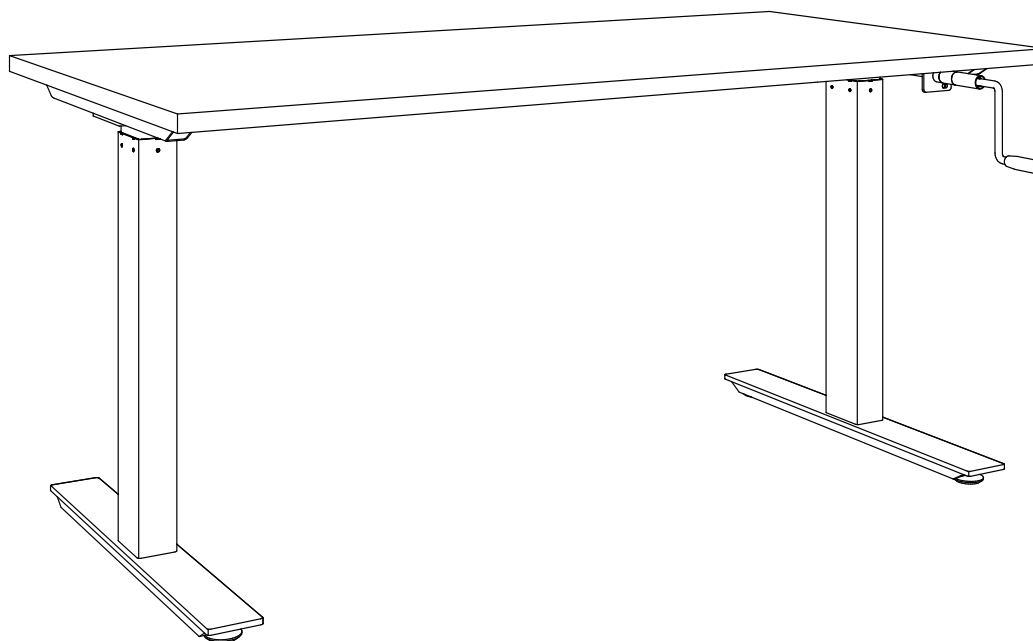


Parts:

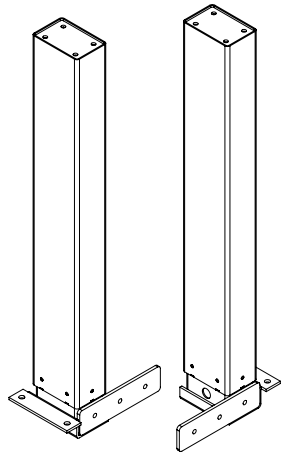 


1 x Left & Right Leg Pair

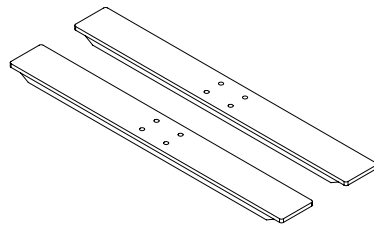 

2 x Foot

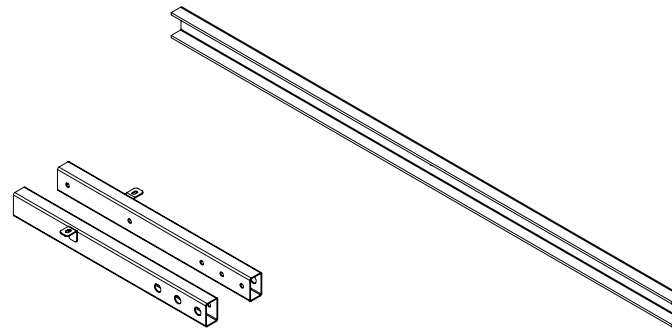 


2 x Leg Rail

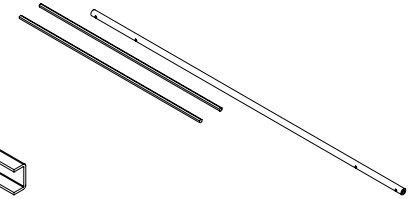 


1 x Cross Rail

 
1 x Drive Shaft

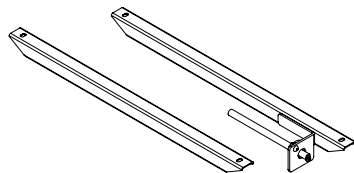


1 x L&R Support Bar Pair

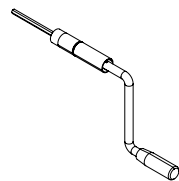 

1 x Winder

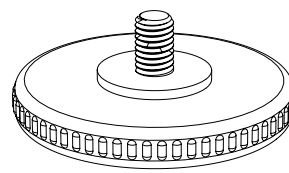 

4 x Levelling Foot

 

8 x M8x25



8 x M8x10

 
 


6 x ST5.0x23

Step 1





4 x M8x10

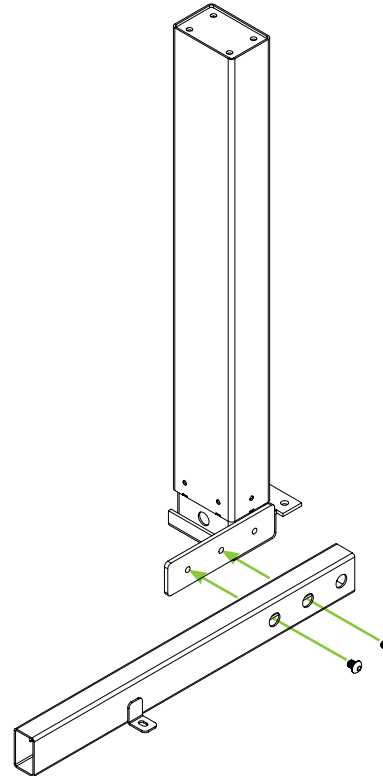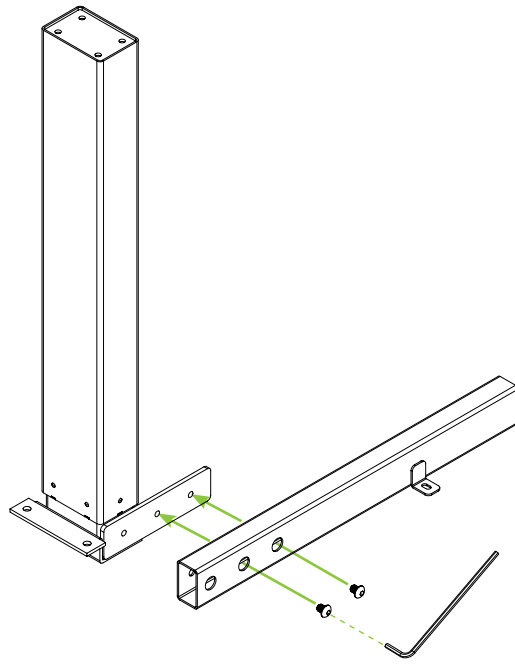


Step 2



 
 
4 x M8x10

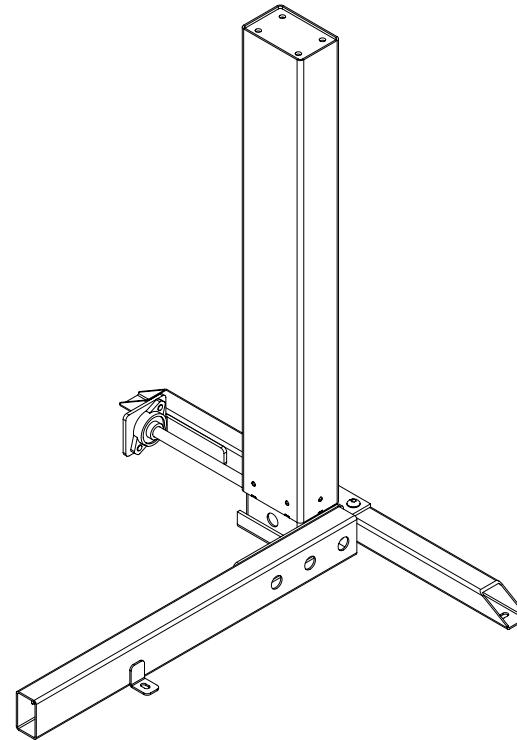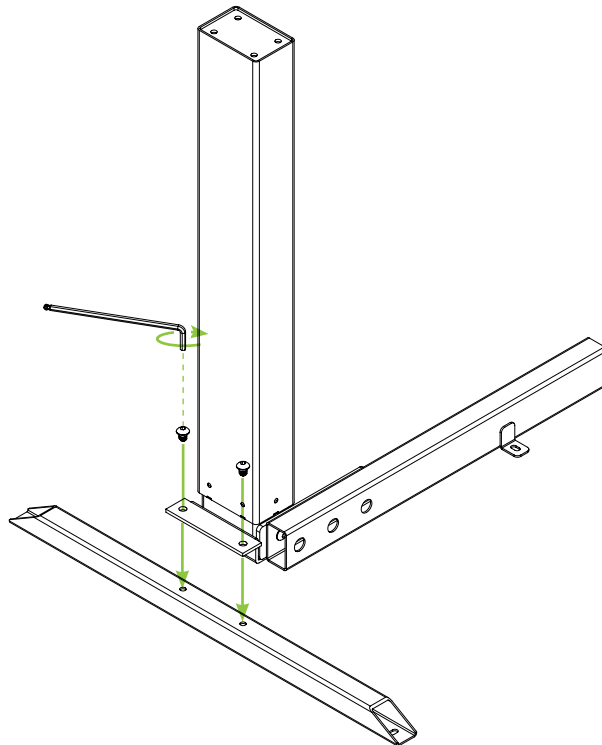


 
Step 3

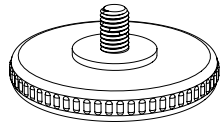


4 x Levelling Foot

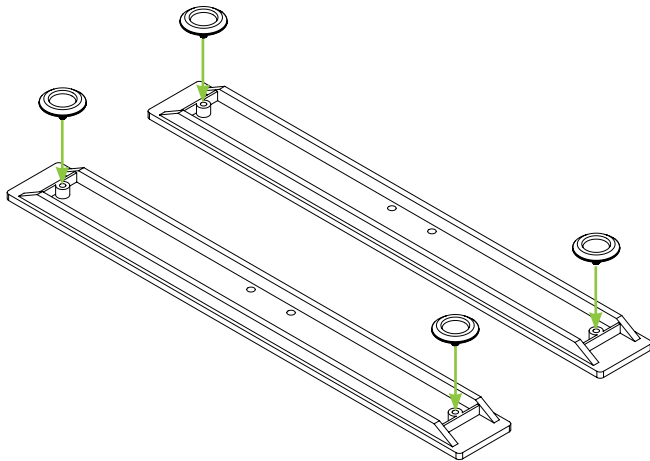  

8 x M8x25

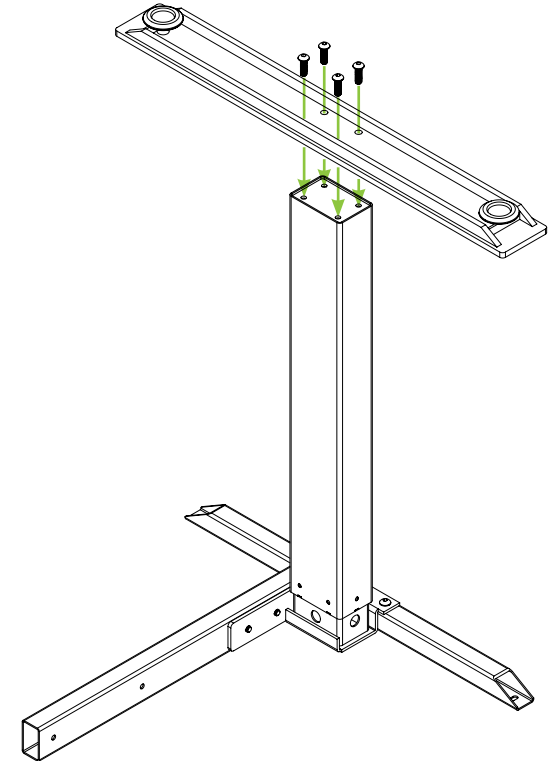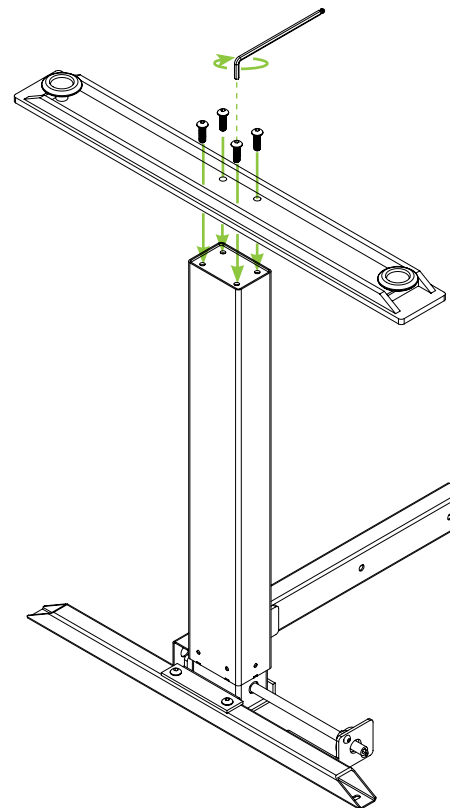  


 Step 4

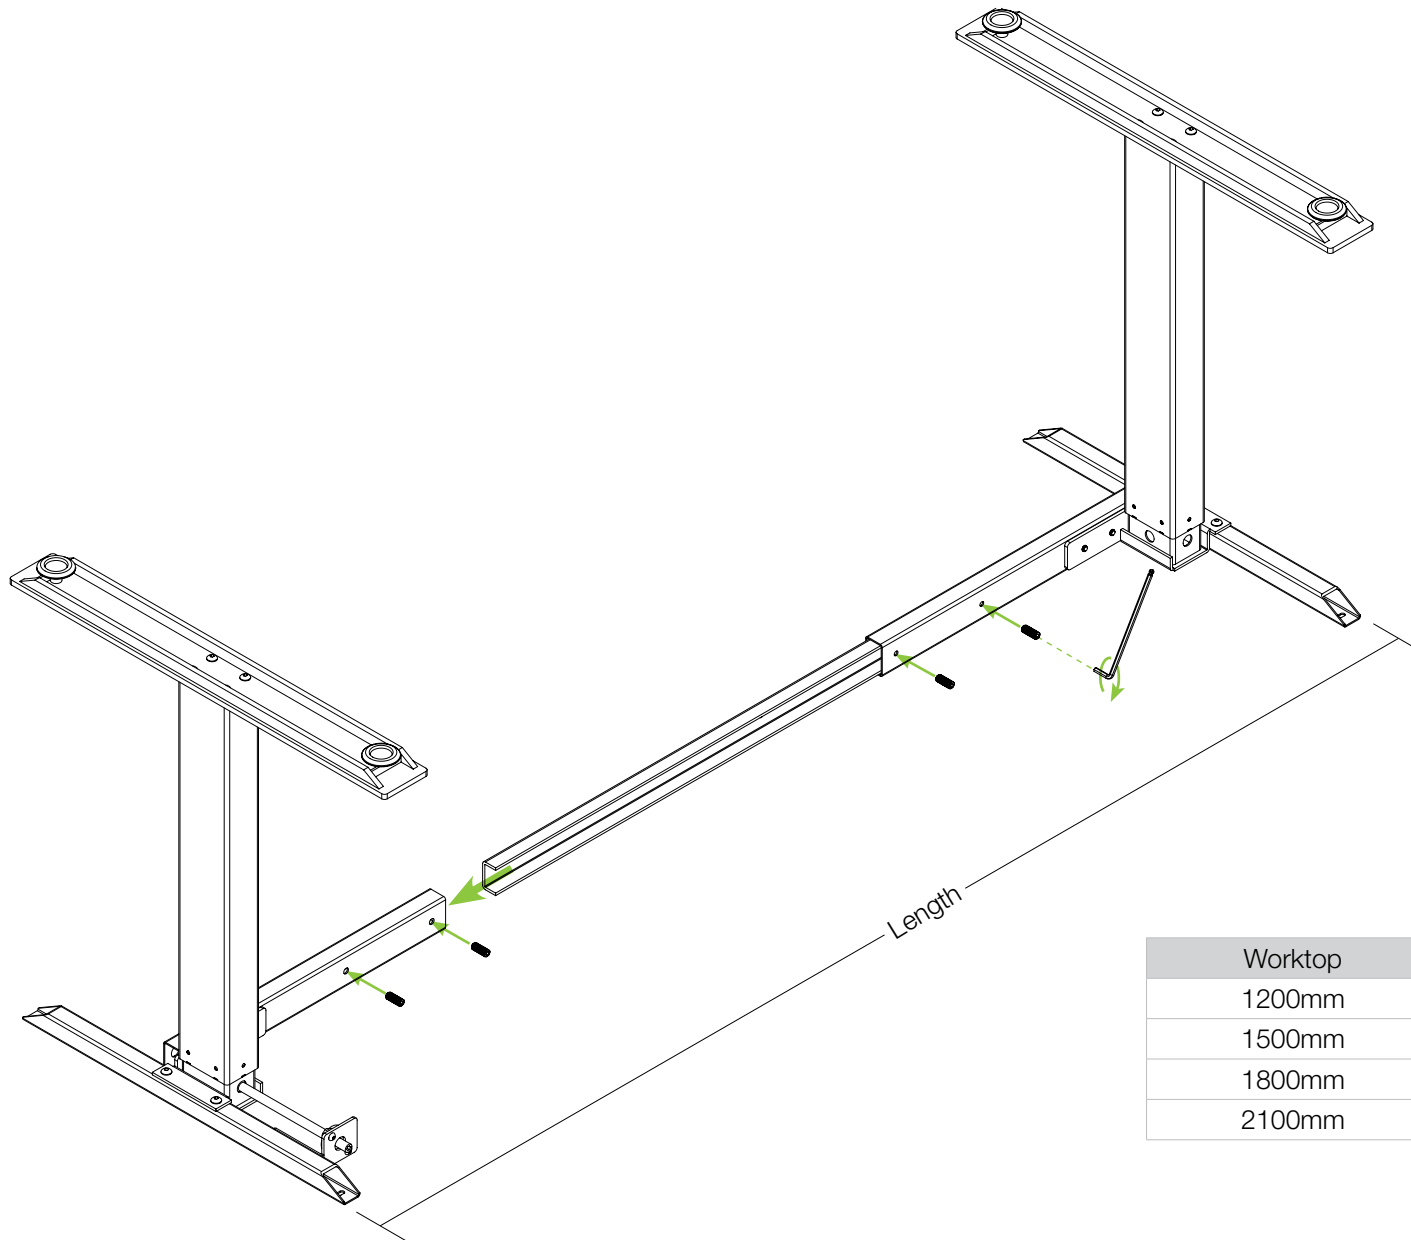


Worktop	Length
1200mm	1125mm
1500mm	1425mm
1800mm	1725mm
2100mm	2025mm

 
Step 5

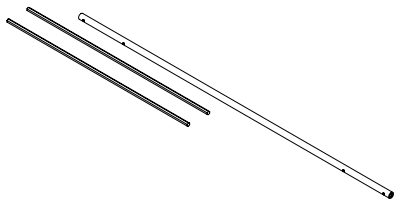


1 x Drive Shaft

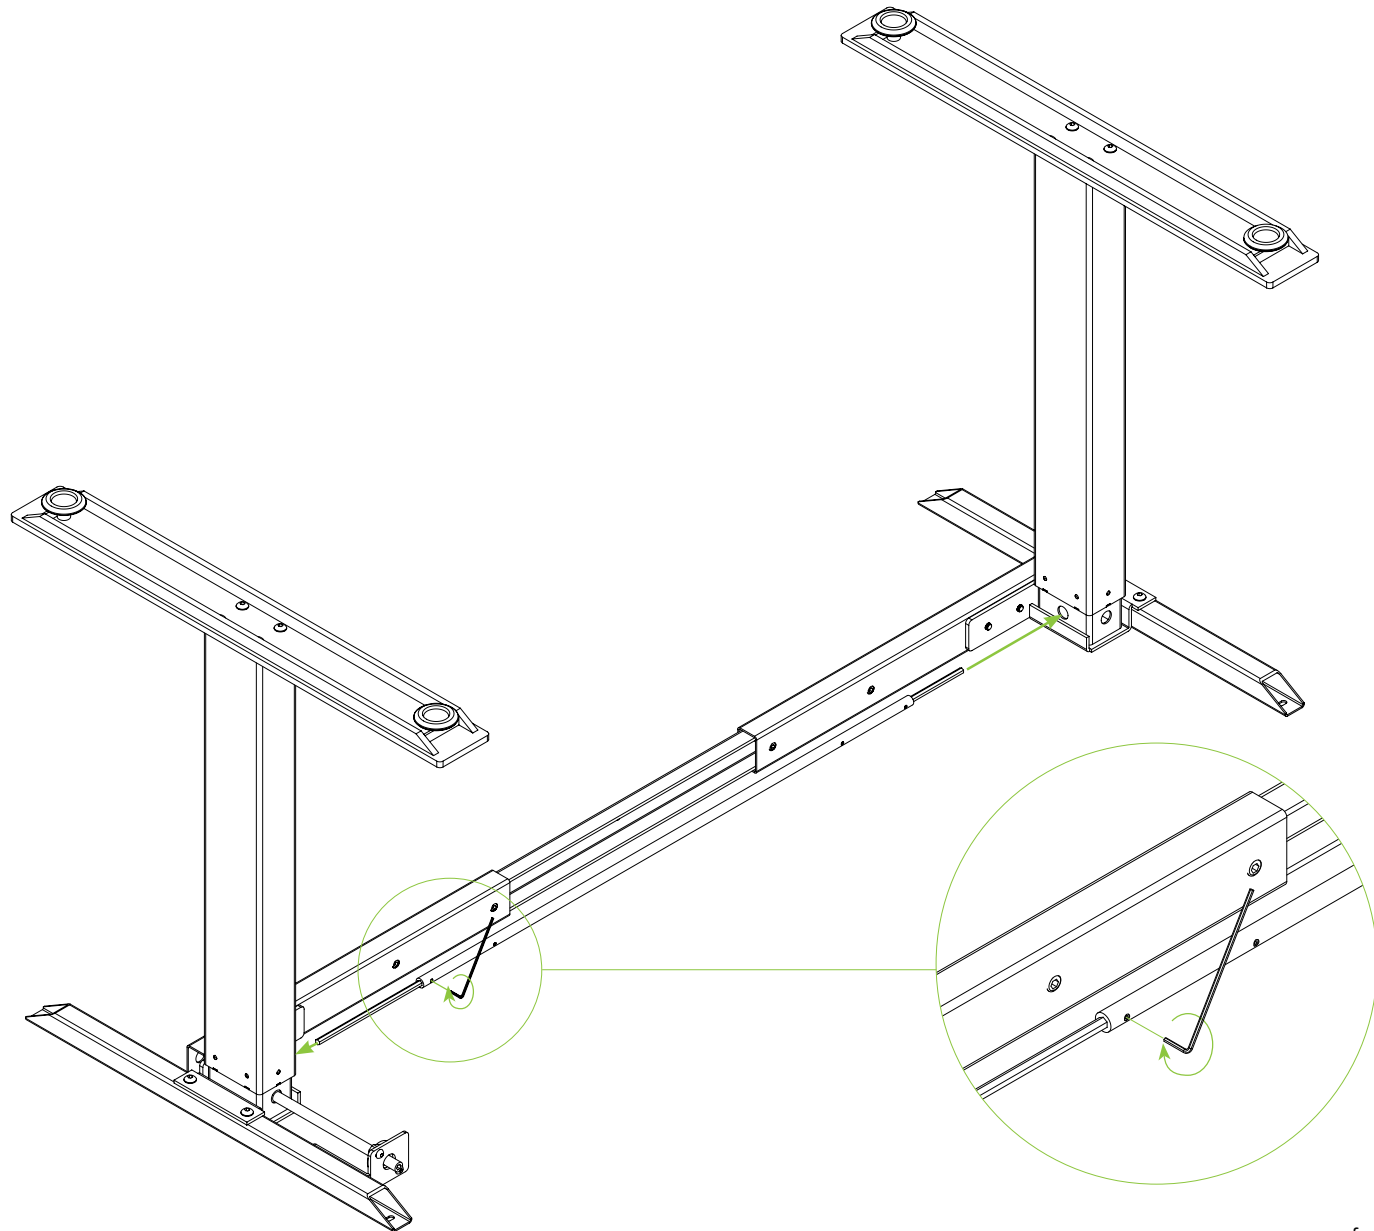 

 
Step 6

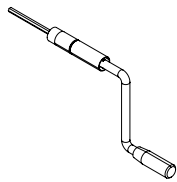


1 x Winder

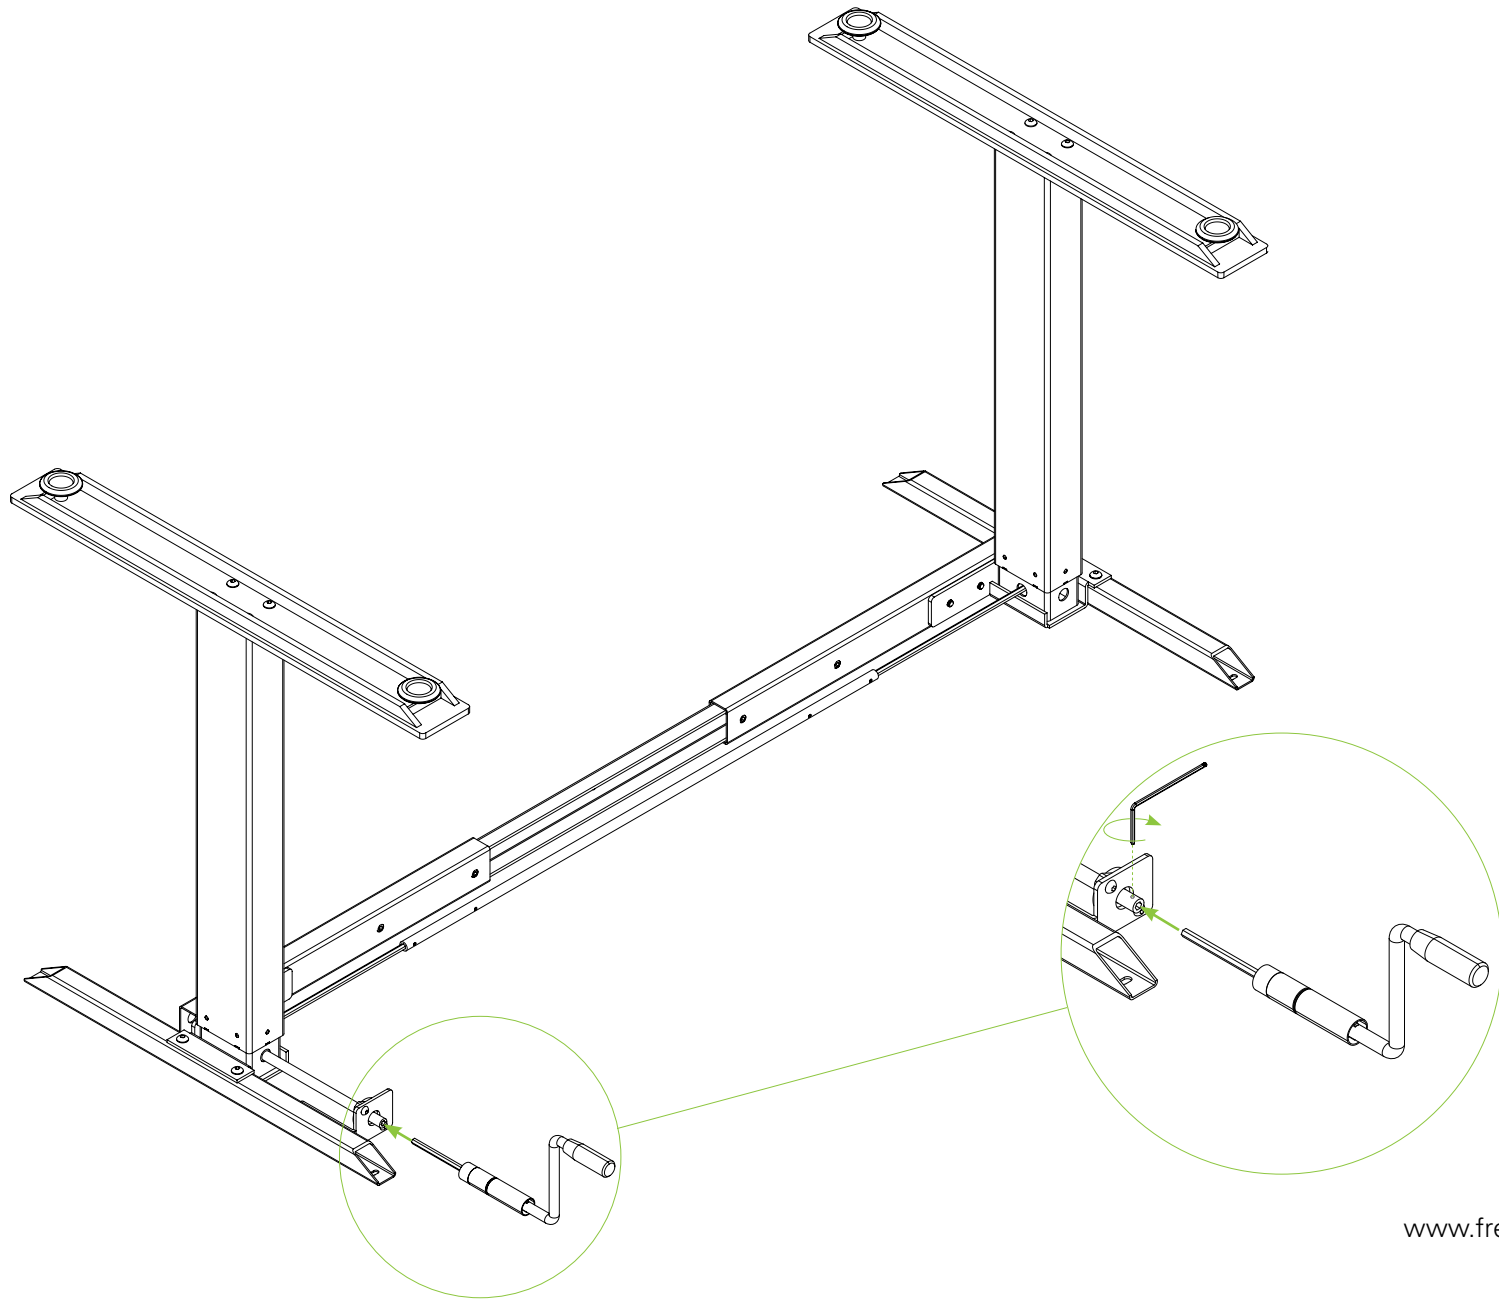 

 
Step 7



6 x ST5.0x23

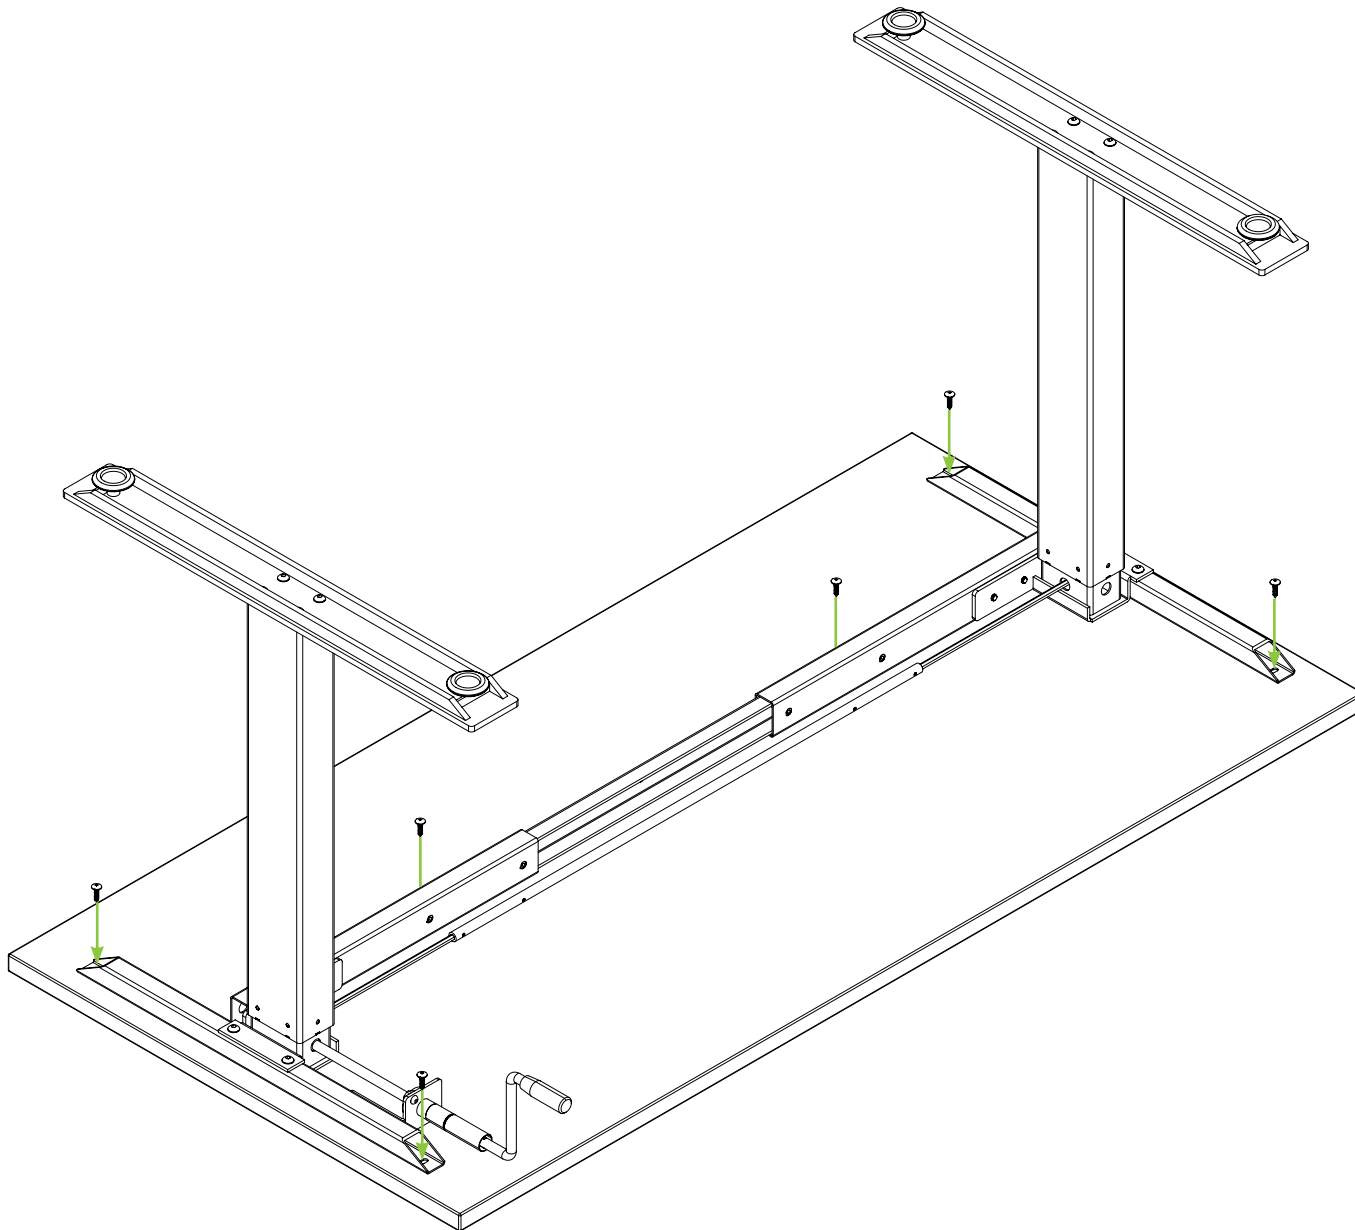 

Completed

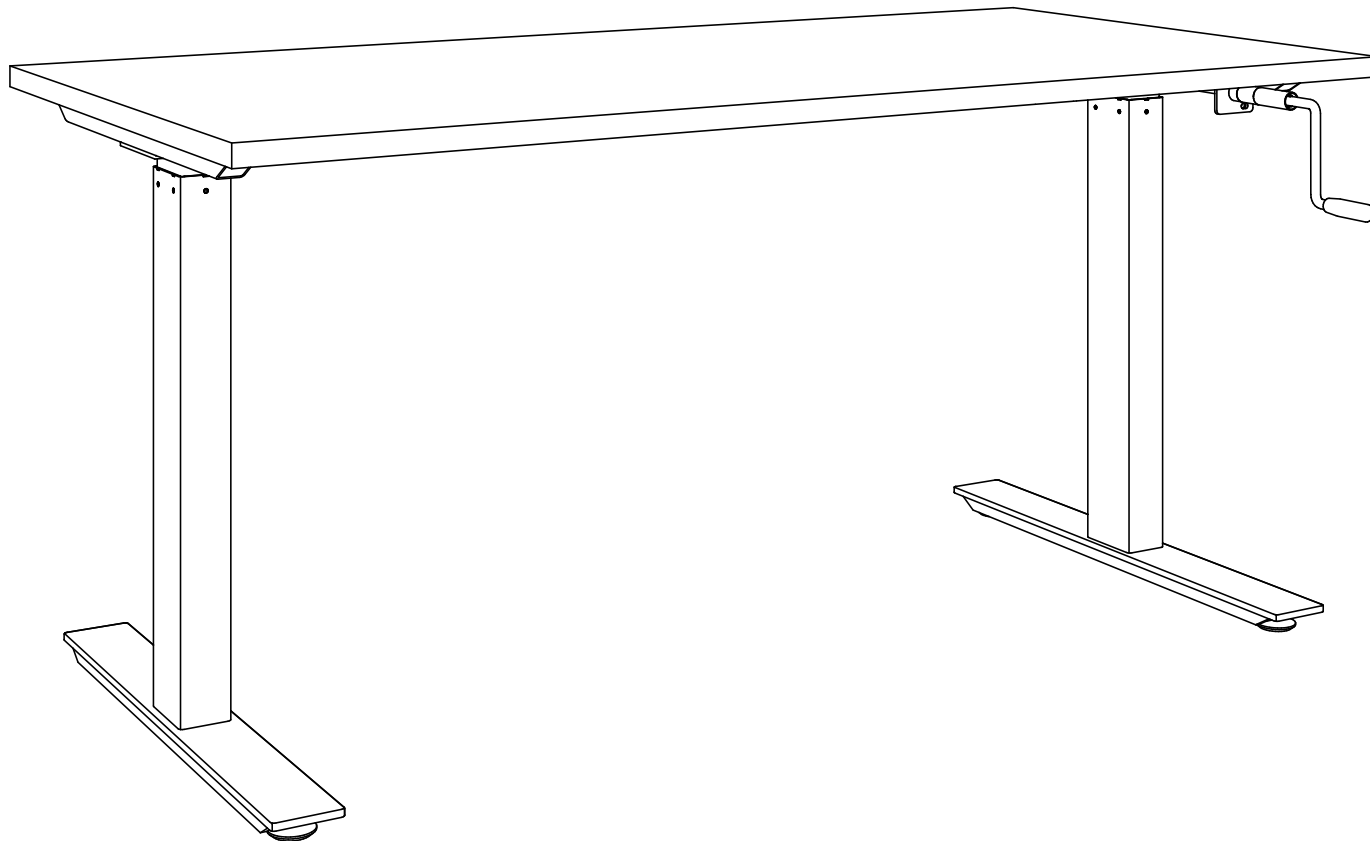 


Changing crank handle from right to left operation

Installation Guide - Winder 2 Column

Page 11

 Step 1

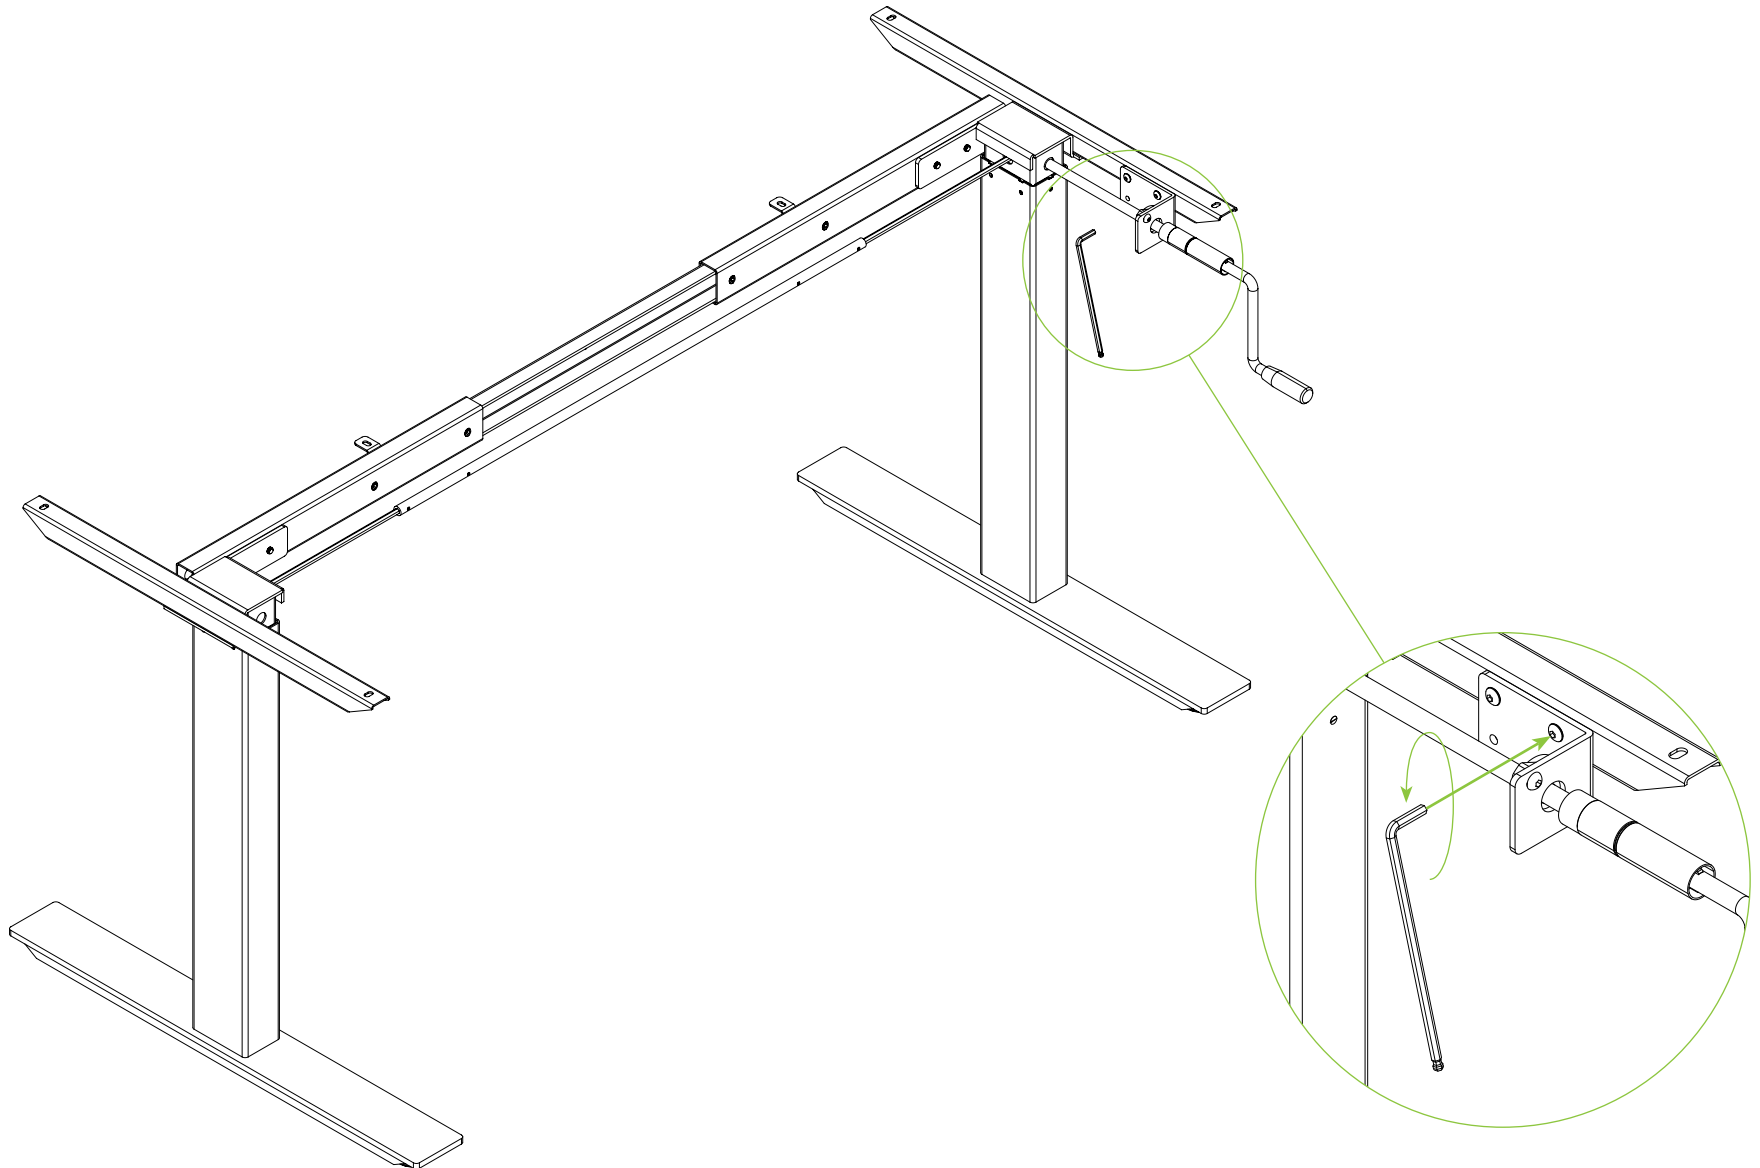


Changing crank handle from right to left operation

Installation Guide - Winder 2 Column

Page 12

 
Step 2

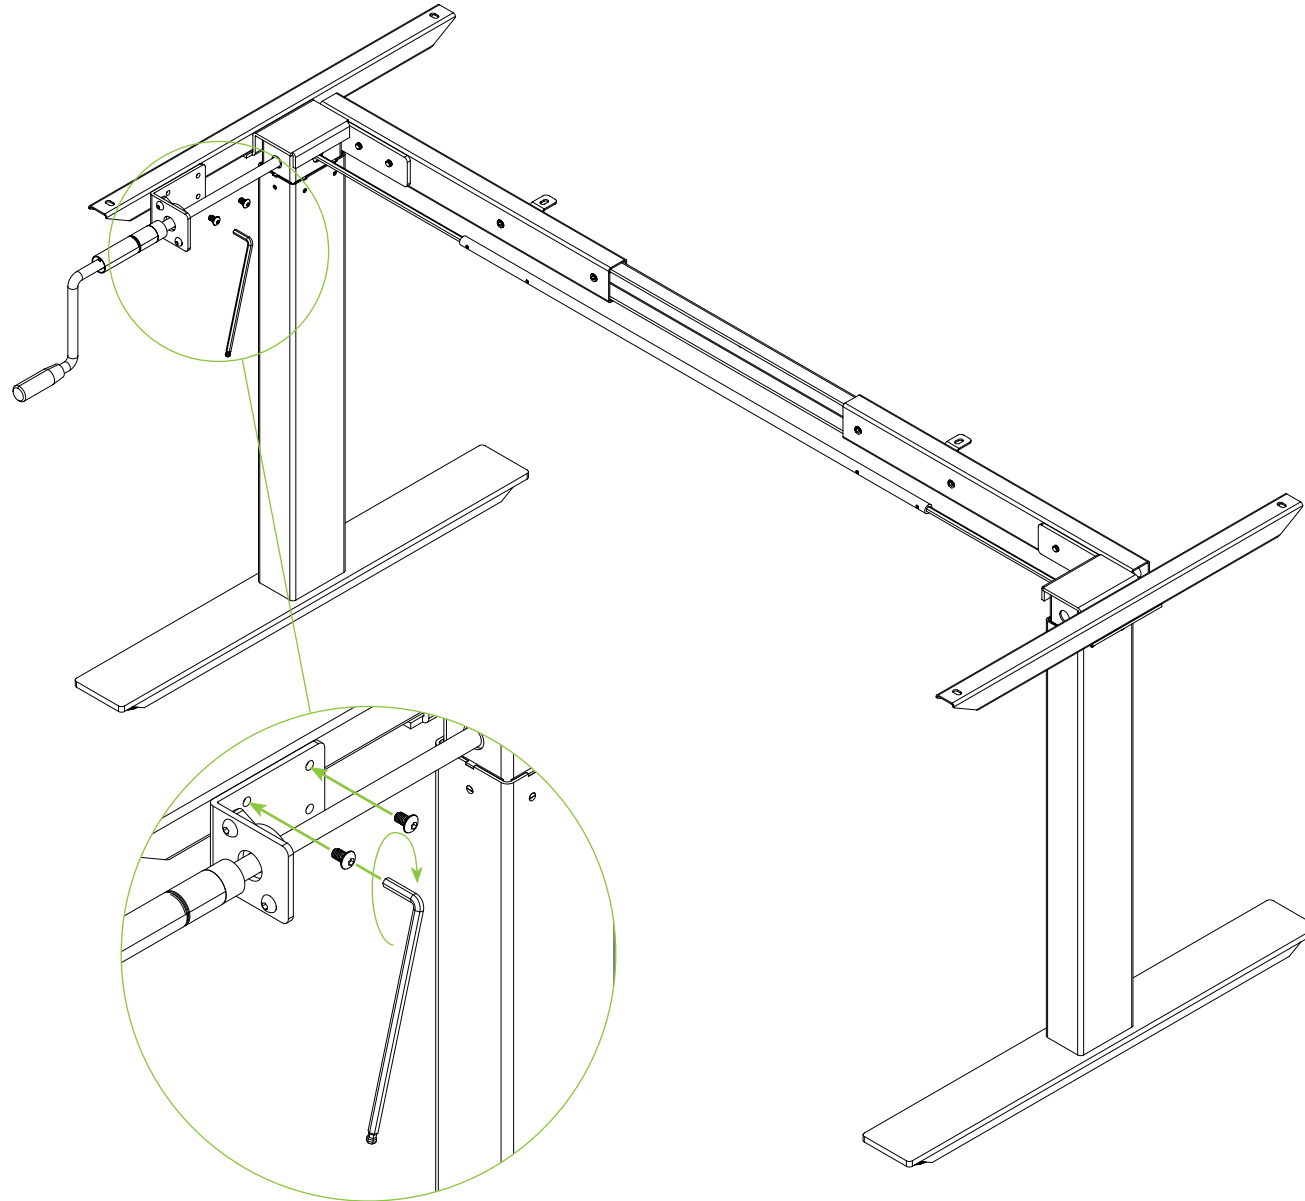

Optional Desk Hung Screen

Installation Guide

 
Step 1

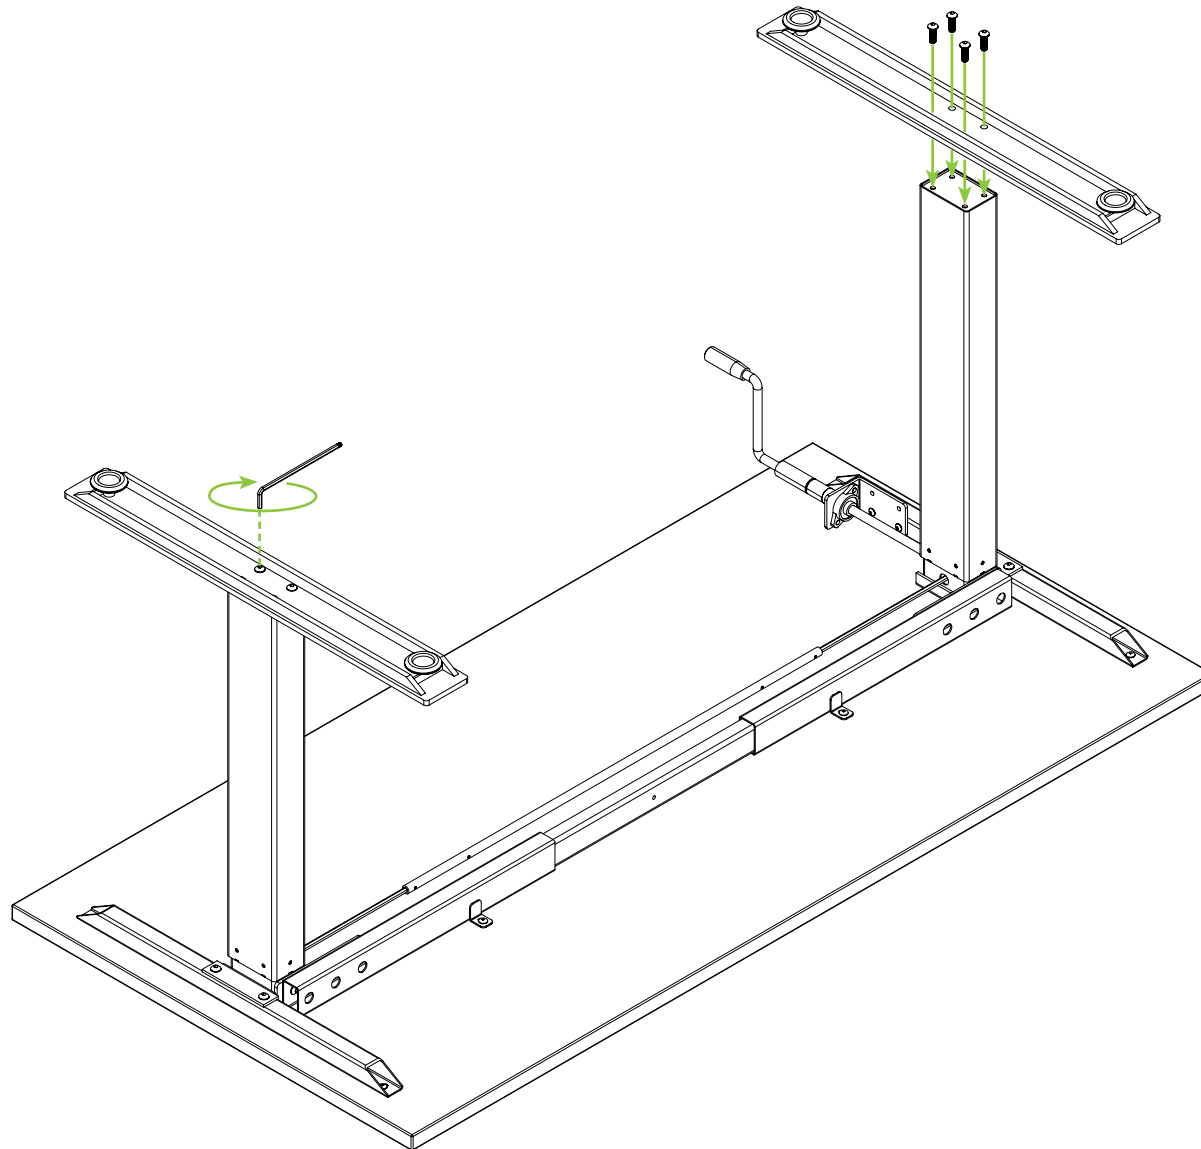

Optional Desk Hung Screen

Installation Guide

 Step 2

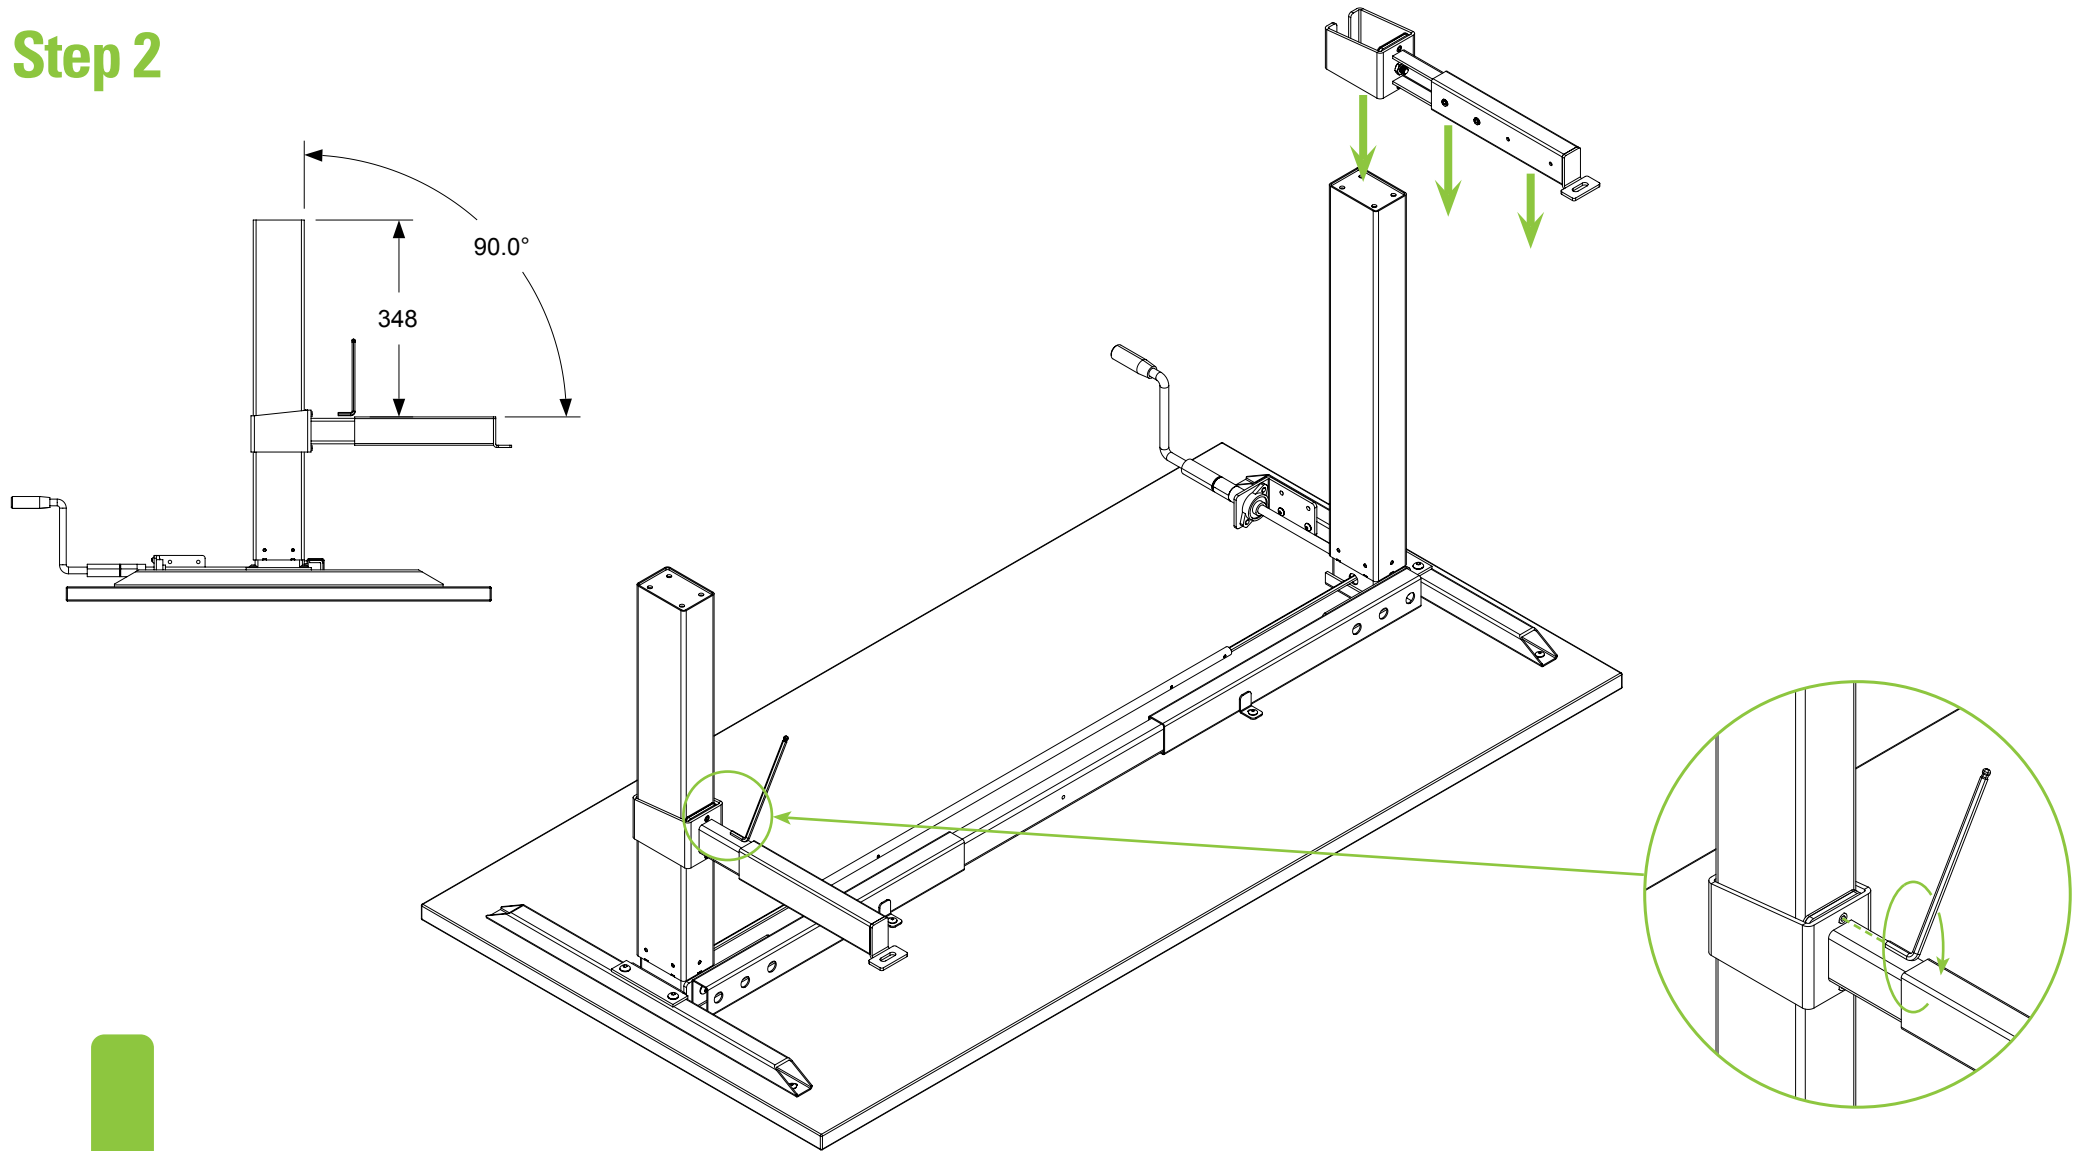


Optional Desk Hung Screen

Installation Guide

Page 15

 Step 3

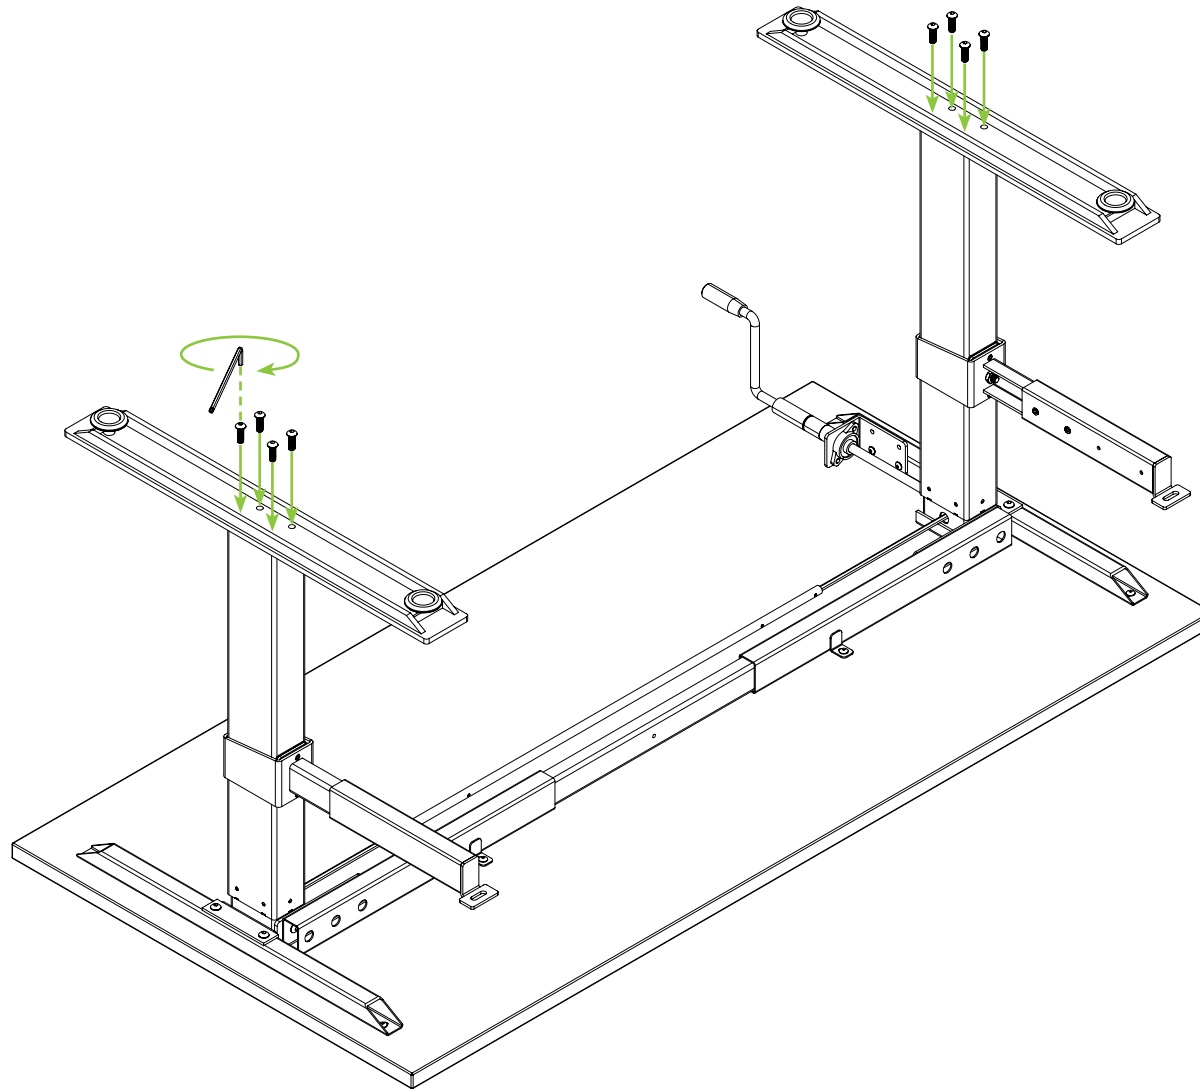


Optional Desk Hung Screen

Installation Guide

Page 16

 Step 4

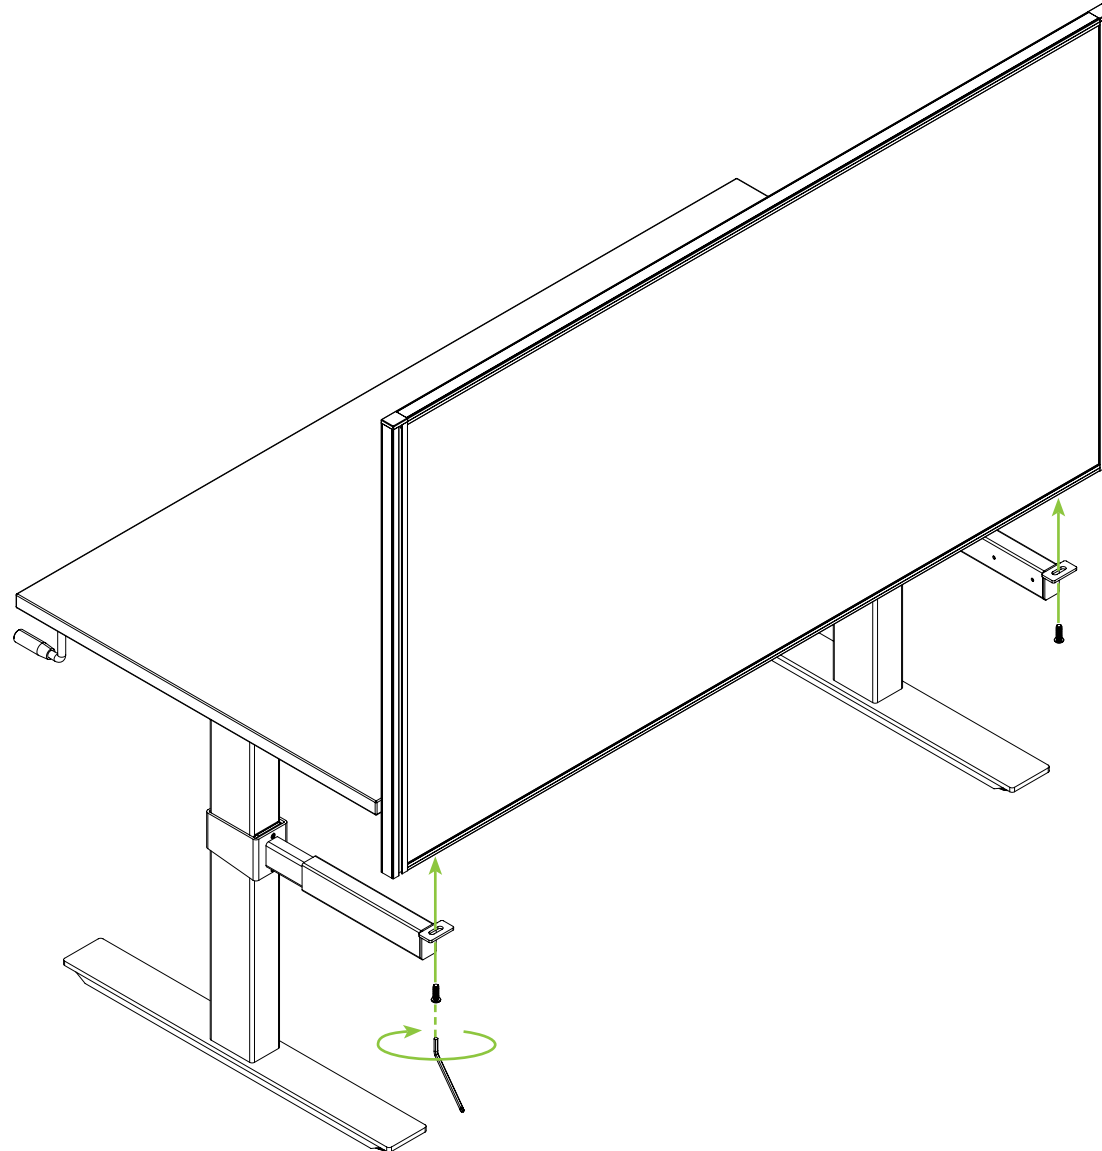


Optional Desk Hung Screen

Installation Guide

Page 17


 
Step 5

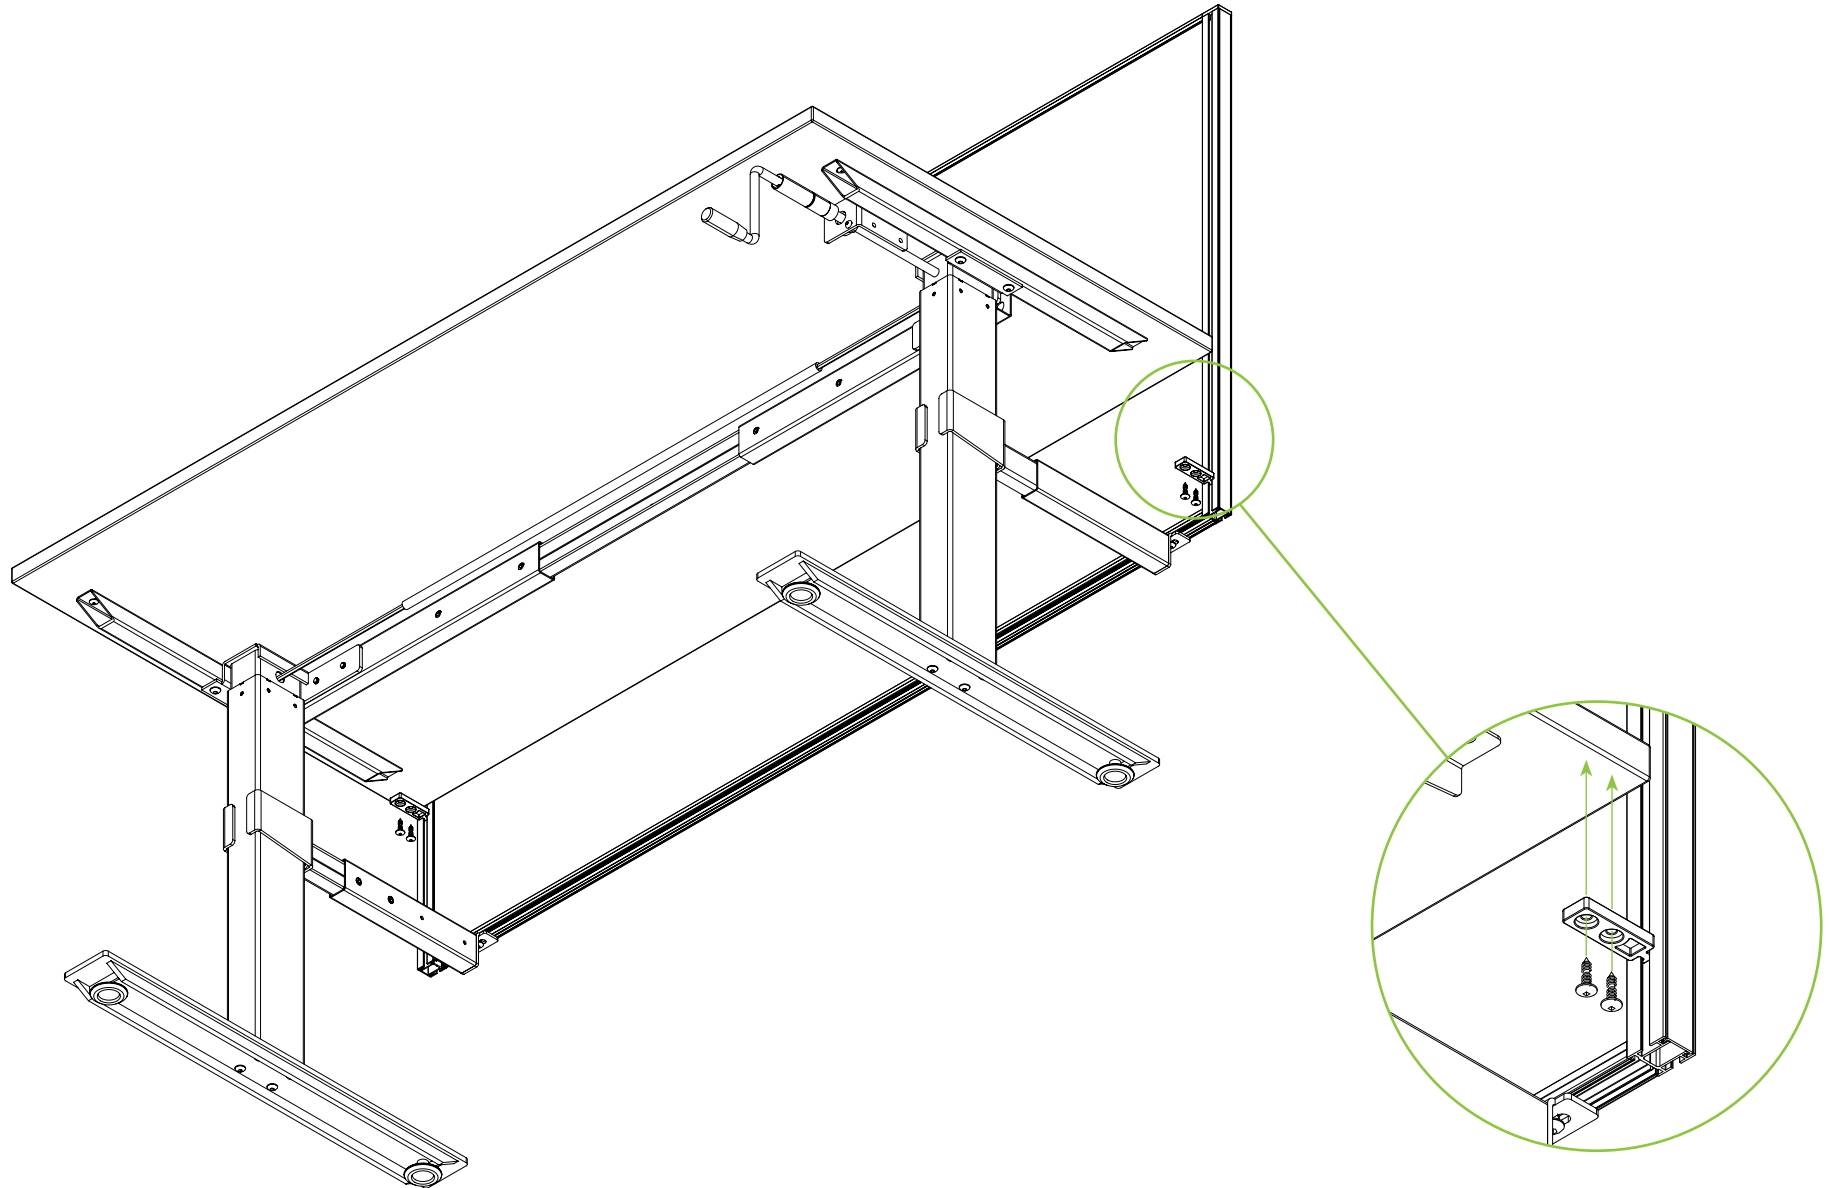


Optional Desk Hung Screen

Installation Guide

  
Step 6

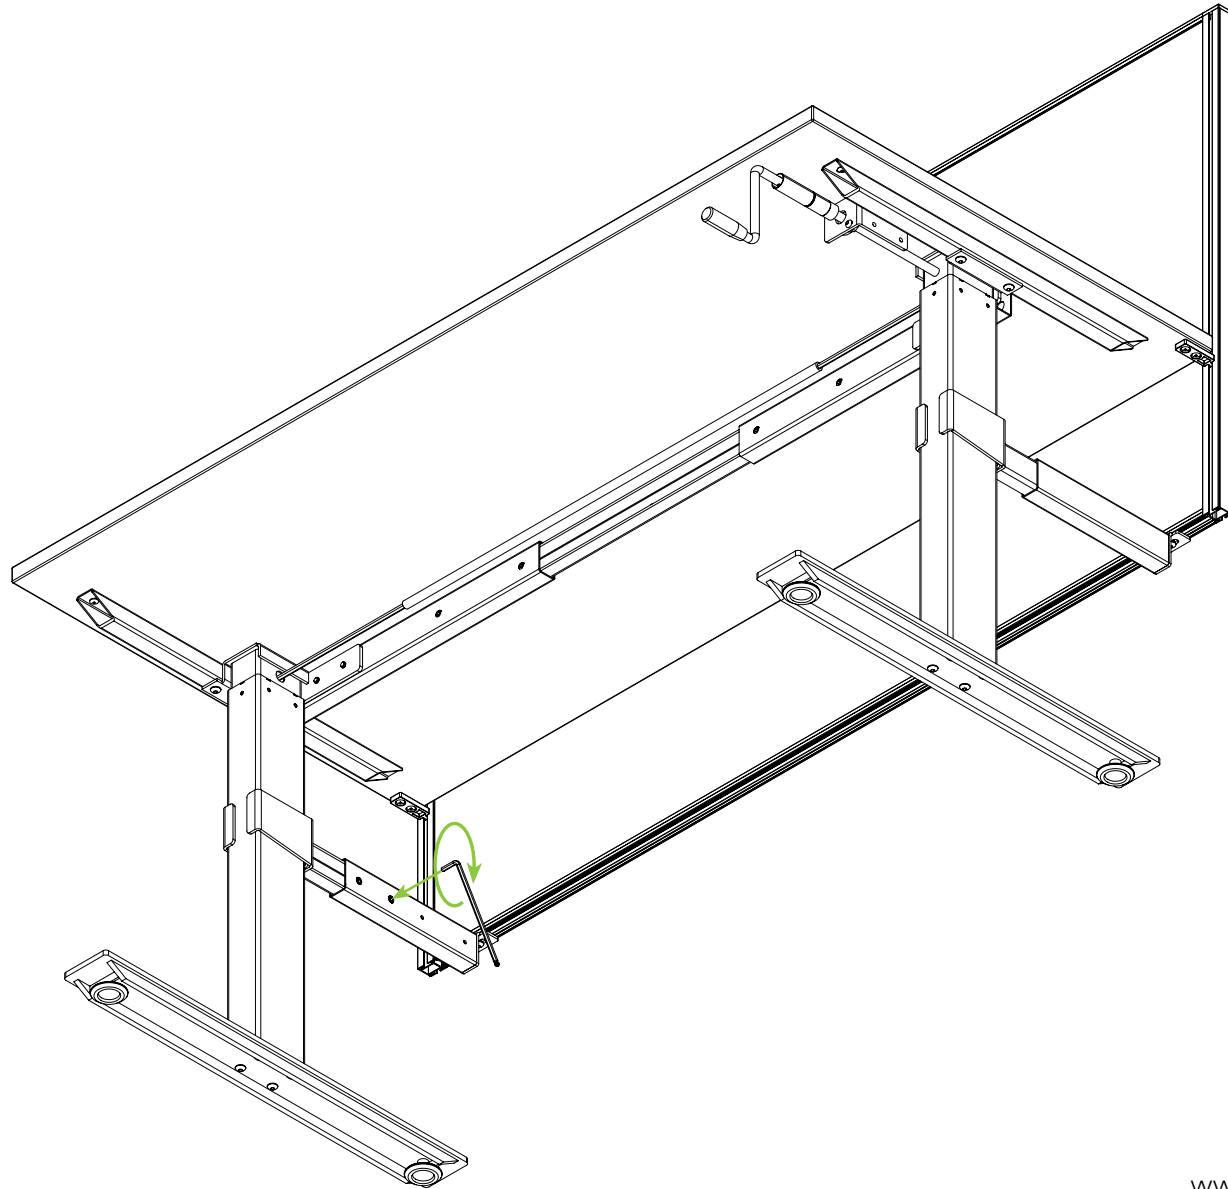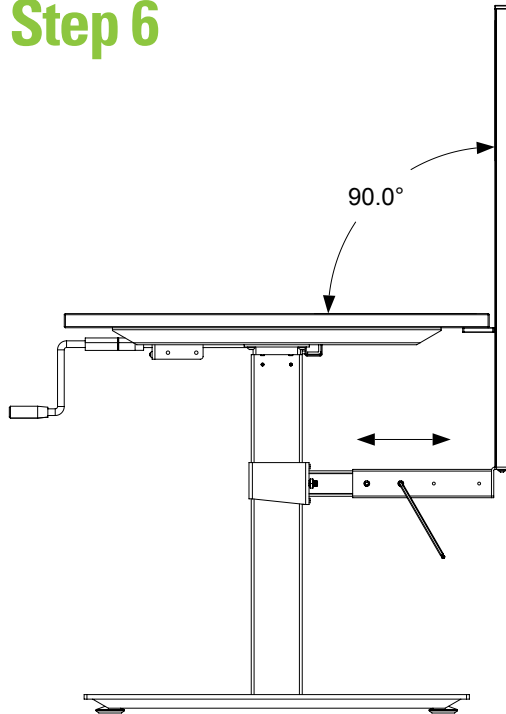

 Step 1

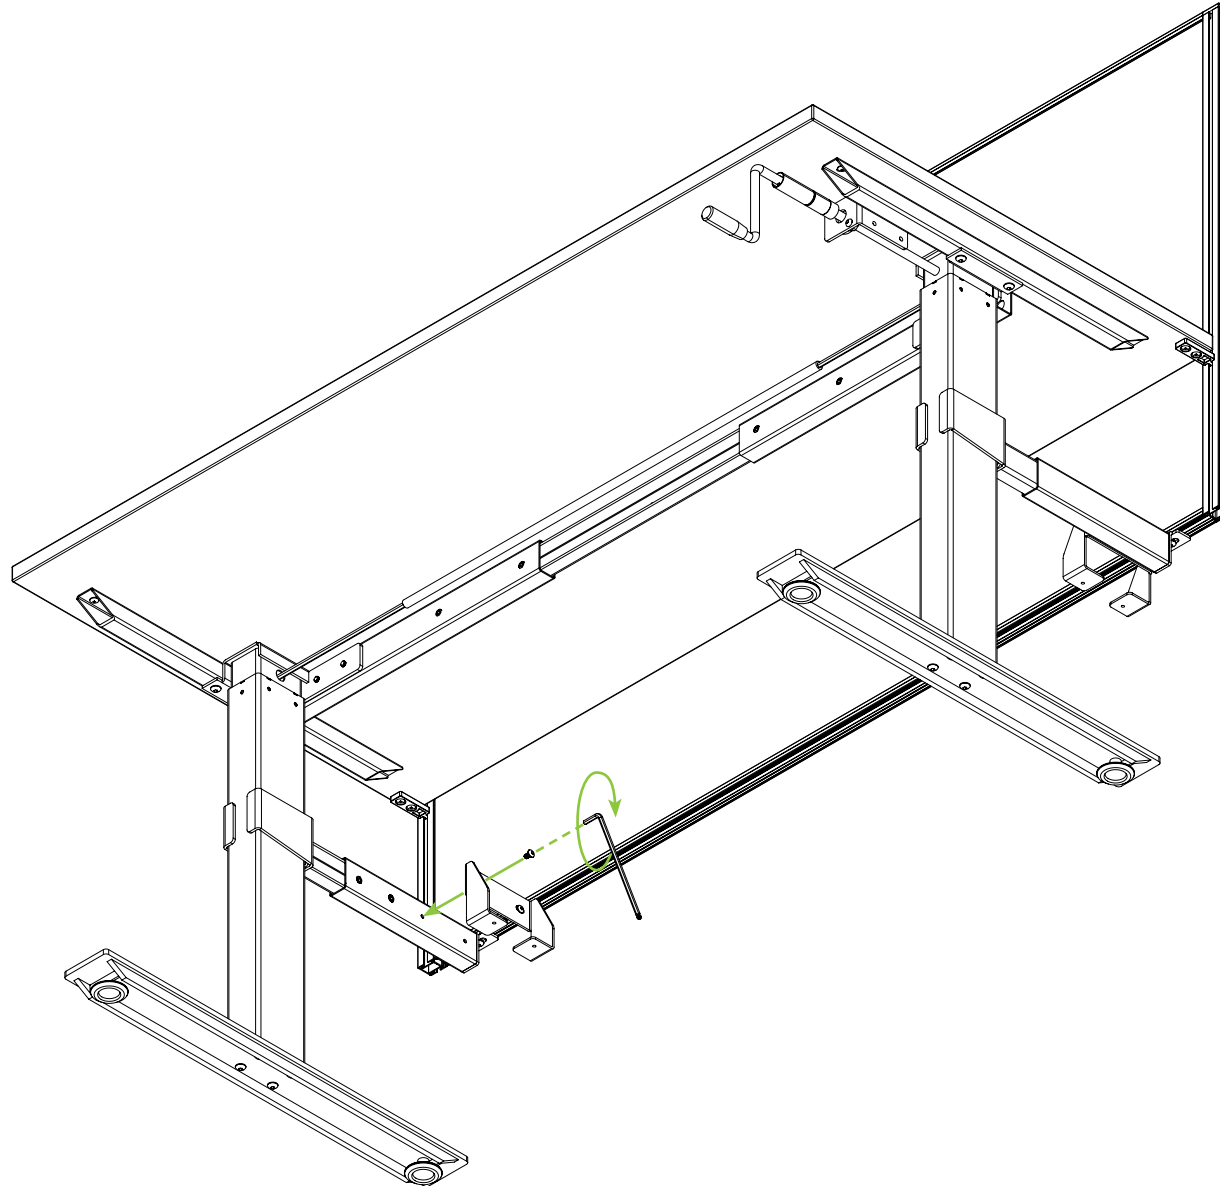

 Step 2

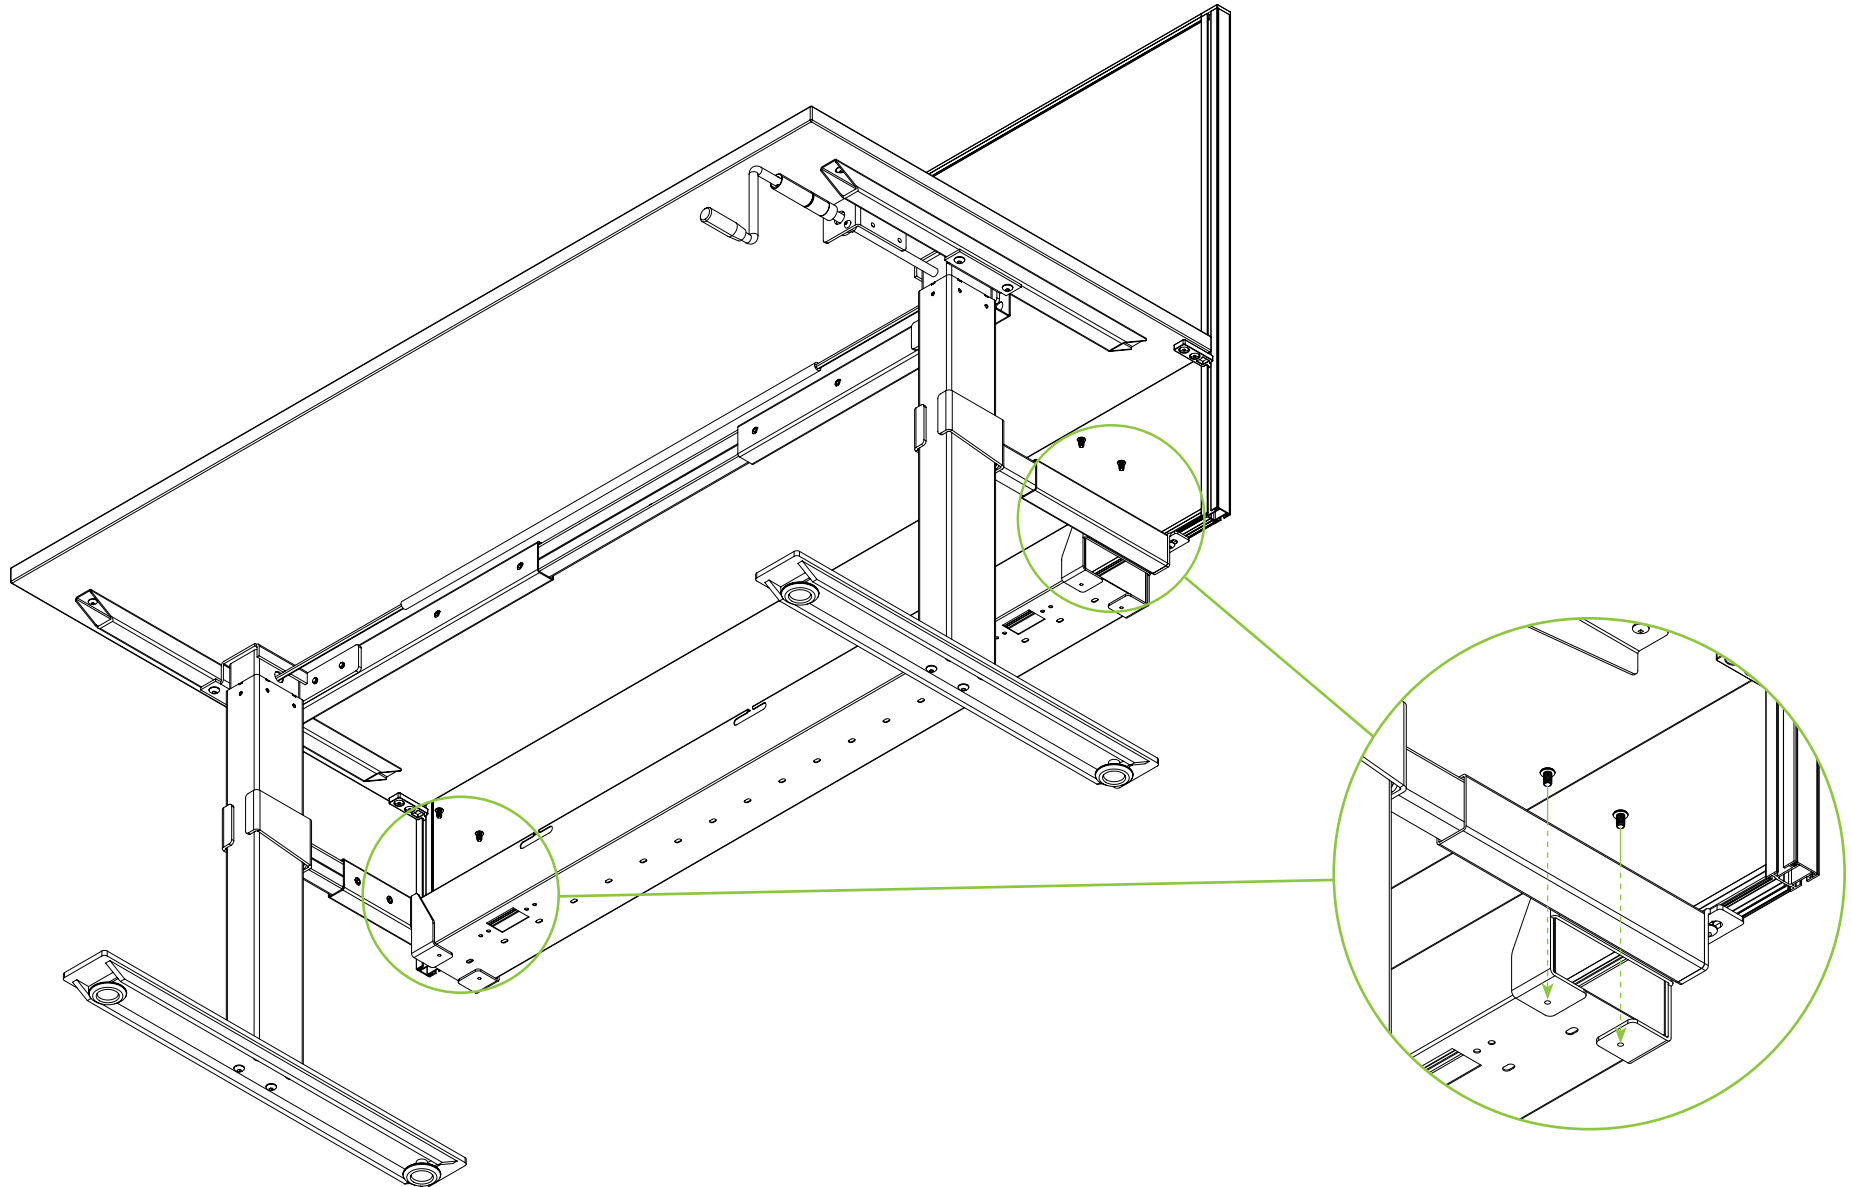

Directions For Use

IMPORTANT

Please carefully read the assembly manual and direction for use prior to instalment, use and maintenance of the table frame to gain a complete understanding of its contents. It provides you with important information about the safety, use, installation and maintenance of the table.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

SAFETY

- The table must be used in a safe manner. Inappropriate use may cause damage to the table and/or cause bodily harm to the user or persons nearby.
- Do not use the table frame to lift people.
- Please retain this operation manual and pass it on to any future owner.

USAGE

- The height-adjustable table is designed for use in dry work environments only.
- The table height is infinitely adjustable within its height range so that it can be set to the user's most ergonomic working height. The user should seek professional help to establish their optimum working height.
- The table has been designed as a devise to elevate the users work surface and associated office peripherals. Do not use the table frame for any other purposes than that which it has been designed for. Any other use is at user's own risk!
- Do not crawl, lie or move around under the table frame, and do not sit or stand on the table frame.
- CHILDREN should only use the table when supervised by adults.
- Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damages arising from improper use or handling of the table frame other than that described in this operation manual.

SET UP AND INSTALLATION

Assemble the table frame according to the assembly instructions on pages #-#.

- Place the table in a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.
- Level the table with the adjustable feet ensuring that the table is stable.

The table is now ready for use.

MAINTENANCE

- The table does not require any maintenance by the user
- The table is only to be cleaned with a wrung cloth.

TECHNICAL DATA

 
Height Range: 680-1130mm




freeway

Agile


Installation Guide - Winder 2 Column Left Hand Return For Single & Double Desk

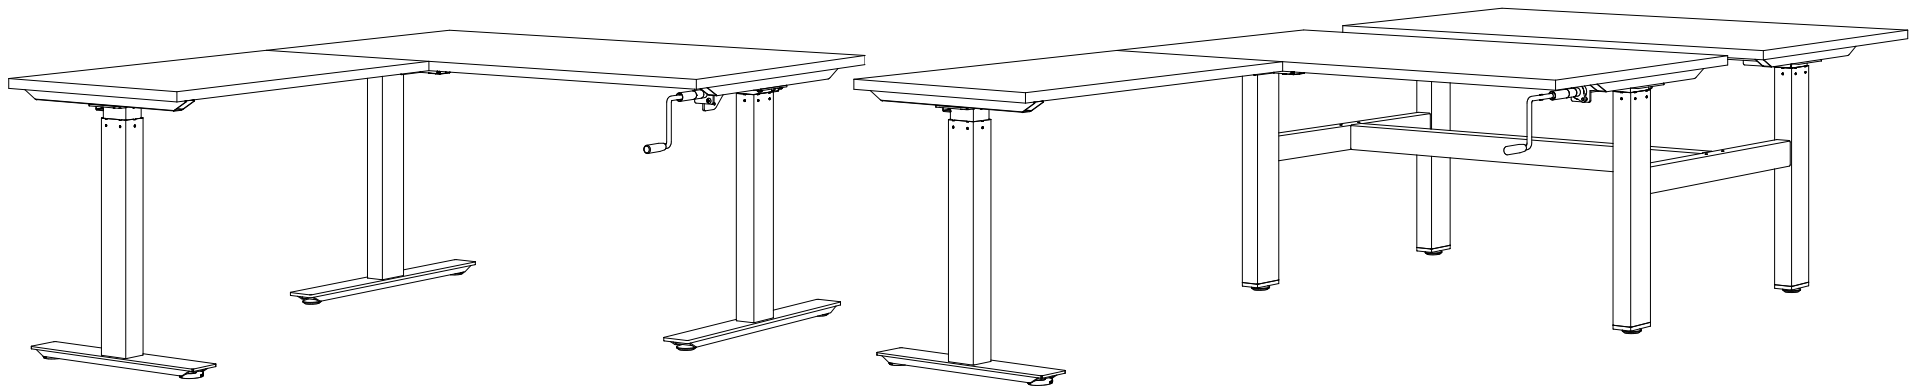


Parts:

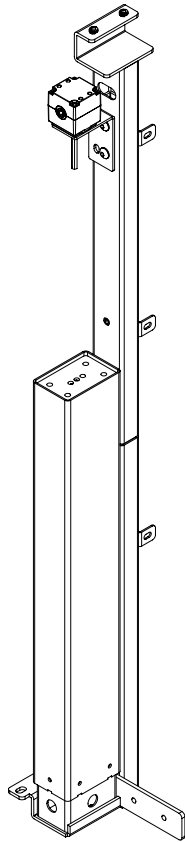 


1 x Return Leg

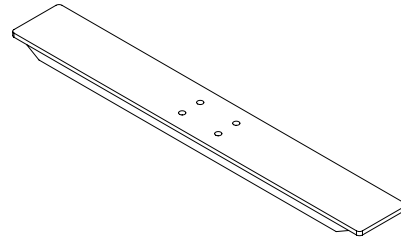 


1 x Foot

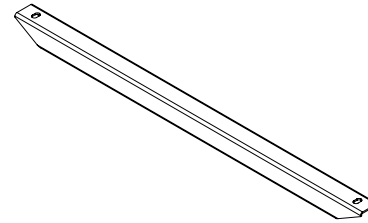 


1 x Support Bar

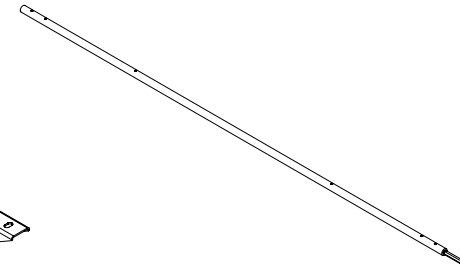 

1 x Drive Bar

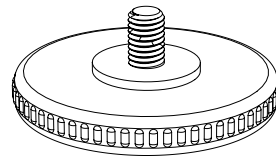 

2 x Levelling Foot

 

4 x M8x25



5 x ST5x23

 


4 x M8x10

Step 1




2 x M8x10

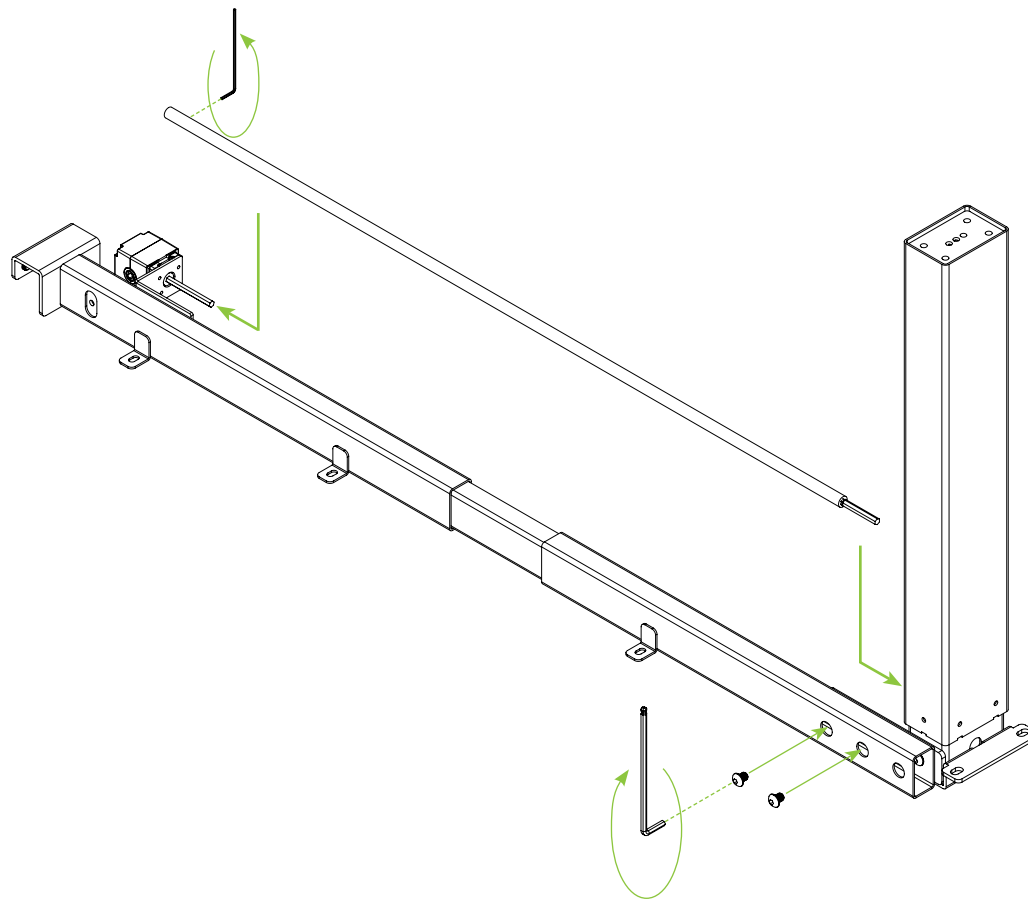


Step 2



 
2 x M8x10

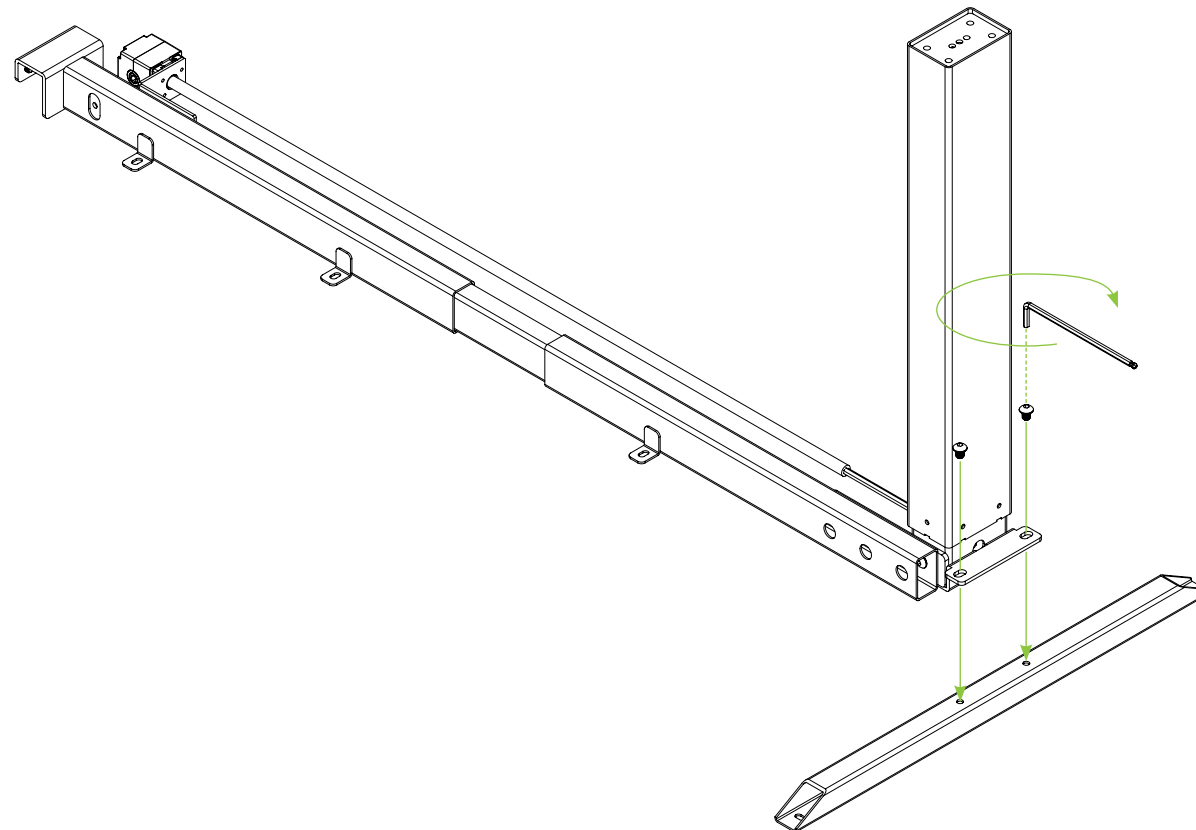

 
Step 3

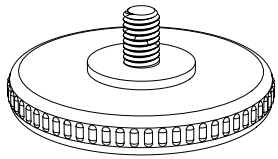


2 x Levelling Foot

 

4 x M8x25

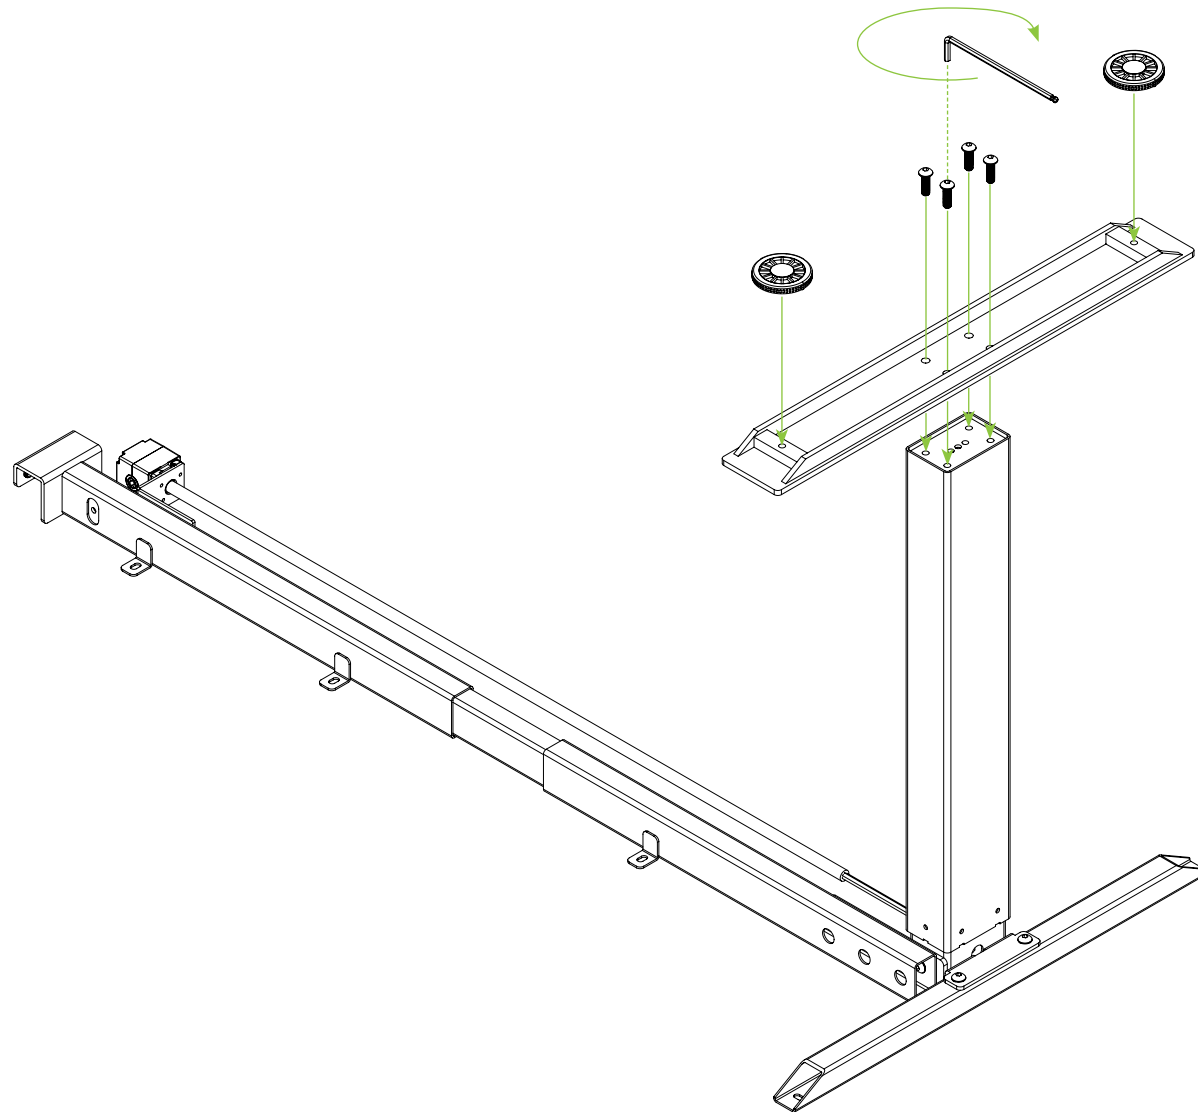 

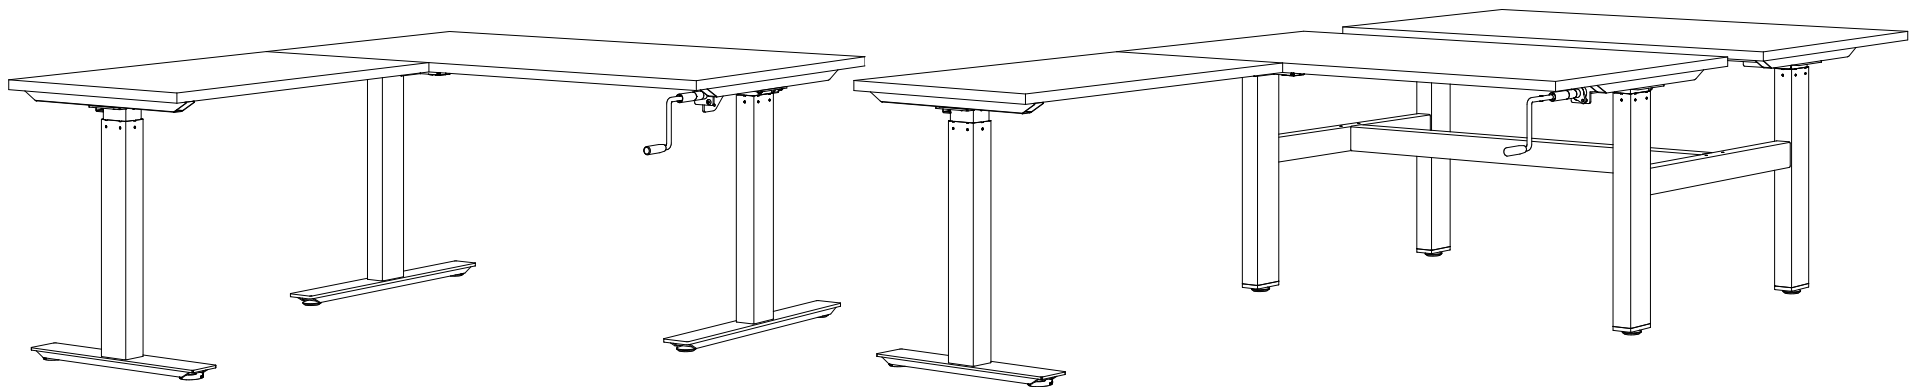 


Option 1 - Winder 2 Column Left Hand Return for Single Desk

Go to page 7


Option 2 - Winder 2 Column Left Hand Return for Double Desk

Go to page 11

 Option 1: Single Desk and Return Step 4




6 x ST5x23

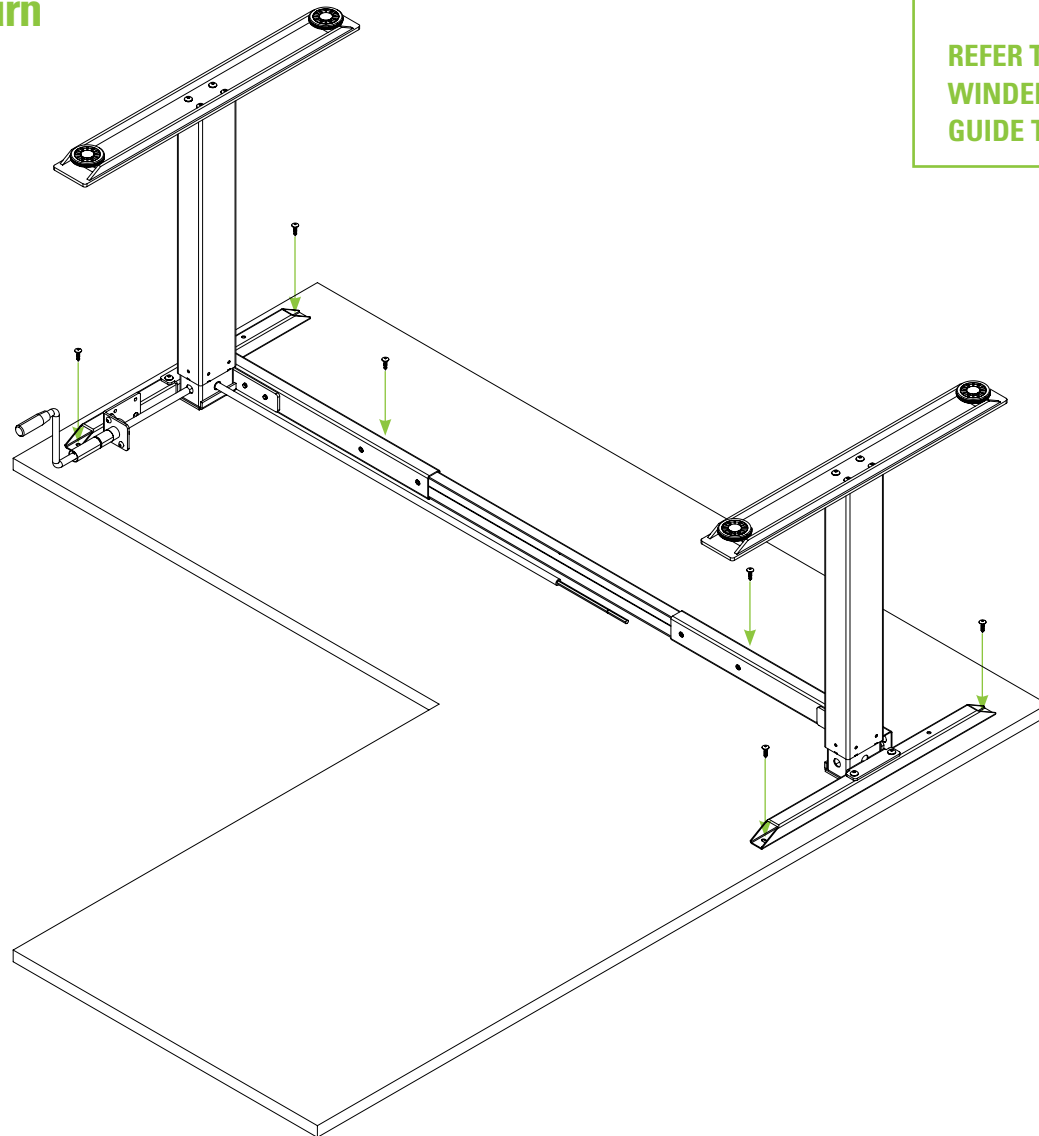 


IMPORTANT!

REFER TO SETPS 1-4 OF SINGLE-SIDED
WINDER 2 COLUMN DESK INSTALLATION
GUIDE TO ASSEMBLE DESK FRAME.

 
Step 5




5 x ST5x23

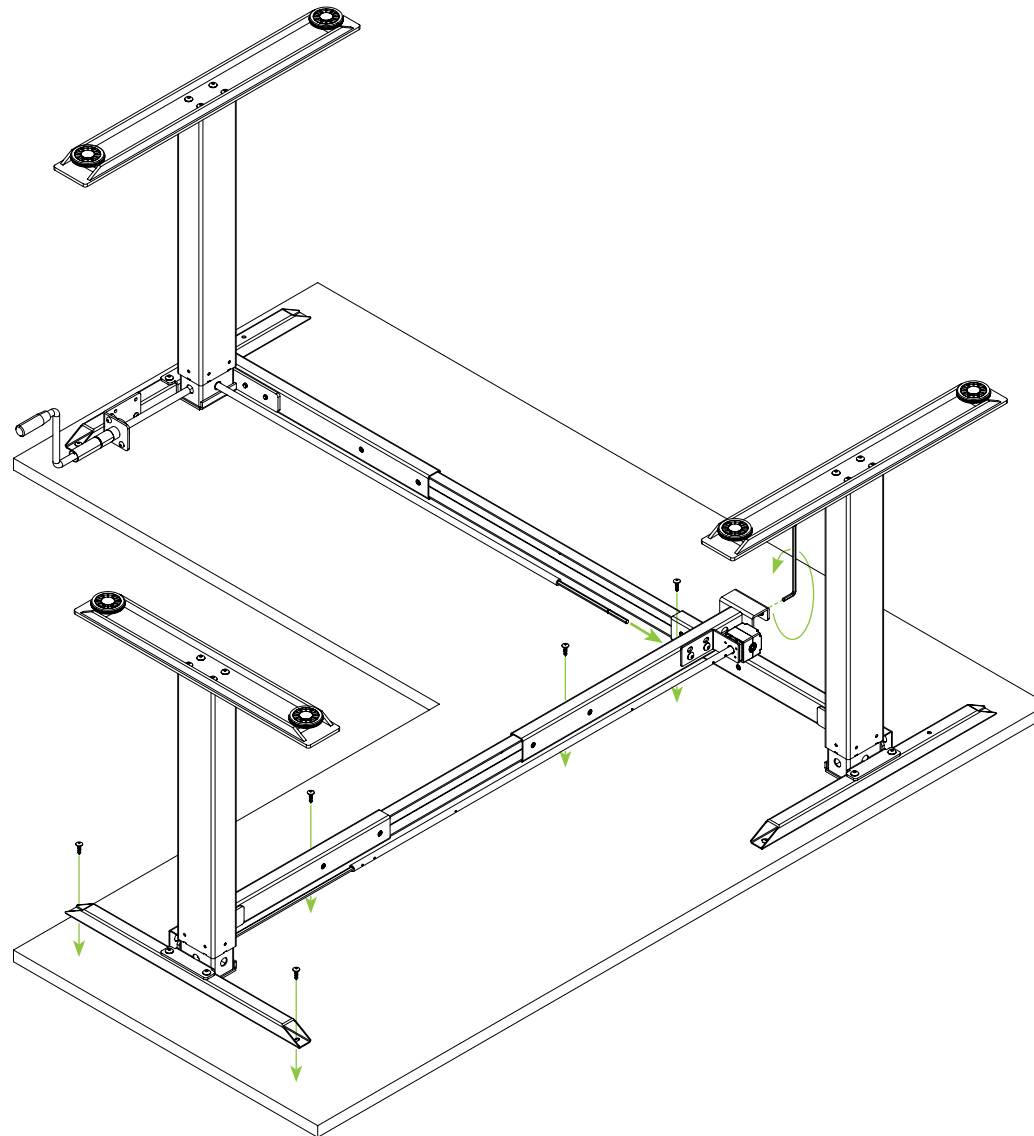 

 Step 6

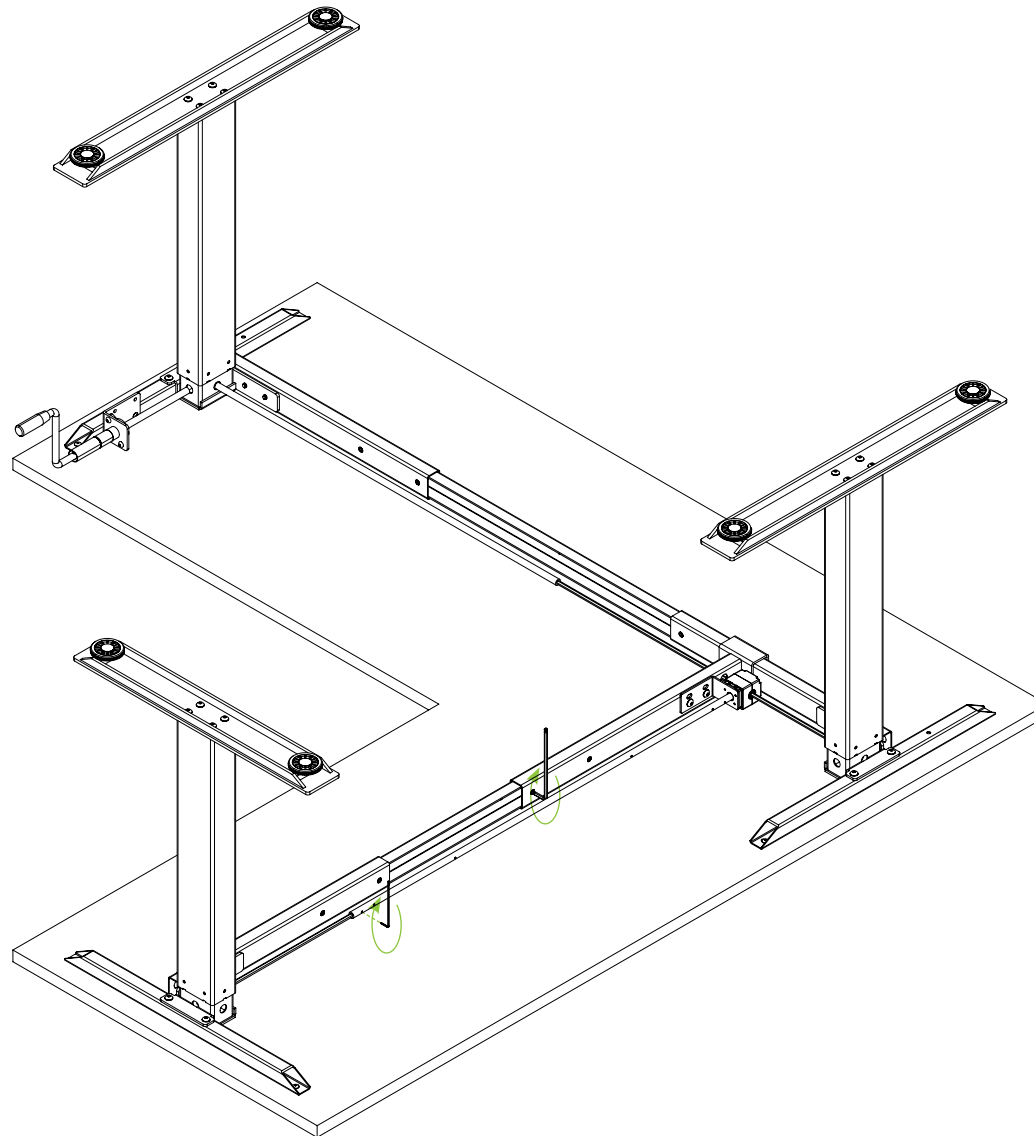


Completed

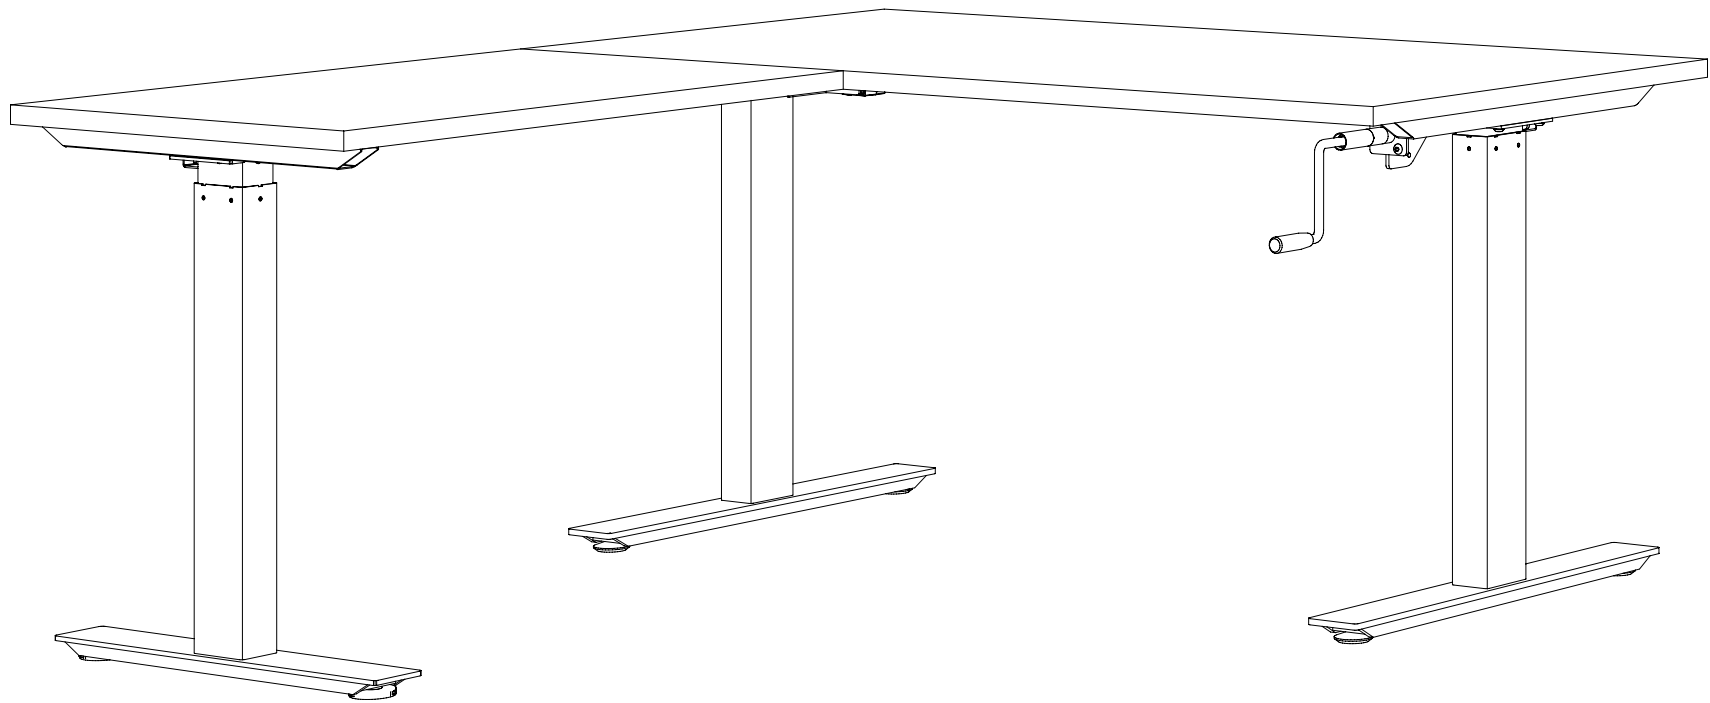 


Option 2: Double Desk and Return Step 4

IMPORTANT!

 
REFER TO SETPS 1-8 OF DOUBLE-SIDED
WINDER 2 COLUMN DESK INSTALLATION
GUIDE TO ASSEMBLE DESK FRAME.

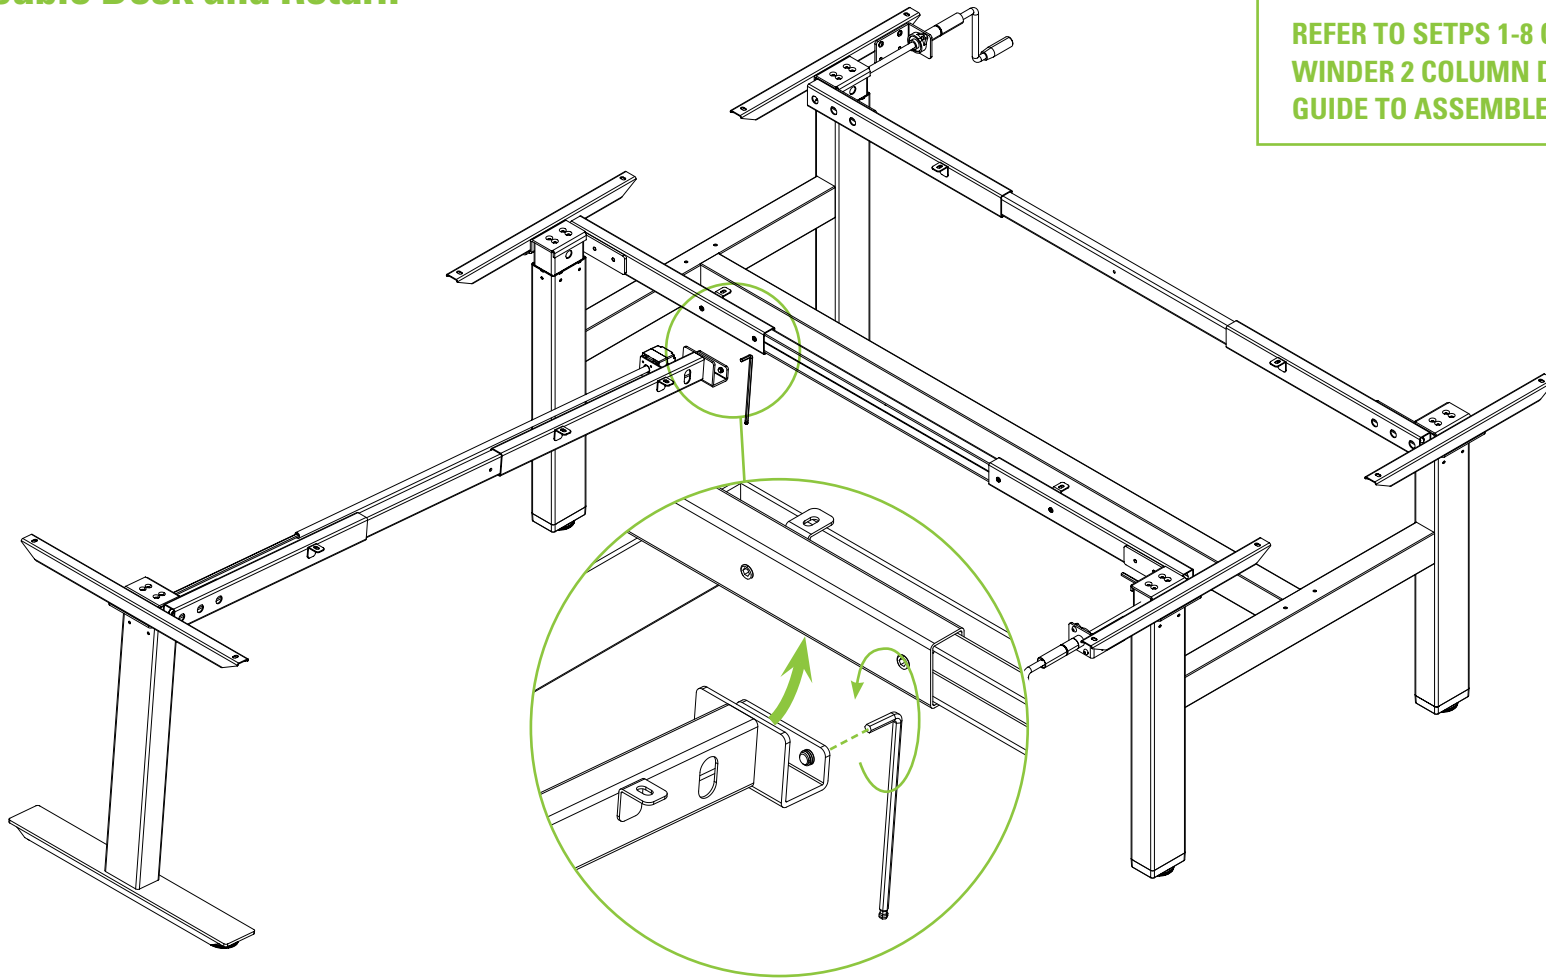

 
Step 5

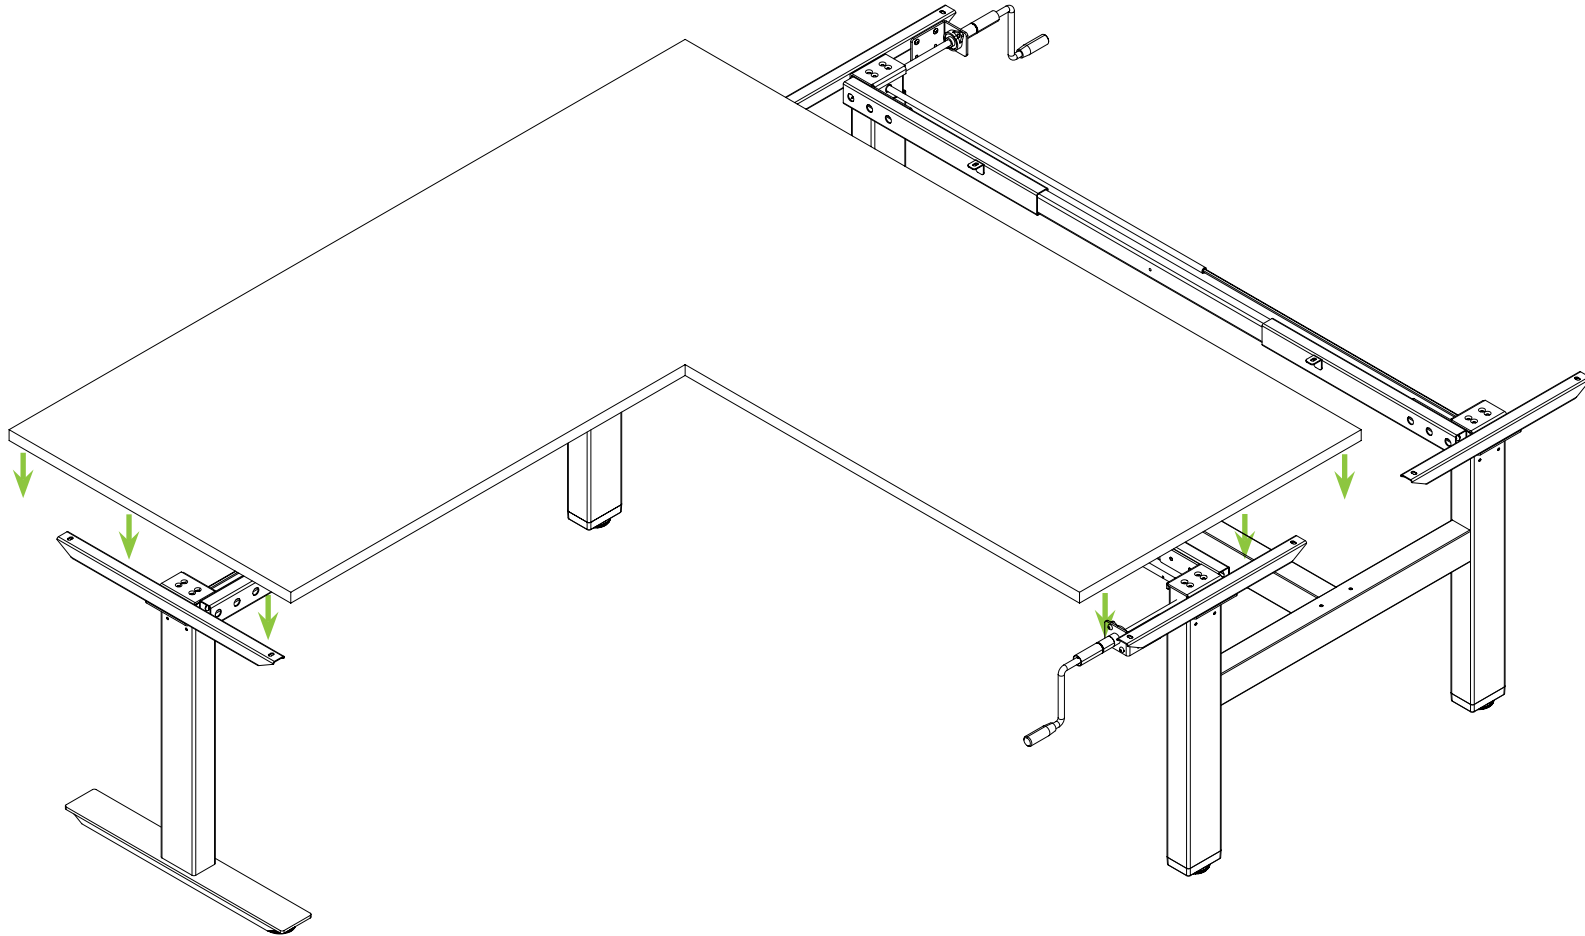

 
Step 6




11 x ST5x23

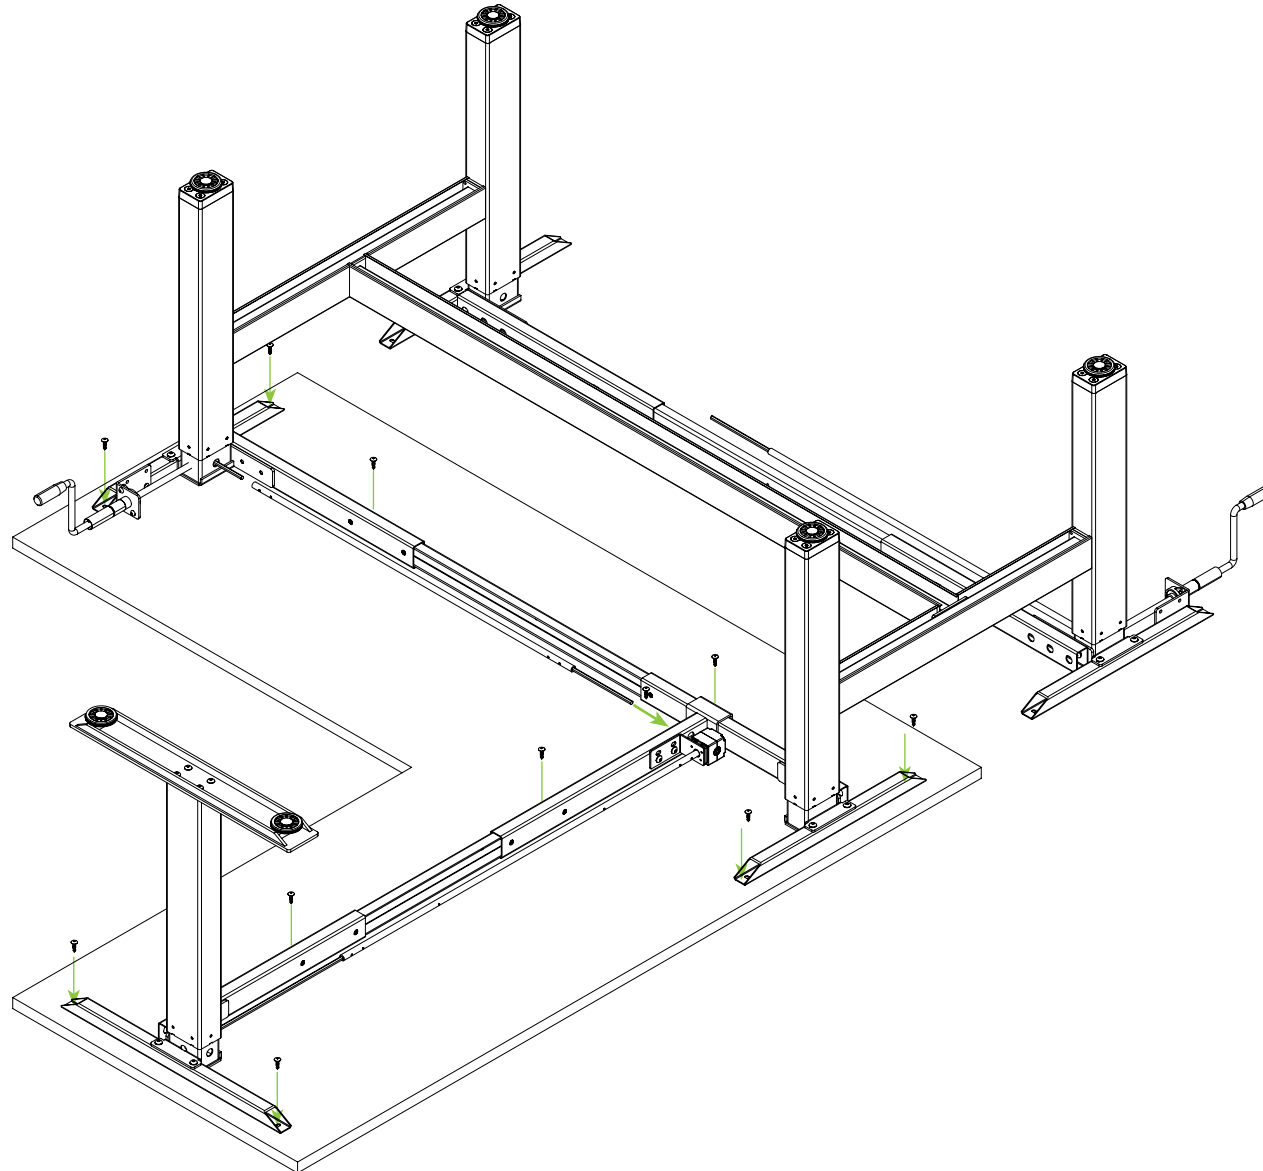 

 Step 7

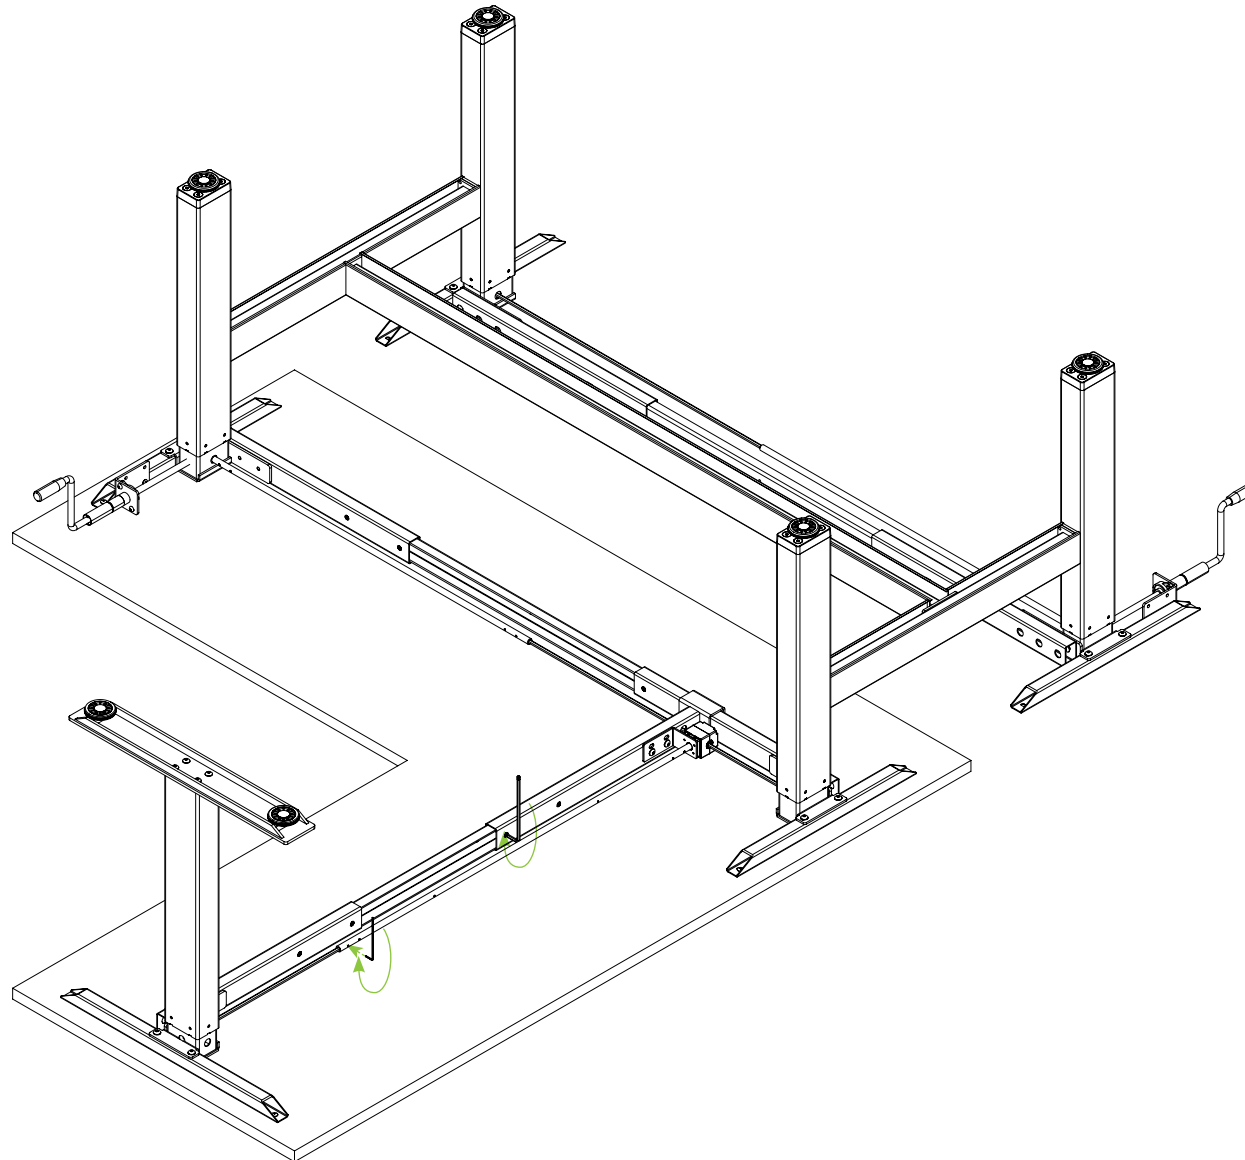

Completed

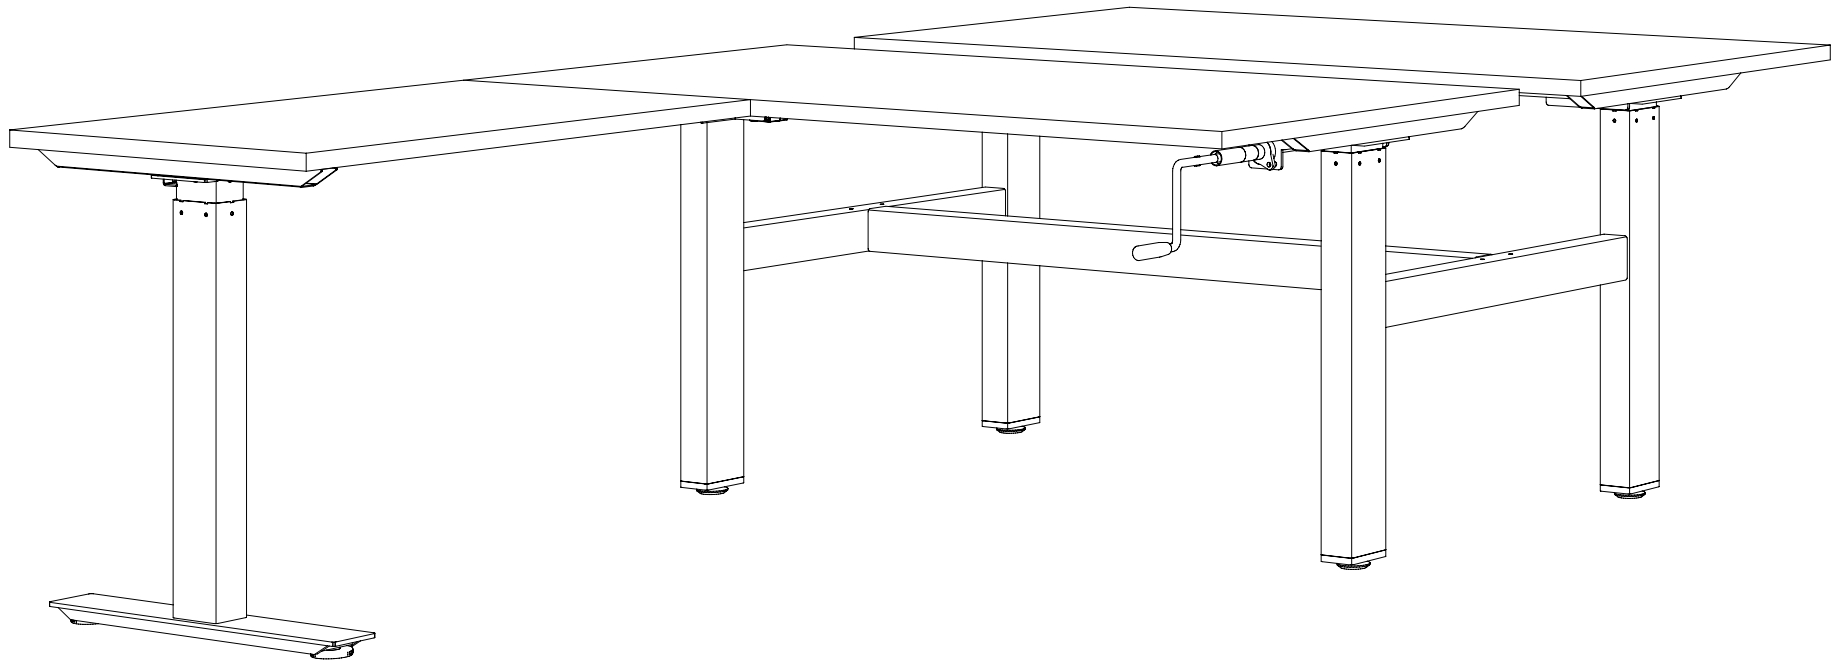 





freeway

Agile

 
Installation Guide - Winder 2 Column Right Hand Return For Single & Double Desk

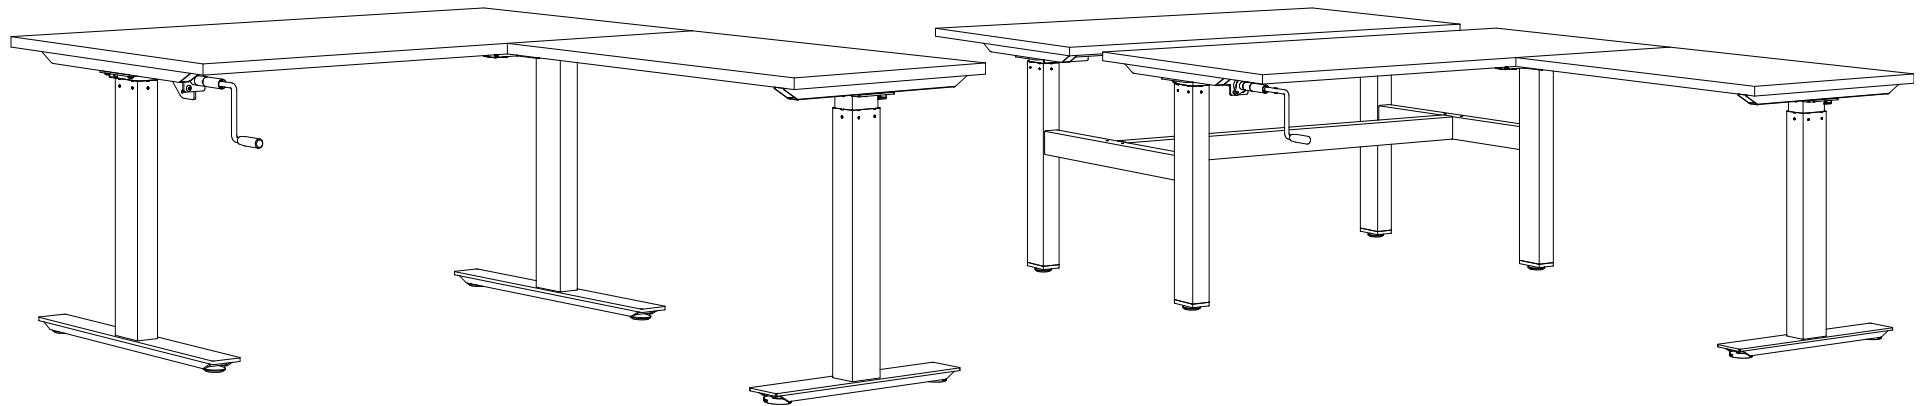


Parts:

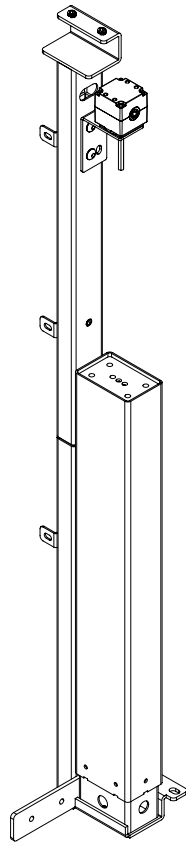 


1 x Return Leg

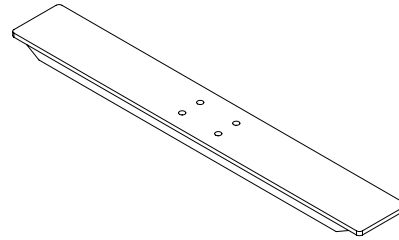 


1 x Foot

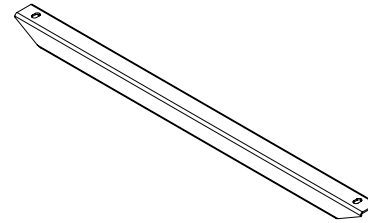 


1 x Support Bar

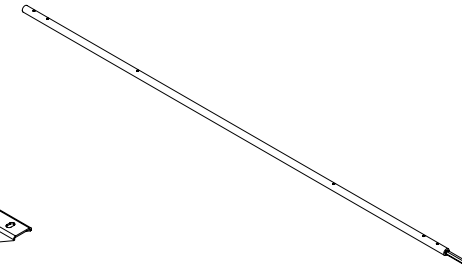 

1 x Drive Bar

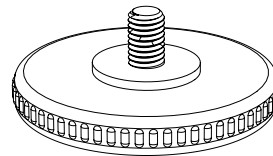 

2 x Levelling Foot

 

4 x M8x25



5 x ST5x23

 


4 x M8x10

Step 1




2 x M8x10

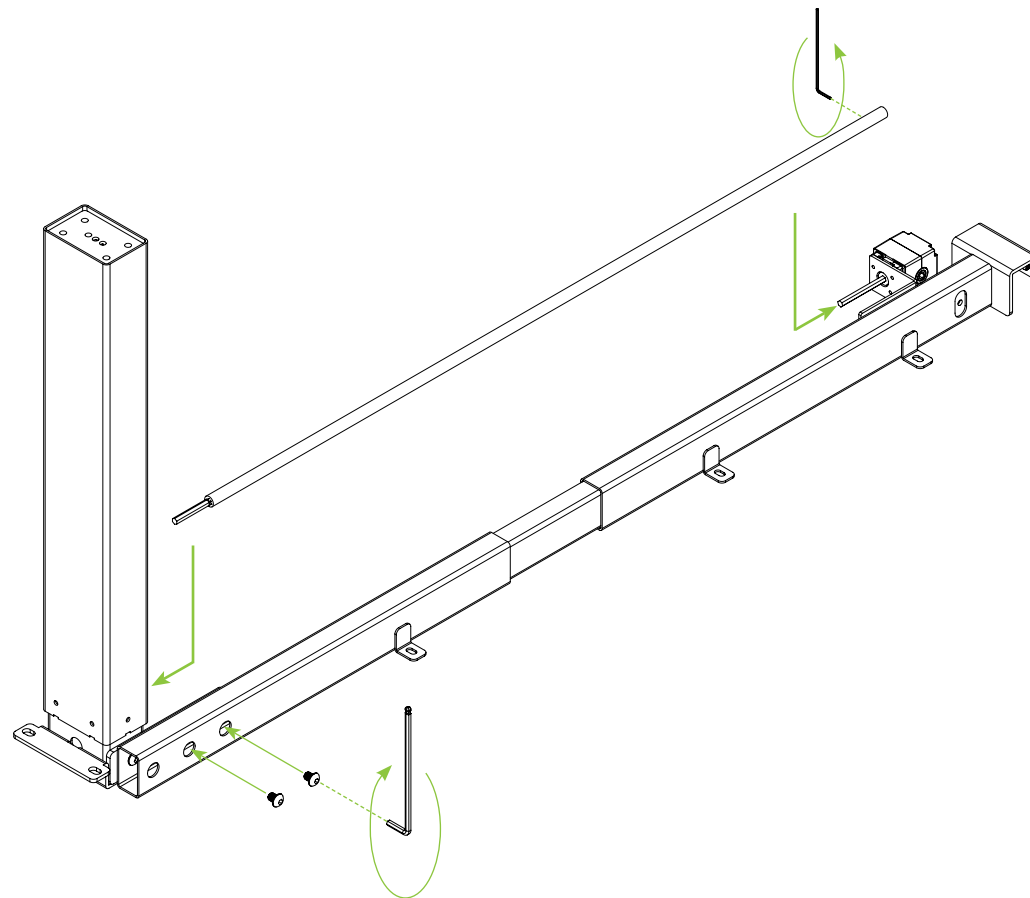


Step 2



 2 x M8x10

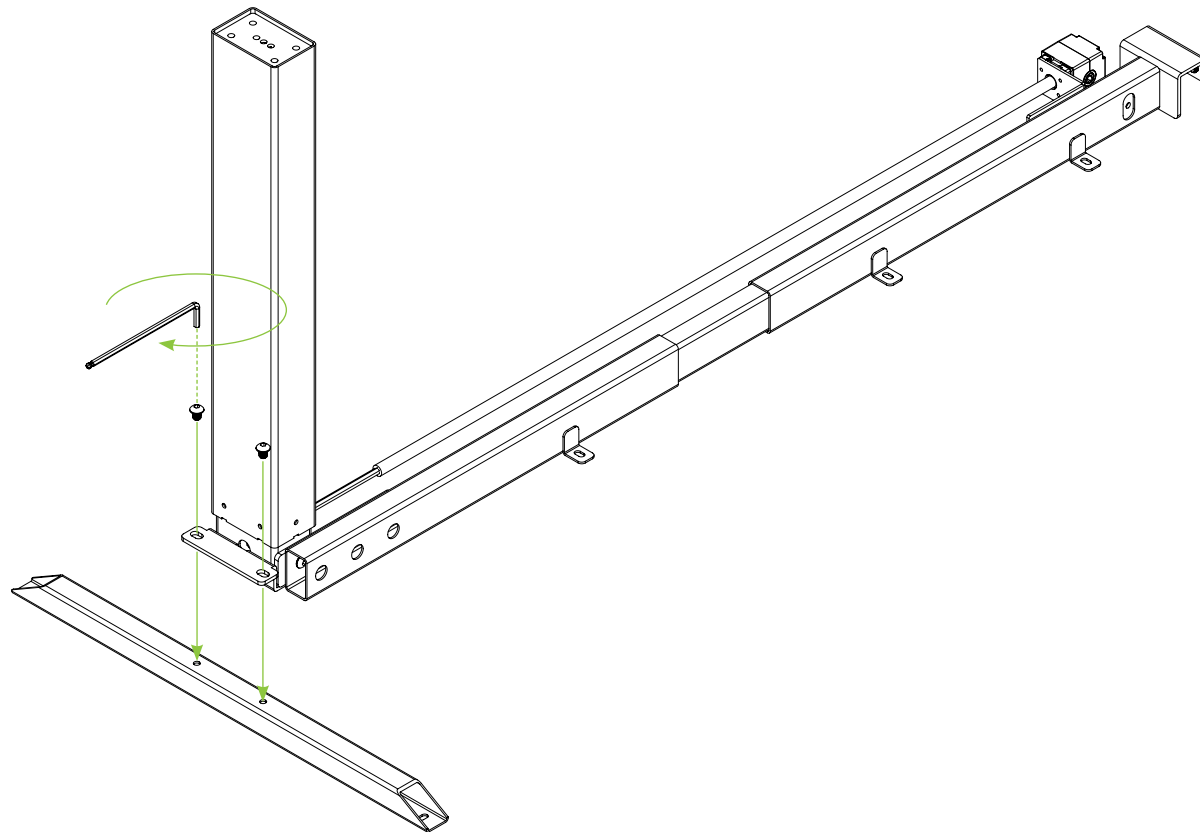

 
Step 3

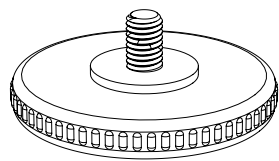


2 x Levelling Foot



  4 x M8x25

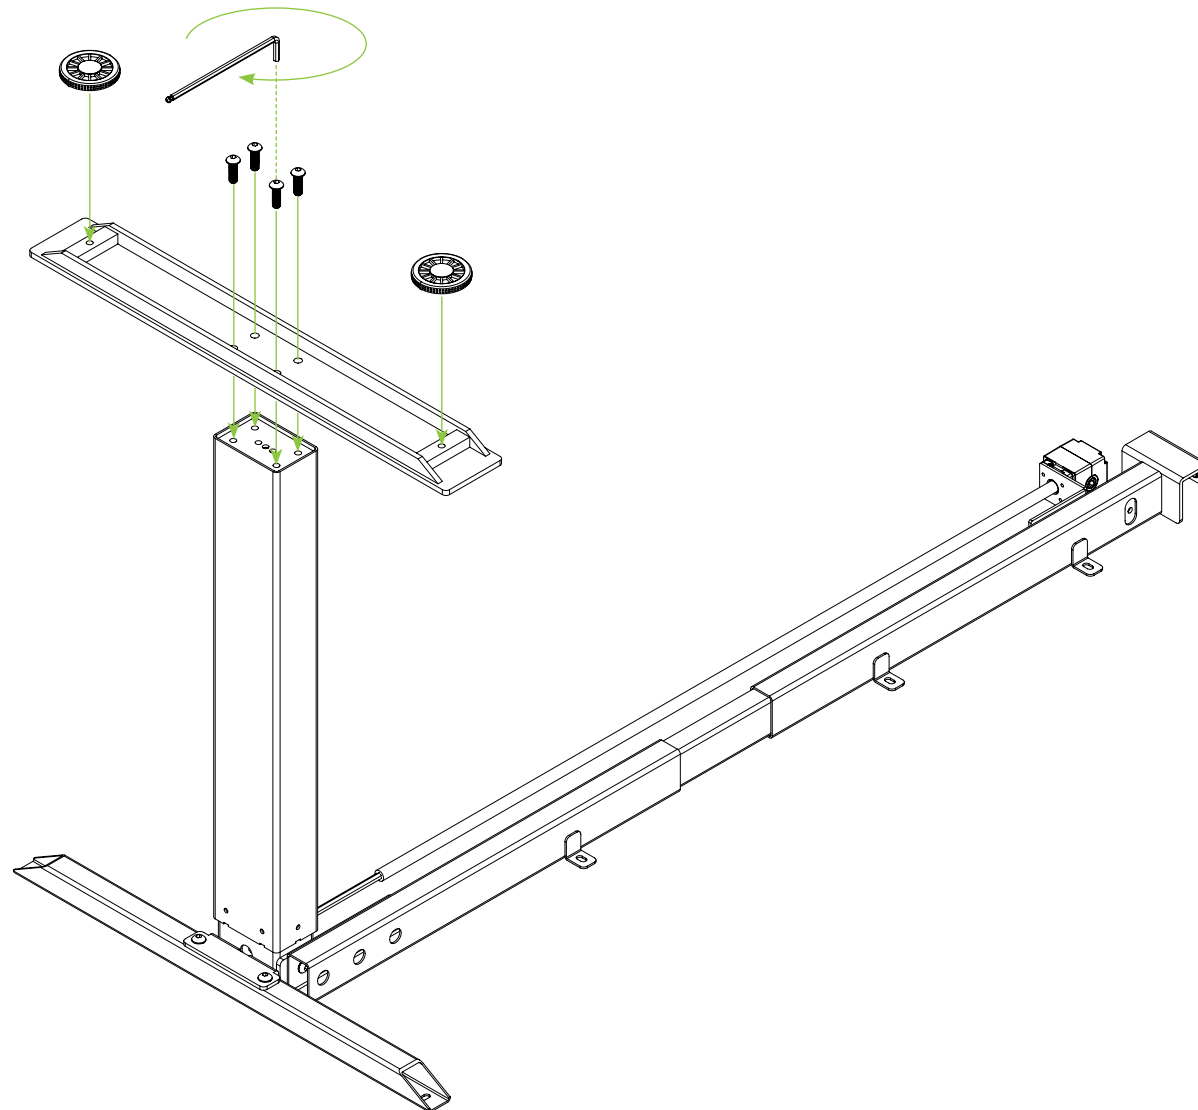

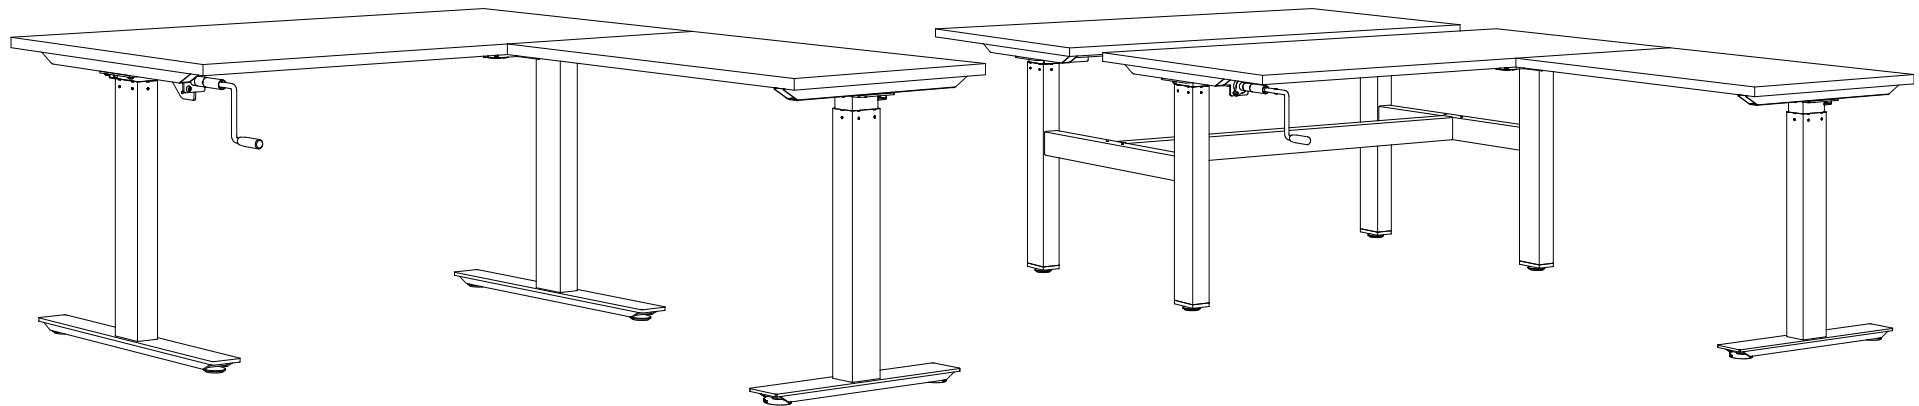


Option 1 - Winder 2 Column Right Hand Return for Single Desk

Go to page 7


Option 2 - Winder 2 Column Right Hand Return for Double Desk

Go to page 11

 Option 1: Single Desk and Return Step 4




6 x ST5x23

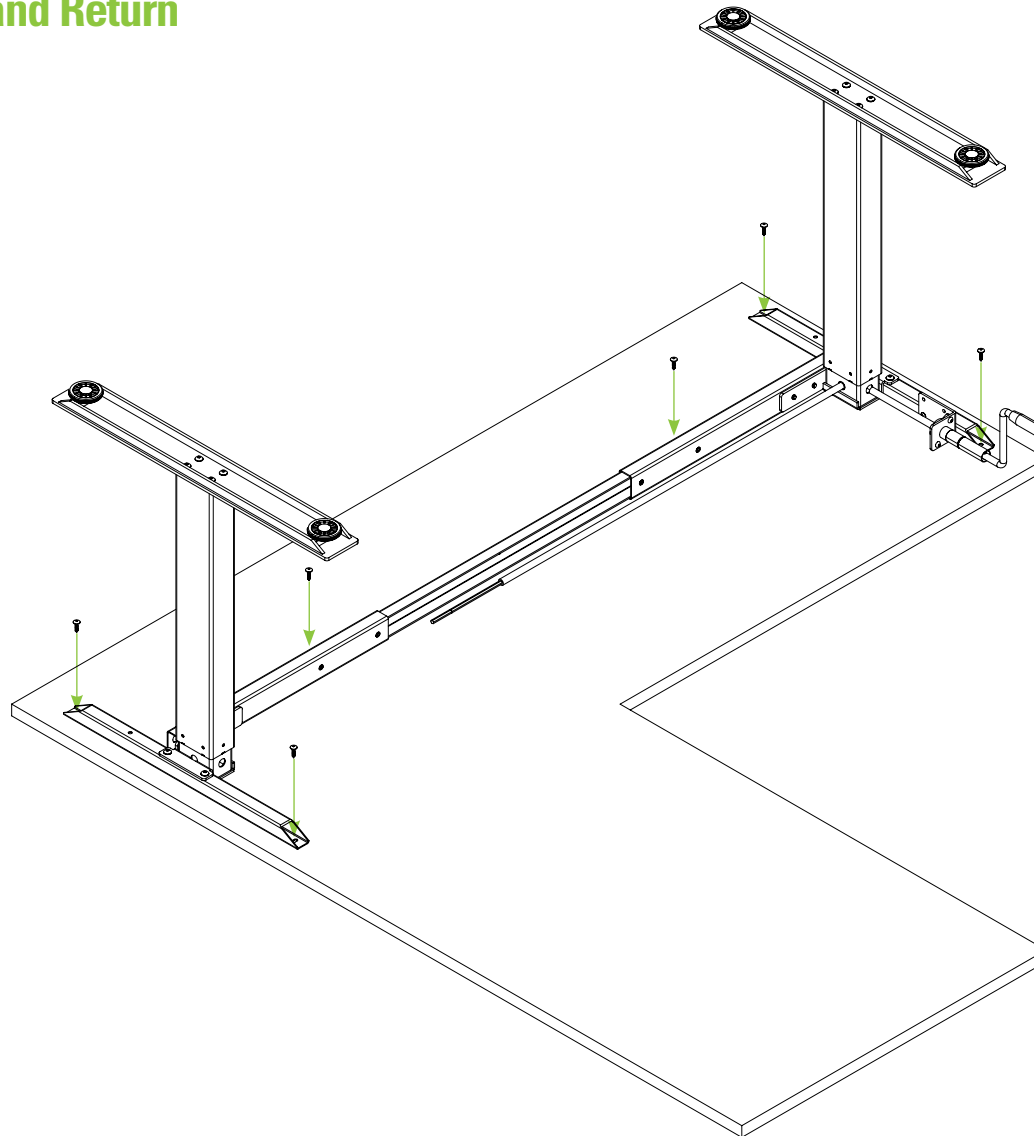 


IMPORTANT!

REFER TO SETPS 1-4 OF SINGLE-SIDED
WINDER 2 COLUMN DESK INSTALLATION
GUIDE TO ASSEMBLE DESK FRAME.

 
Step 5




5 x ST5x23

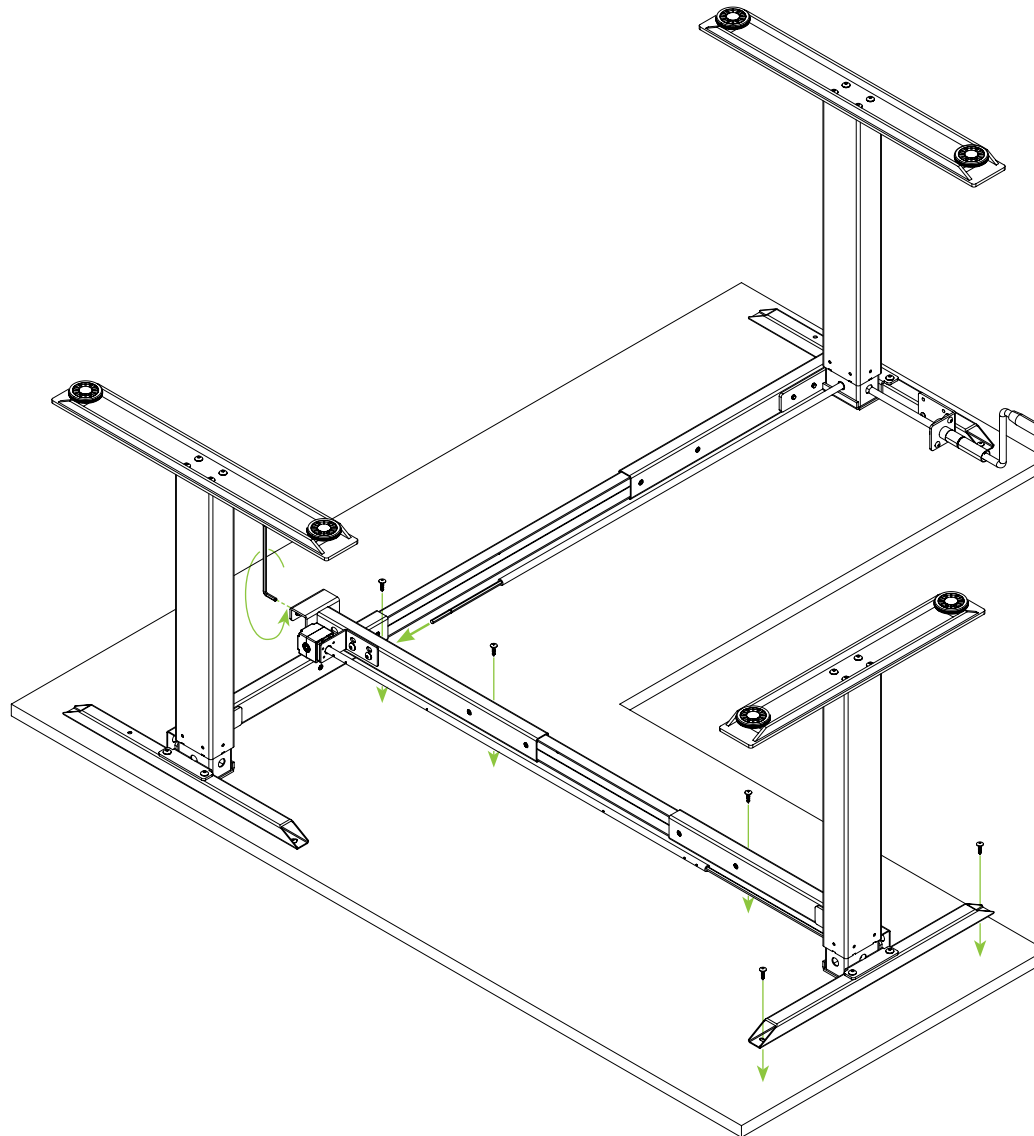 

 Step 6

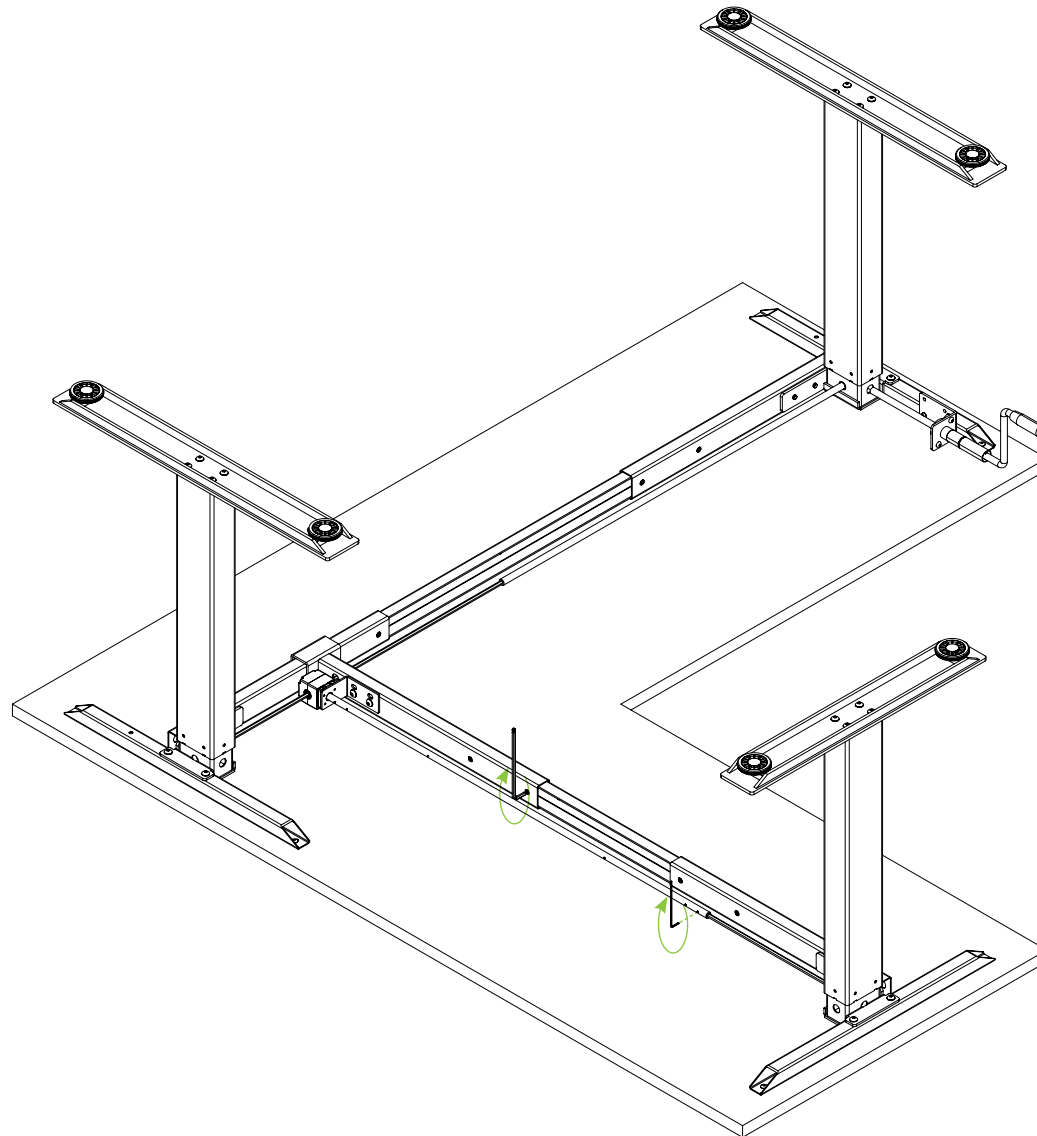


Completed

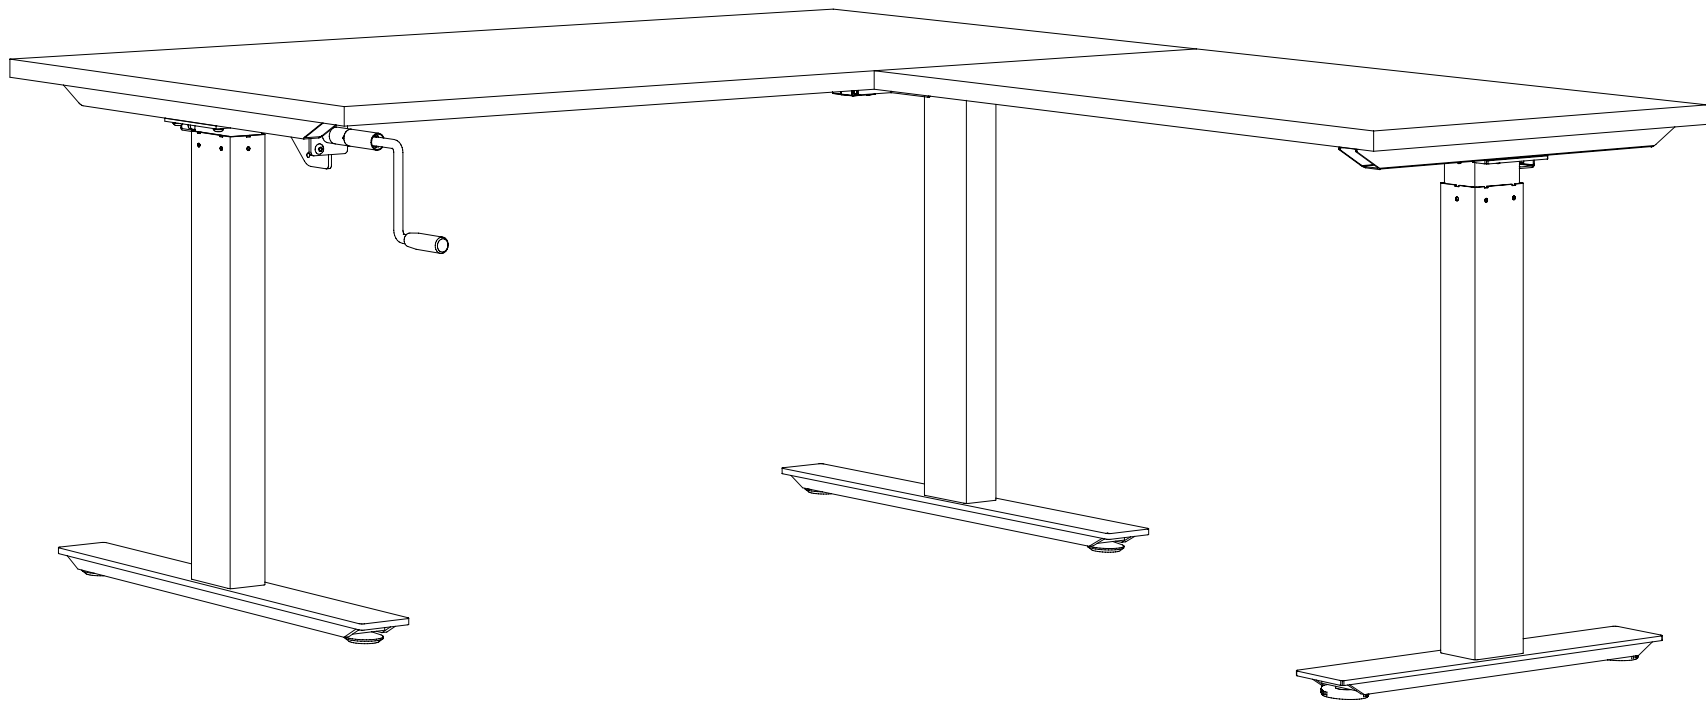 


Option 2: Double Desk and Return Step 4

IMPORTANT!

 
REFER TO SETPS 1-8 OF DOUBLE-SIDED
WINDER 2 COLUMN DESK INSTALLATION
GUIDE TO ASSEMBLE DESK FRAME.

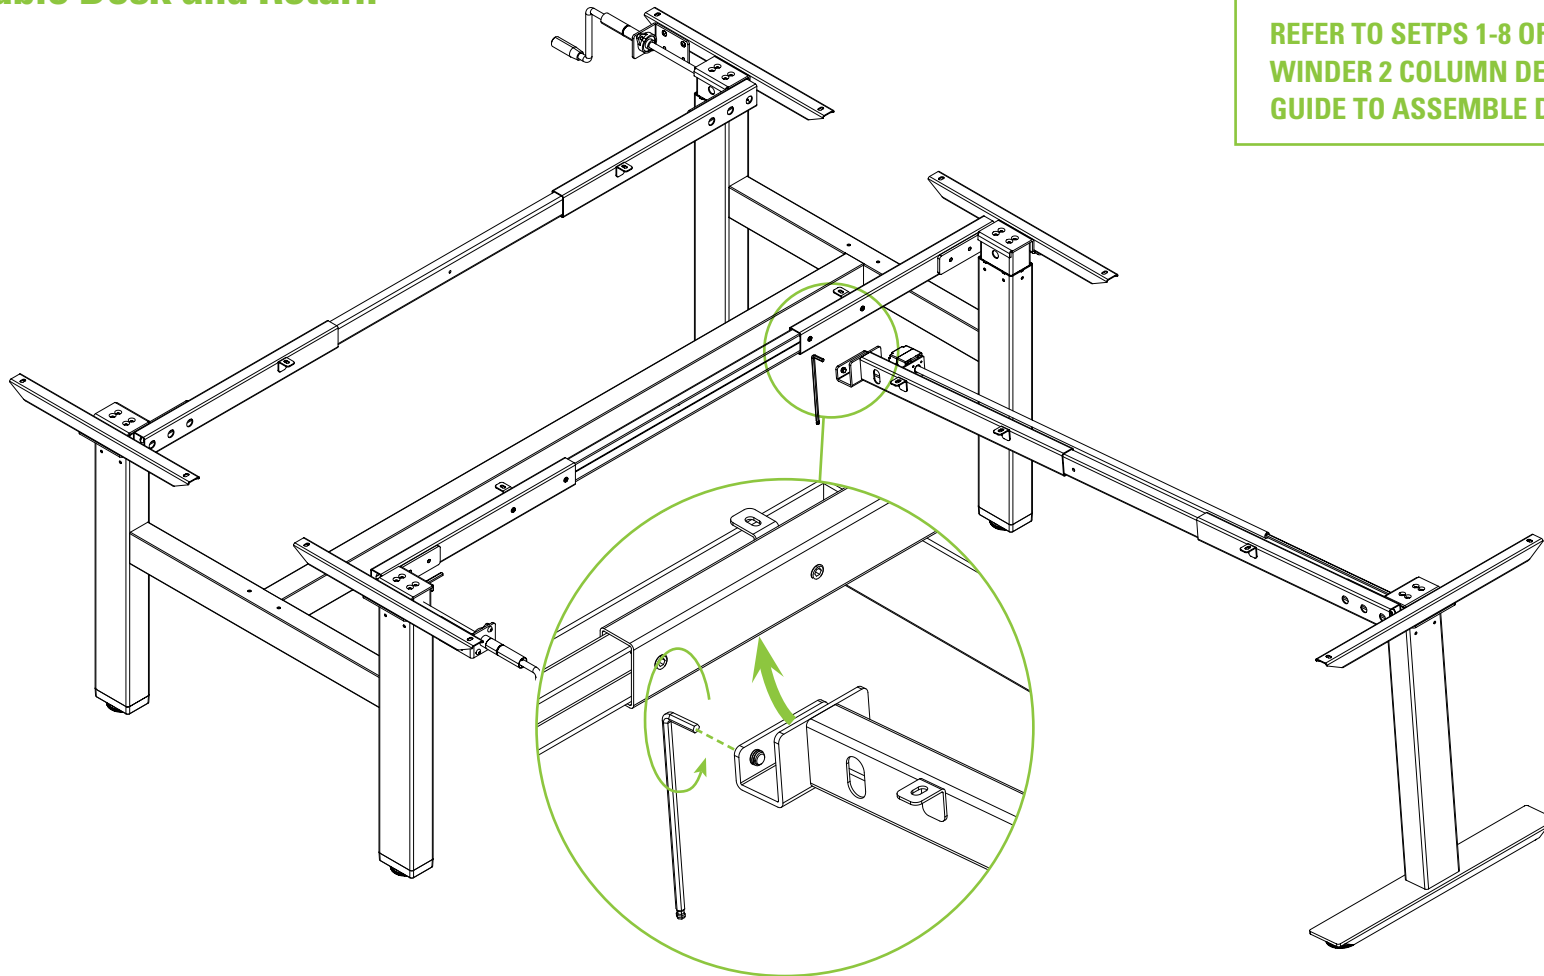

 
Step 5

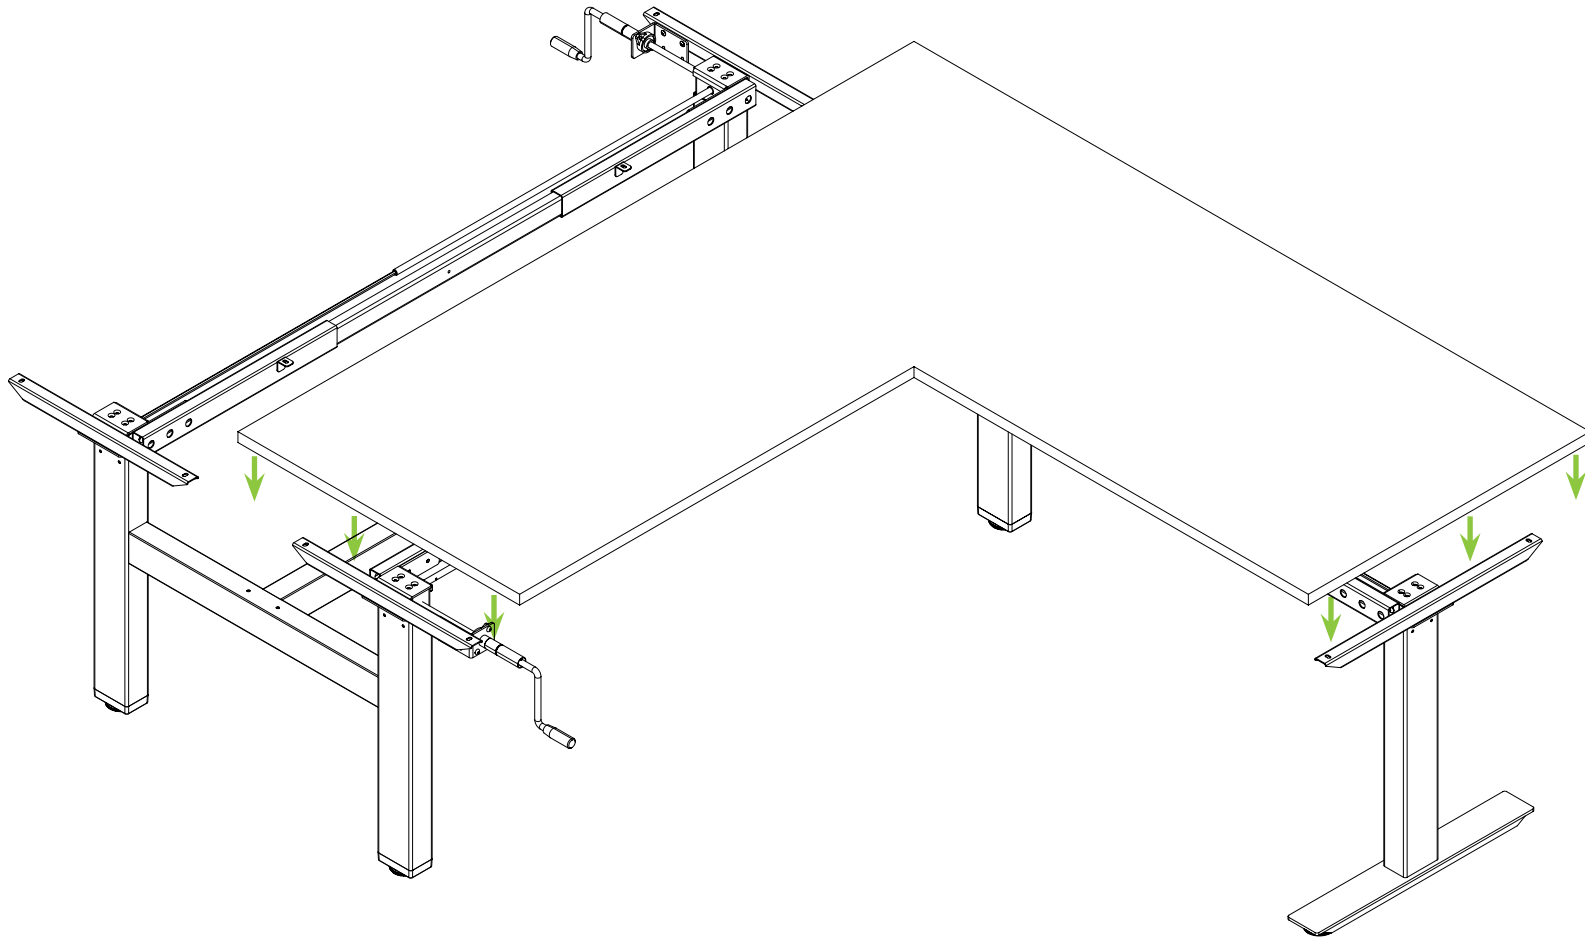

 
Step 6




11 x ST5x23

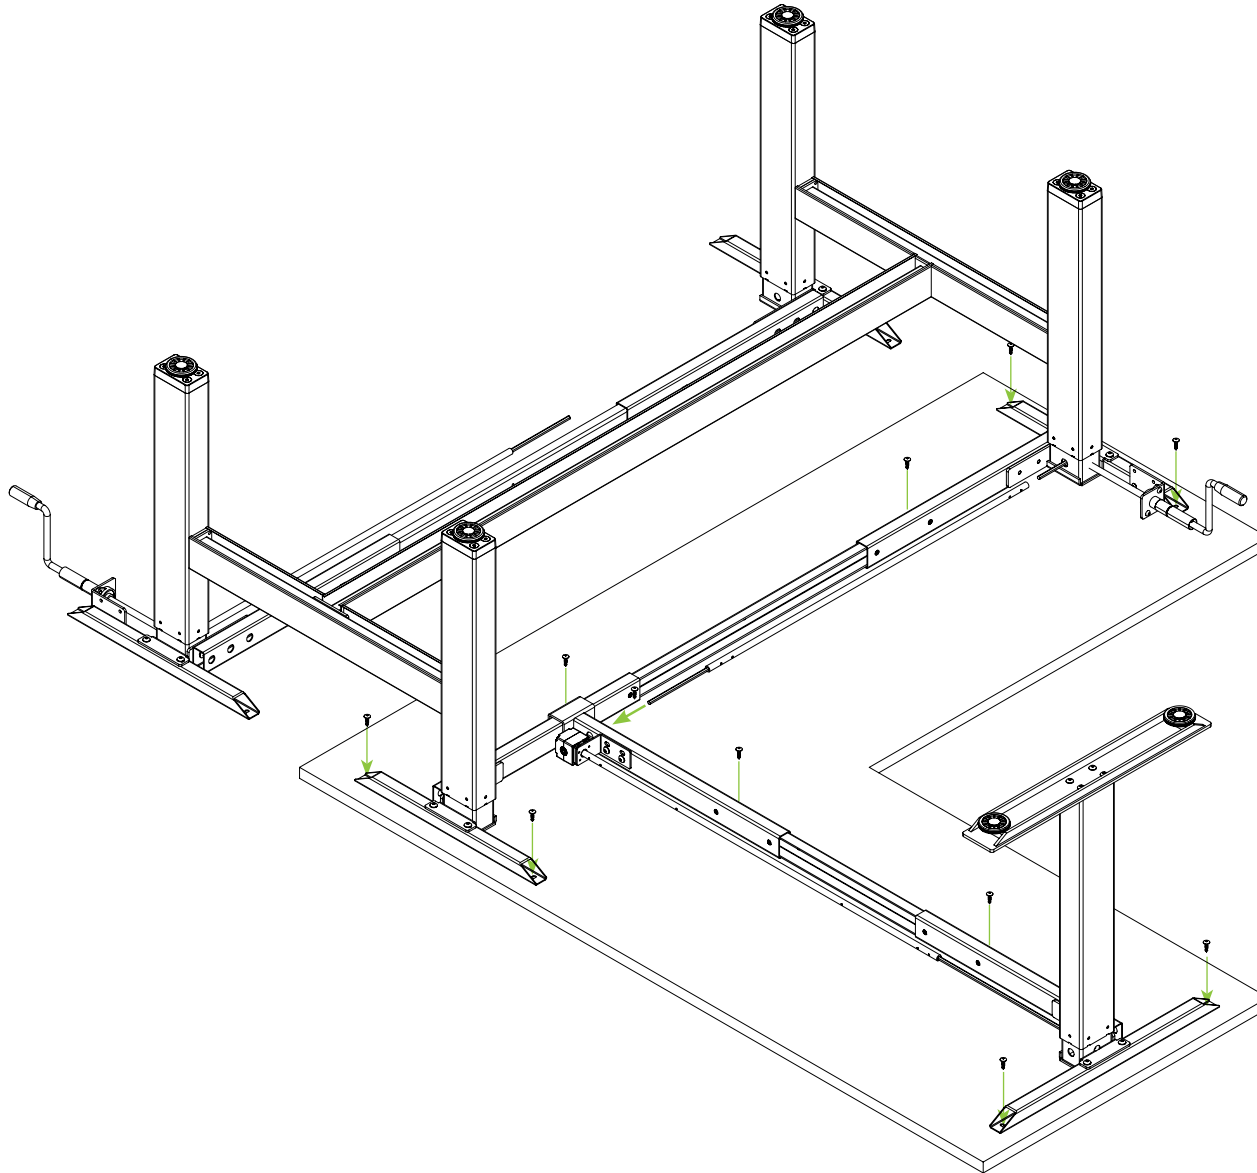 

 Step 7

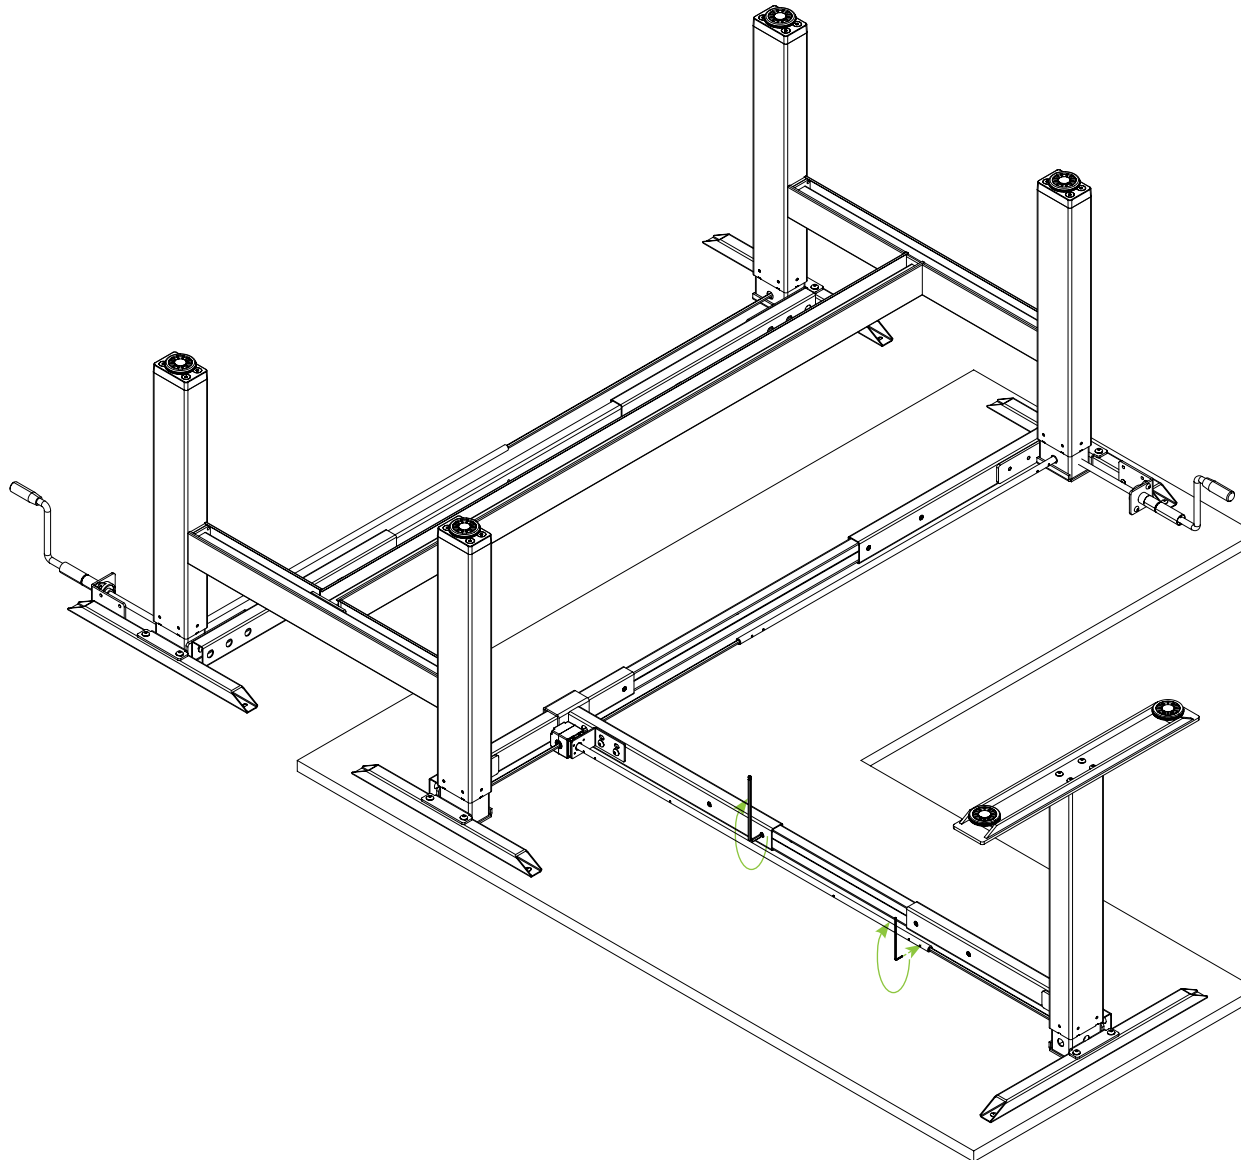

Completed

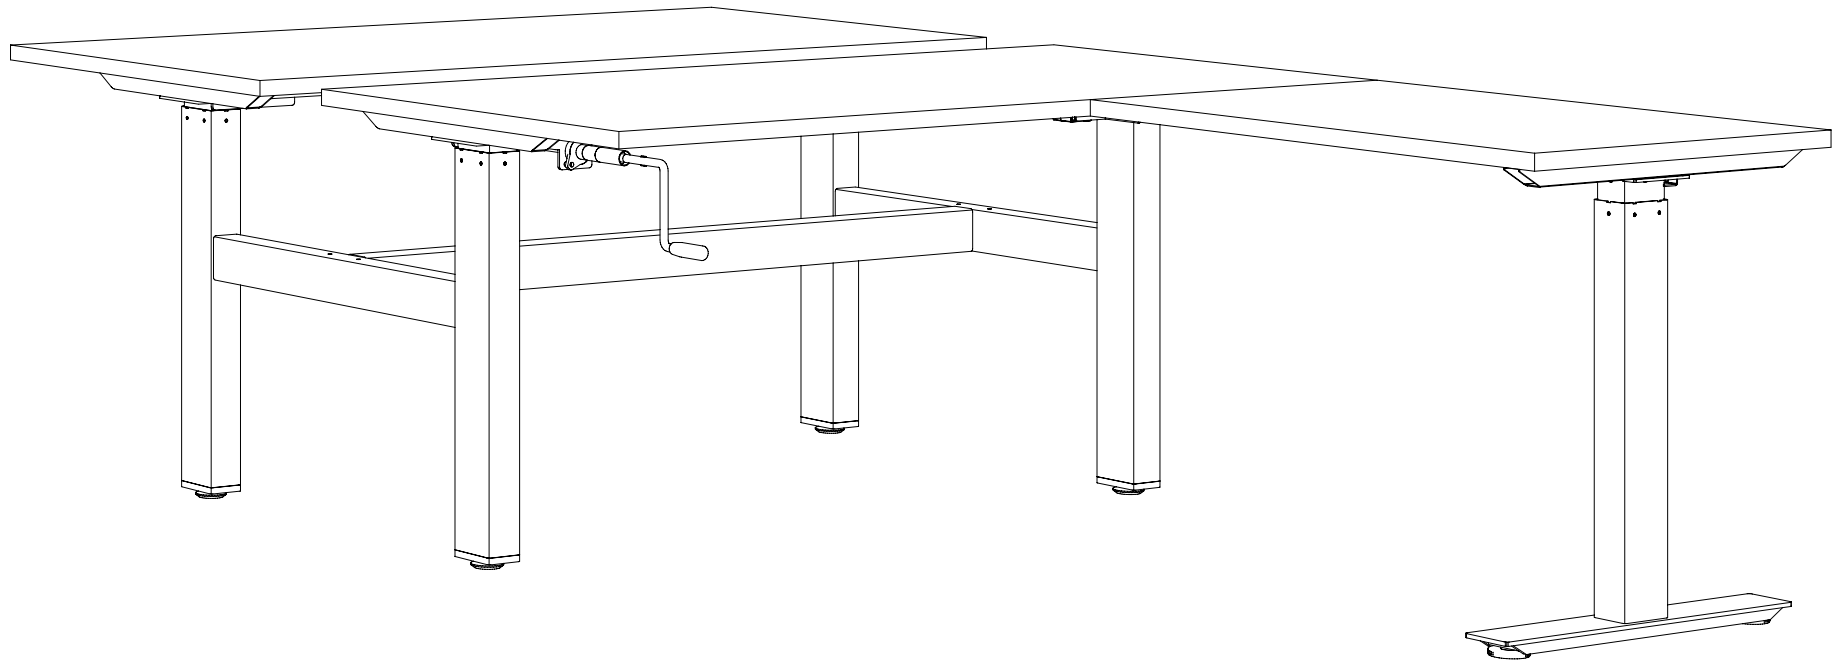 


Agile


Installation Guide - Winder 2 Column



 
freeway

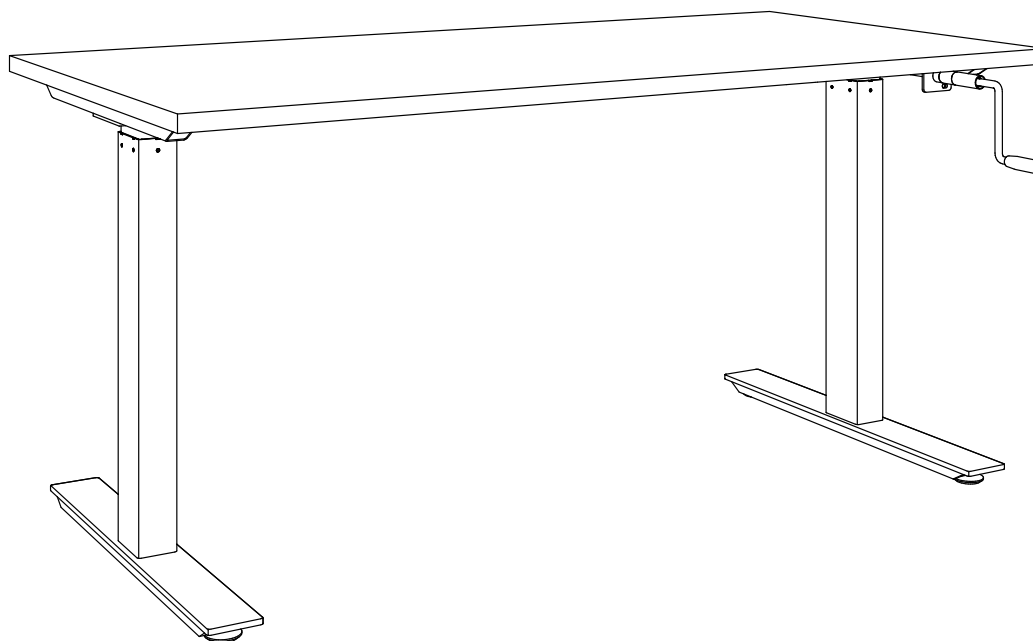


Parts:

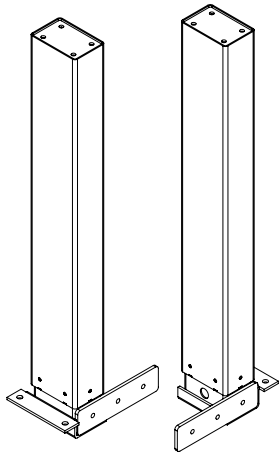 


1 x Left & Right Leg Pair

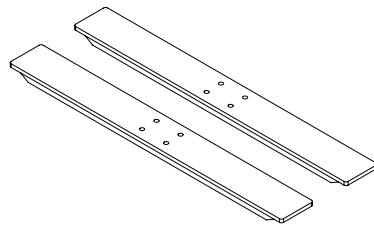 


2 x Foot

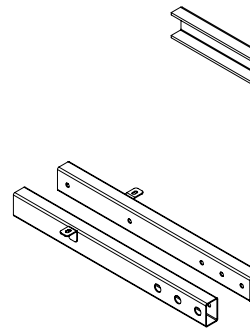 


2 x Leg Rail

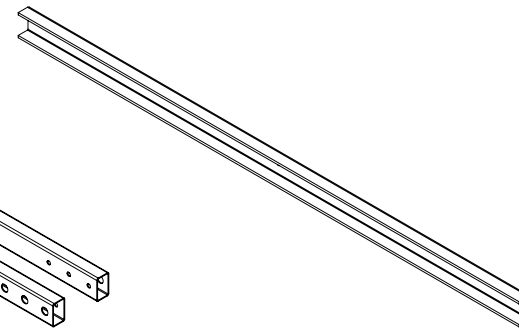 


1 x Cross Rail

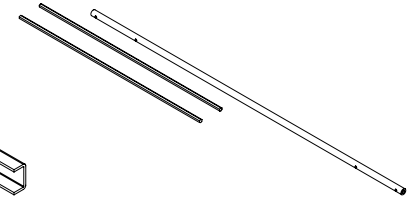 


1 x Drive Shaft

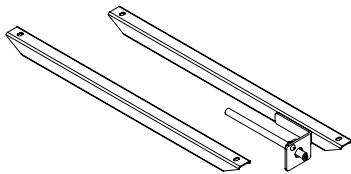 


1 x L&R Support Bar Pair

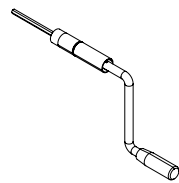 

1 x Winder

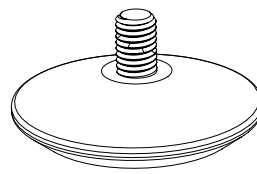 


4 x Levelling Foot

 


8 x M8x25



 10 x M8x10



4 x M10x25


 


6 x ST5.0x22

Step 1



 
 
6 x M8x10

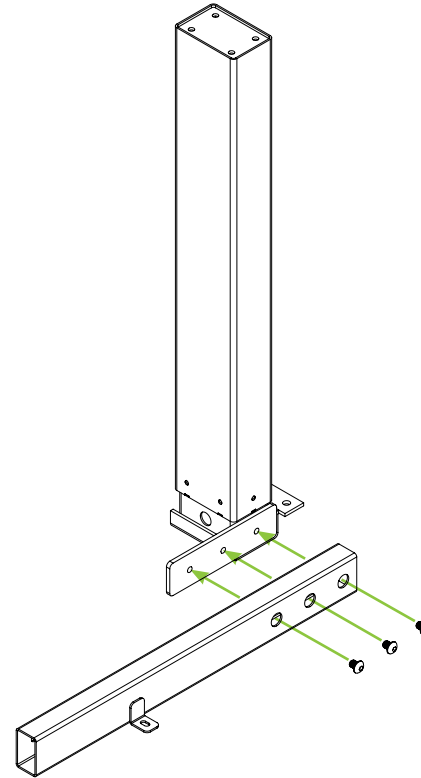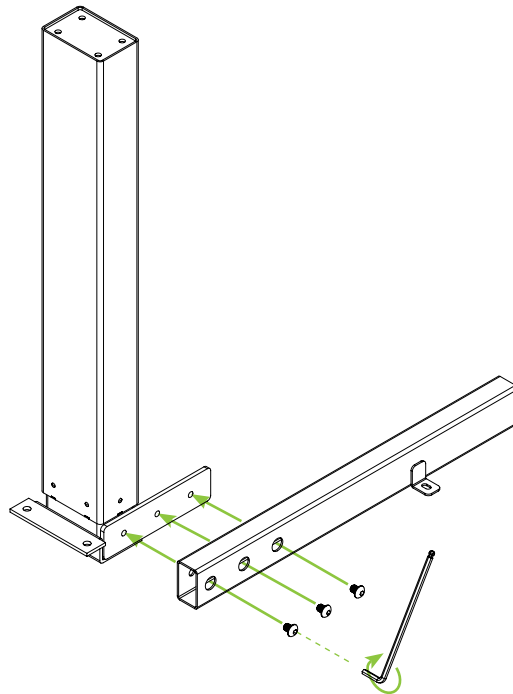


Step 2



 
 
4 x M8x10

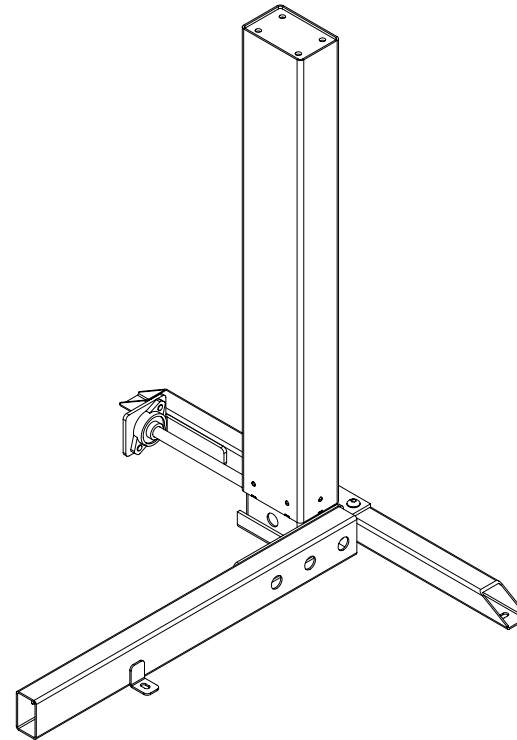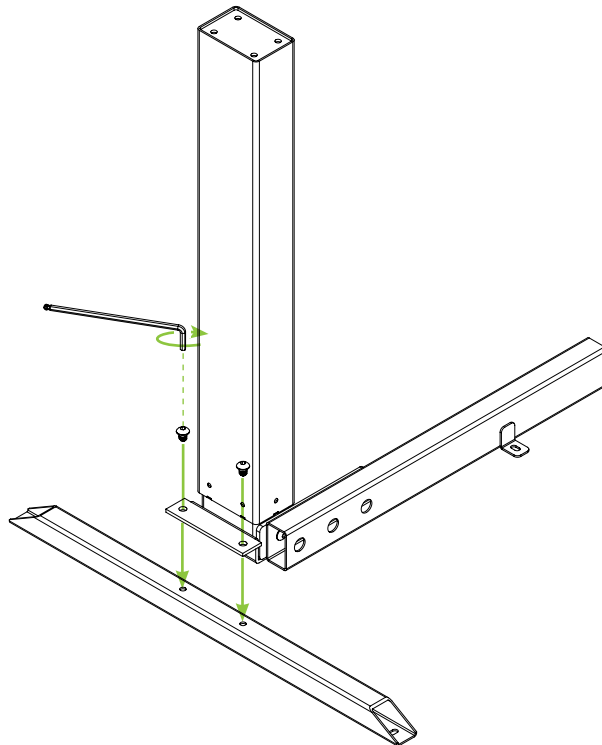


 
Step 3

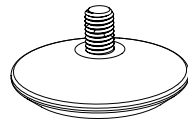

4 x Levelling Foot

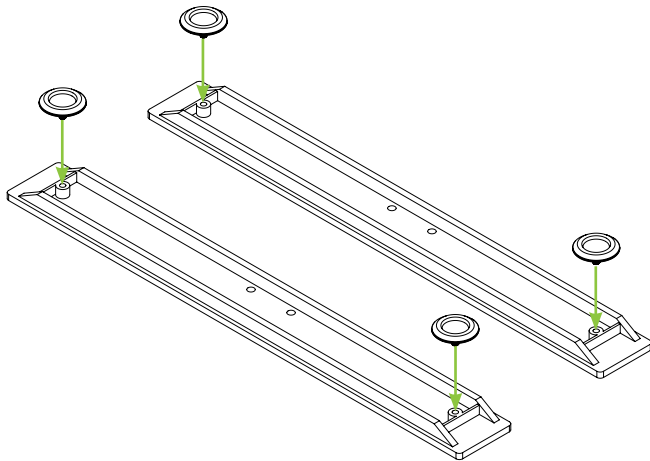  


8 x M8x25

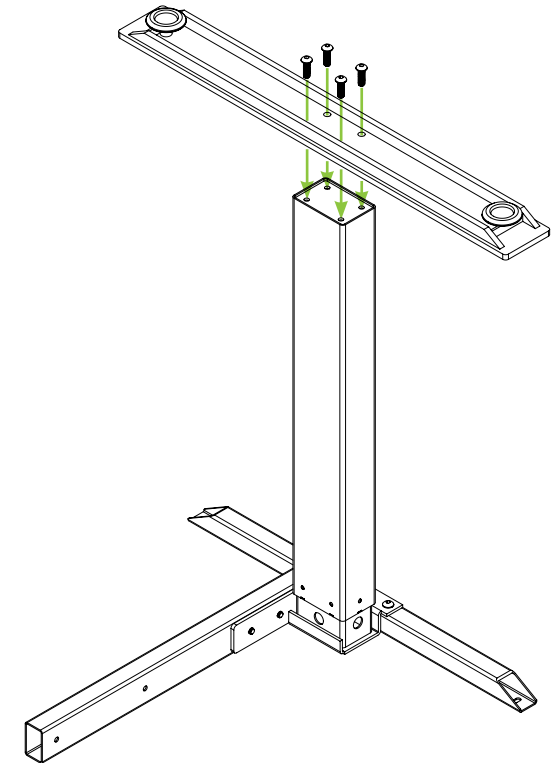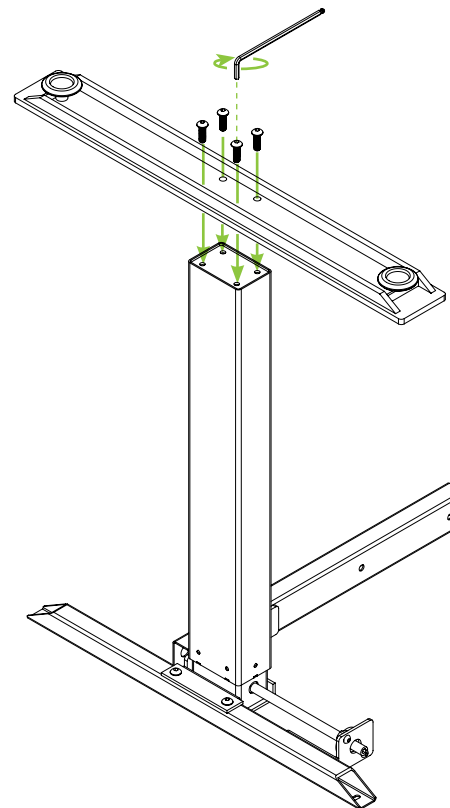  

Step 4




 4 x M10x25

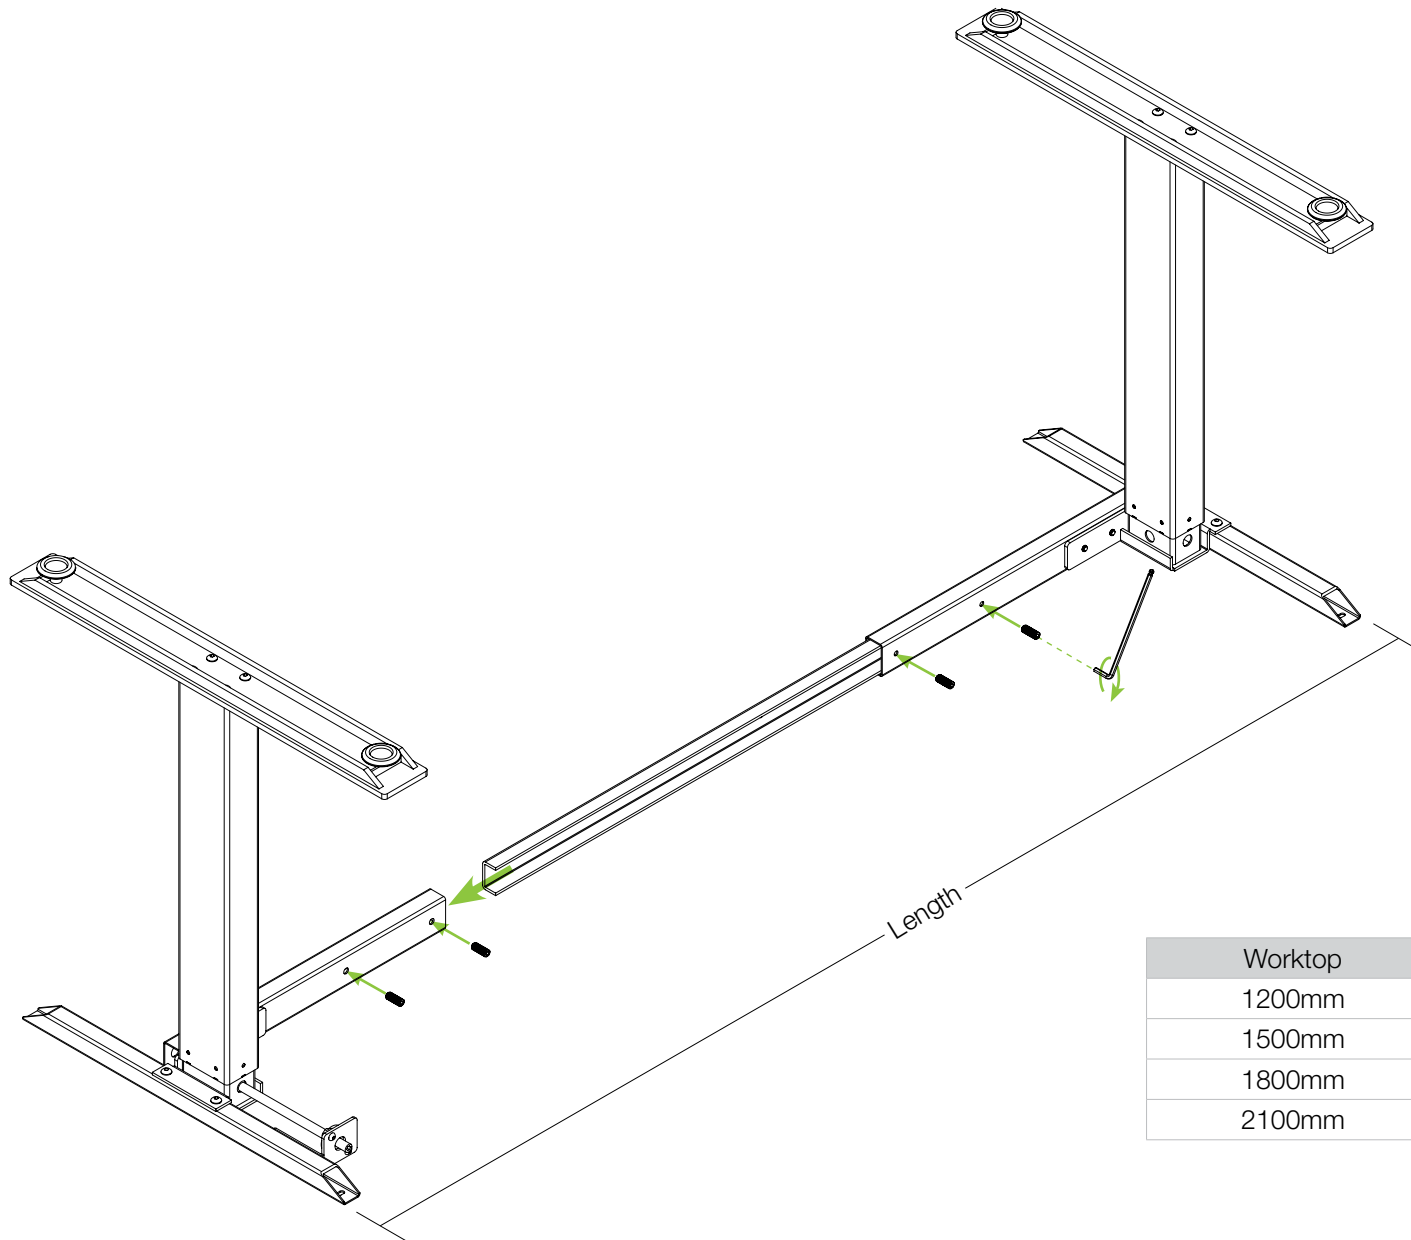


Worktop	Length
1200mm	1125mm
1500mm	1425mm
1800mm	1725mm
2100mm	2025mm

 
Step 5

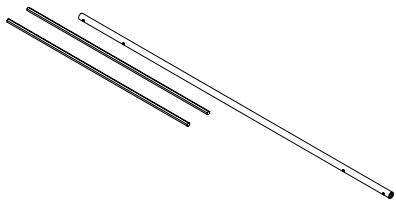


1 x Drive Shaft

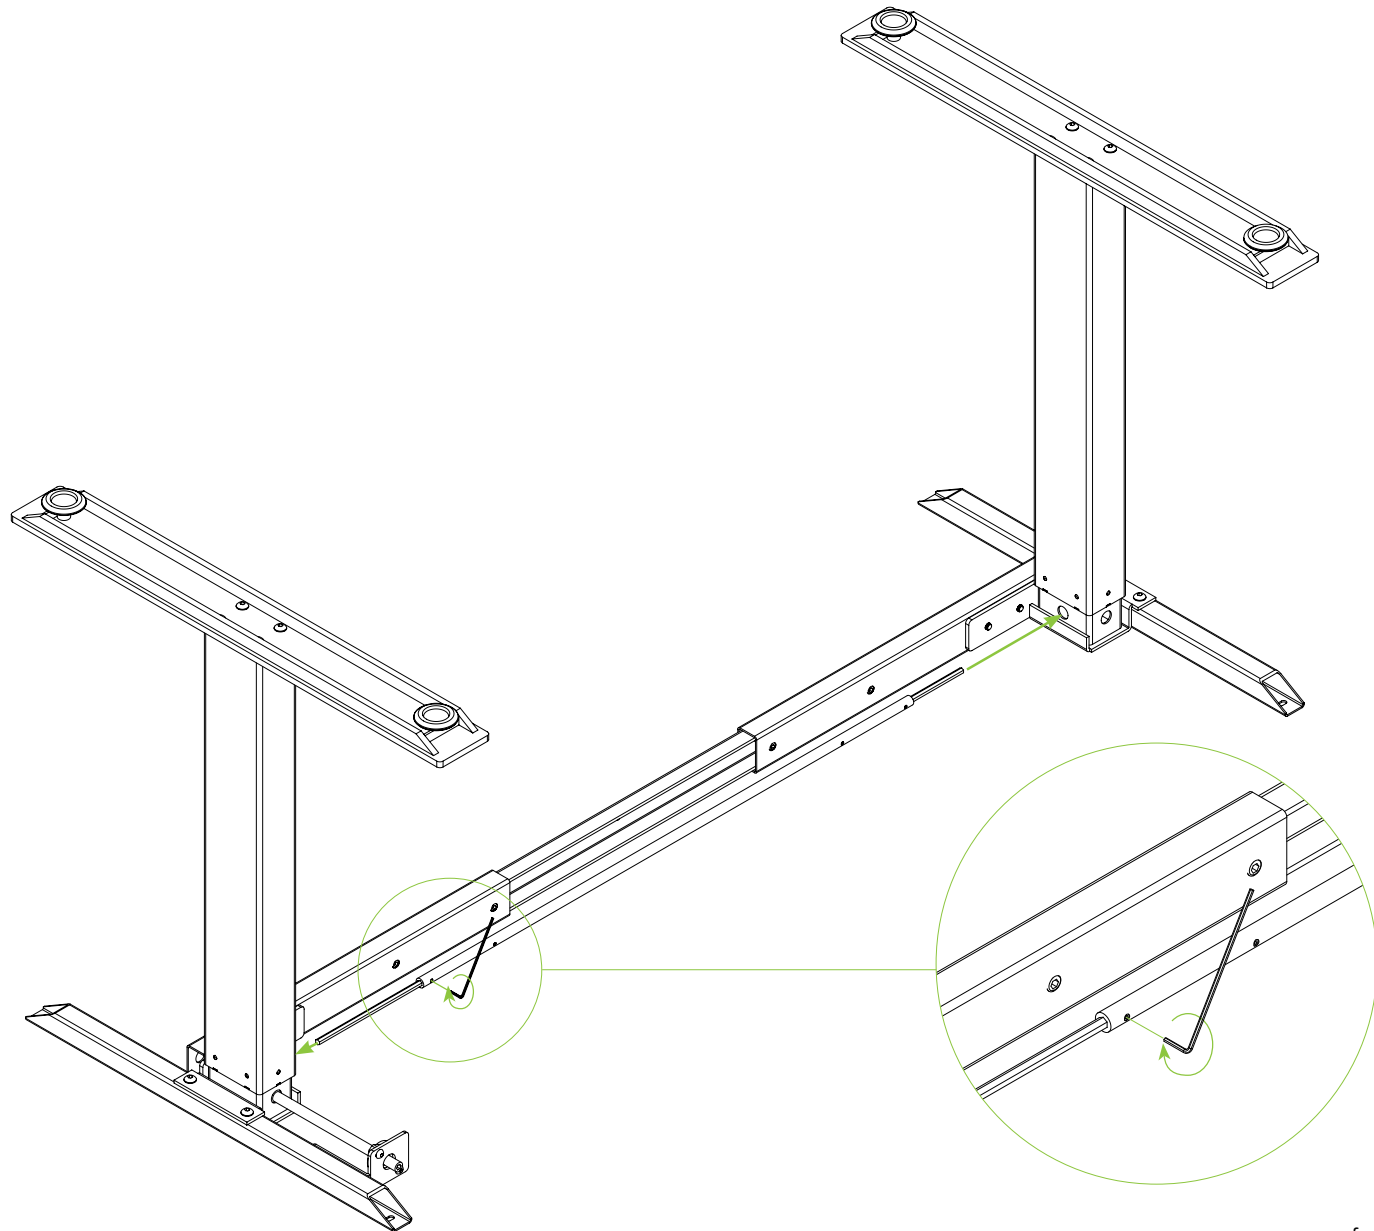 

 
Step 6

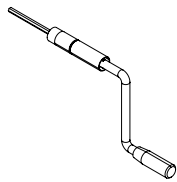


1 x Winder

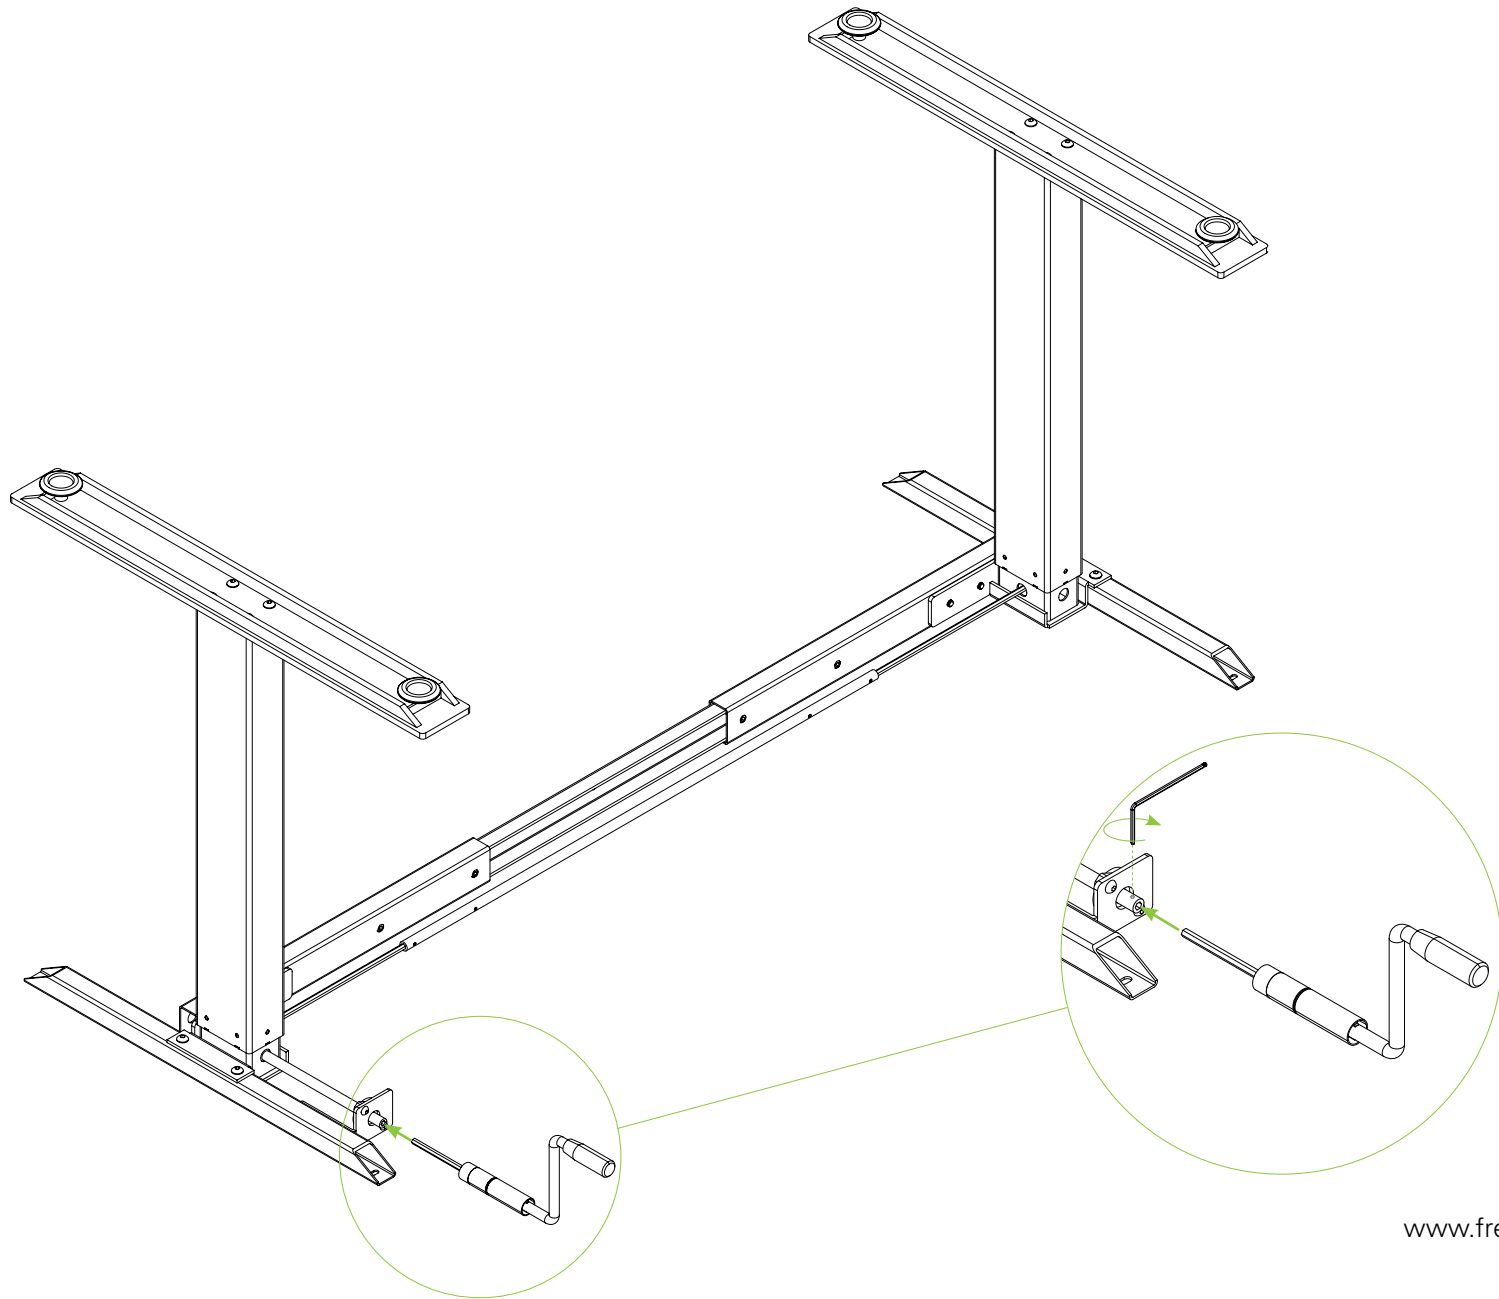 

 
Step 7



6 x ST5.0x22

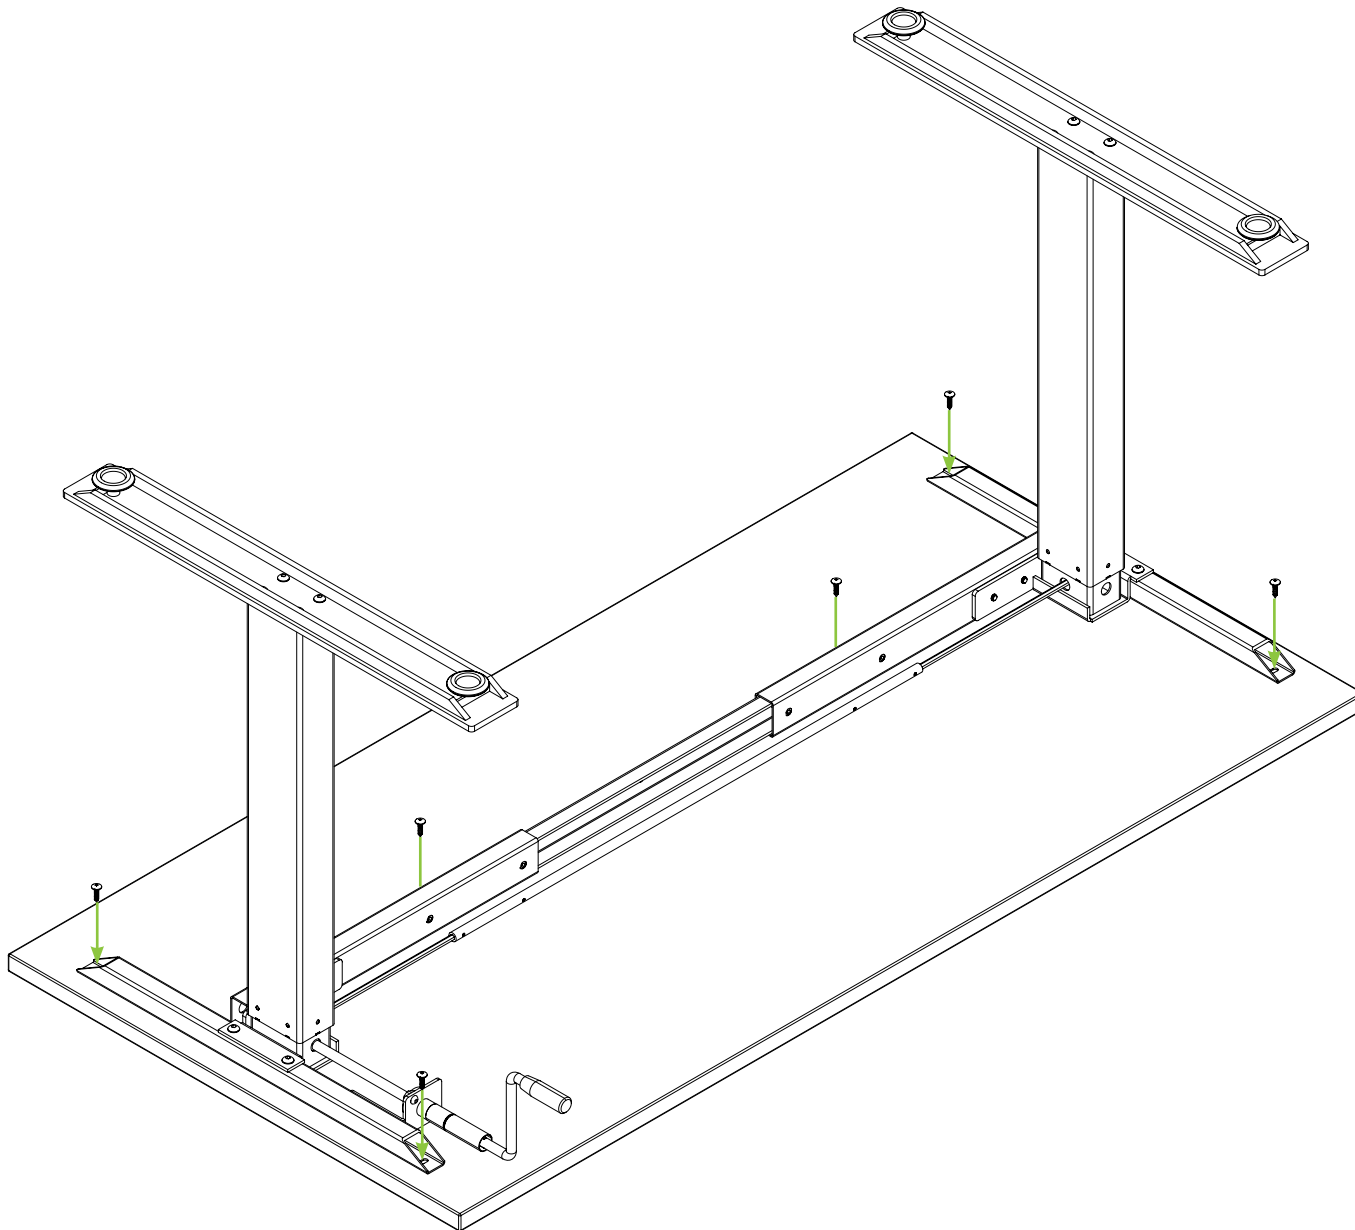 

Completed

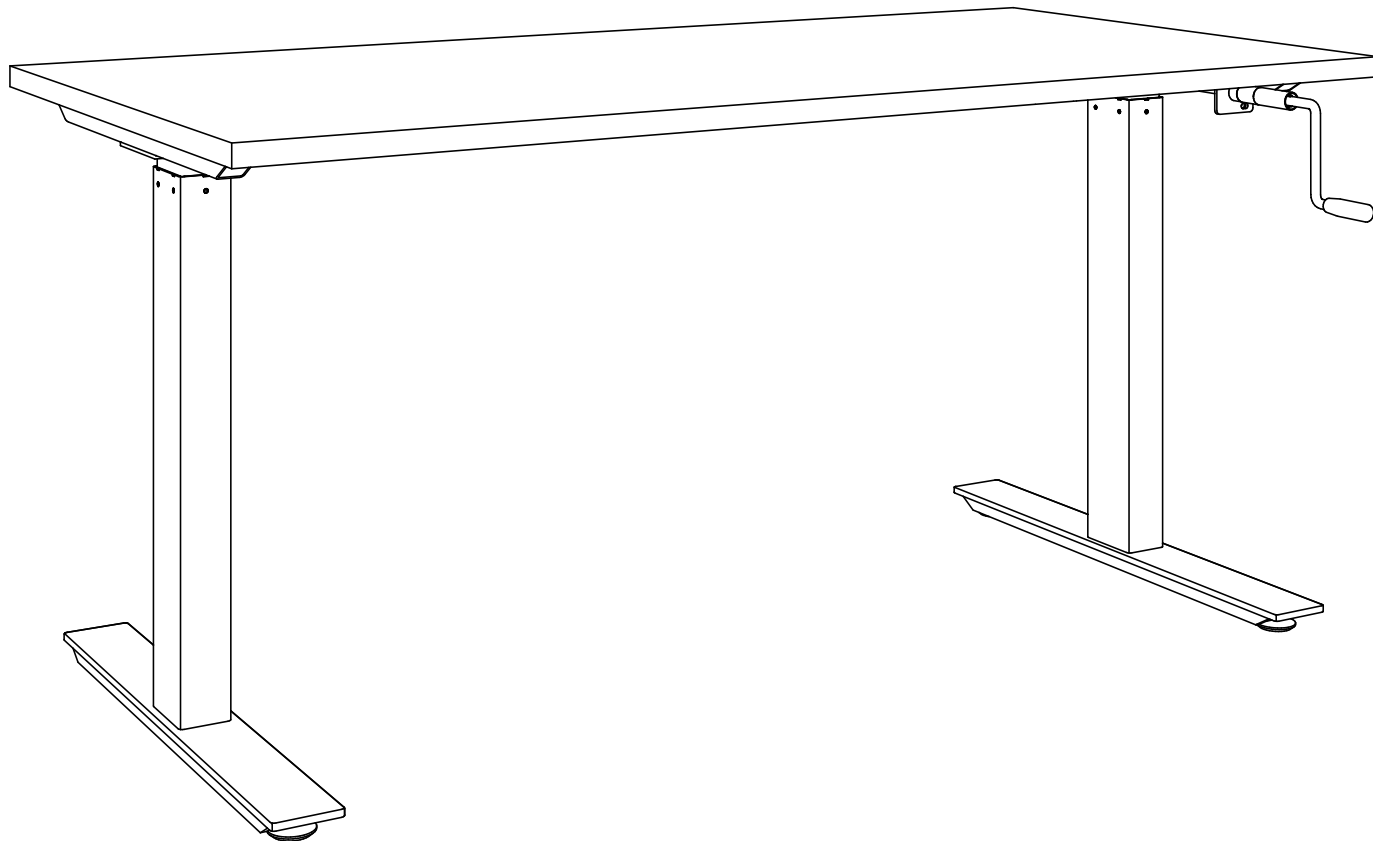 





freeway

Agile

 
Installation Guide - Winder 2 Column

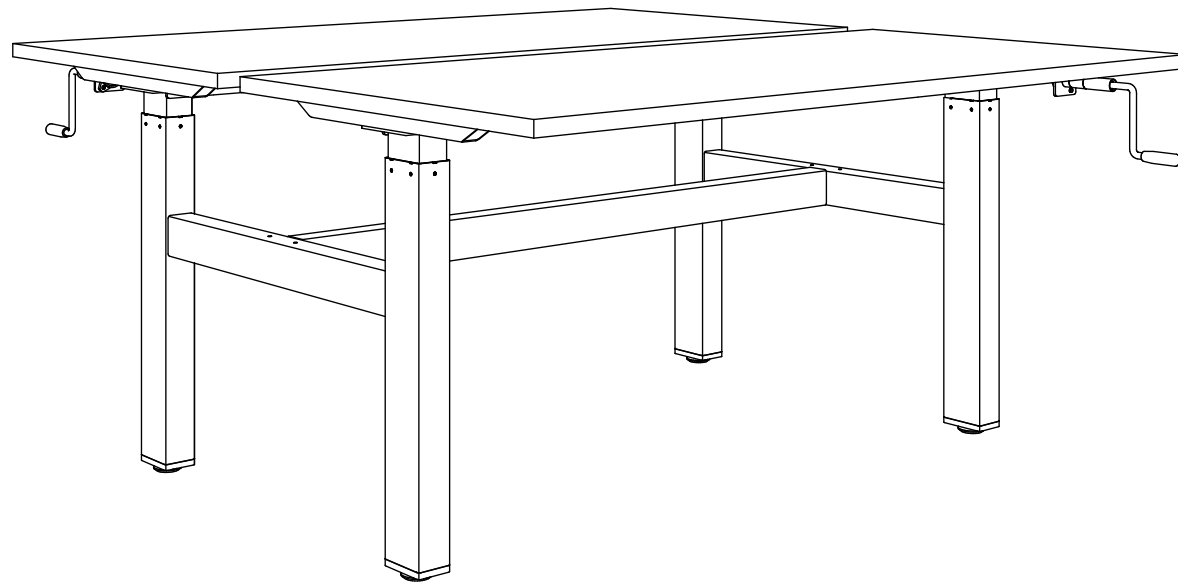


Parts:

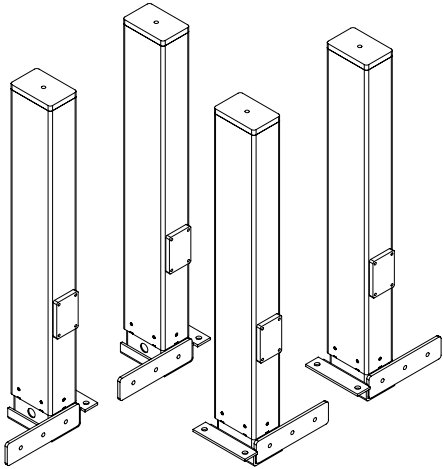 


2 x L&R Leg Pair

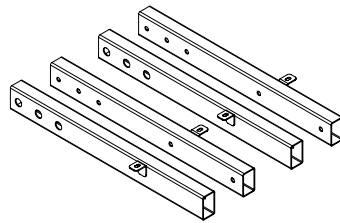 


2 x L&R Leg Rail Pair

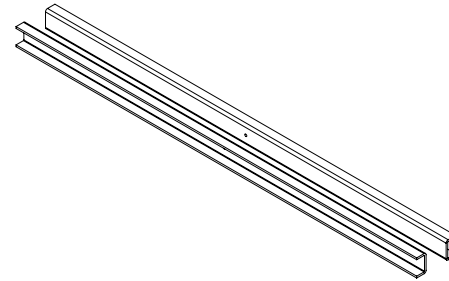 


2 x Cross Rail

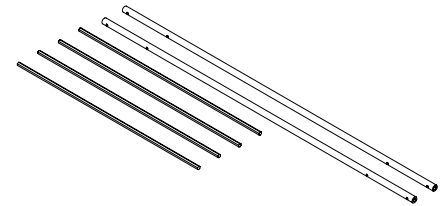 


2 x Drive Shaft

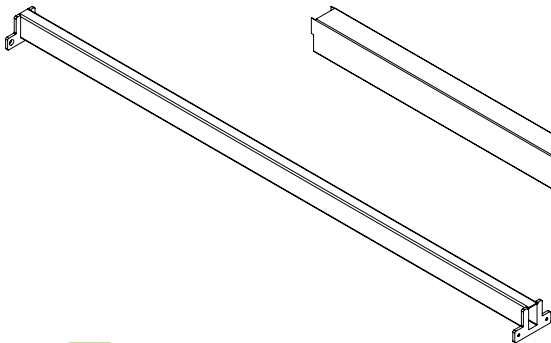 


1 x Cross Beam

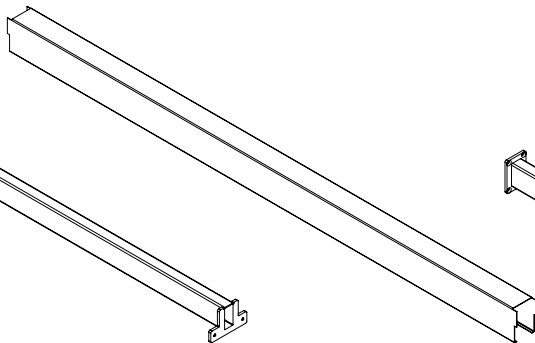 


1 x Cross Beam Cover

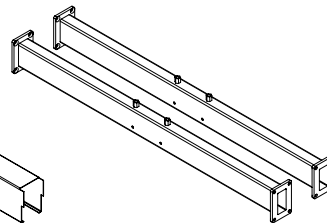 

2 x Leg Beam

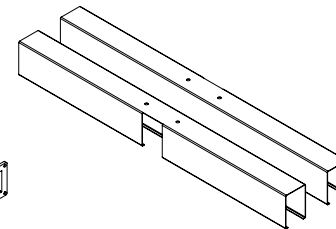 


2 x Leg Beam Cover

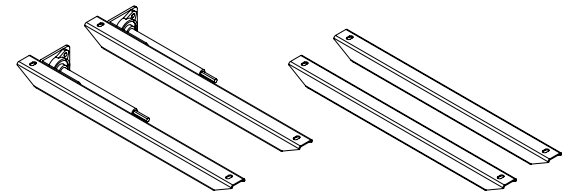 


2 x L&R Support Bar Pair

 
Parts:

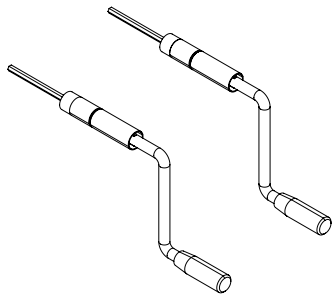


2 x Winder

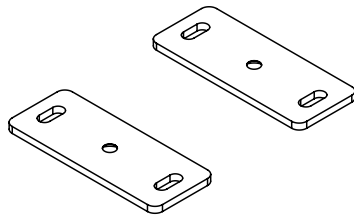 

2 x Screen Bracket

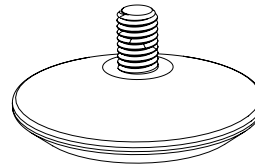 

4 x Levelling Foot

 


8 x M10x25




20 x M8x10



 
12 x ST5.0x22



2 x M6x20

 

4 x M5x15

 


20 x M5x12

Step 1



 
12 x M8x10

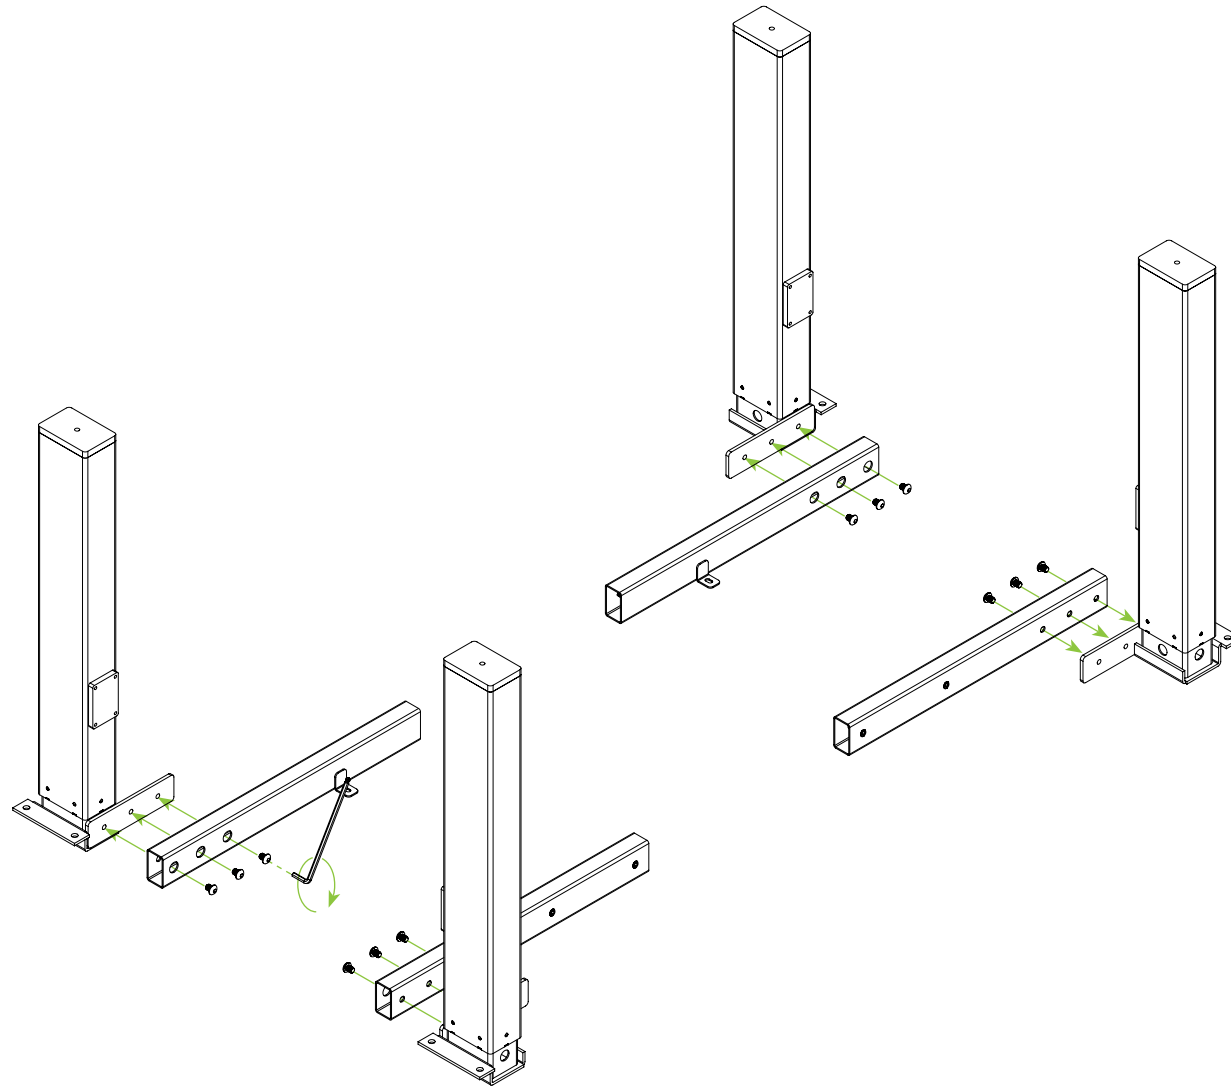


Step 2



 
8 x M6x10

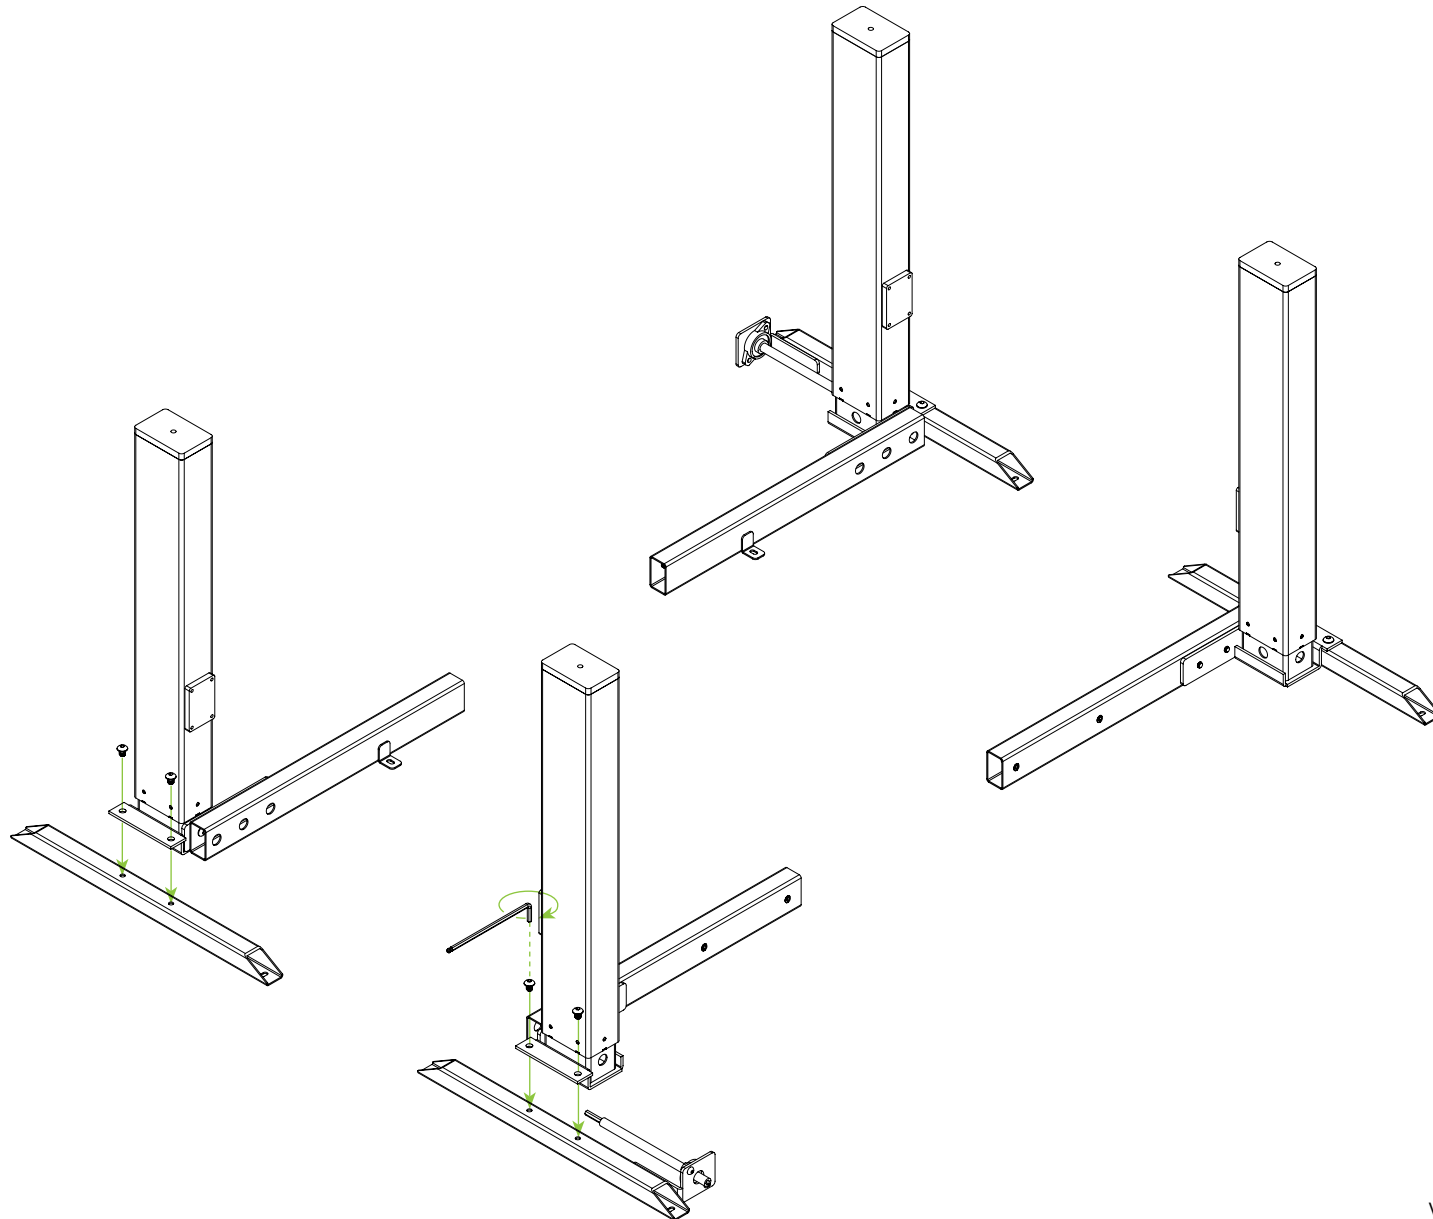

 
Step 3

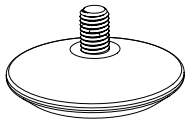


4 x Levelling Foot

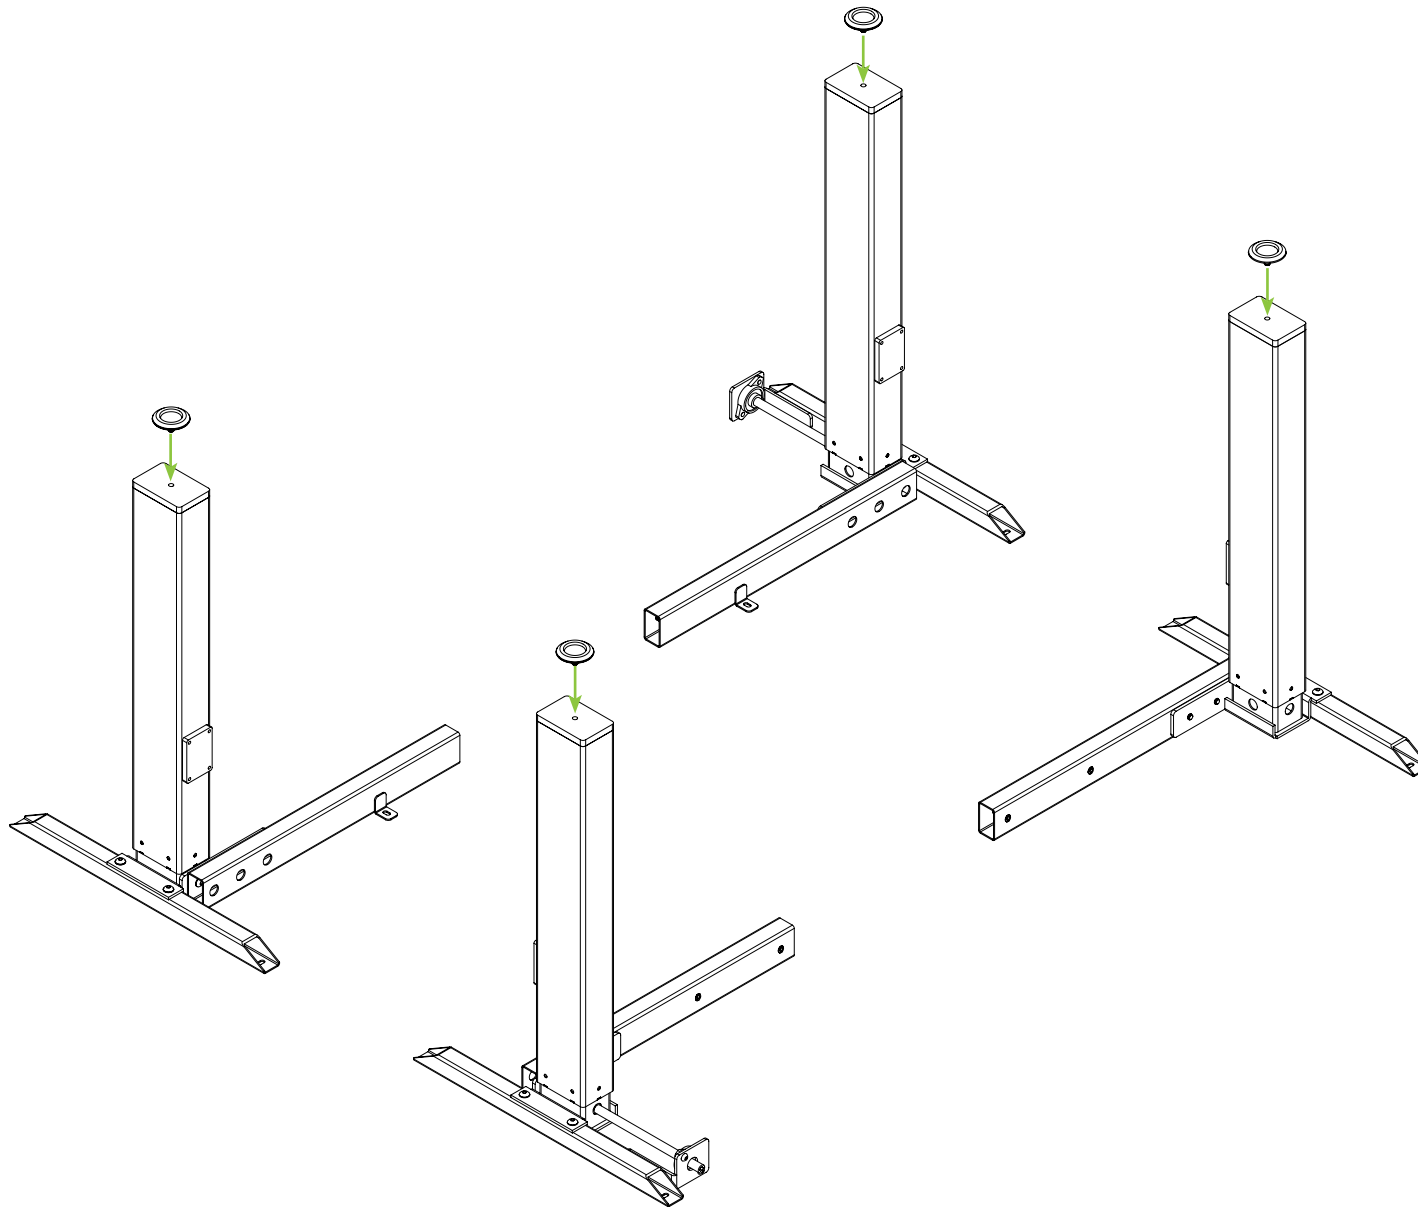 

 
Step 4




16 x M5x12

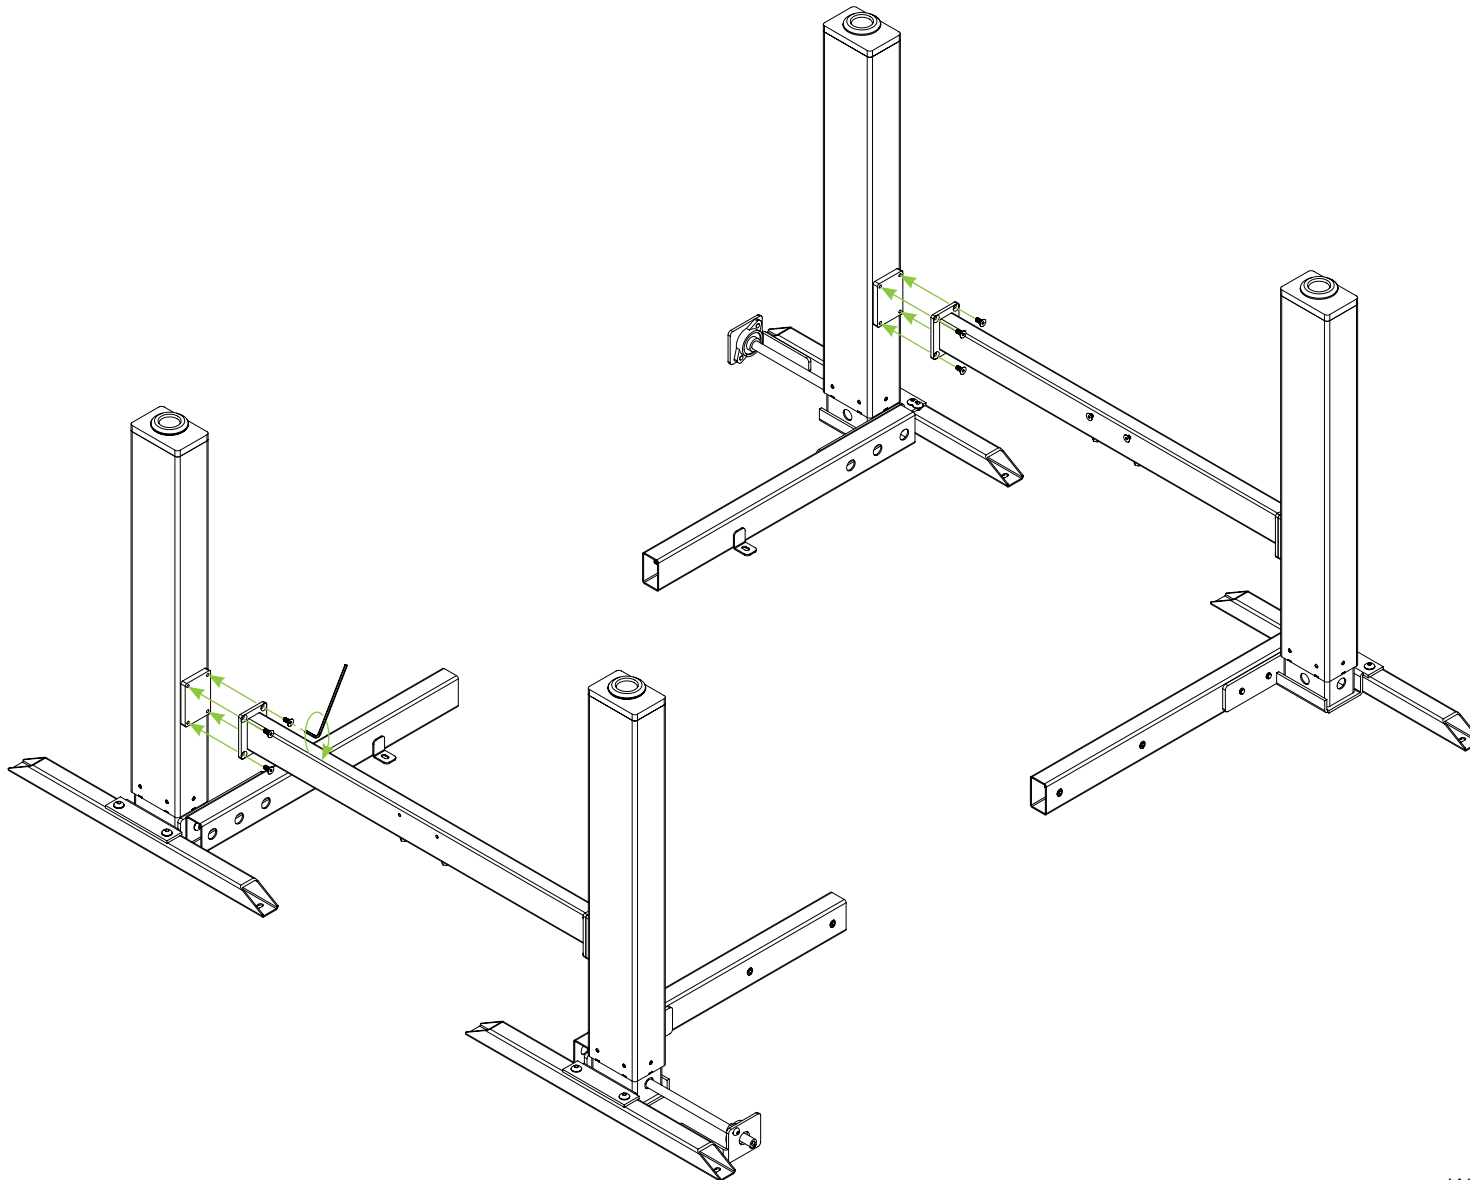 

 
Step 5




4 x M5x12

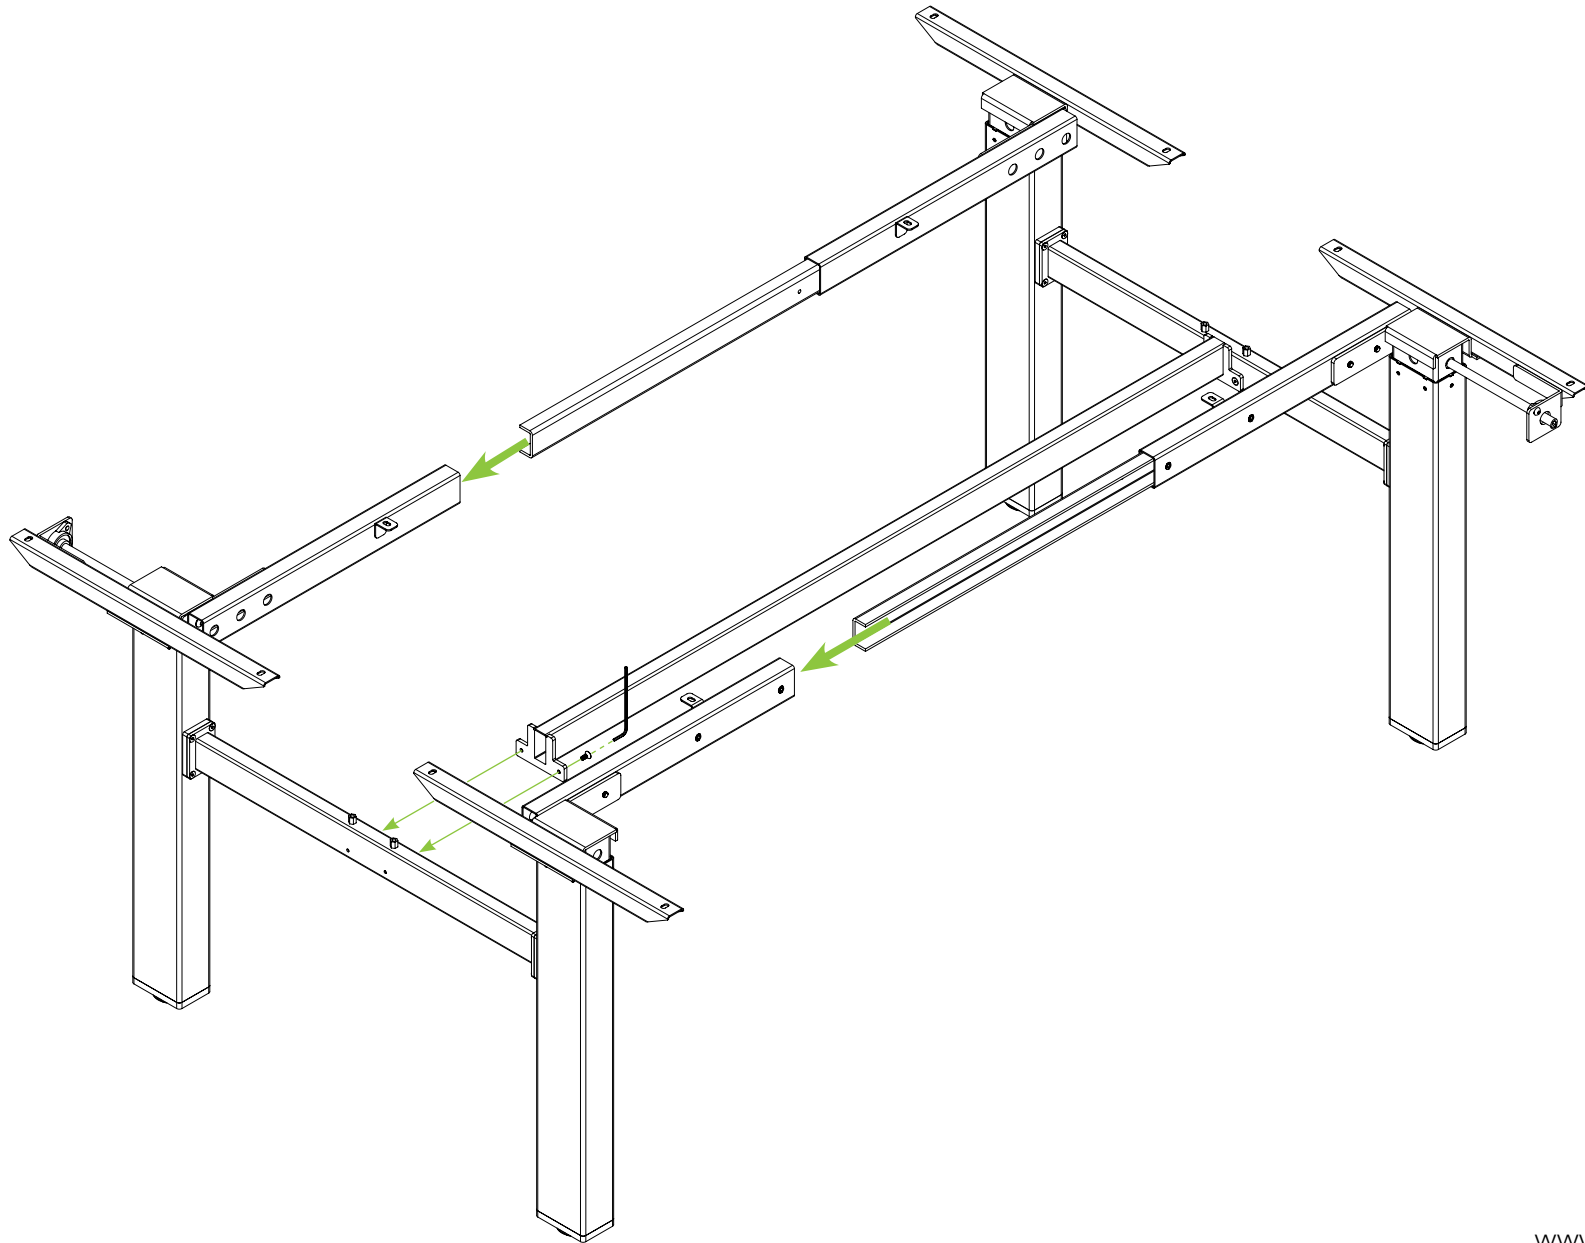 

 
Step 6




8 x M10x25

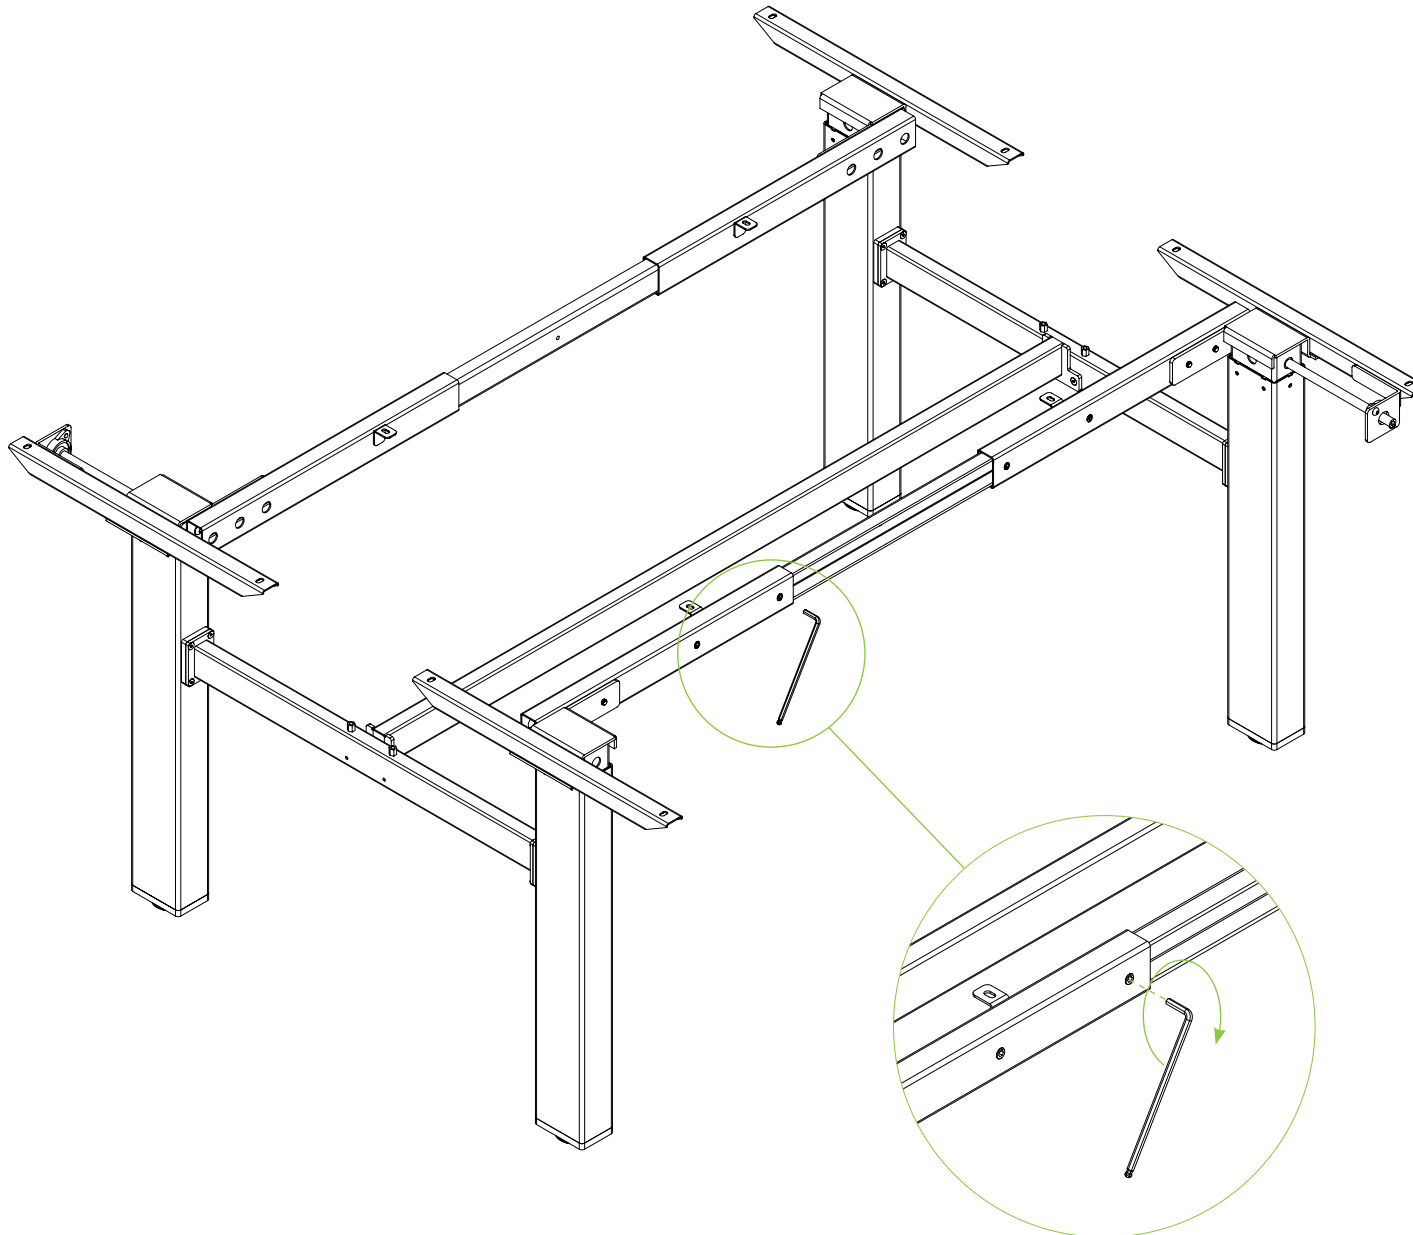 

 
Step 7

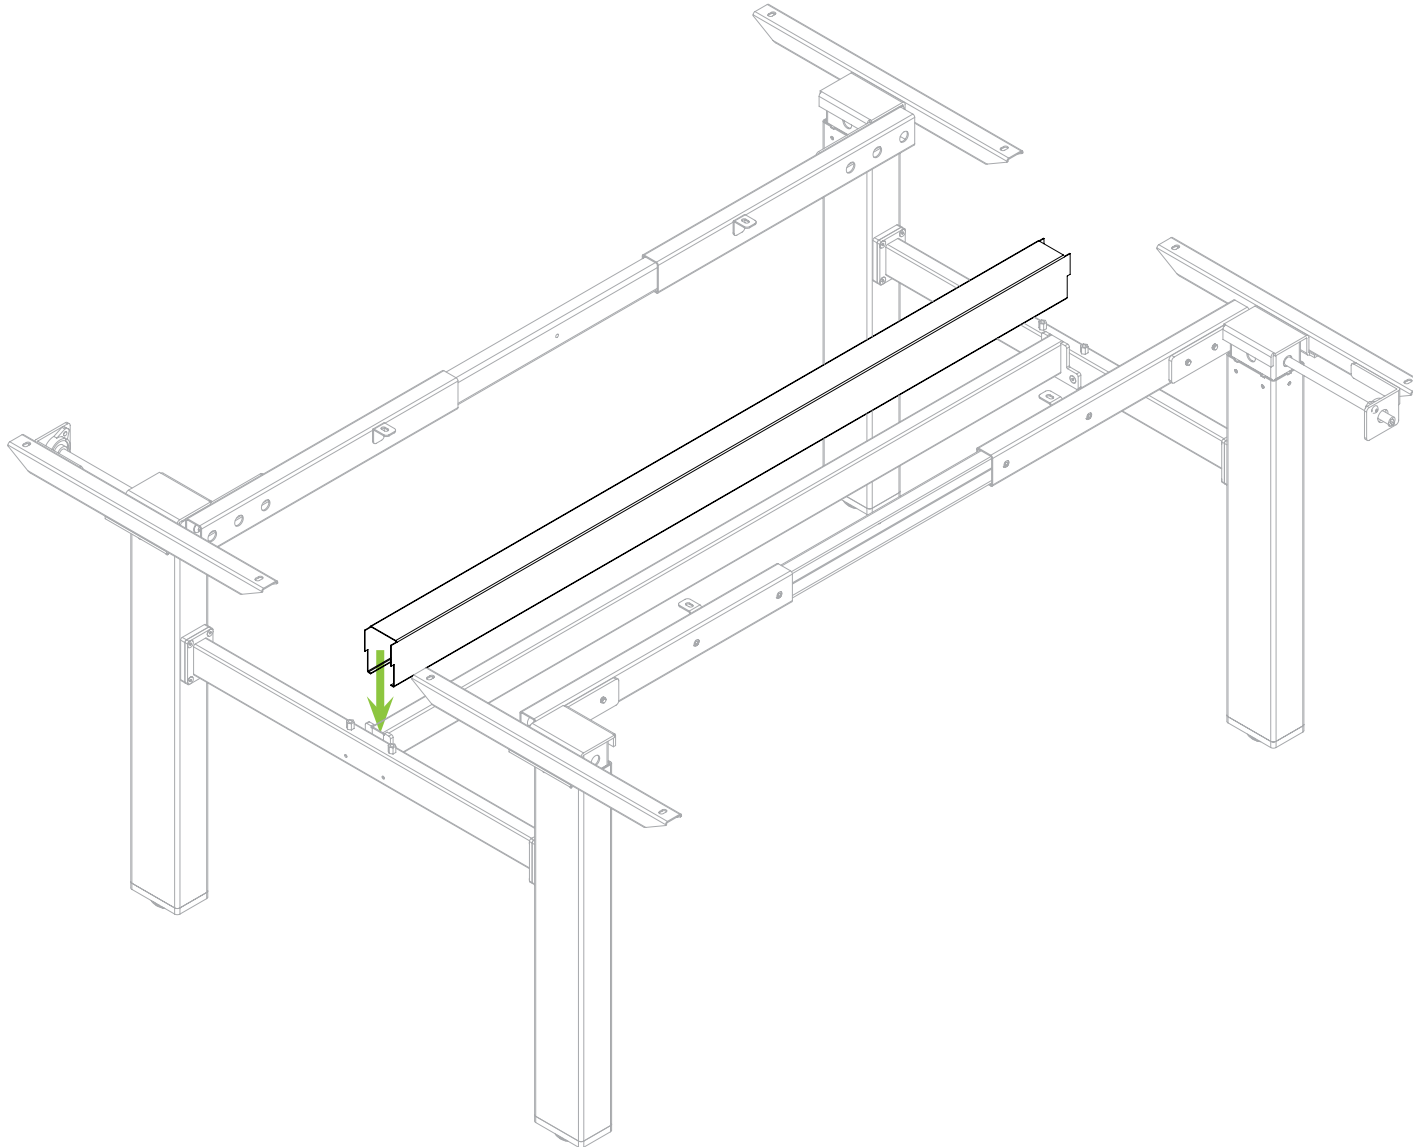

 
Step 8

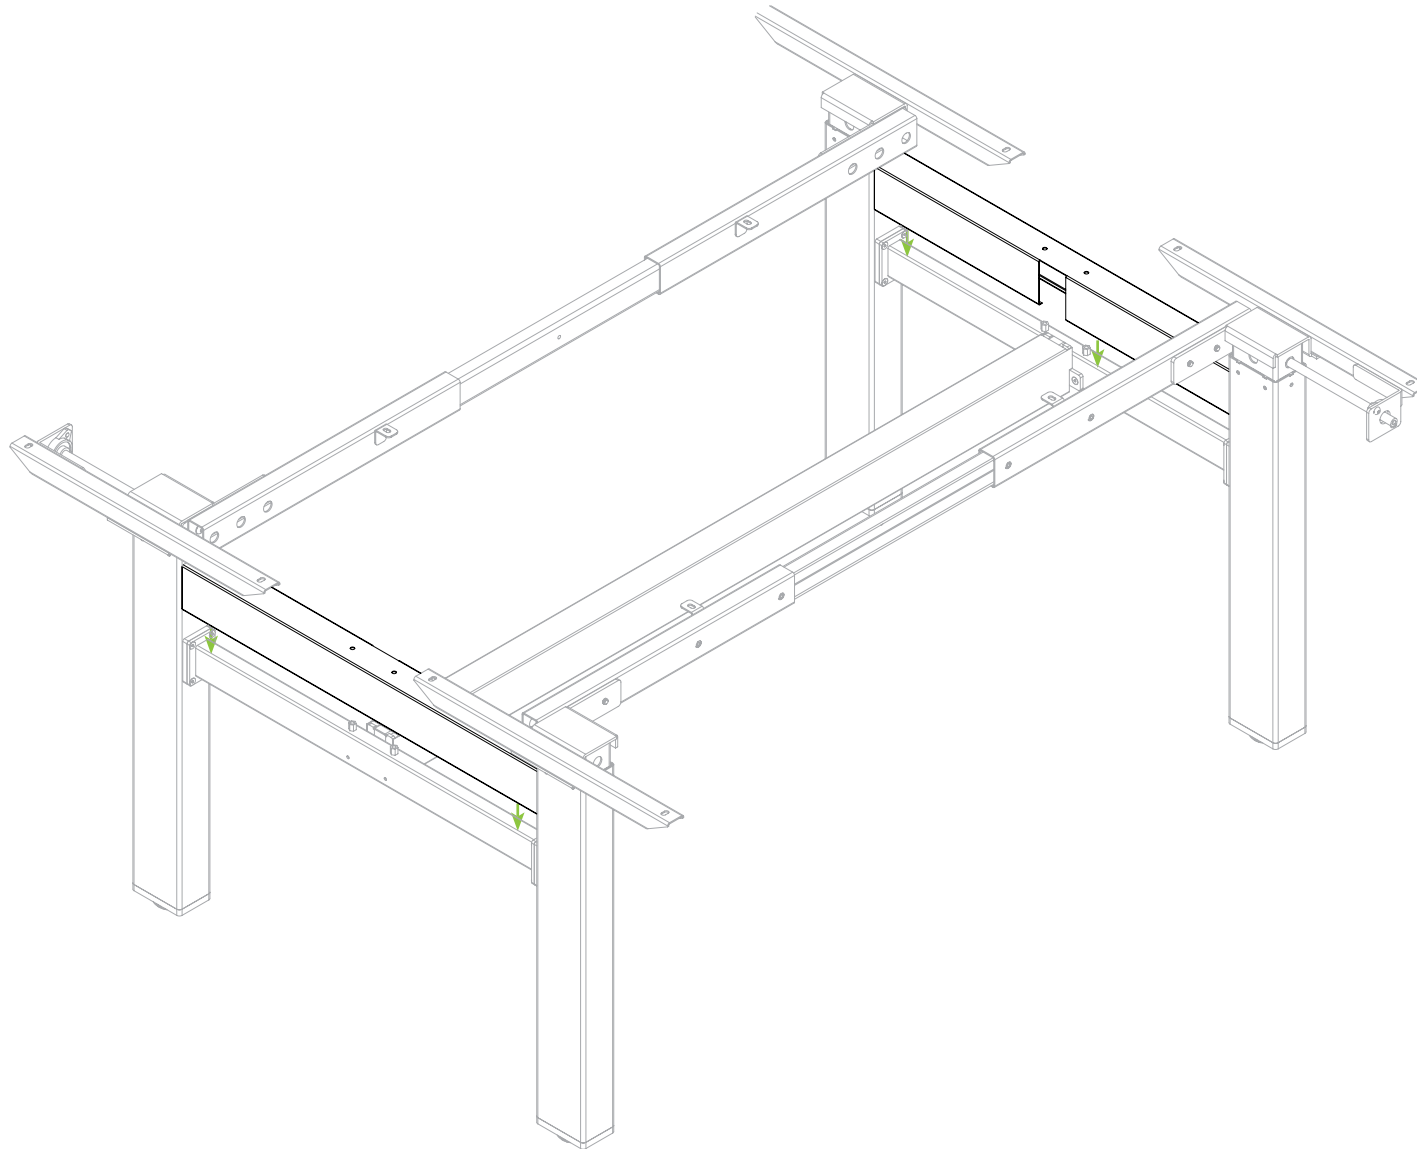

 
Step 9

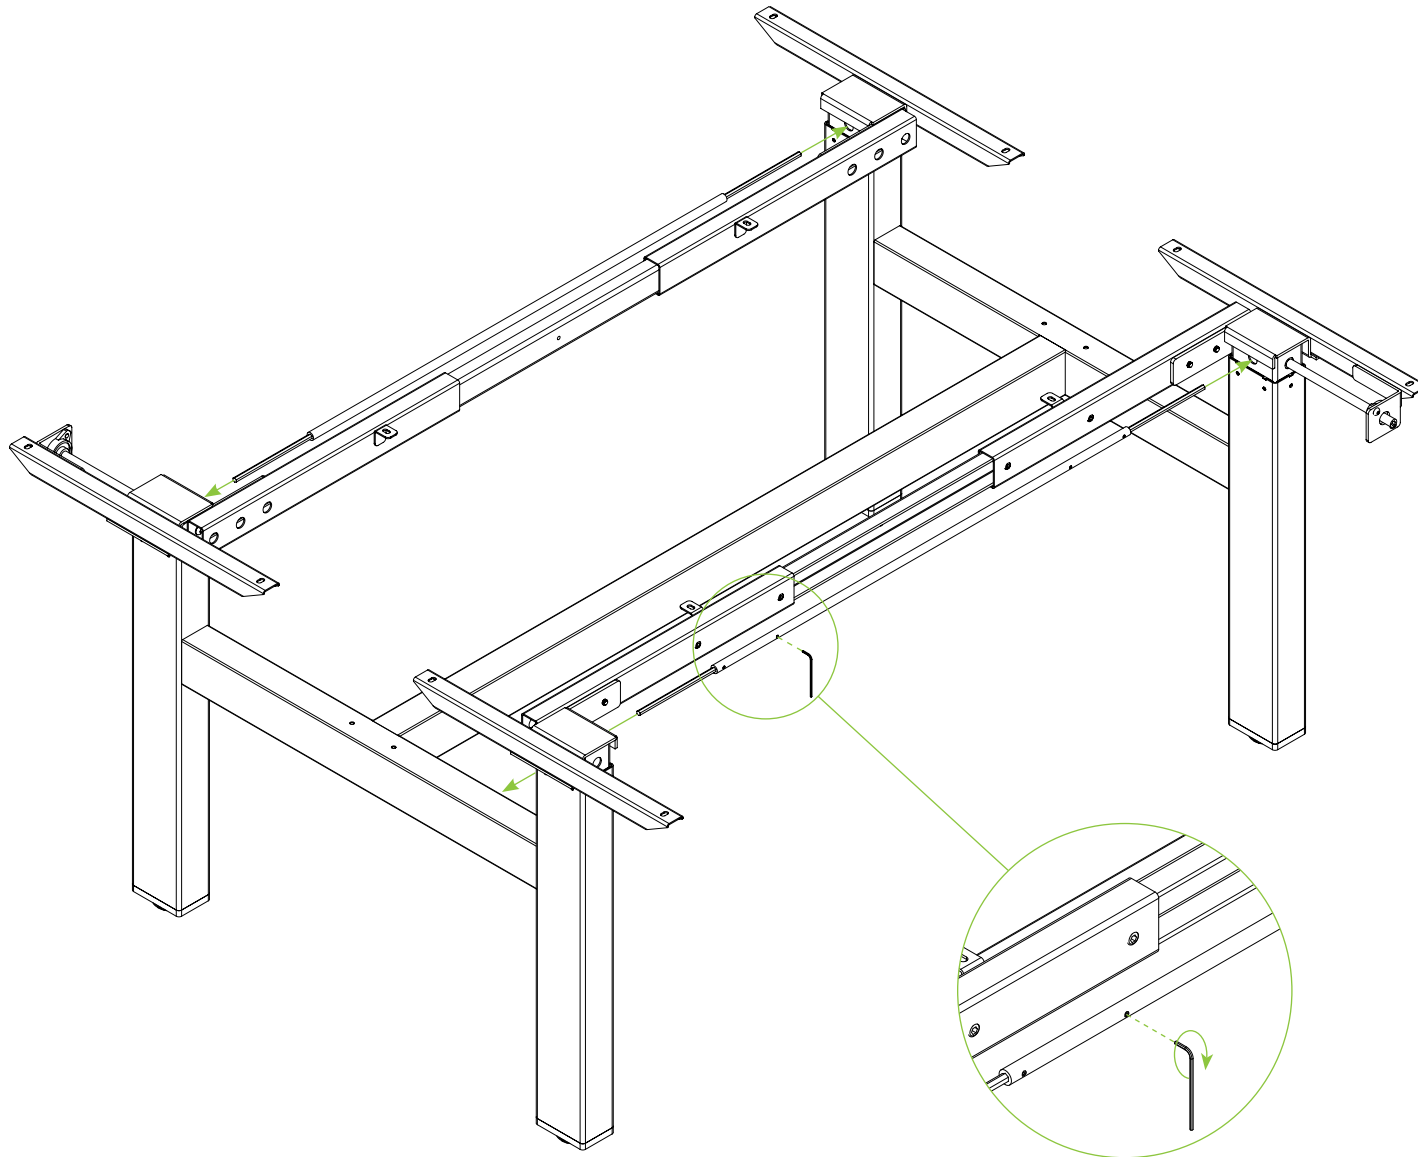

 
Step 10

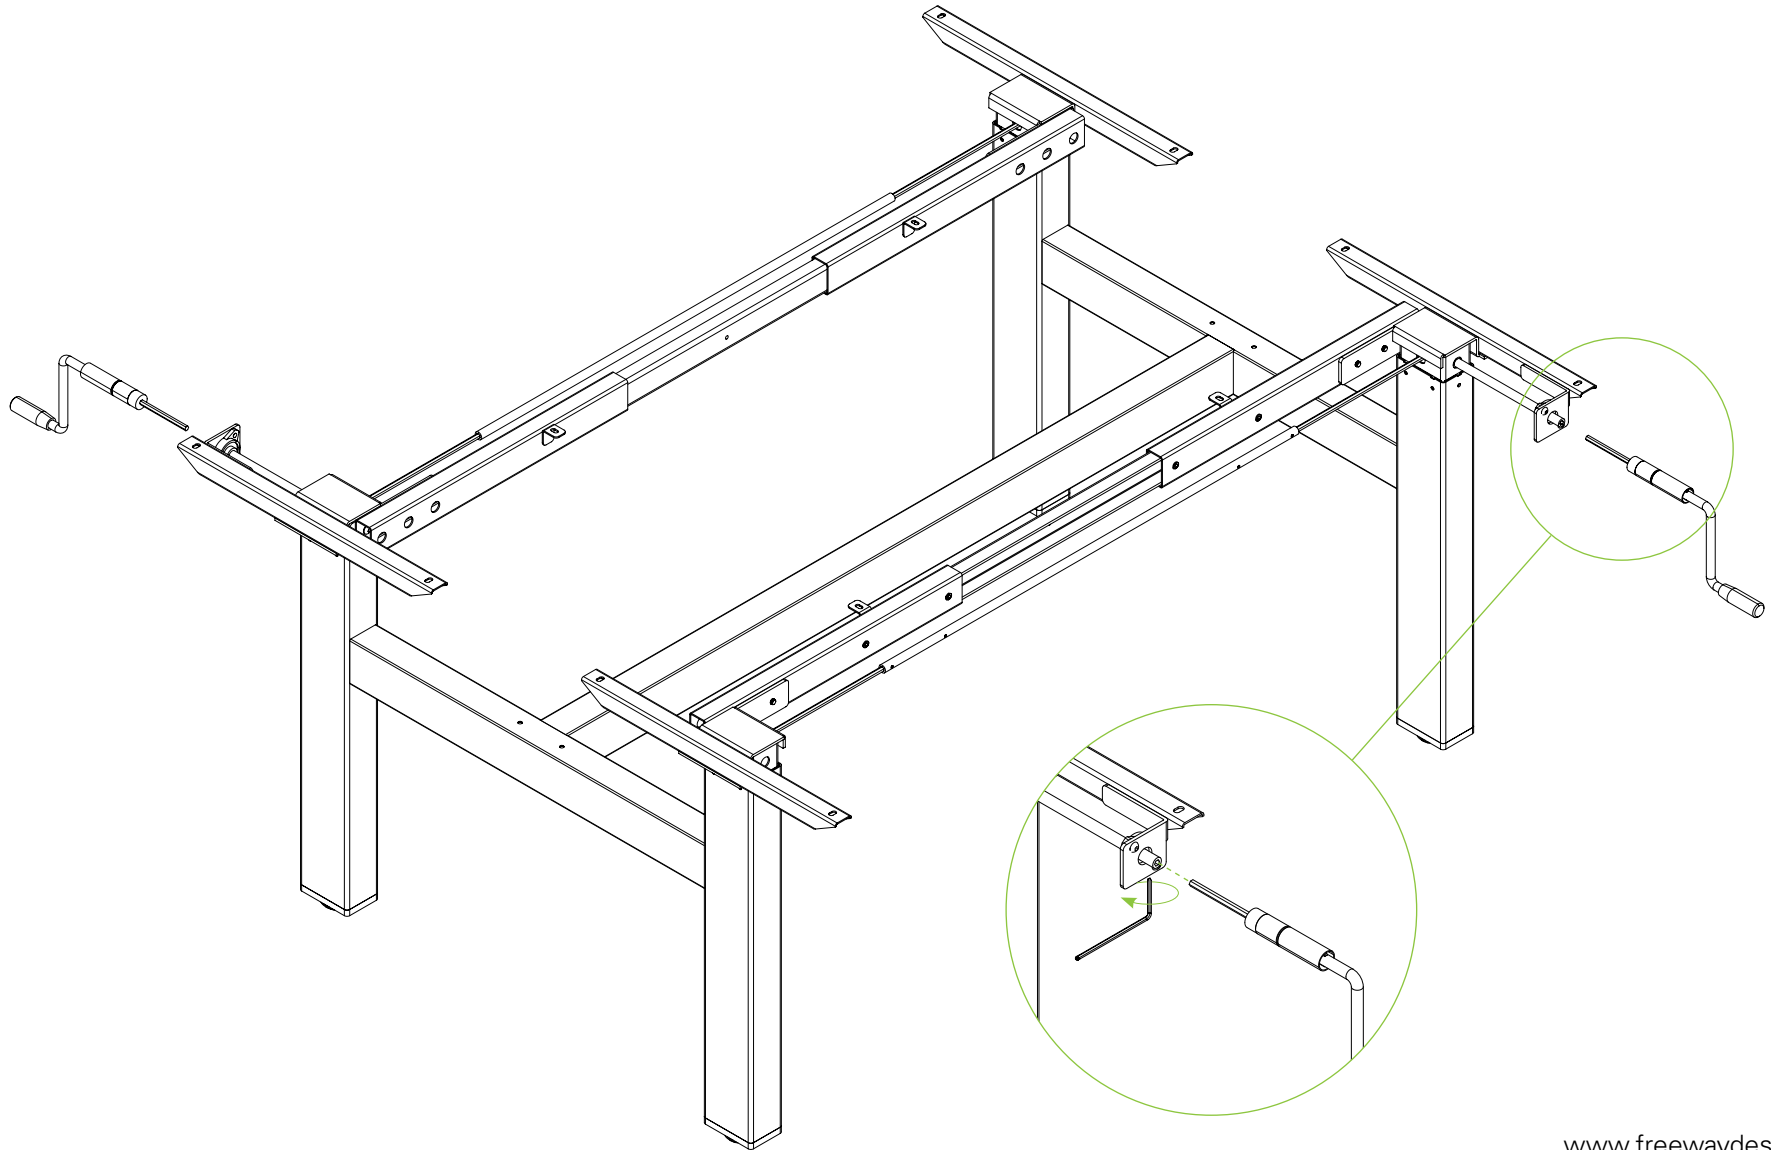

 
Step 11




12 x ST5.0x22

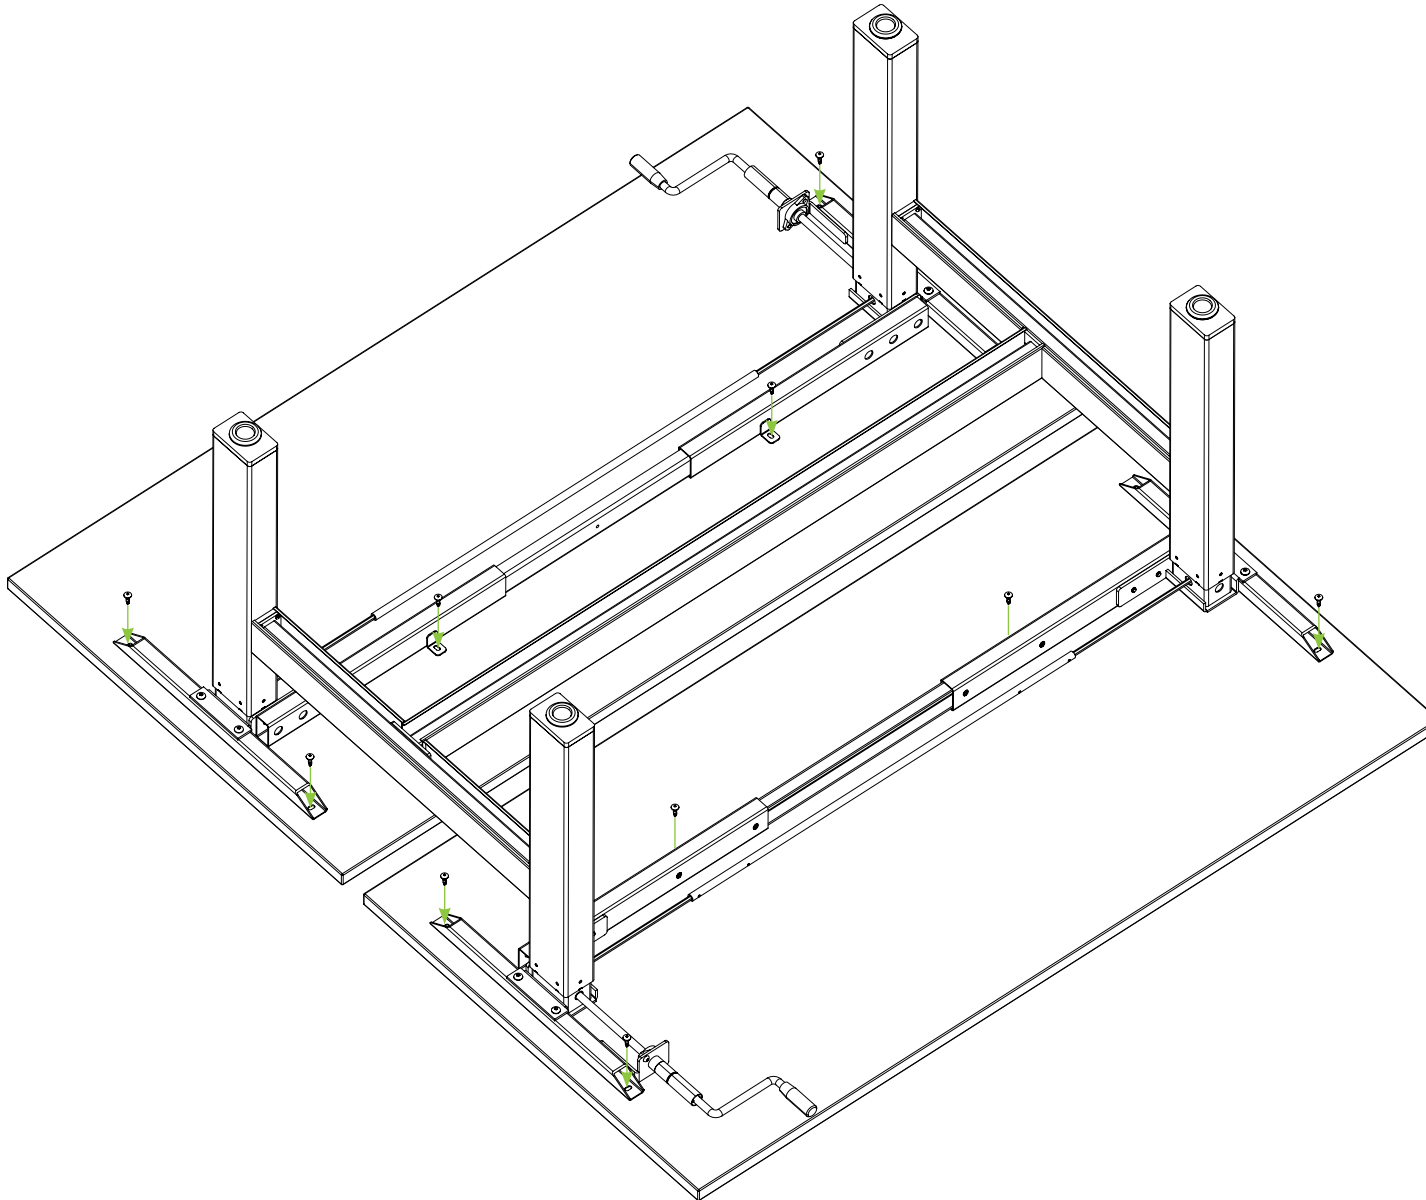 

 
Step 12




2 x M6x20

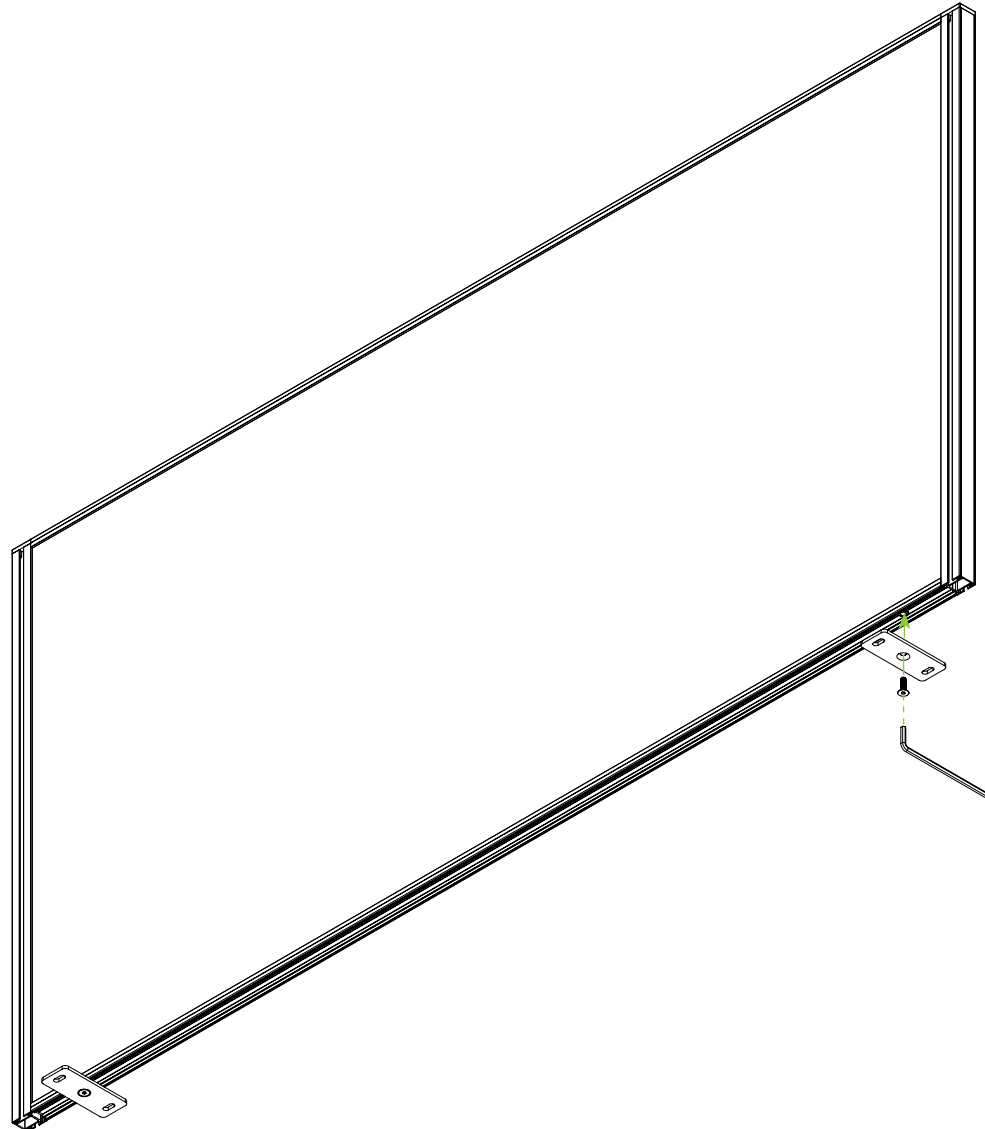 

 
Step 13




4 x M5x15

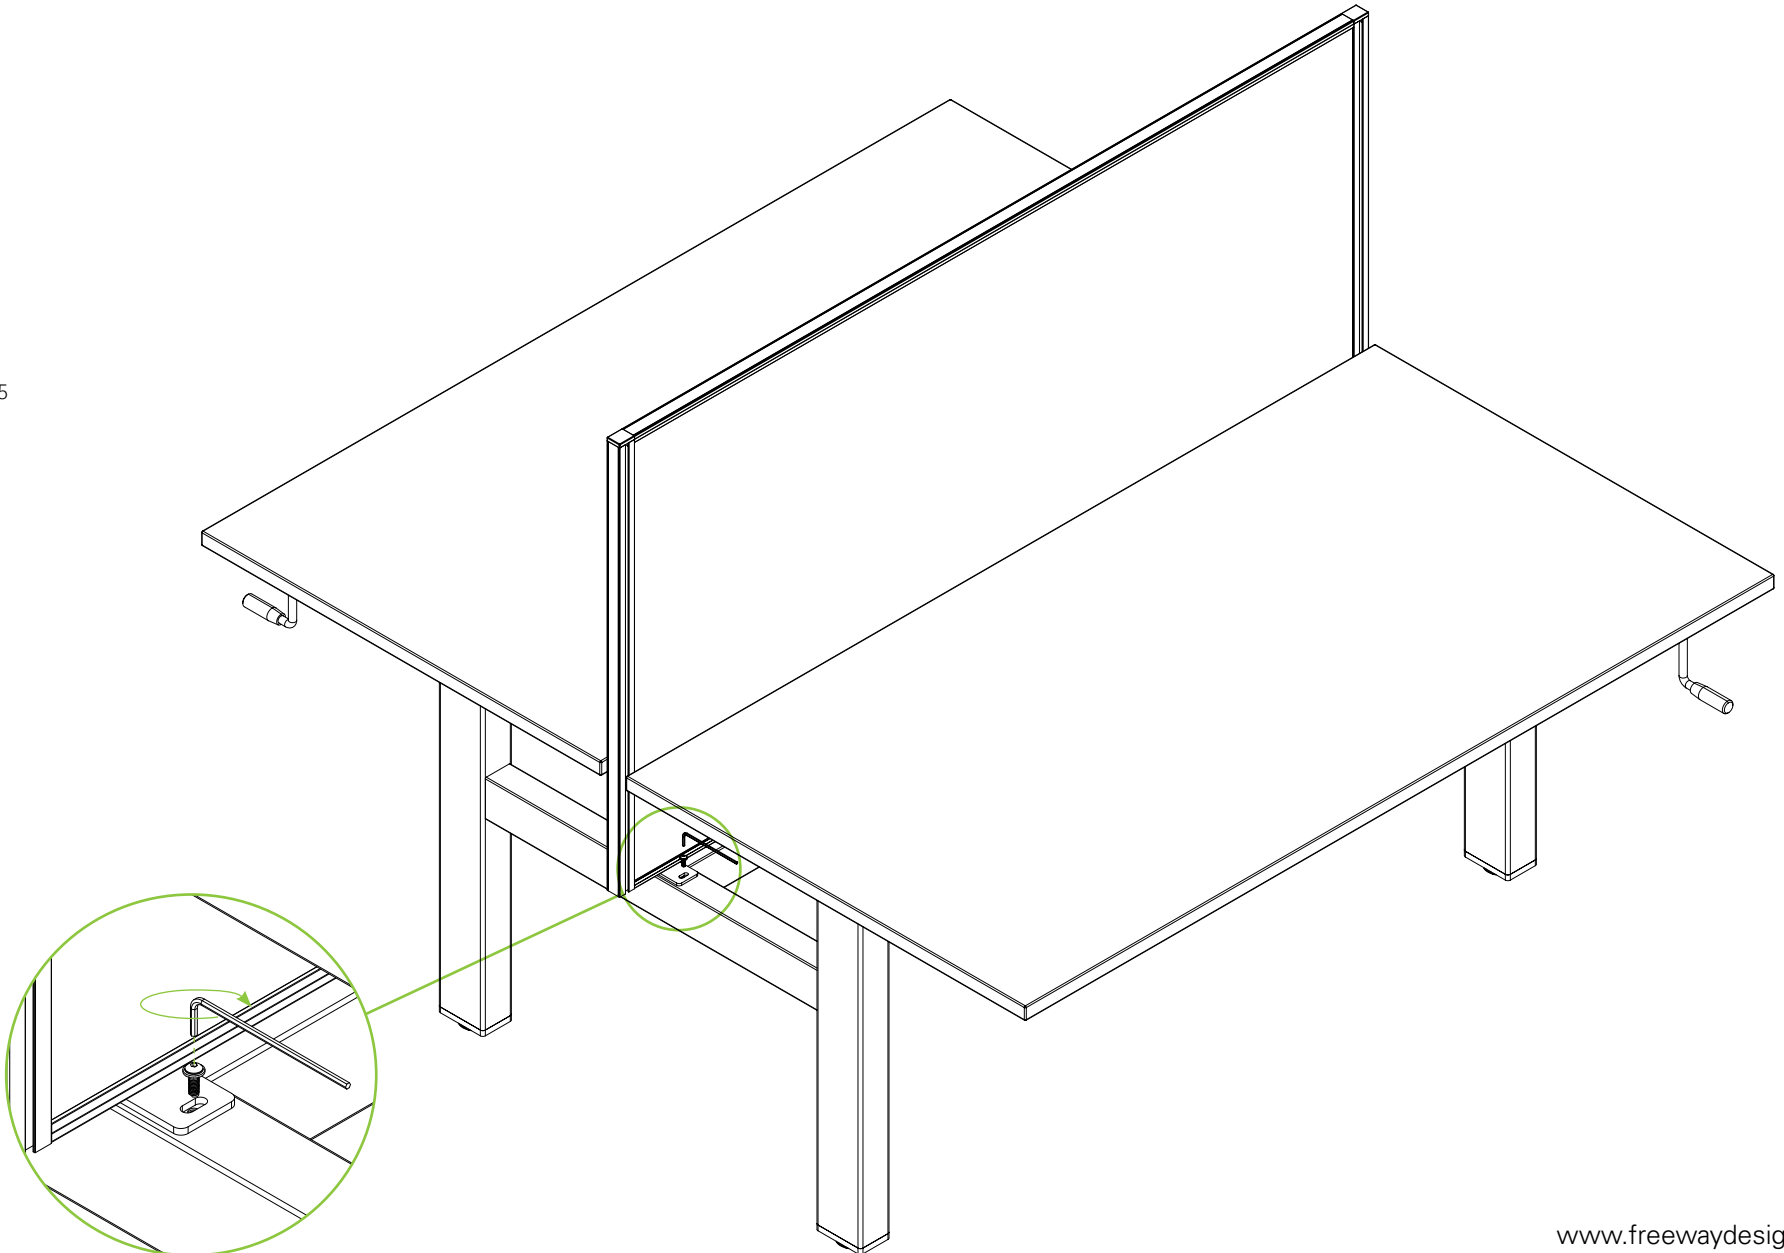 

 Step 14



8 x ST5.0x22

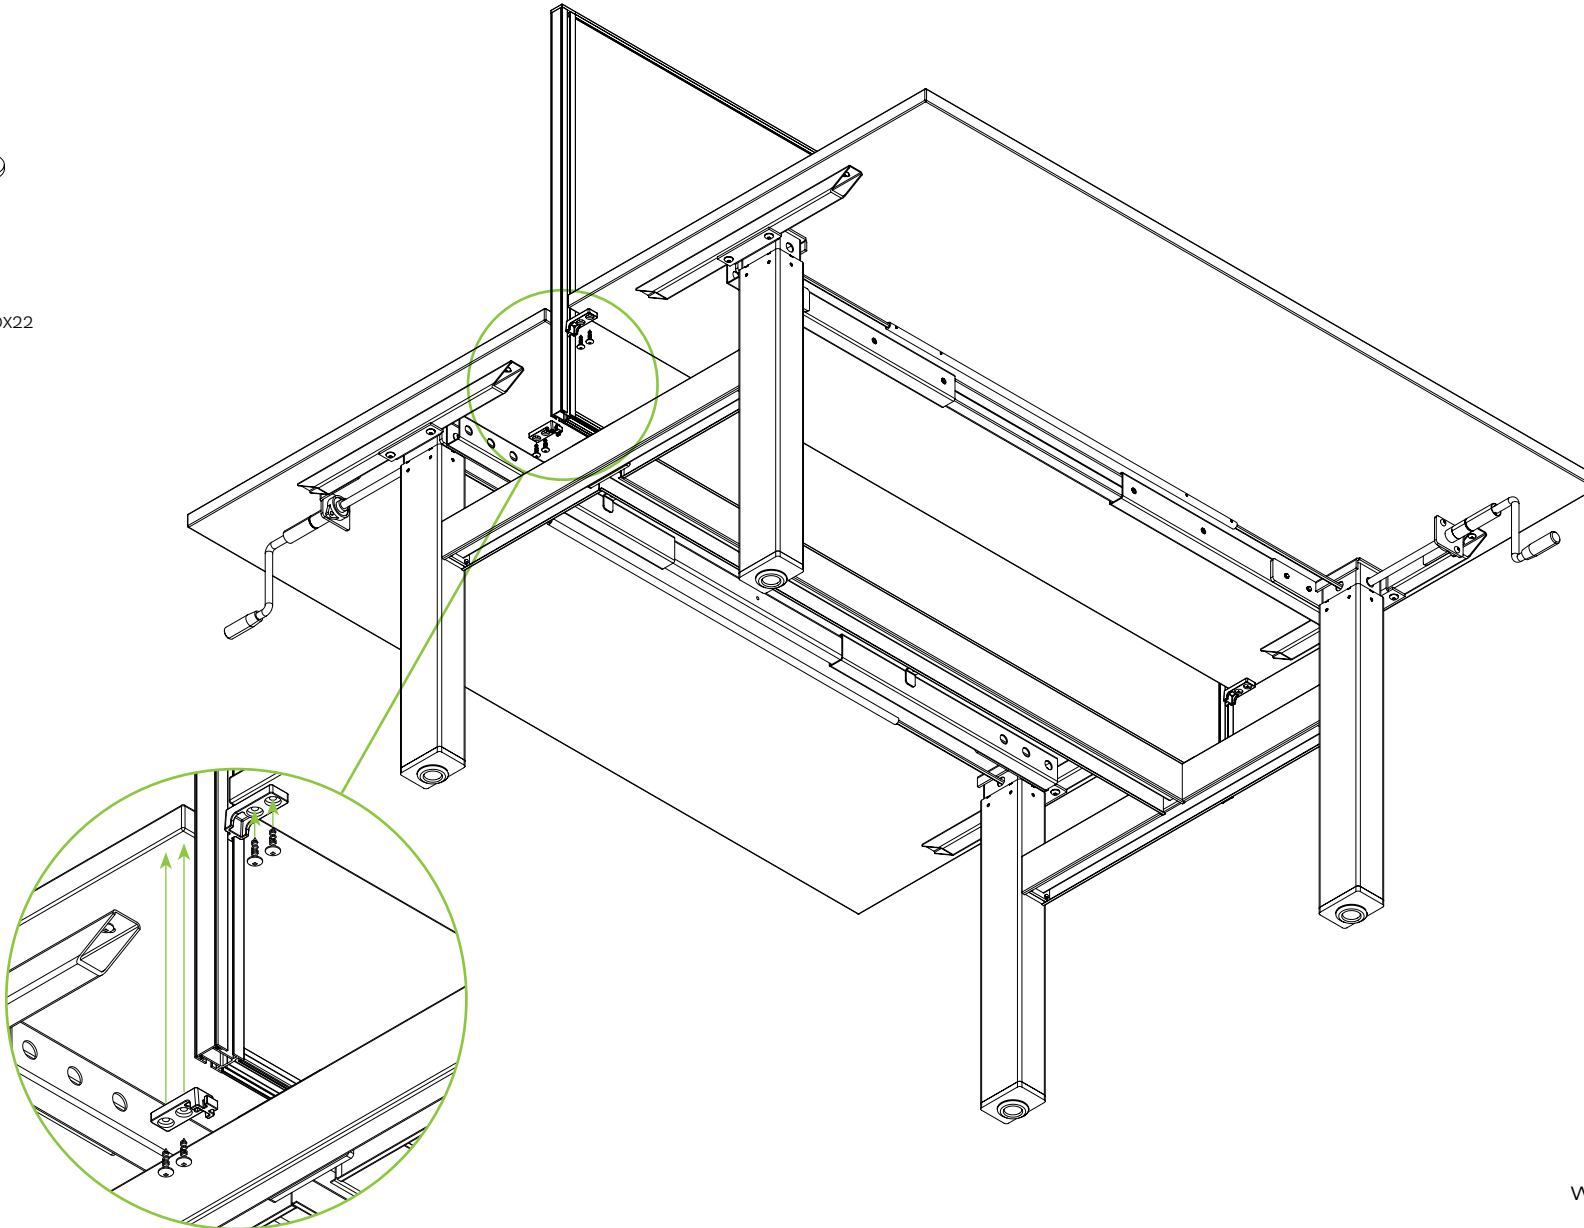 

Completed

