Axis/Anvil Desking

Maintenance Instructions



ANNUAL CHECK

Once every 12 months make sure all the mounting bolts on the underside of the frame & screen brackets are tight.

TOP CARE

Axis/Anvil are supplied standard with melamine tops. Clean tops regularly by wiping them down with a damp cloth and a general purpose cleaner/detergent. For best results use streak free glass cleaner

Stain and Mark Removal

- Stubborn marks or stains apply Handy Andy or diluted Janola (1 part to 3 parts water), then wipe down with a warm damp cloth.
- Smearing, finger marks, marking from cold or hot dishes, stickiness apply 1 or 2 applications of acetone (available at pharmacies) and wipe over with dry cloth.
- Felt pen or dry marker use methylated spirits or acetone
- Paint use acetone or thinners (from a paint shop)
- Glue contact type use Ados Solvent N (from a paint shop)

Follow on with streak free glass cleaner to remove any residues.

FRAME CARE

Keep the plastic, glass & metal components of your table clean by wiping them down with a damp cloth and a general purpose cleaner/detergent. For best results use streak free glass cleaner.

SCREENS CARE

Keep the plastic, glass & metal components of your table clean by wiping them down with a damp cloth and a general purpose cleaner/detergent. For best results use streak free glass cleaner. The fabric is best to be gently cleaned with a vacuum cleaner annually.

