

Motion Sync Chair

OPERATING INSTRUCTIONS



ARMREST ADJUSTMENT



Press the button on the side of the armrest to move it up or down. Release to lock at 1 of 10 locking positions

WEIGHT/TENSION ADJUSTMENT



Turn the knob clockwise to increase tension

SEAT HEIGHT ADJUSTMENT



Lift lever to engage gaslift adjustments. Release to lock in desired position



BACKREST TILT ADJUSTMENT



Rotate the left hand knob forwards to enable infinite tilt setting. To lock in an upright position, rotate the knob backward

SEAT SLIDE ADJUSTMENT



While seated, lift the spring-loaded lever up and slide the seat base into the desired position. Release the lever to lock

