

URBAN CHAIR


OPERATING INSTRUCTIONS

OLG



Backrest handwheel

- loosen this handwheel, then raise or lower the backrest to the required position, and tighten again to hold it at the required height.

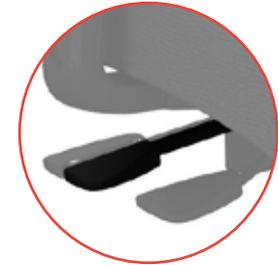

Pull this lever to adjust the angle of the seat by leaning forward or backward while seated. Release the lever to lock into the required position.



Pull this lever to adjust the angle of the backrest by leaning against or reducing the pressure on the backrest. Release the lever to lock it into required position.



Pull this lever to operate the gas lift, raising or lowering the chair as required.

