





Assembly Instructions

Components List

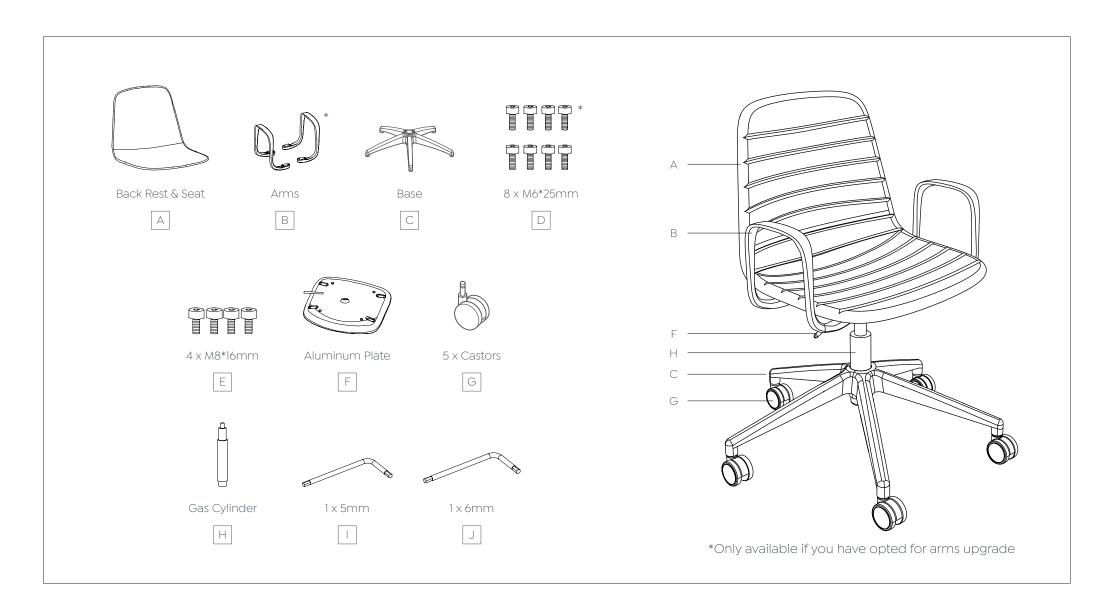


Assembly Instructions

STEP 1:

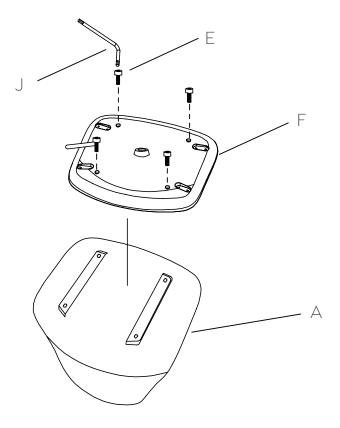


Note:

Do not tighten too much to make the platic shell broken. Stop to tightening when there is no space between the shell and the aluminum plate.

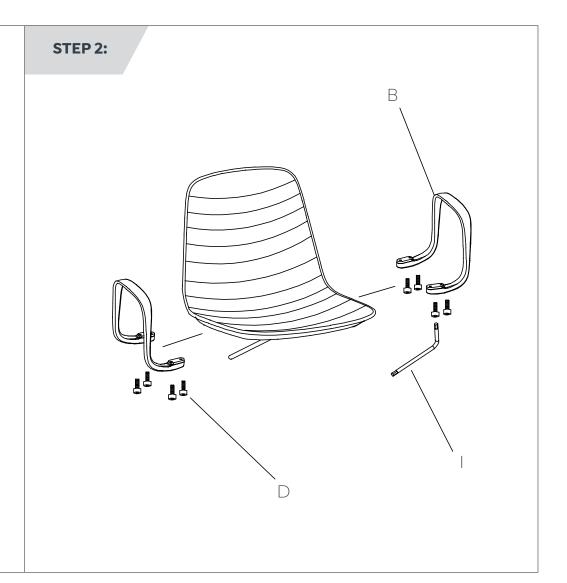

Assembly Instructions

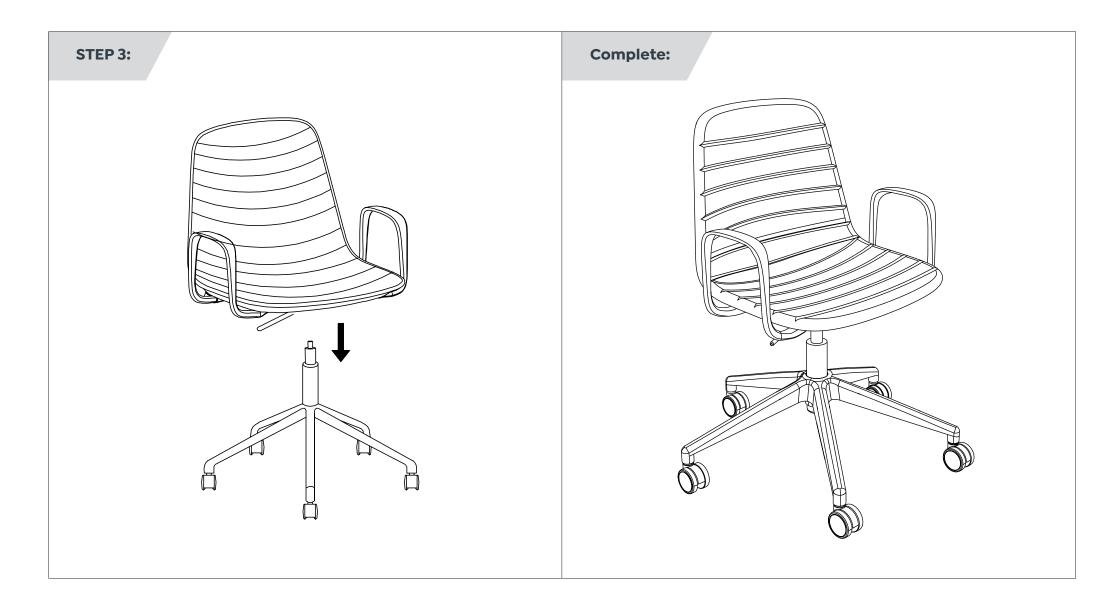



Sydney 02 8188 2732 **Melbourne** 03 9111 0315 **Brisbane** 07 3733 1923 **Adelaide** 08 7111 0810 **Perth** 08 9468 2707

info@olgoffice.com

 $myolg.online \mid olgoffice.com \mid officed esigner.net \mid motion office.com$