






Components List

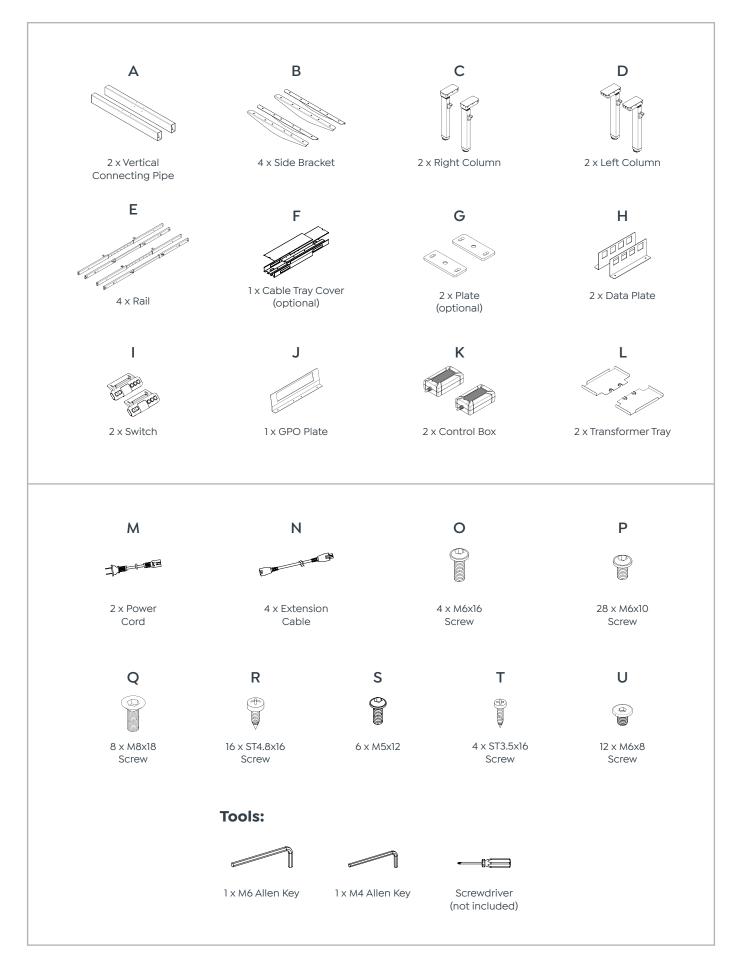

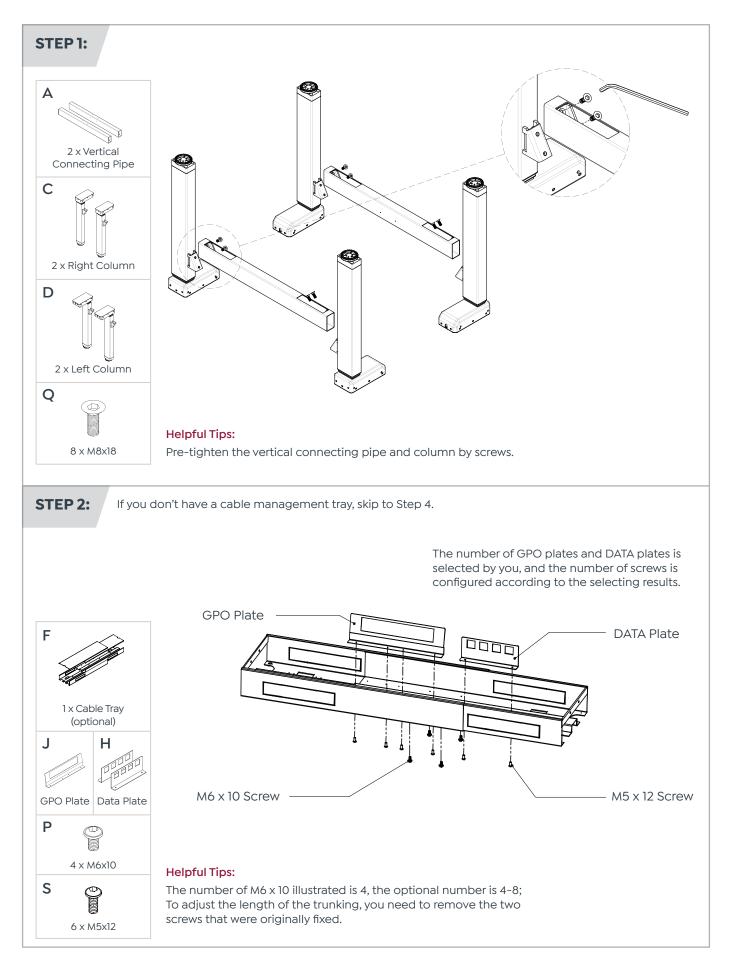

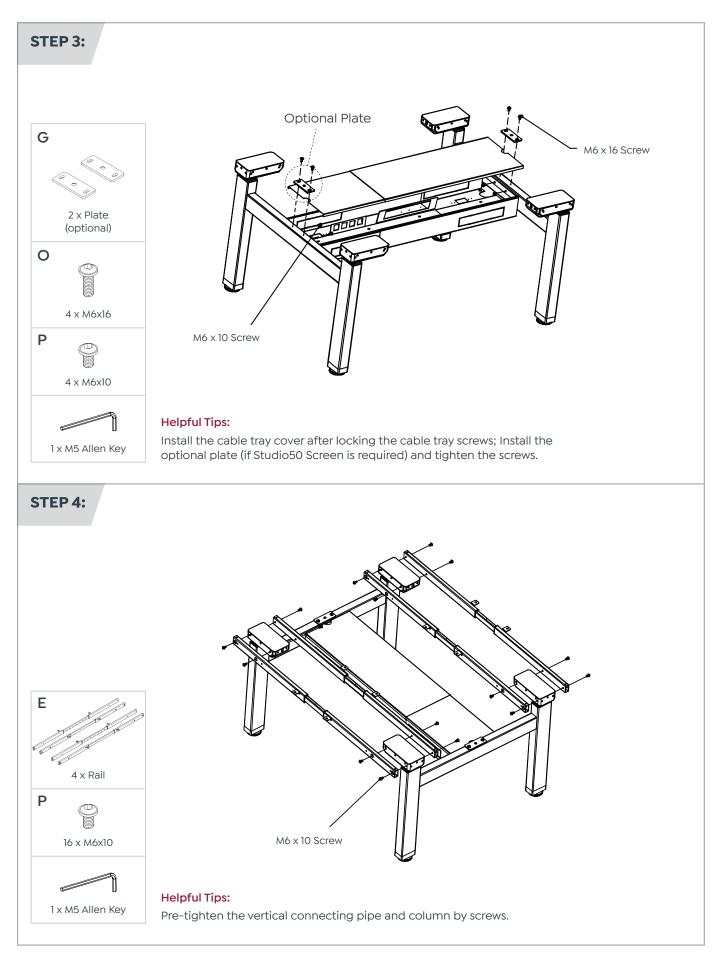

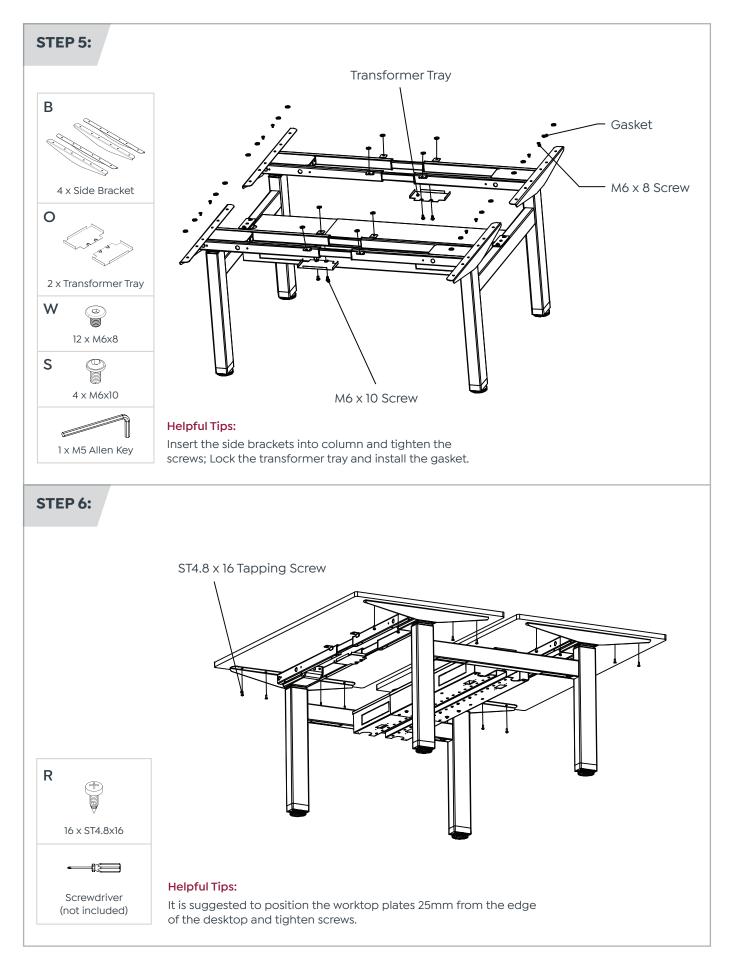

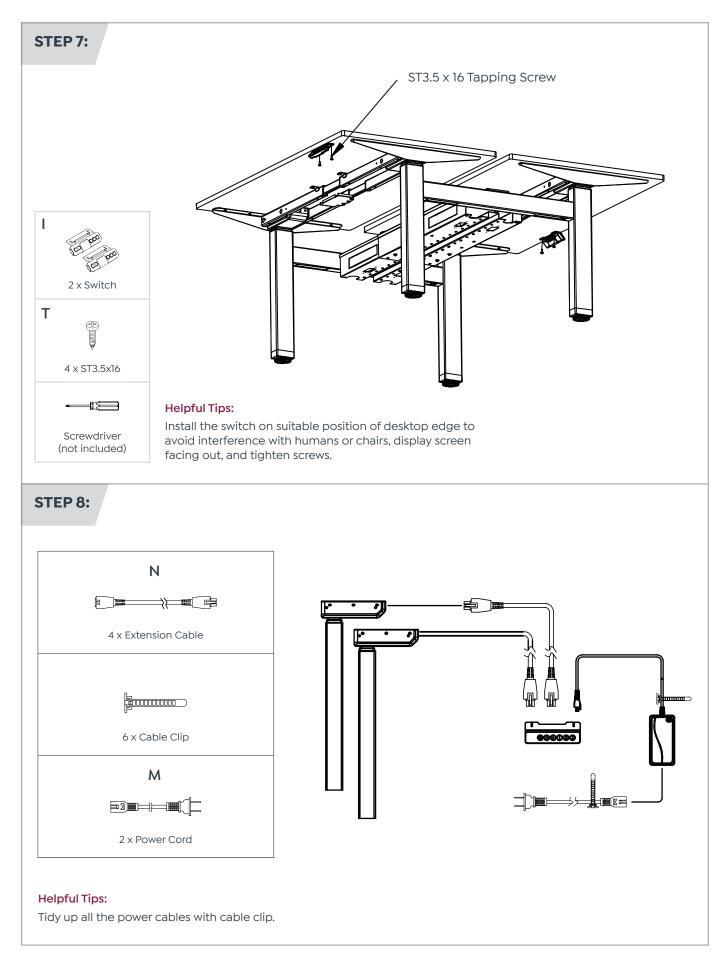

$\boxed{\textbf{BBB}(M+-1)(2)(3)}$		
MANUAL RESET	 It is necessary to be reset manually after the initial installation and power off. 	
res	 Keep pressing down key until the desktop until display shows "E-1" and "rES" alternately and release the key. 	
063	 Keep pressing down key, the desktop will move slowly down and return back until the display shows "063". 	
▼ rES	• Release the key, the height-adjustable desk can be used normally.	
 Note: The anti-collision function is not enabled during all resets. Please note that there is a potential risk of pinching in this case, and be sure no obstacles in the desk's path. 		
UP AND DOWN		
	Keep pressing up key until the required height is reached.	
	• Keep pressing down key until the required height is reached.	
SAVING POSITION	• Press and hold the memory key until the columns have reached the desired memory position.	
	• Adjust the desktop to the height you want to save.	
Μ	• Press "M" key, until the display will show "S"	
	• Press "1", and the display will show alternately as "S-1" and the desktop height.	
Μ	 Press "M" key, the first memory position is set successfully. Similar process for 2 and 3 memory positions. 	
ANTI-COLLISION FUNCTI	• Before use, please make sure removing obstacle in advance and human body is in the safe position.	
888	• Once the desktop encounters any obstacle in its path, the screen displays "E-2".	
	• The desktop will move a defined distance in opposite direction, and it would be used normally after removing the obstacle.	

SET MINIMUM AND MAXIMUM HEIGHT	 Do not enable this function only when you are really need in some situation. 	
Μ	 Keep pressing the key "M" for 3 seconds until the display shows "S" to enter setup menu. 	
	• Press up key until the display flash as "HLP".	
1 H-P	• Press "1", the display show alternately as "H-P" and current height.	
	• Keep pressing up or down key until the required upper limit position is reached	
Μ	Press "M", the desktop height will be showed and the shelf stop position has been set.	
2 L-P	• Press "2", the display will show alternately "L-P" and current height, keep pressing down key until the lower limit position is reached, press M, the container stop position has been set.	
-	build be used to limit the movement area of desktop, when the container is underneath or any esktop. Once it is set, the new upper or lower limitation position will be stored.	
CHANGE THE DISPLAY (UNIT(cm/inch)	
Μ	• Keep pressing up key "M" until the display show "S" to enter the setup menu.	
Unt	• Press "up" key, the display will show "Unt".	
Unt 1	 Press "up" key, the display will show "Unt". Press "1", and the display will show alternately as "Unt" and the desktop height unit by "cm". 	
Unt 1 M	Press "1", and the display will show alternately as "Unt" and the desktop height	
1	 Press "1", and the display will show alternately as "Unt" and the desktop height unit by "cm". 	
1 M 2	 Press "1", and the display will show alternately as "Unt" and the desktop height unit by "cm". Press "M" key to save the unit as cm. Press "2", and the display will show alternately as "Unt" and the desktop height unit by "inch", press the key "M" to save the unit as inch. 	
1 M 2	 Press "1", and the display will show alternately as "Unt" and the desktop height unit by "cm". Press "M" key to save the unit as cm. Press "2", and the display will show alternately as "Unt" and the desktop height unit by "inch", press the key "M" to save the unit as inch. 	
1 M 2 AMEND THE DESKTOP H	 Press "1", and the display will show alternately as "Unt" and the desktop height unit by "cm". Press "M" key to save the unit as cm. Press "2", and the display will show alternately as "Unt" and the desktop height unit by "inch", press the key "M" to save the unit as inch. HEIGHT DISPLAYED	
1 M 2 AMEND THE DESKTOP F	 Press "1", and the display will show alternately as "Unt" and the desktop height unit by "cm". Press "M" key to save the unit as cm. Press "2", and the display will show alternately as "Unt" and the desktop height unit by "inch", press the key "M" to save the unit as inch. HEIGHT DISPLAYED Keep pressing down key until the desktop until display shows "E-1" and "rES". 	
1 M 2 AMEND THE DESKTOP F	 Press "1", and the display will show alternately as "Unt" and the desktop height unit by "cm". Press "M" key to save the unit as cm. Press "2", and the display will show alternately as "Unt" and the desktop height unit by "inch", press the key "M" to save the unit as inch. HEIGHT DISPLAYED Keep pressing down key until the desktop until display shows "E-1" and "rES". Keep pressing key "M" until the display show "Ur" and "OFF" alternatelty. Keep "Up" or "Dn" several times, until the display show "End" and height. (In this	

CHANGE THE DISPLAY UNIT(cm/inch)		• The function can detect whether the motors are collected normally.
E-3 rES	 Once the display shows "E-3" and "r motors fail connected with control wait at least 5 seconds. 	ES", it reminds you check whether any unit. Please connect the main cable again,
	• Collect all the plugs.	
rES	Follow manual reset procedure.	
RESET TO FACTORY SETTING		• With this function, you can make the control unit to factory setting.
Μ	• Keep pressing "M" until the display s	hows "FAC".
	 Press "M", and the control unit to fac container - and shelf - stop positior 	ctory setting (including memory position, n, etc).

CODE MEANING				
Code	Information	Operating		
rES	Manual resetting	Refer to the progress of manual reset		
ovr	Overloading	Remove the load on desktop till it less than 800N (175 LBS) for further operation		
E-2	Anti-Collision function	It can be used normally after removing the obstacle		
dut	Operated continuously without suitable rest	Make the desk rest around 15min for further operation		

TROUBLE SHOOTING		
Code	Operating	
E-4 / The height between two legs exceed 1 inch	Stop the operation and reset, refer to Manual reset	
E-3	Check the cables and ensure they are well connected, and the height-adjustable desk can be used normally after manual reset	

TECHNICAL DATA		
Item	Data	
Input voltage	100~240VAC	
Output voltage	24VDC	
Max loading	1000N	
Height range (without desktop)	595 - 1245	
Duty cycle	2 min on / 18 min off	



 Sydney
 02
 8188
 2732

 Melbourne
 03
 9111
 0315

 Brisbane
 07
 3733
 1923

 Adelaide
 08
 7111
 0810

 Perth
 08
 9468
 2707

info@olgoffice.com

myolg.online | olgoffice.com | officedesigner.net | motionoffice.com