 


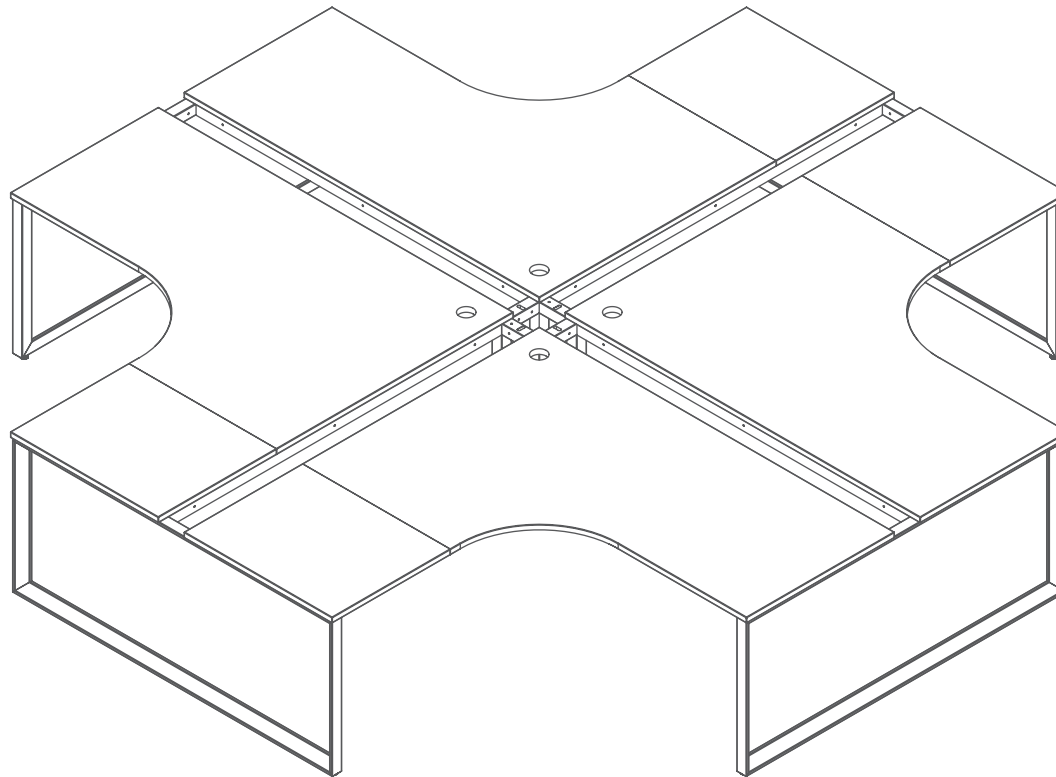


Anvil 4 – User 90° Workstation


Assembly Instructions

Anvil 4-User 90° Workstation

 Components List

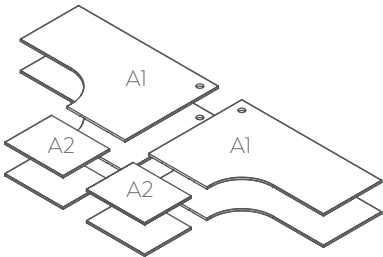


Axis Worktop

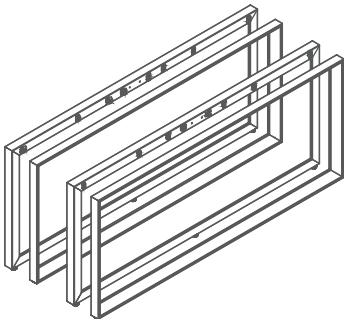 


2 x L & R Leg Pair

 EL




1 x 4-Way 90° Leg

 SL

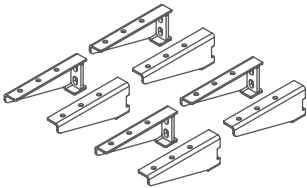


4 x Pair AXKDBRAC

 SL

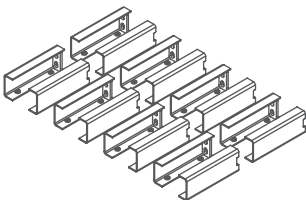

8 x Pair AXKDSPIGE

 C

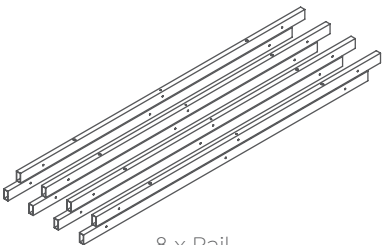

8 x Rail

R



48 - M6 x 20



32 - M8 x 16



24 - ST6 x 23

 


32 - ST5 x 70

STEP 1:



32 - M6 x 20

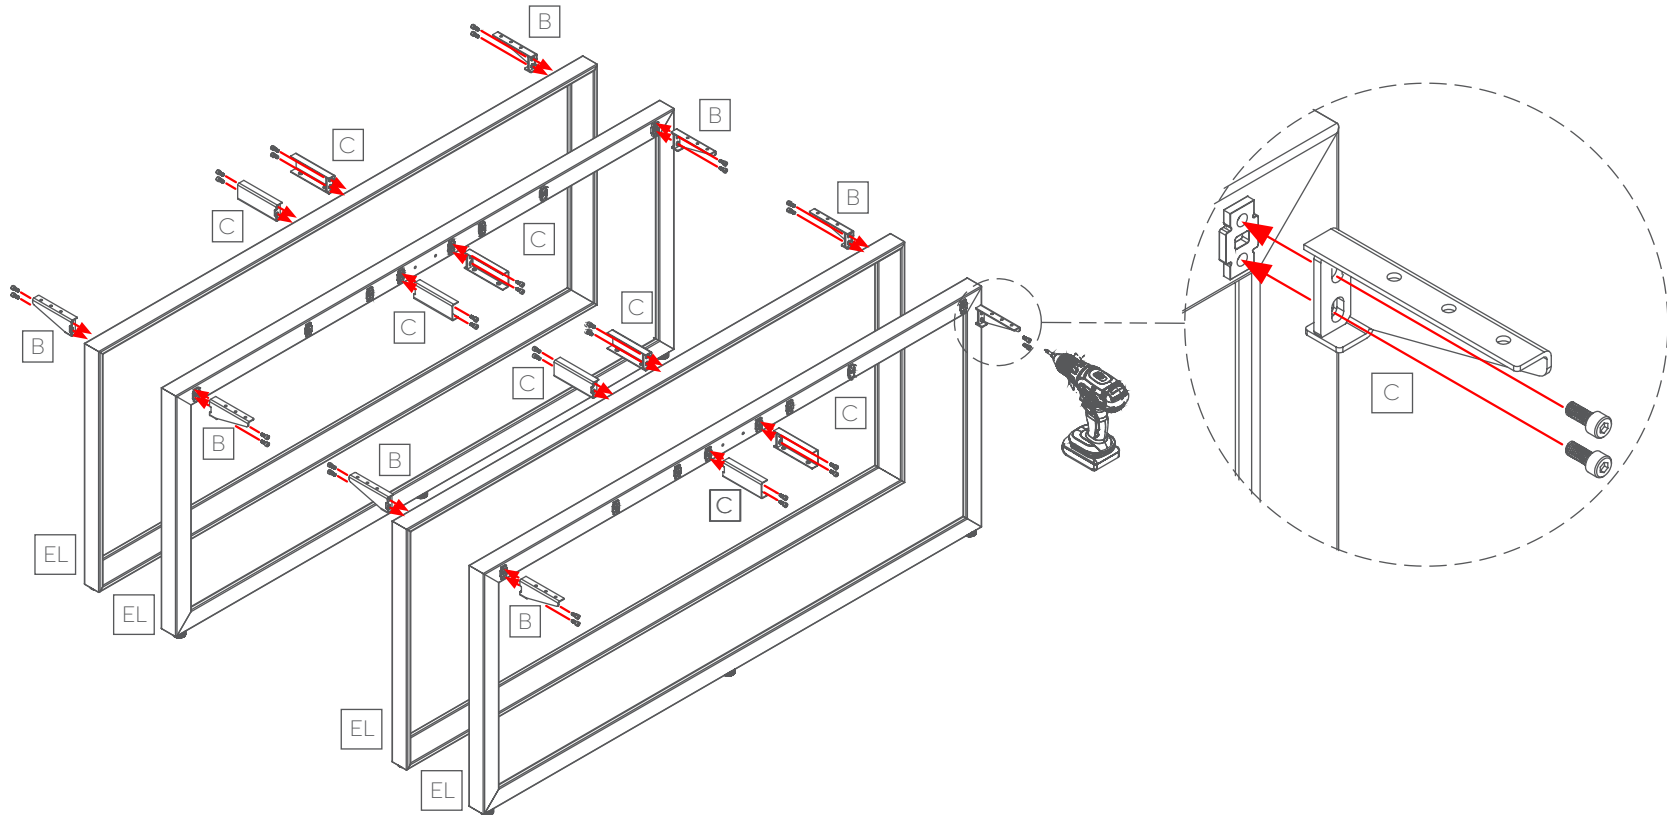


Anvil 4-User 90° Workstation

Assembly Instructions

STEP 2:



 
16 - M6 x 20

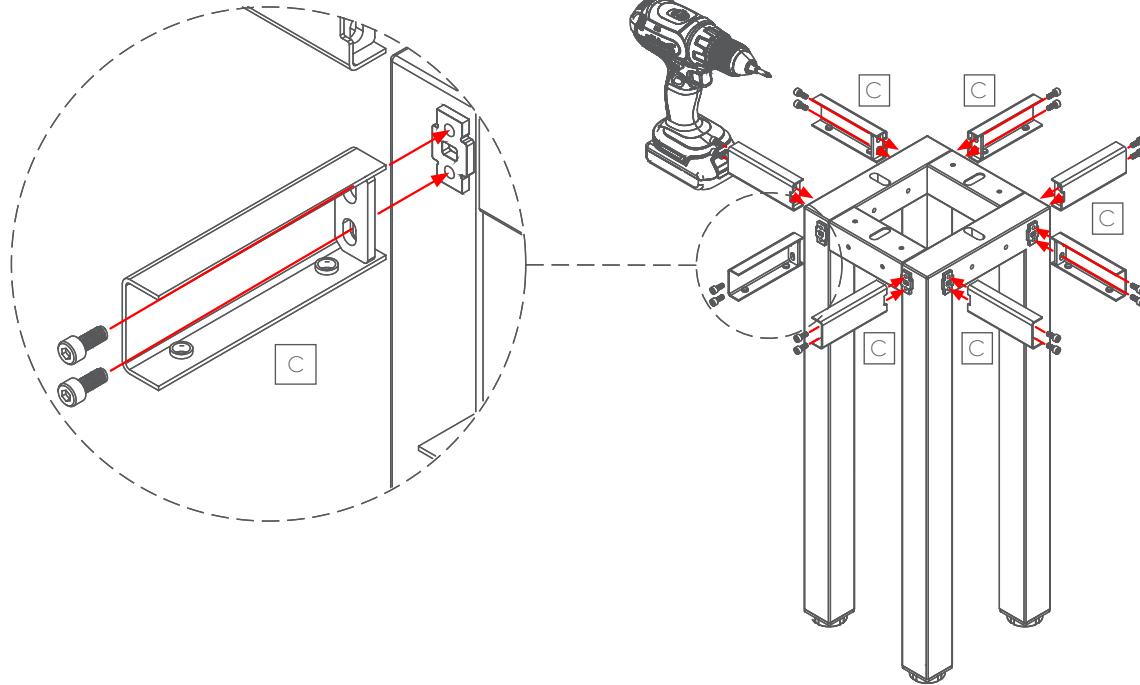

STEP 3:



 32 - M6 x 16

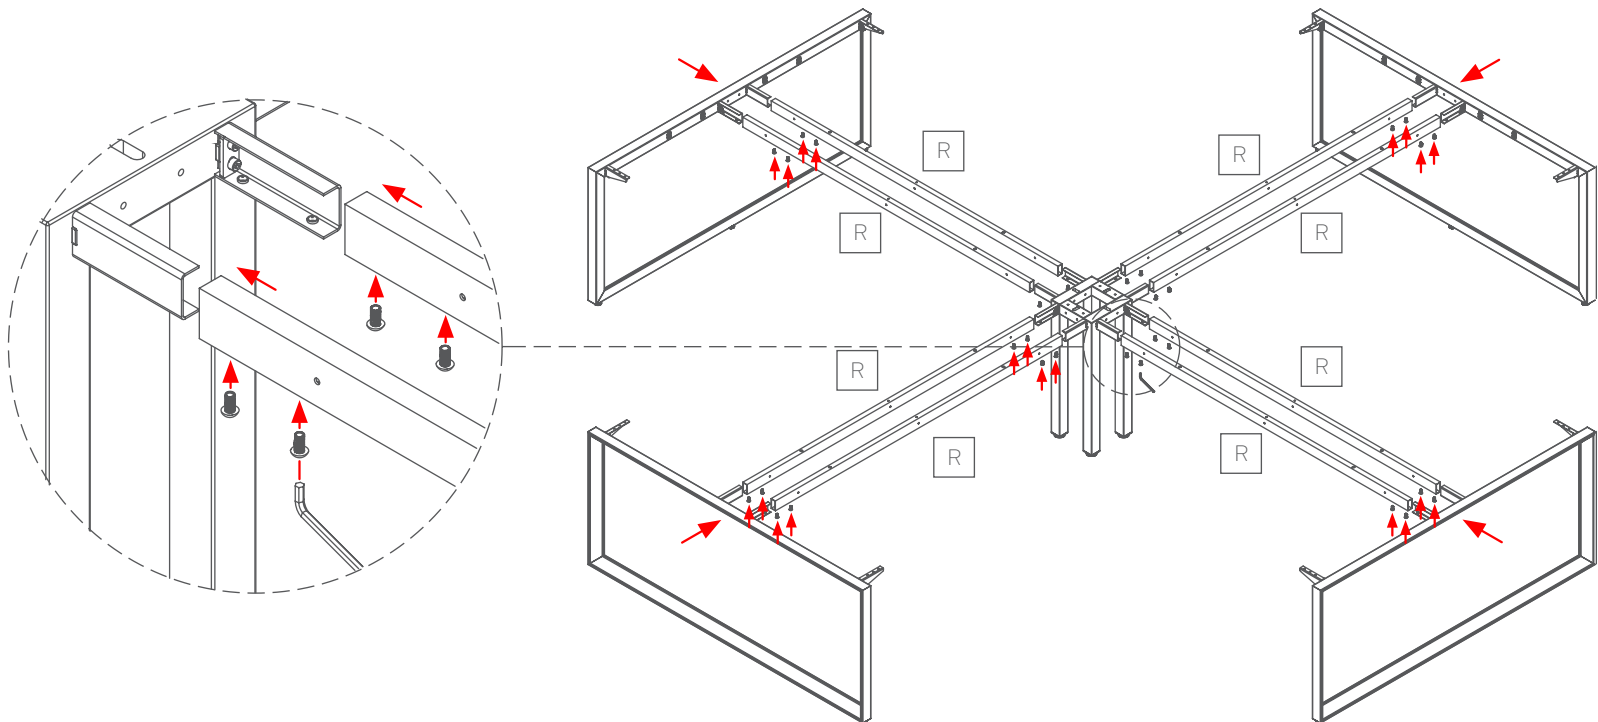

Anvil 4-User 90° Workstation

Assembly Instructions

 
STEP 4:




24 - ST6 x 23



32 - ST5 x 70

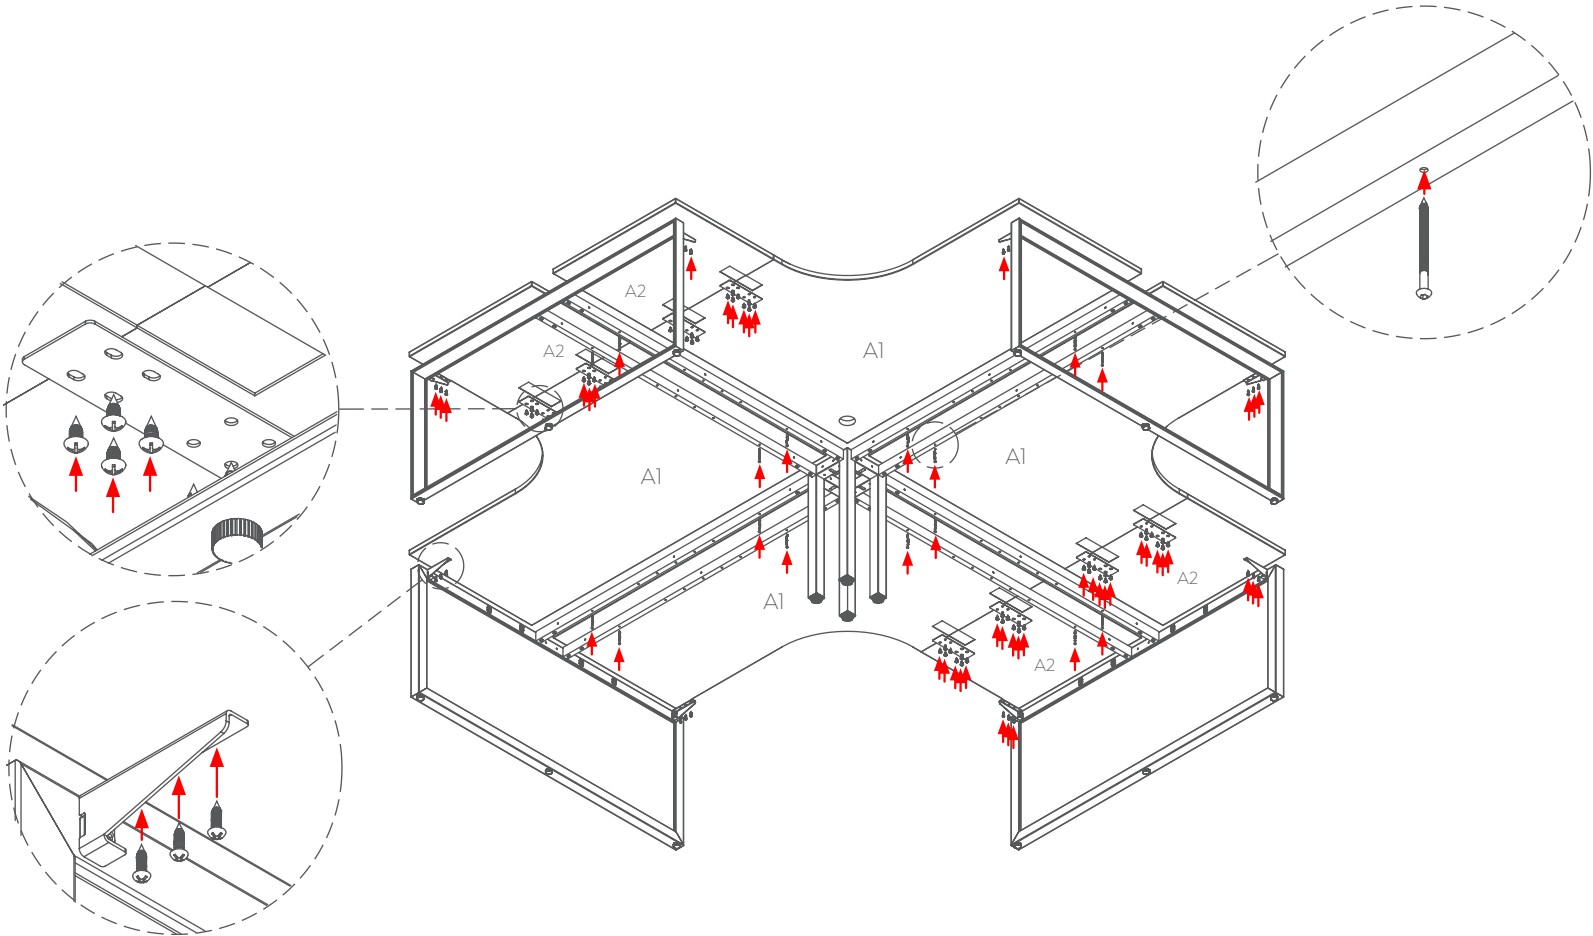

Complete:

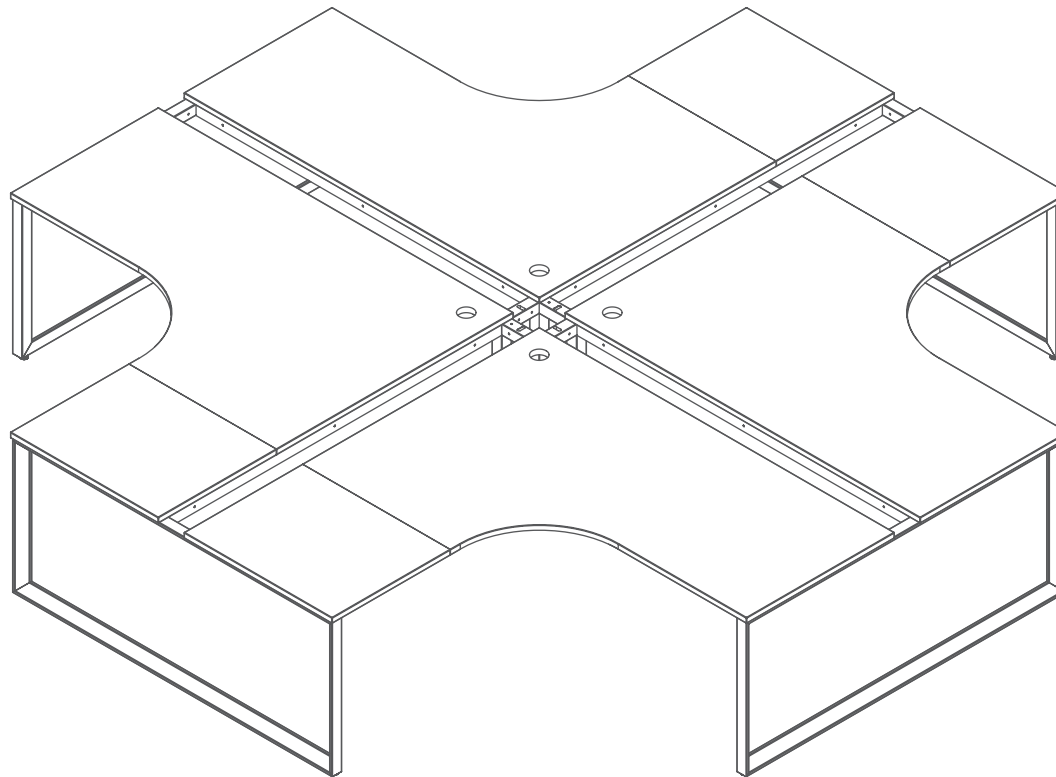 



Sydney 02 8188 2732

Melbourne 03 9111 0315

Brisbane 07 3733 1923

Adelaide 08 7111 0810

Perth 08 9468 2707

info@olgoffice.com

myolg.online | olgoffice.com | officedesigner.net | motionoffice.com