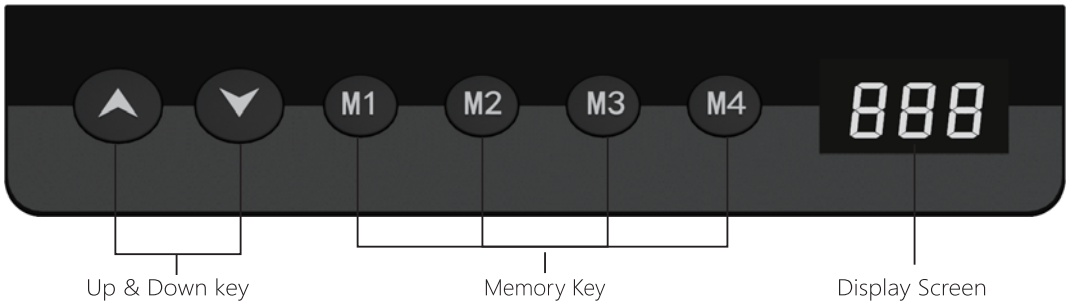

The whole handset surface is a button panel. If there is no press within 30 seconds, the screen is locked and M1/M2/M3/M4 keys are locked correspondingly., you should press Up or Down key first, it can be used when the display screen light up.

■ **Up or Down Key**

To adjust the height of the desk, keep pressing on "up" or "down" until it fits your best position.

■ **Display screen**

Display the height value of the desk.

■ **Memory Key (M1/ M2/ M3/ M4)**

After setting memory keys, the desk can lift automatically to memory height.

※ How to set memory mode

Please keep pressing M1/M2/M3/M4 key for 5 seconds, until "be" sound, the memory height is successfully saved. Then press M1/M2/M3/M4, the desk moves to memory height automatically.

■ **Safety function**

When the desktop is on the rise or down, encountered reverse resistance, the desk will rebound.

■ **Handset shows error code and solution**

Error code	Fault cause	Solution
ER1	Motor stop	Power off and restart. If fault still exists, it is motor problem.
ER2	Synchro error beyond 15mm	Power off and restart. If handset display RST(DOWN key unlocked), keep touching DOWN key to the lowest normal number.
ER3	Cable fault	Check motor cable off or broken, power off and restart.
ER4	Communication fault	Check cables for handset and controller, power off and restart.
ER5	Overload protection	2 legs Load>180kg or 3 legs load>160kg, display ER5. Lighten loads, power off and restart.
Hot	Run continuously for 2.5 to 5 minutes.	Overload, power protection, automatic recovery after five minutes
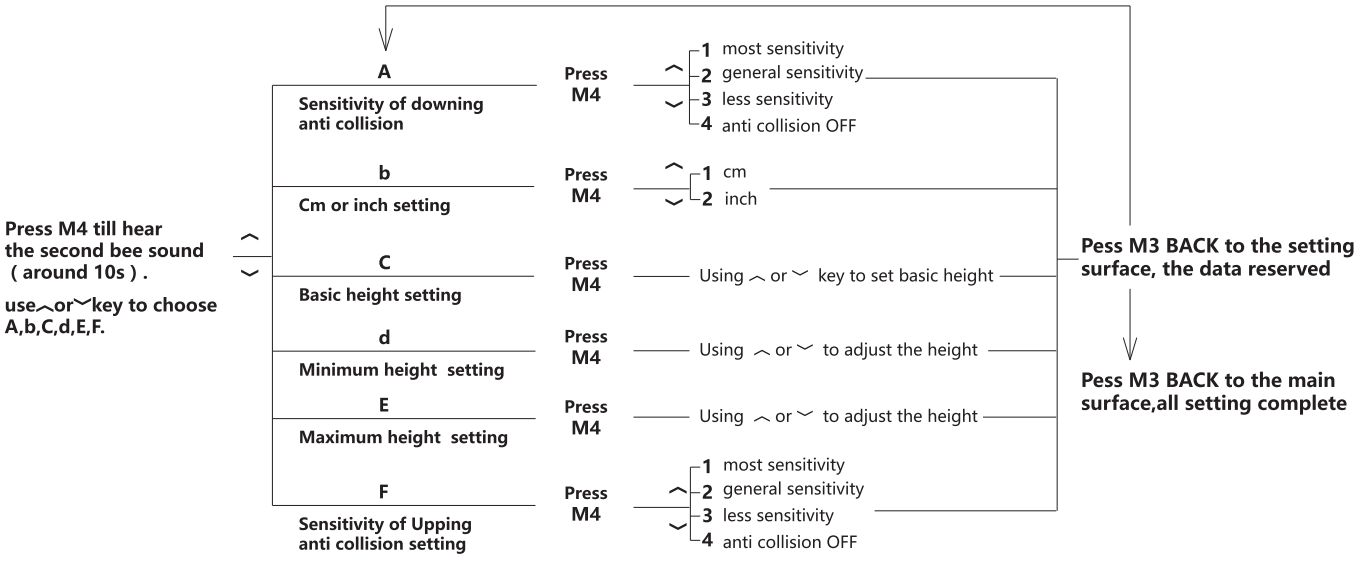
■ **Setting solution for desk function**