

OLG



Axis 6 Pod

Assembly Instructions

Axis 1200 x 750mm DSD


Assembly Instructions



STEP 1: Attach brackets to end leg.




STEP 2: Attach brackets to mid legs.

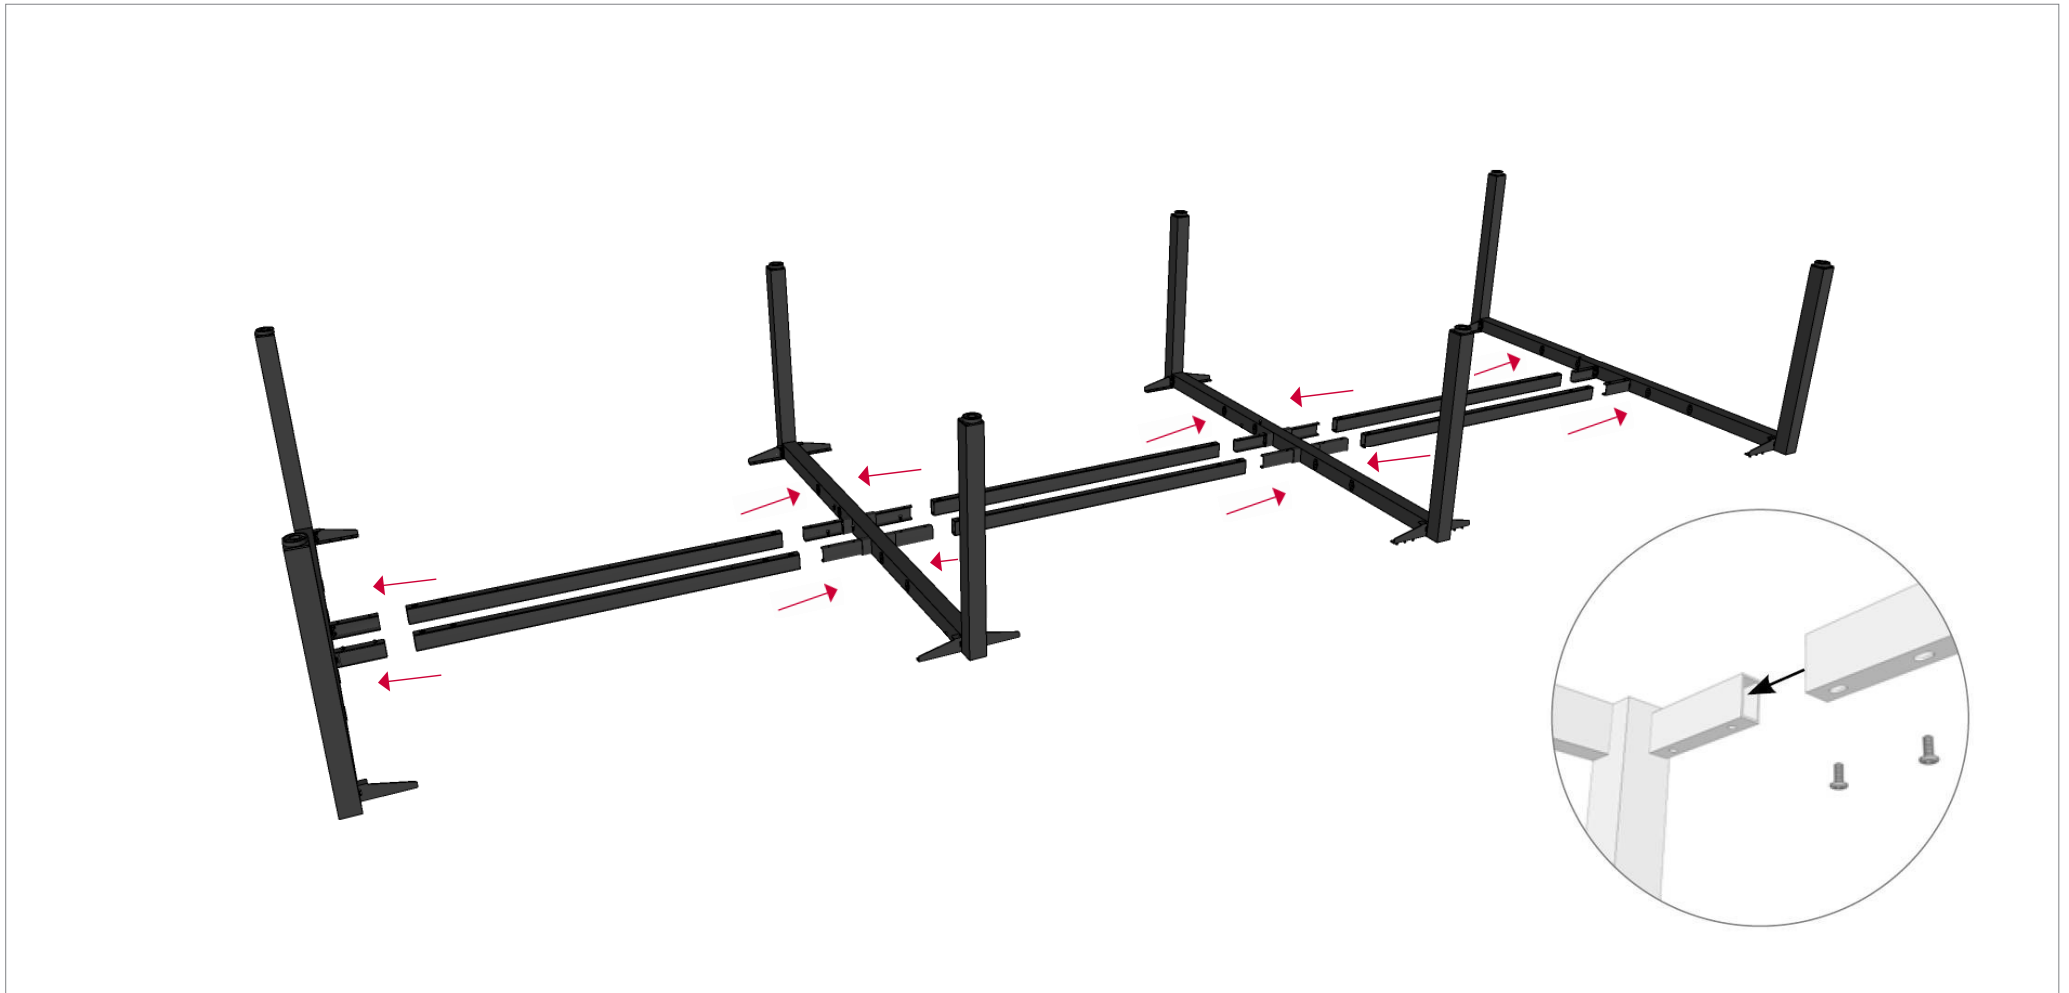

STEP 3: Assemble rails to frame.

Axis 1200 x 750mm DSD

Assembly Instructions

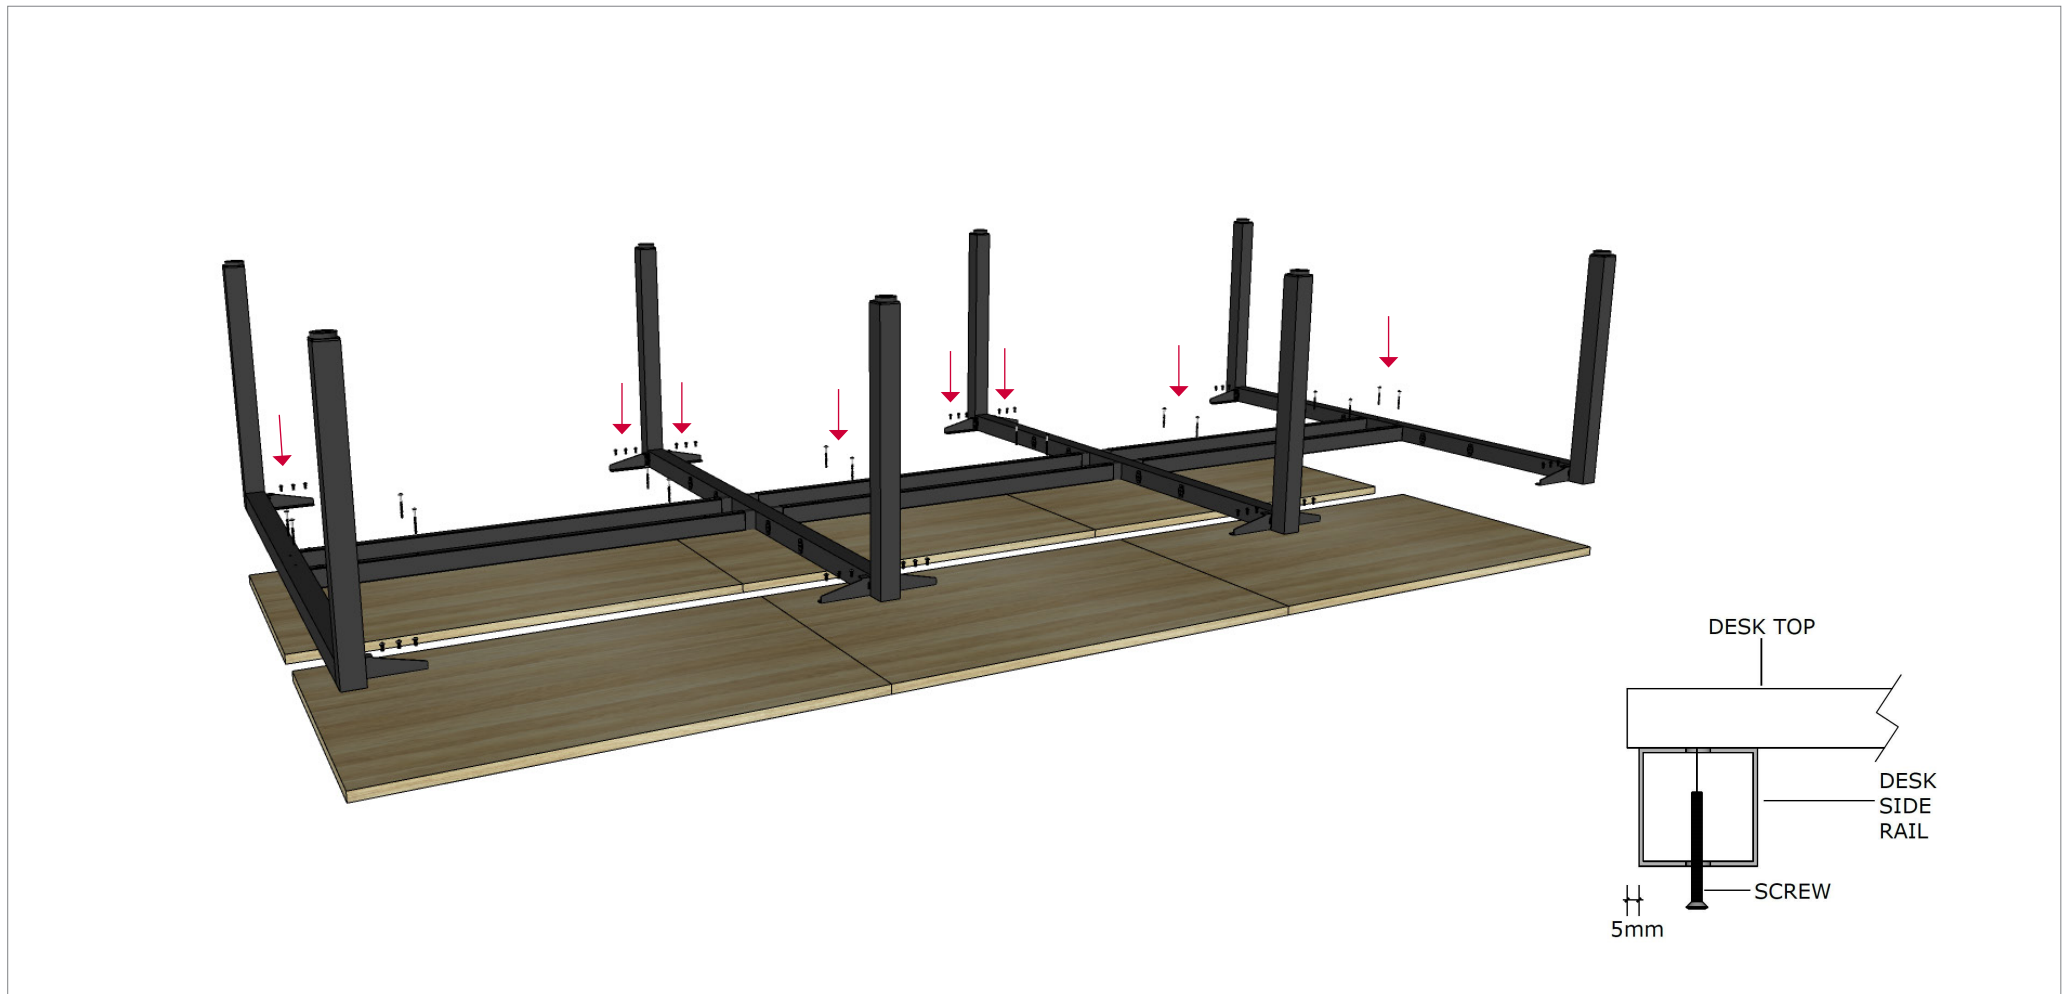

STEP 4: Fix top to frame with 5mm overhang over metal frame. Where desktops butt together, make sure these are fitted tight together.



STEP 5: Complete.



Sydney 02 8188 2732
Melbourne 03 9111 0315
Brisbane 07 3733 1923
Adelaide 08 7111 0810
Perth 08 9468 2707

info@olgoffice.com

myolg.online | olgoffice.com | officedesigner.net | motionoffice.com