


# Cosmic System Straightline

## Installation Guide

---

**TOOLS REQUIRED:** Powered screwdriver

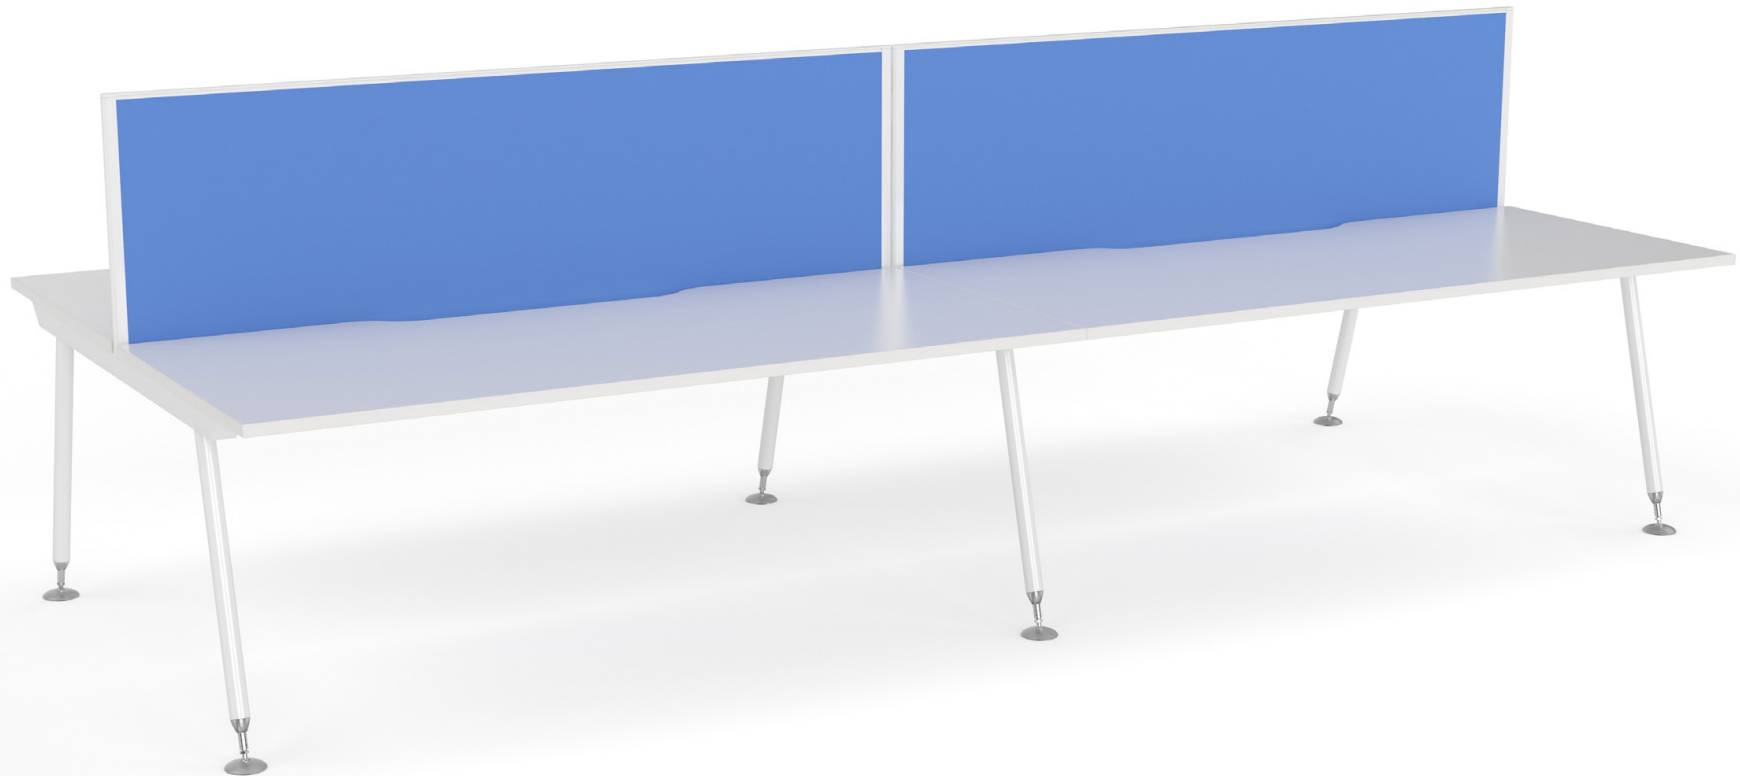



# COSMIC SYSTEM STRAIGHTLINE

## Installation Guide


\* To prevent possible scratches or damage, assemble the desk upside down on a soft surface such as a blanket, carpet or packaging.



\* Attach leg to the top assembly by using bolts, spring washer, flat washer. Tighten using the allen wrench provided.

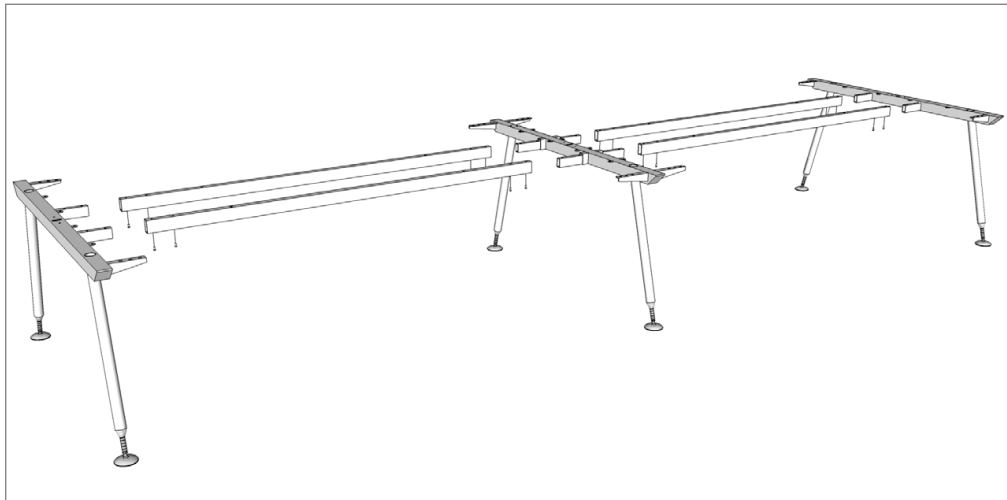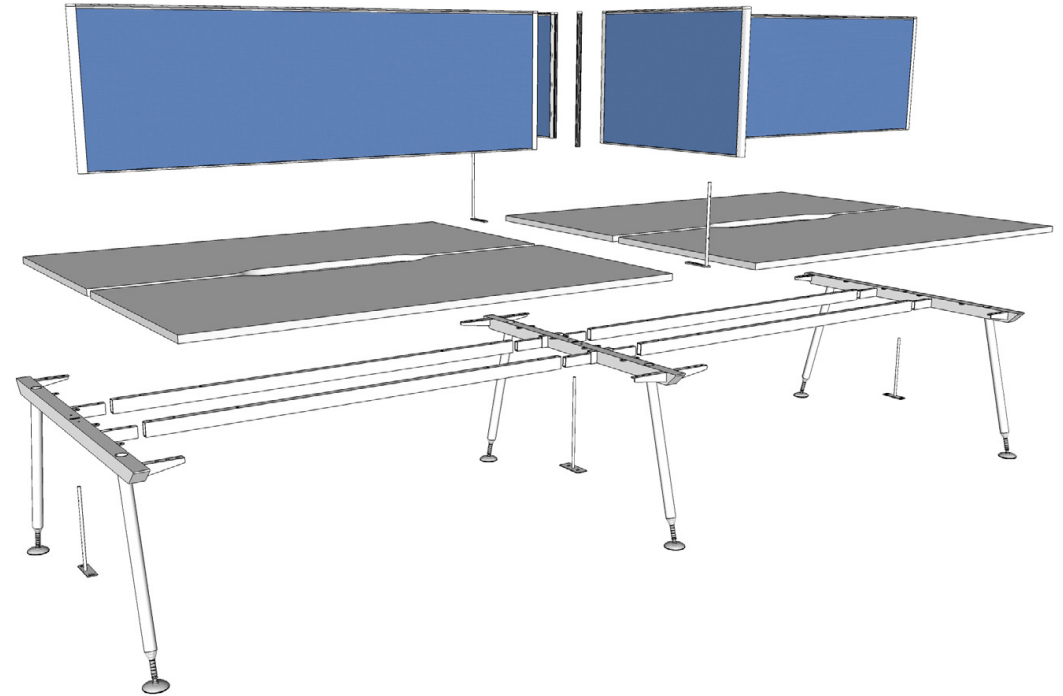


**STEP 1:** Assemble frames & rails together, loosely (1 turn from tight).

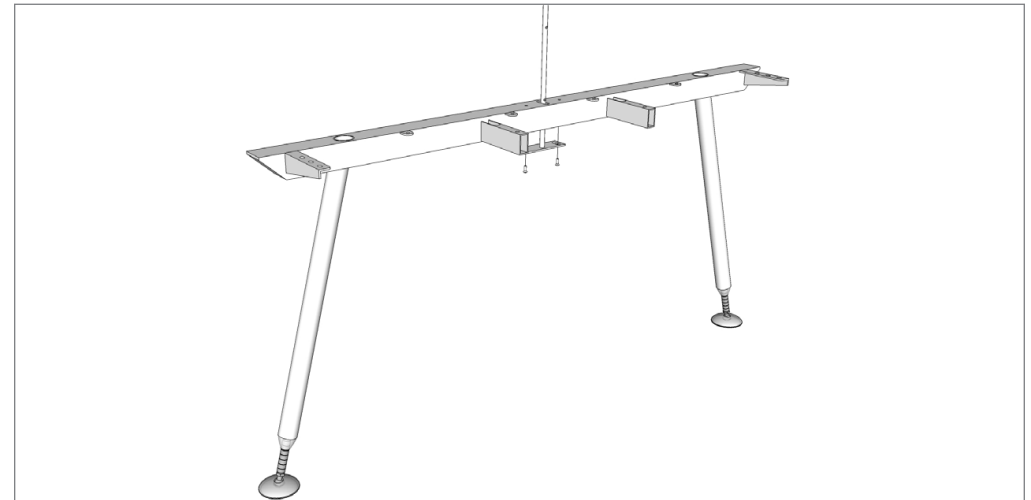


**STEP 2:** Assemble screen brackets to frame, loosely (1 turn from tight).

# COSMIC SYSTEM STRAIGHTLINE


## Installation Guide

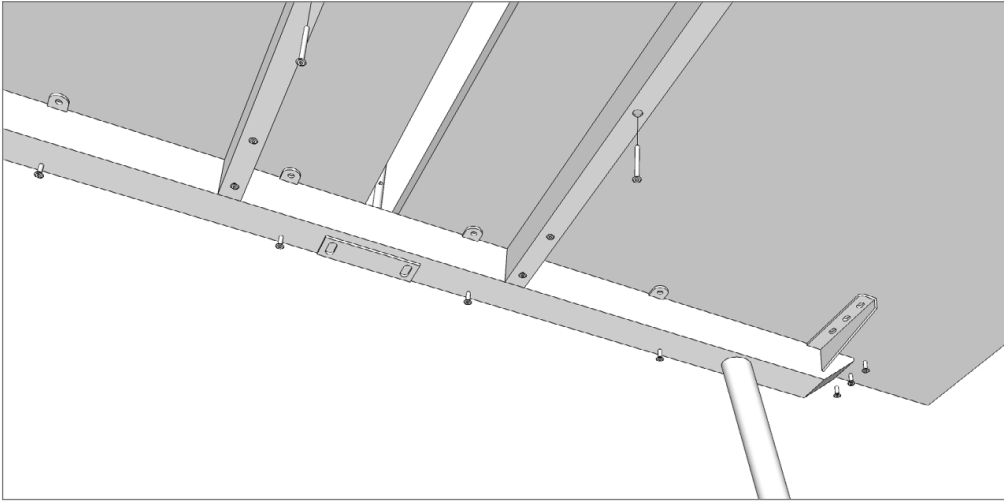


**STEP 3:** Fix desk top with 5mm overhang over metal frame. Where desktops butt together, make sure these are fitted tight together.

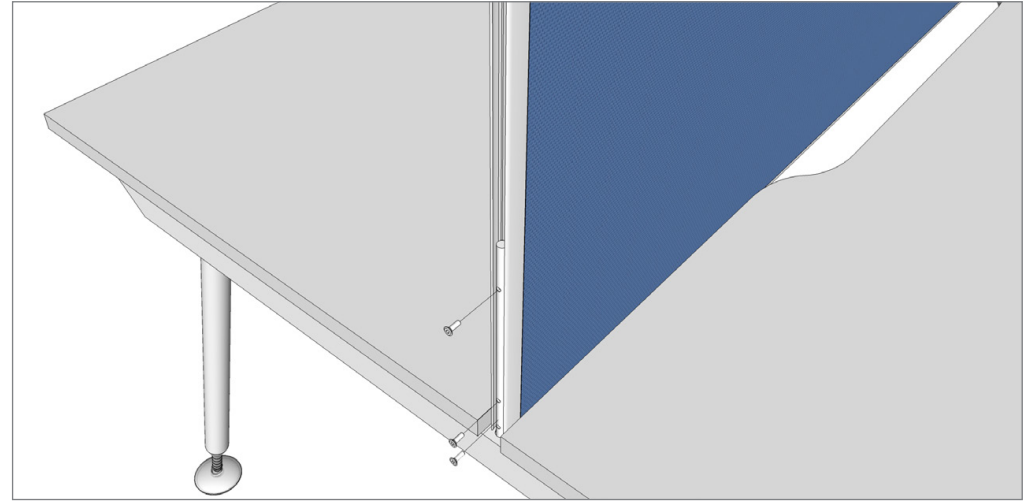

**STEP 4:** Slide centre screen pole over bracket. Carefully remove end seal on centre screens & fit screen between end brackets & screw self tappers to fix screen tightly.

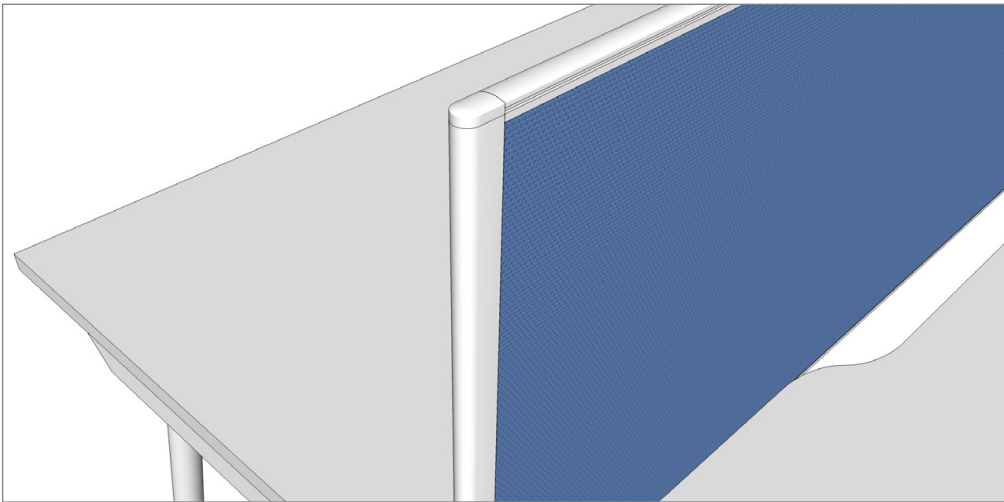


**STEP 5** Attach centre screen end seal and top cap with soft non-marking mallet.

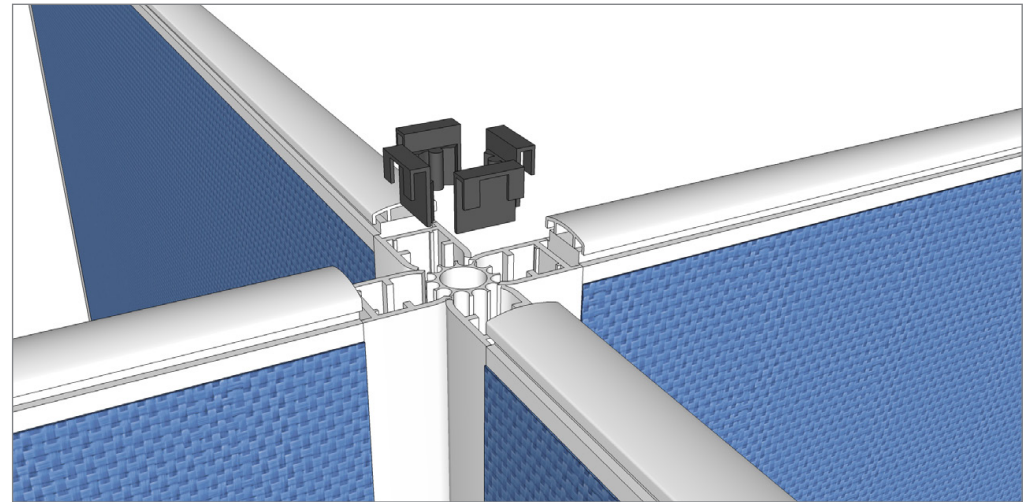


**STEP 6:** Attach screens to centre pole with top slug connectors.

# COSMIC SYSTEM STRAIGHTLINE


## Installation Guide

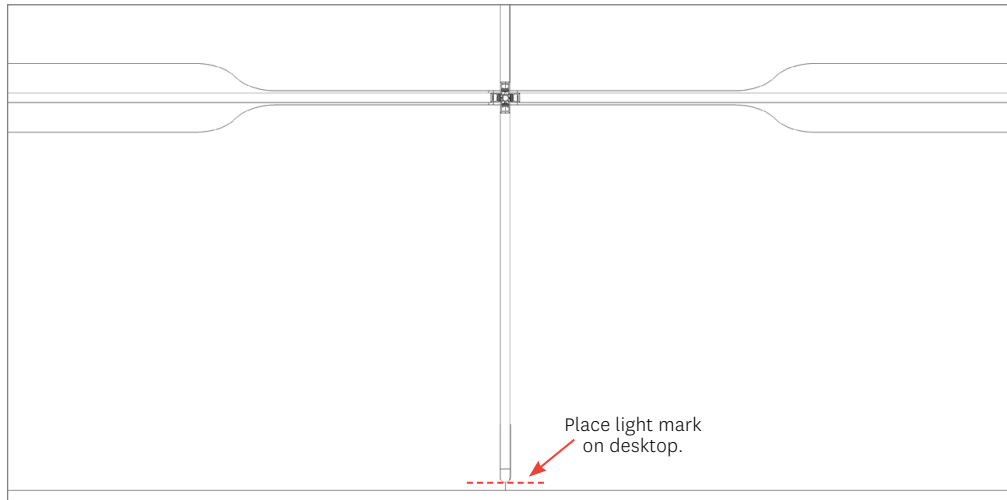


**STEP 7:** Mark out end of return screens on desk.

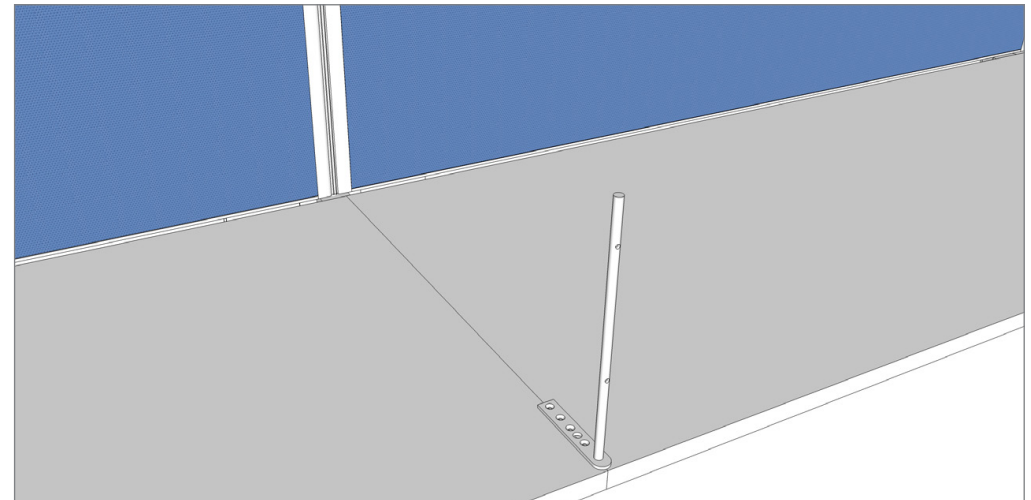

**STEP 8:** Remove return screen and x bracket in place. As an alternative to screws, use 3M double sided tape to fasten return screen bracket to desk top.

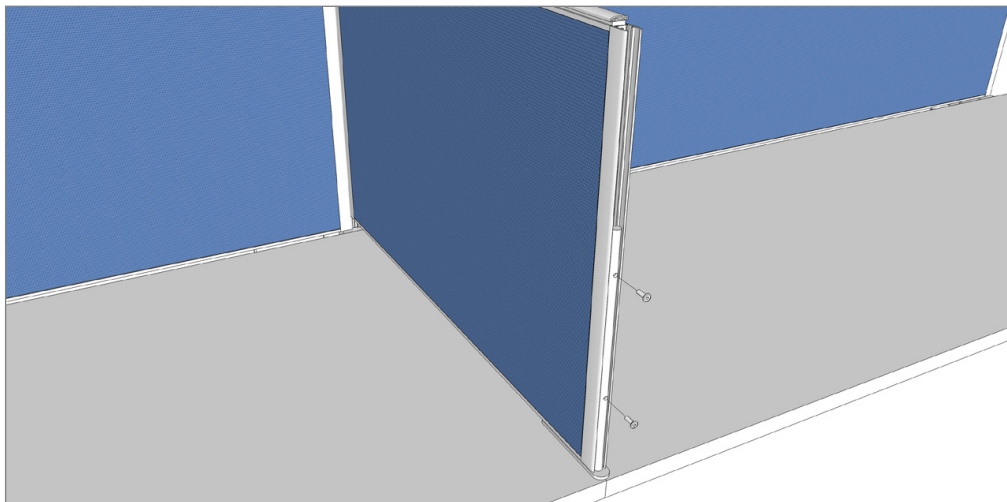

**STEP 9:** Remove return screen end seal, and attach screen to bracket with self tapper screws.

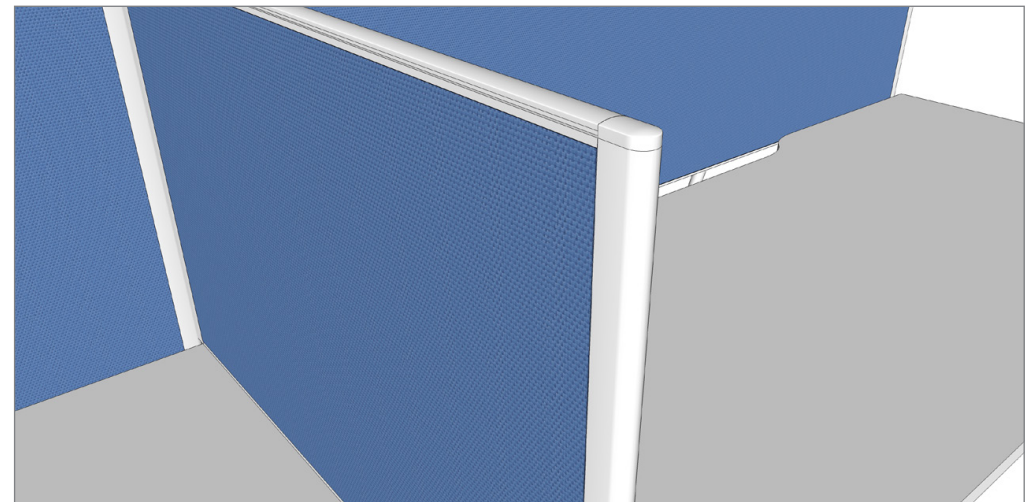


**STEP 10:** Attach return screen end seal and top cap with soft non-marking mallet.




# COSMIC SYSTEM STRAIGHTLINE


## Installation Guide

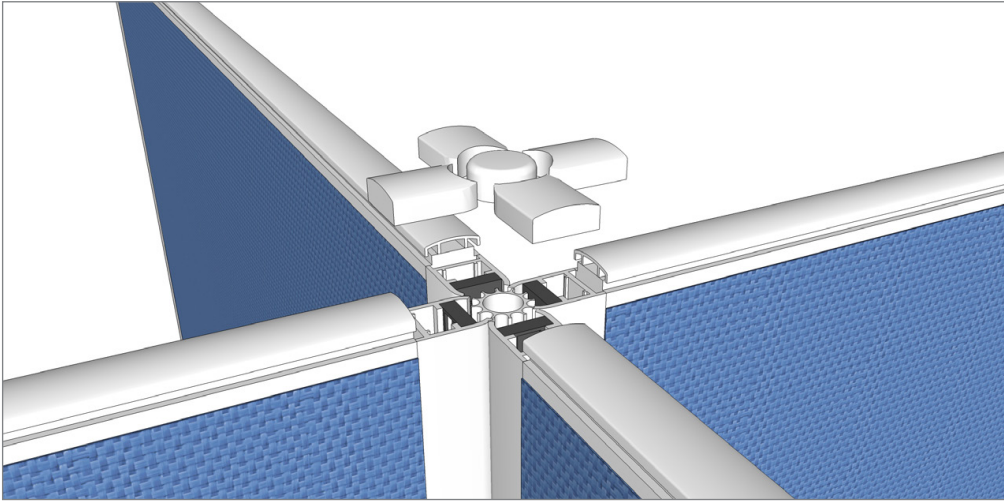


**STEP 11:** Install all top caps simultaneously down all together gently tapping with a soft non- marking mallet.

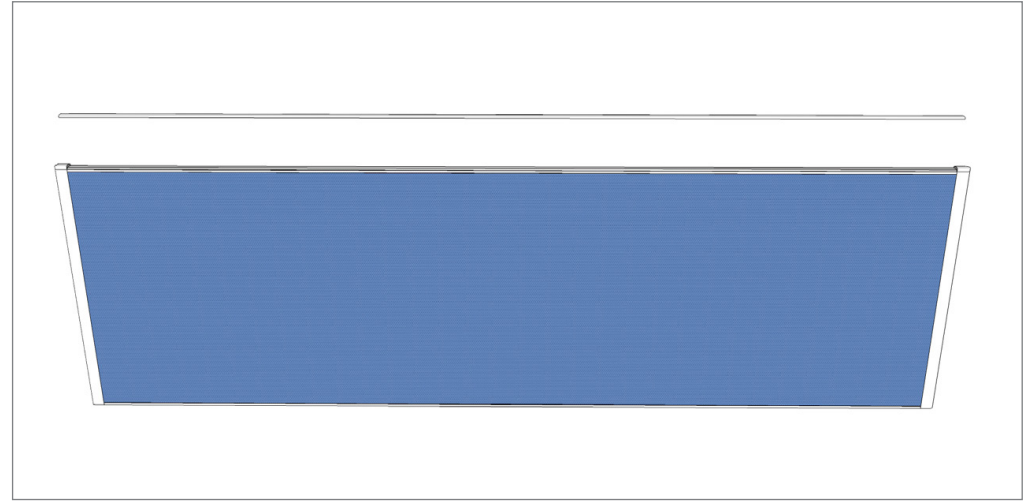

**STEP 12:** If for whatever reason you have to remove the top seal, then to refit, slightly arc in the middle, placing the 2 ends into location, & gently tap down.

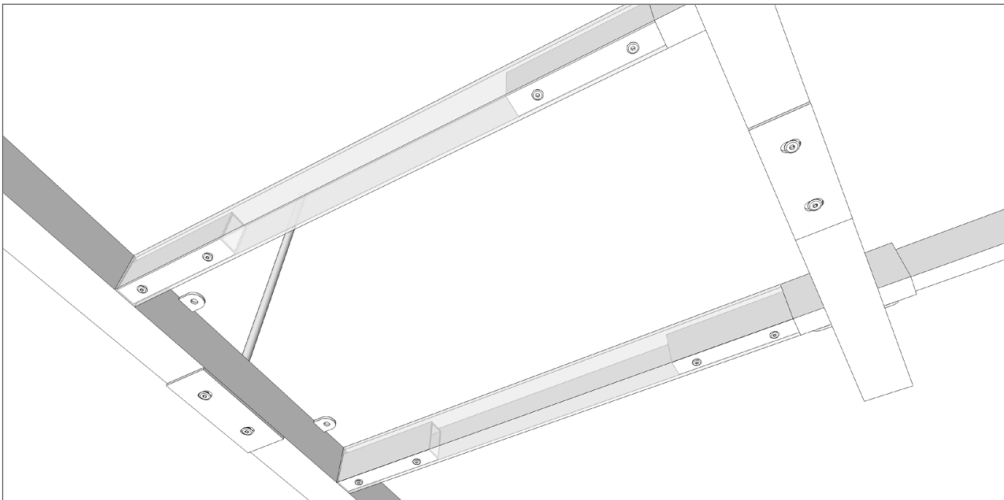

**STEP 13:** Fully tighten all rail to frame screws, & then screen bracket screws.

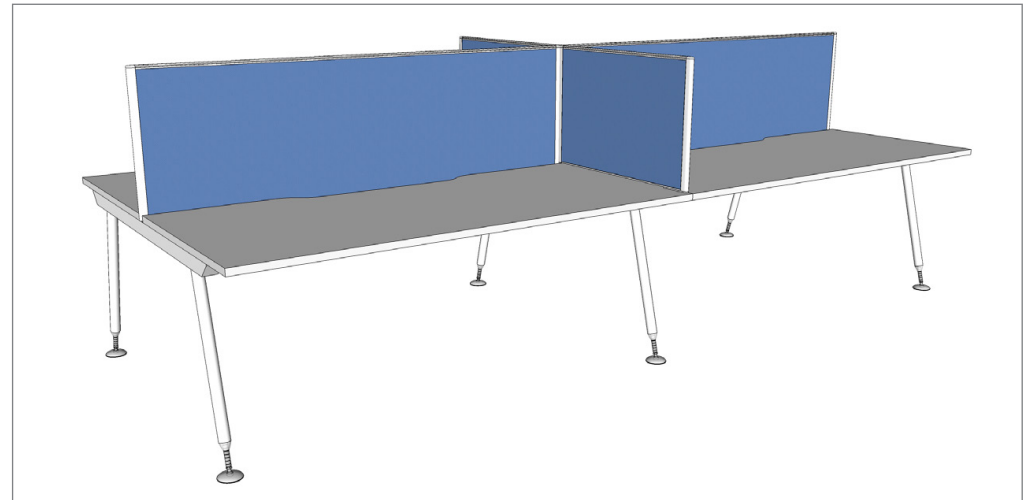

**COMPLETED.**

# Cosmic Desk

## Installation Guide

---


**TOOLS REQUIRED:** Powered screwdriver




# COSMIC DESK

## Installation Guide


\* To prevent possible scratches or damage, assemble the Desk upside down on a soft surface such as a blanket, carpet or packaging.

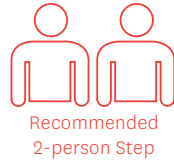

\* Attach Leg to the Top assembly by using Bolts, spring washer, flat washer. Tighten using the Allen Wrench provided.

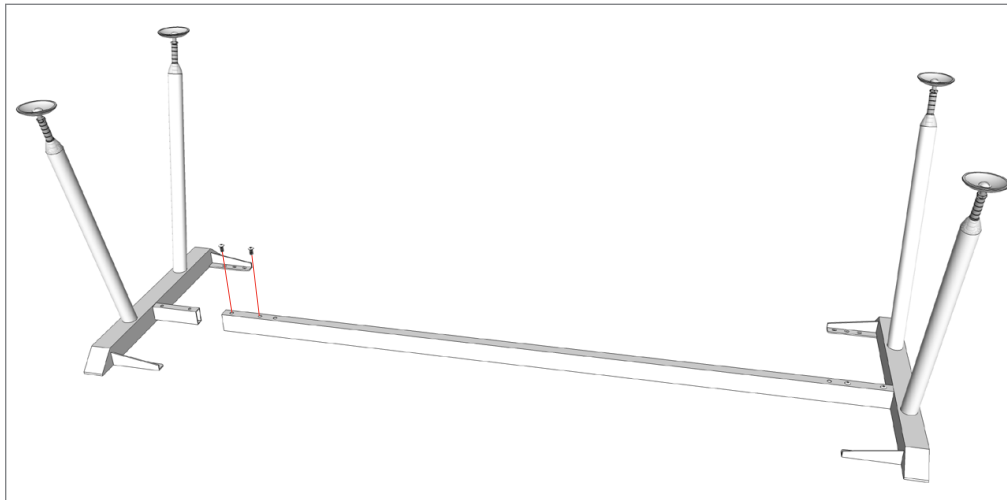

**STEP 1:** Assemble frames & rails together, loosely (1 turn from tight).

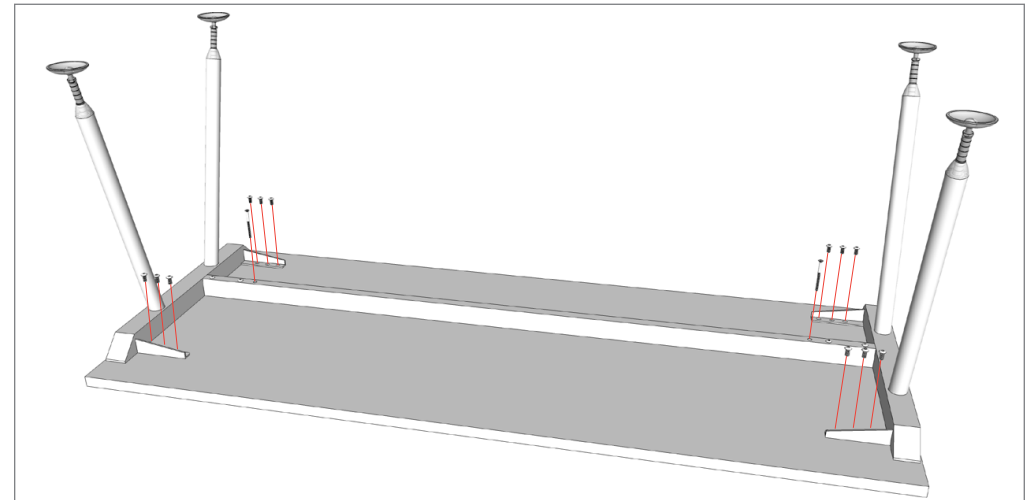

**STEP 2:** Fix desk top with 5mm overhang over metal frame. Lastly, fully tighten all rail to frame screws.

# Cosmic Workstation

## Installation Guide

---

**TOOLS REQUIRED:** Powered screwdriver







# COSMIC WORKSTATION

## Installation Guide


\* To prevent possible scratches or damage, assemble the Desk upside down on a soft surface such as a blanket, carpet or packaging.



\* Attach Leg to the Top assembly by using Bolts, spring washer, flat washer. Tighten using the Allen Wrench provided.

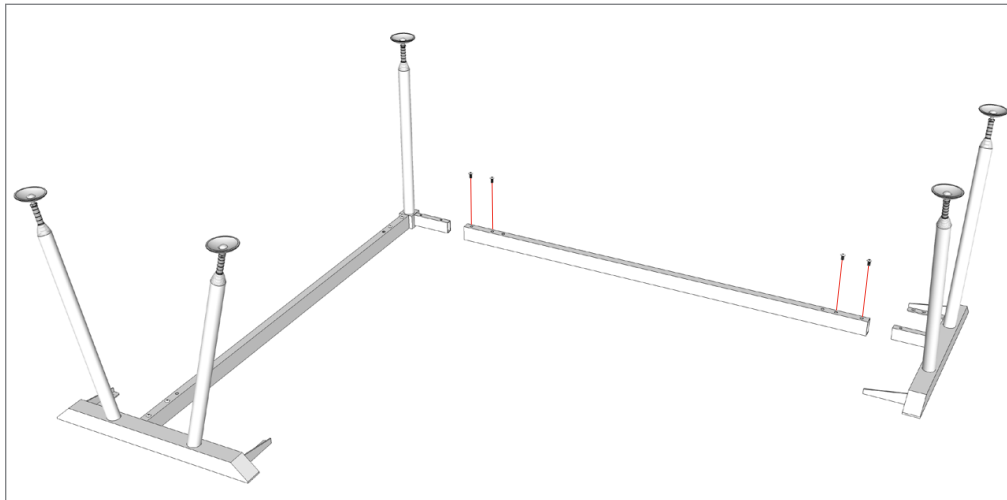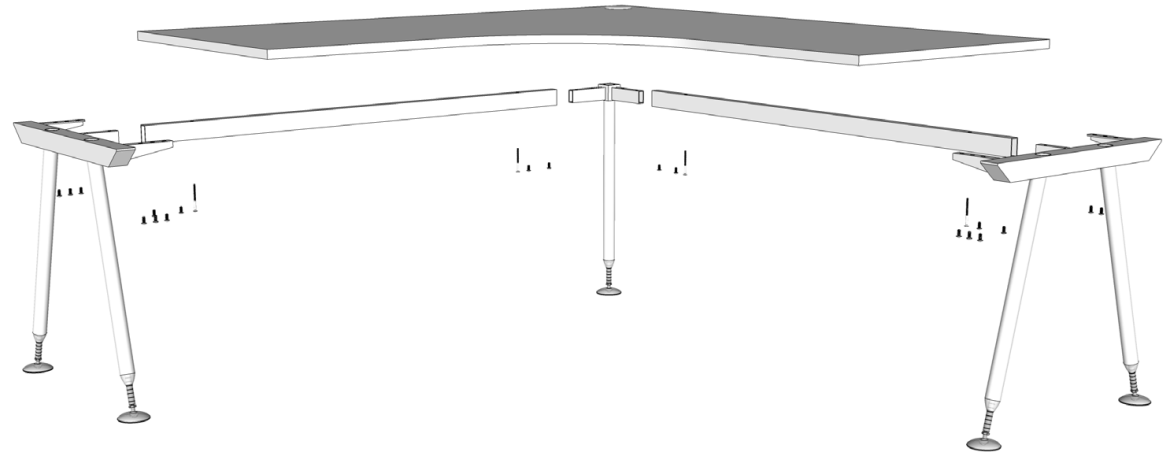

**STEP 1:** Assemble frames & rails together, loosely (1 turn from tight).

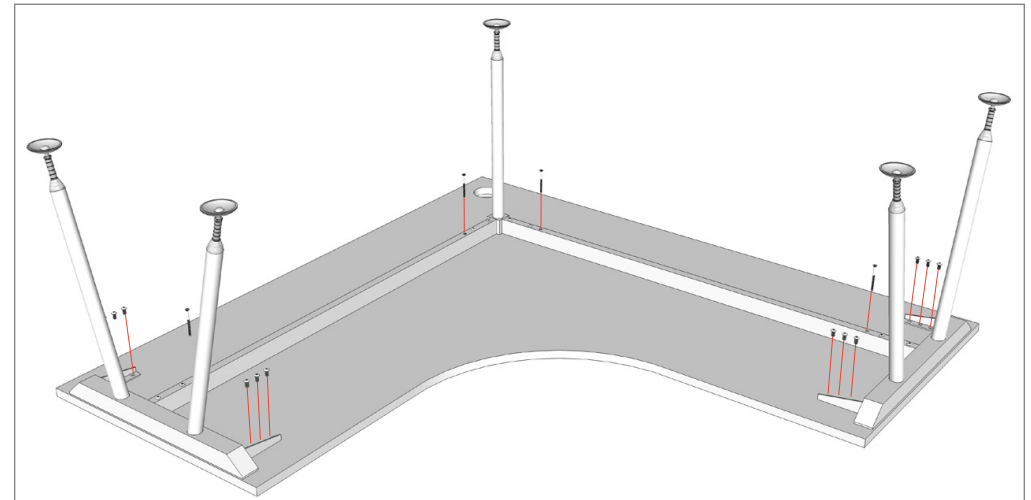

**STEP 2:** Fix desk top with 5mm overhang over metal frame. Lastly, fully tighten all rail to frame screws.