


EkoSystem 90° Workstation


Assembly Instructions

EkoSystem 90° Workstation


Components List

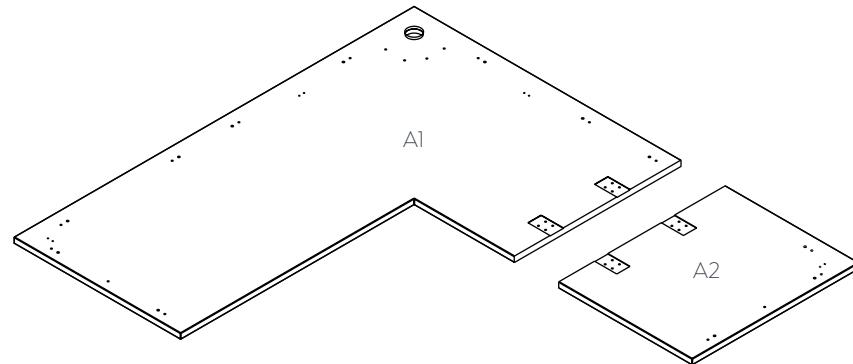


Worktop (A1 & A2)

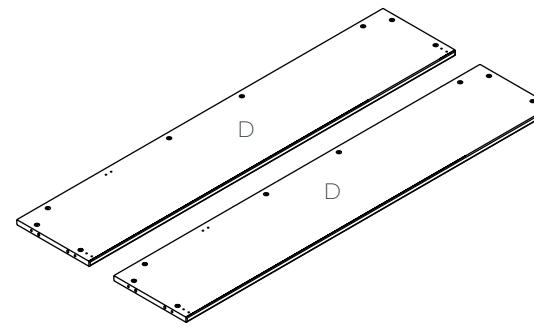

Back Panels (D)

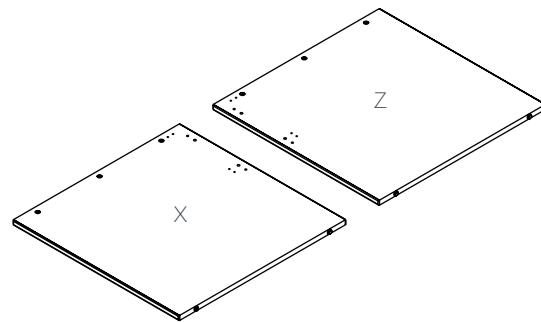


Left Side Panel (X) & Right Side Panel (Z)

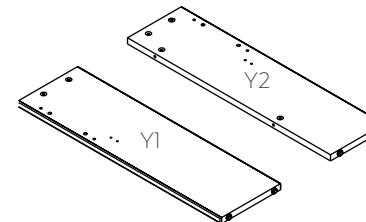

Partitions (Y1 & Y2)

EkoSystem 90° Workstation

Components List



14 - 6 x 35mm Cam Bolts

c1




12 - 8 x 30mm Dowel Pin

d1



14 - 5/8" Cam Cover

c2

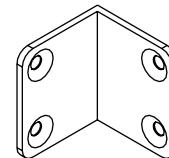


4 x Bracket

b1



16 - 4 x 16mm Screw

s1

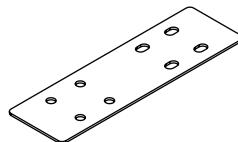

2 - 60mm x 200mm Connector

c3



16 - 6 x 12mm Screw

s5

Pre-installed Parts:



Cam

c5







Cable Port Cover

o5



EkoSystem 90° Workstation

Components List

STEP 1:

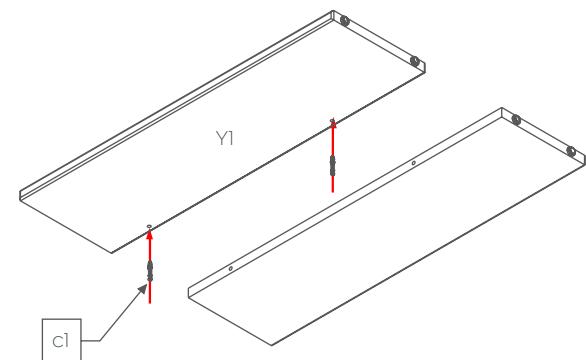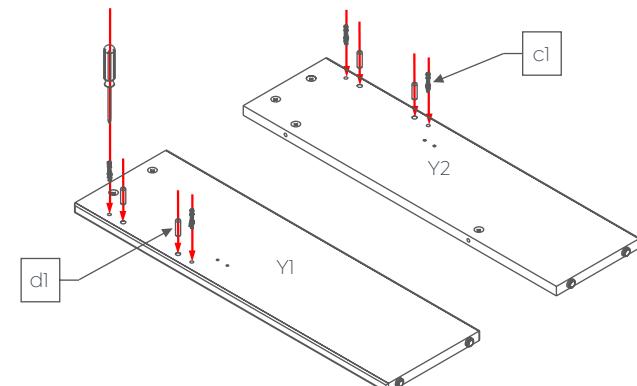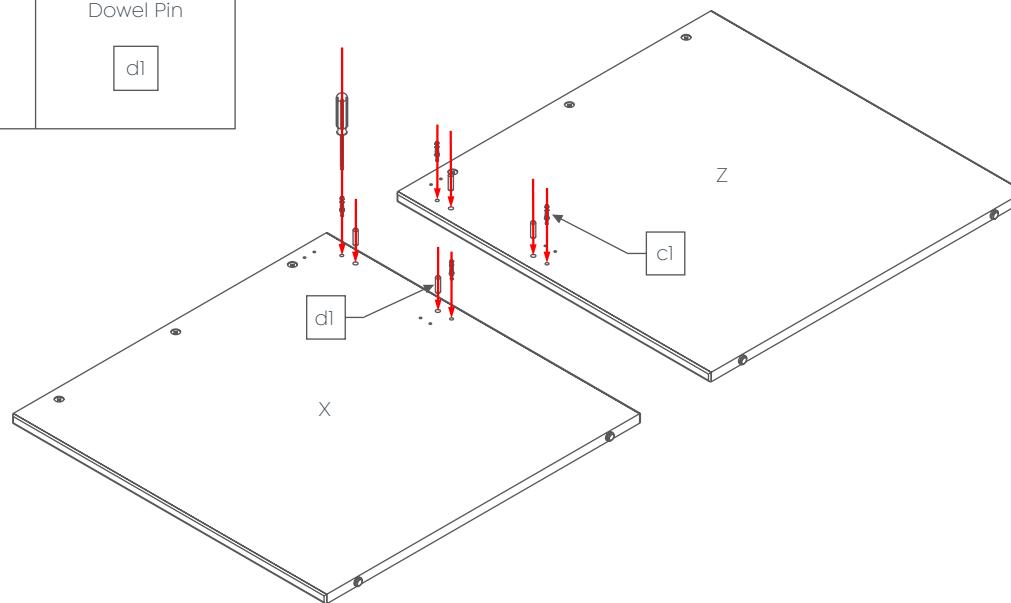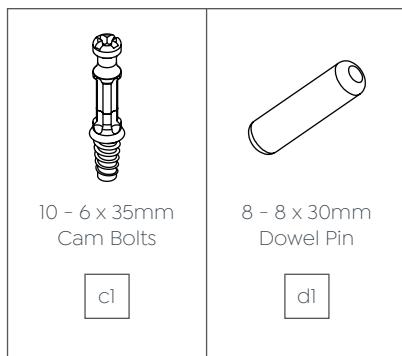



STEP 1.5:

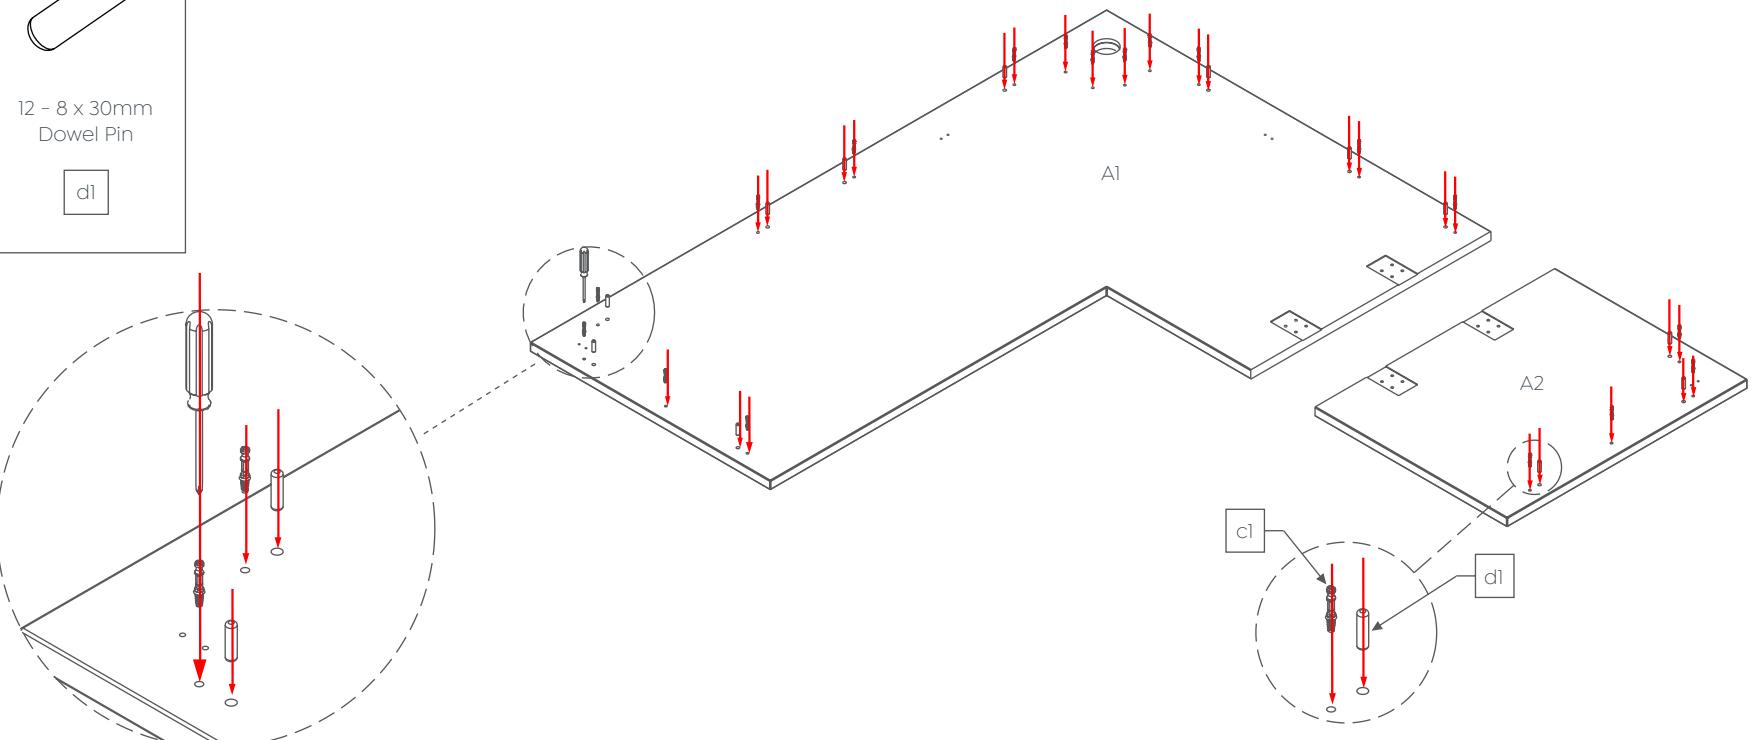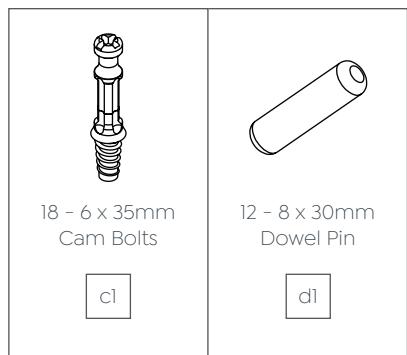



EkoSystem 90° Workstation

Assembly Instructions

STEP 2:

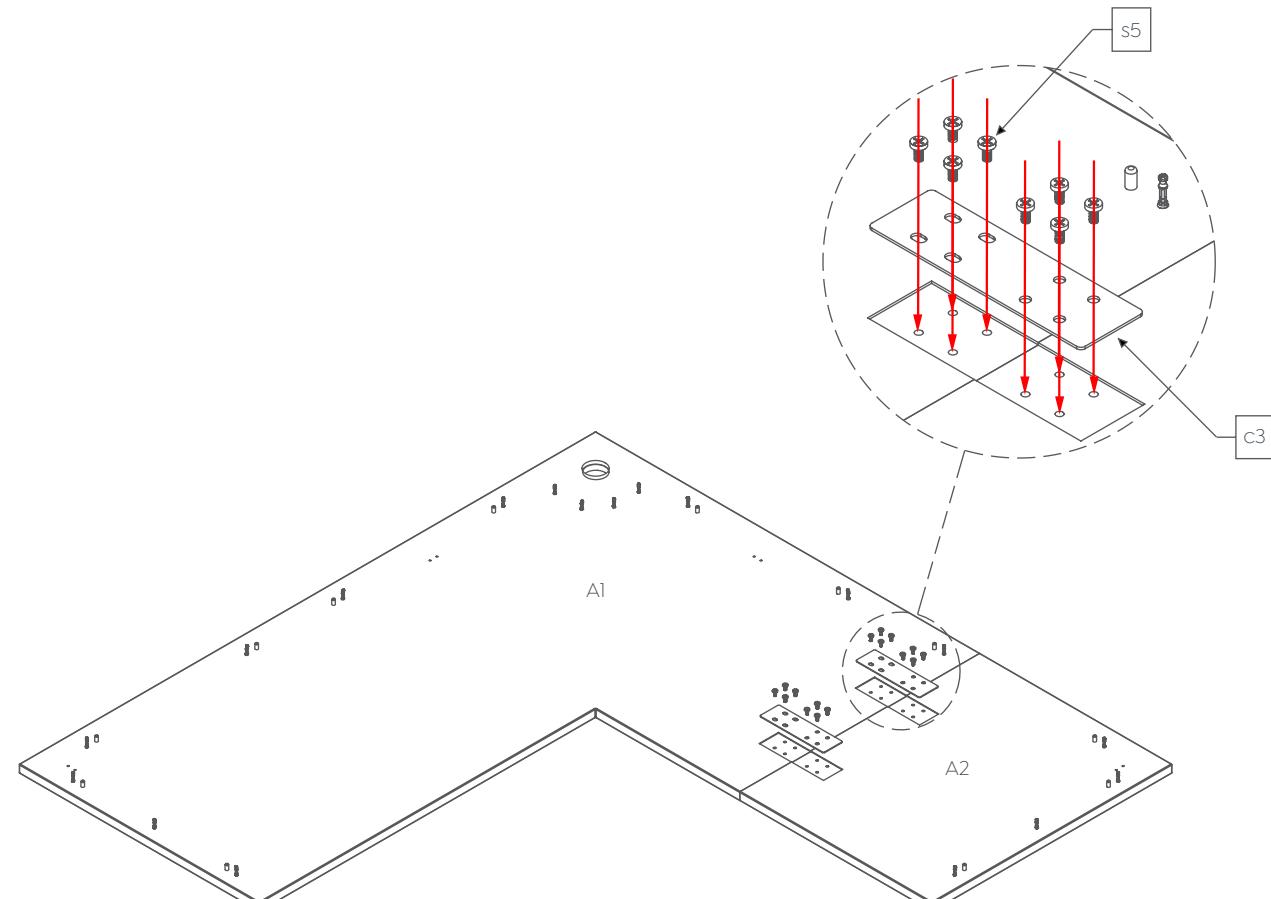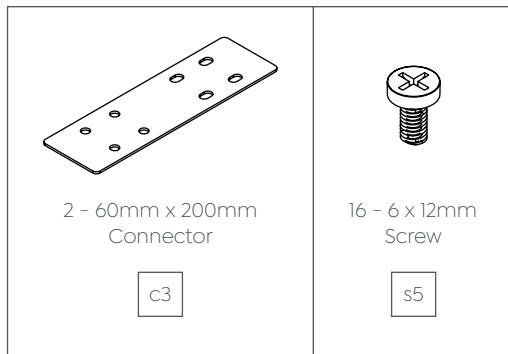



STEP 3:

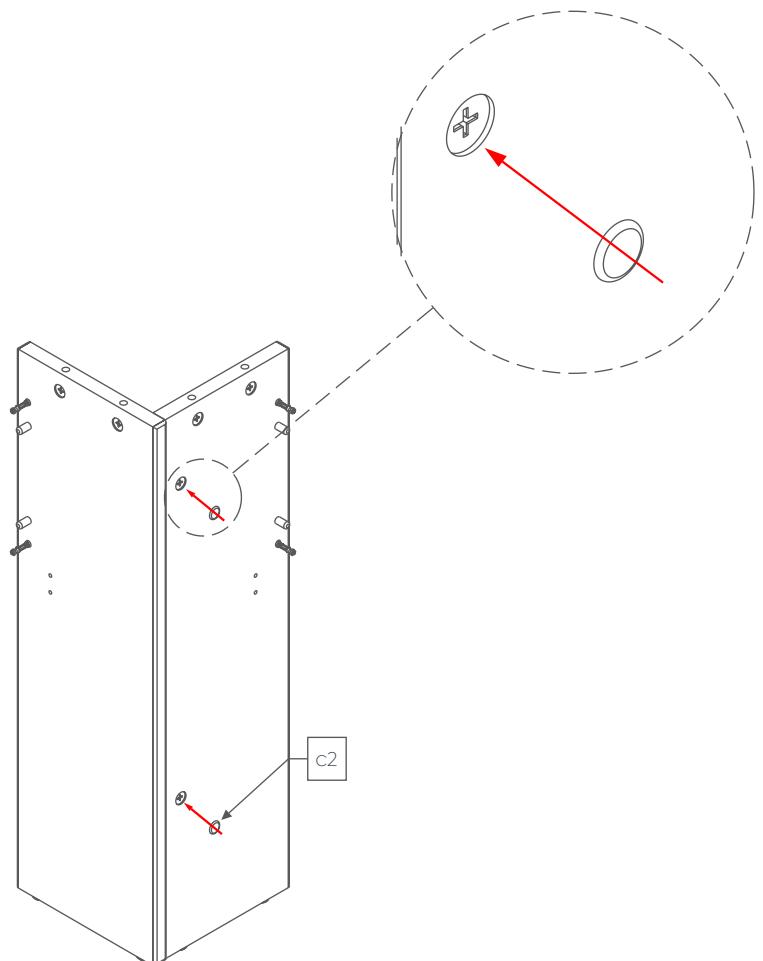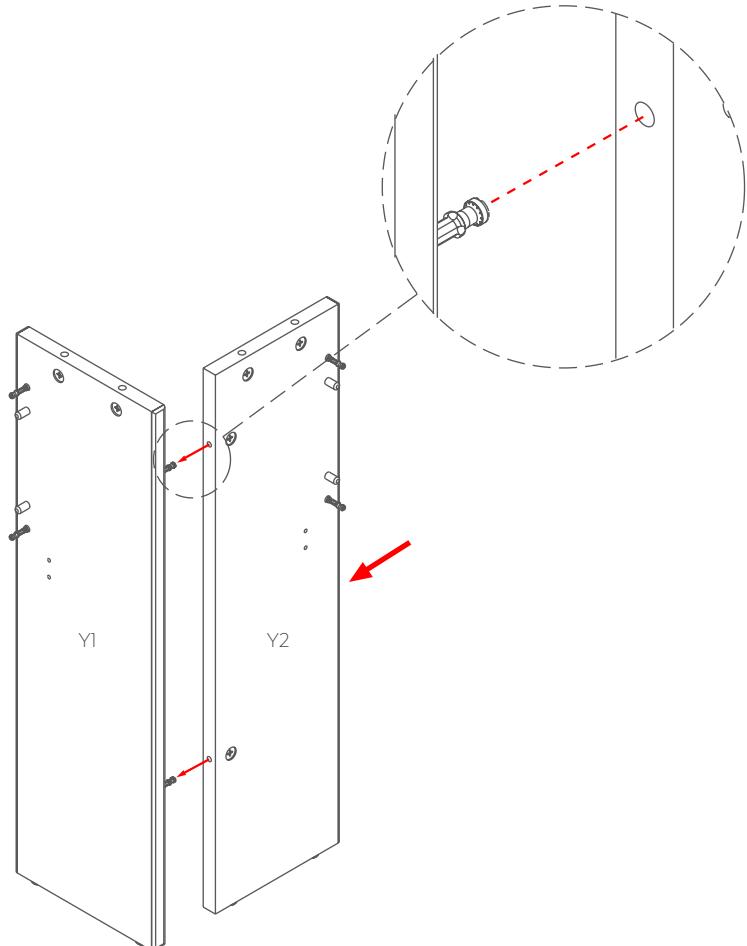


EkoSystem 90° Workstation

Assembly Instructions

STEP 4:

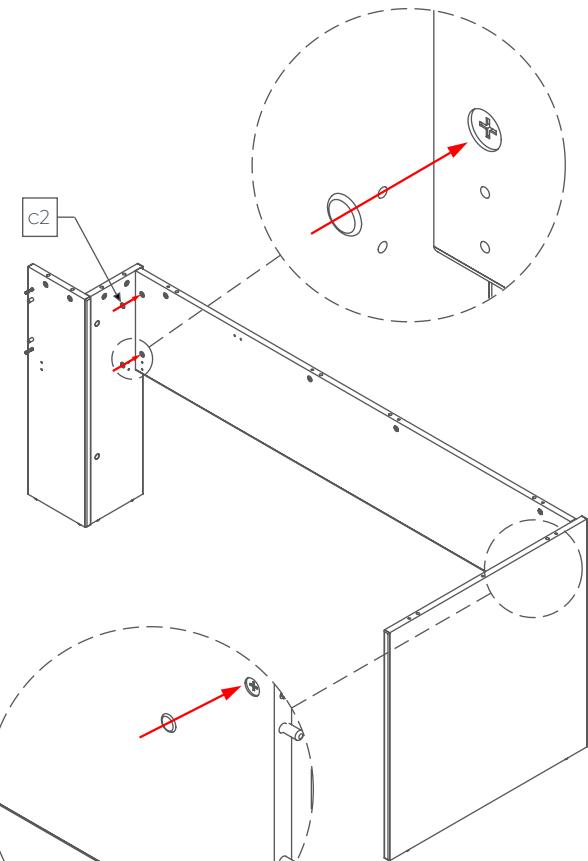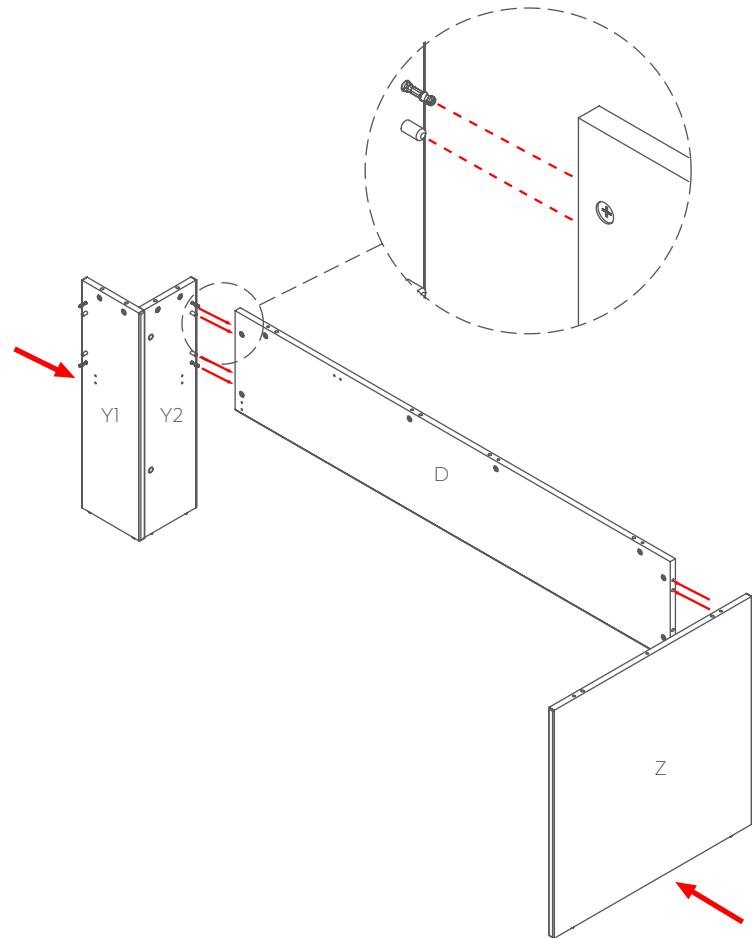


STEP 5:

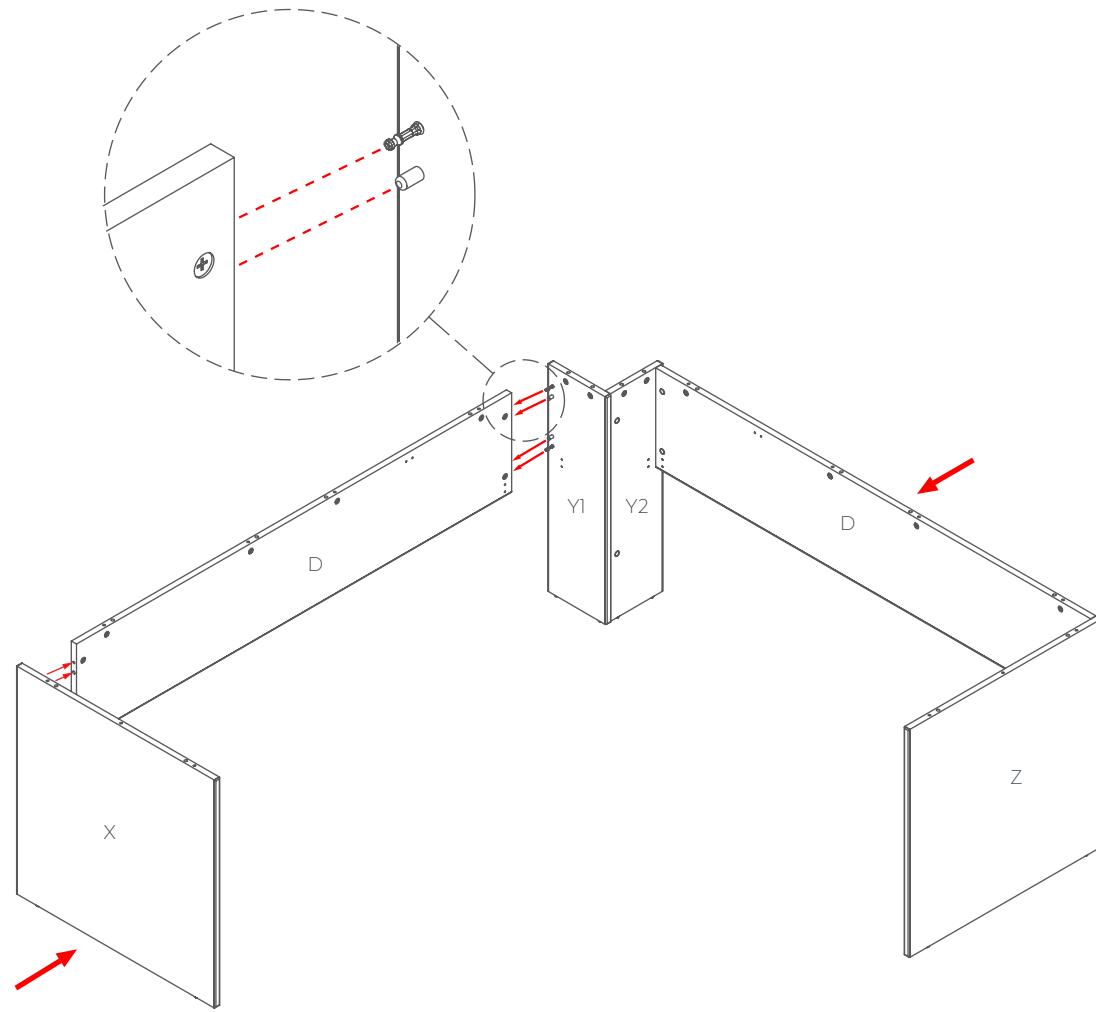

EkoSystem 90° Workstation

Assembly Instructions



STEP 5.5:

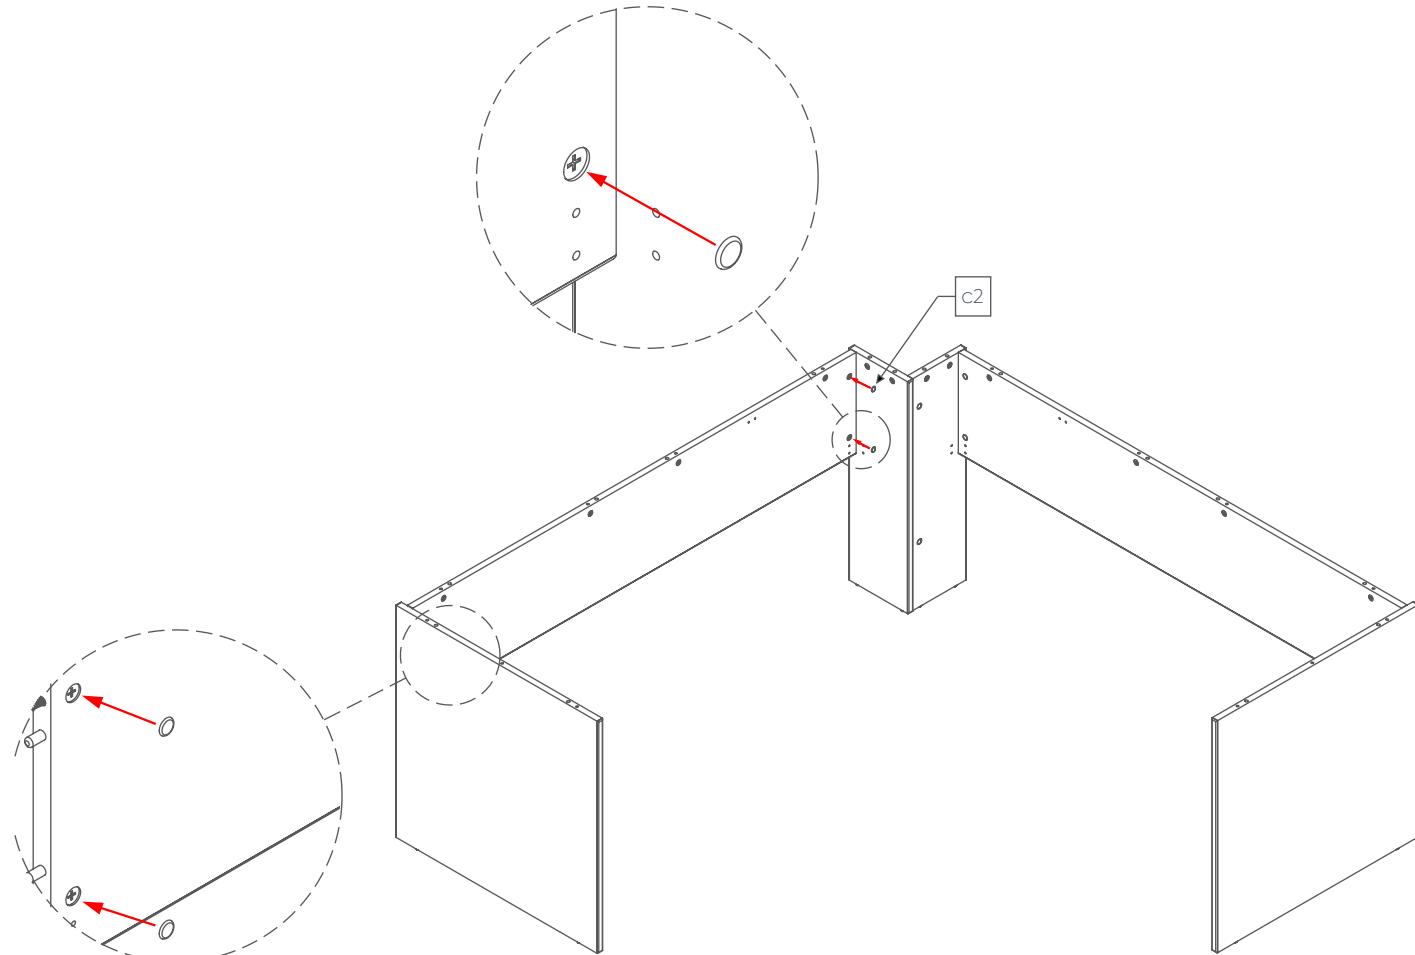

EkoSystem 90° Workstation

Assembly Instructions


STEP 6:

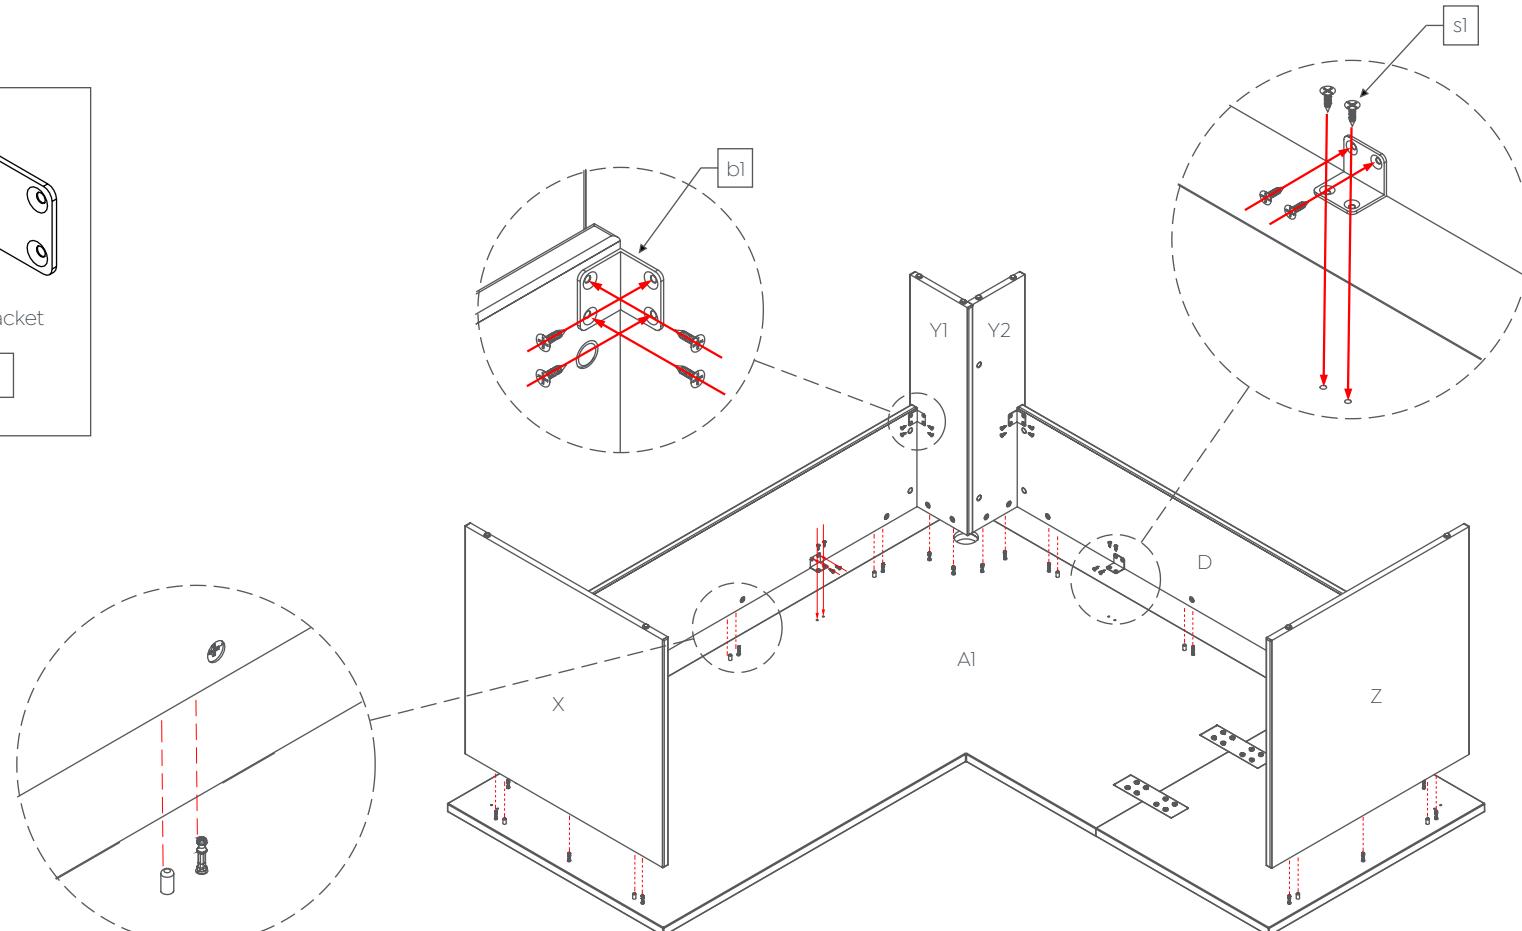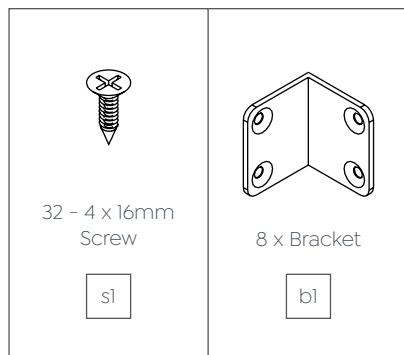

EkoSystem 90° Workstation

Assembly Instructions


STEP 6.5:

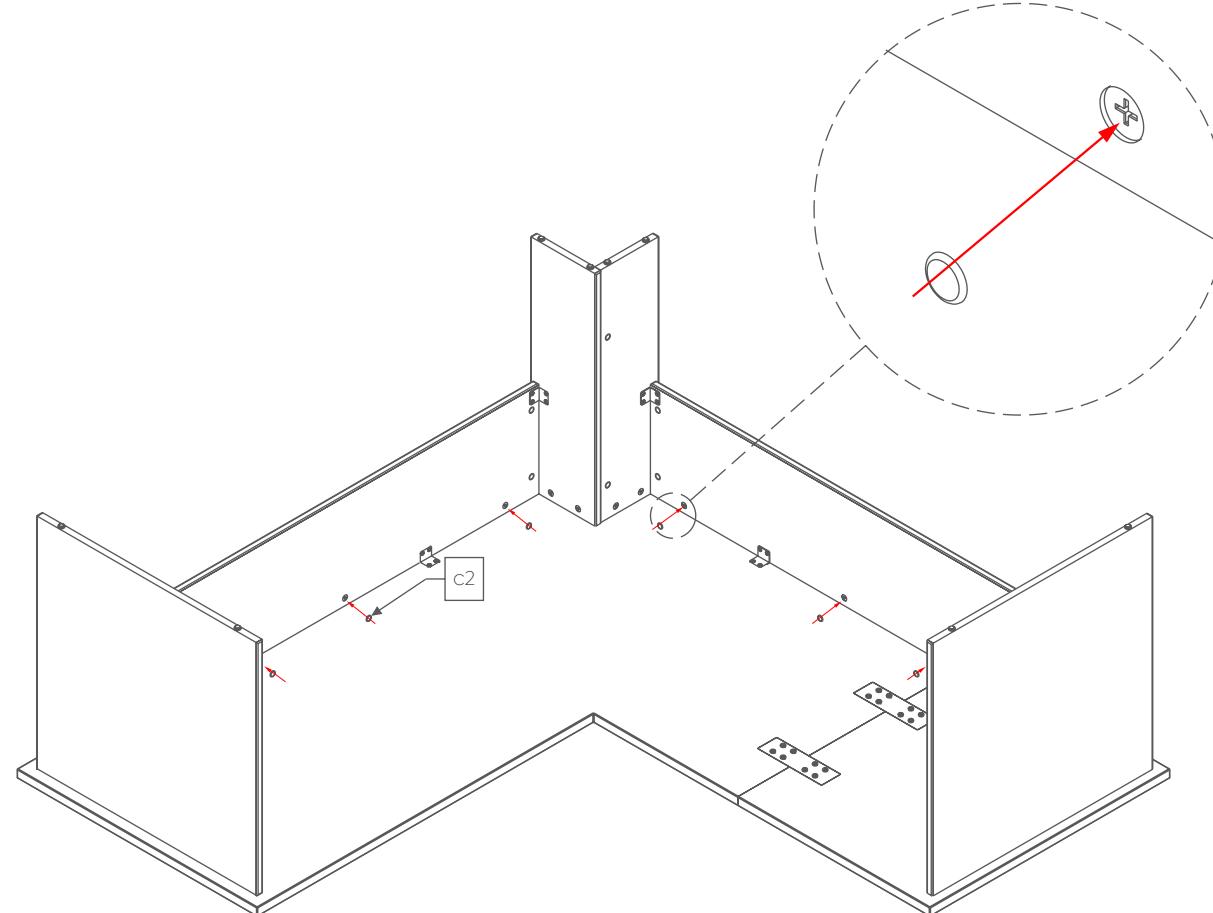

EkoSystem 90° Workstation

Assembly Instructions

STEP 7:

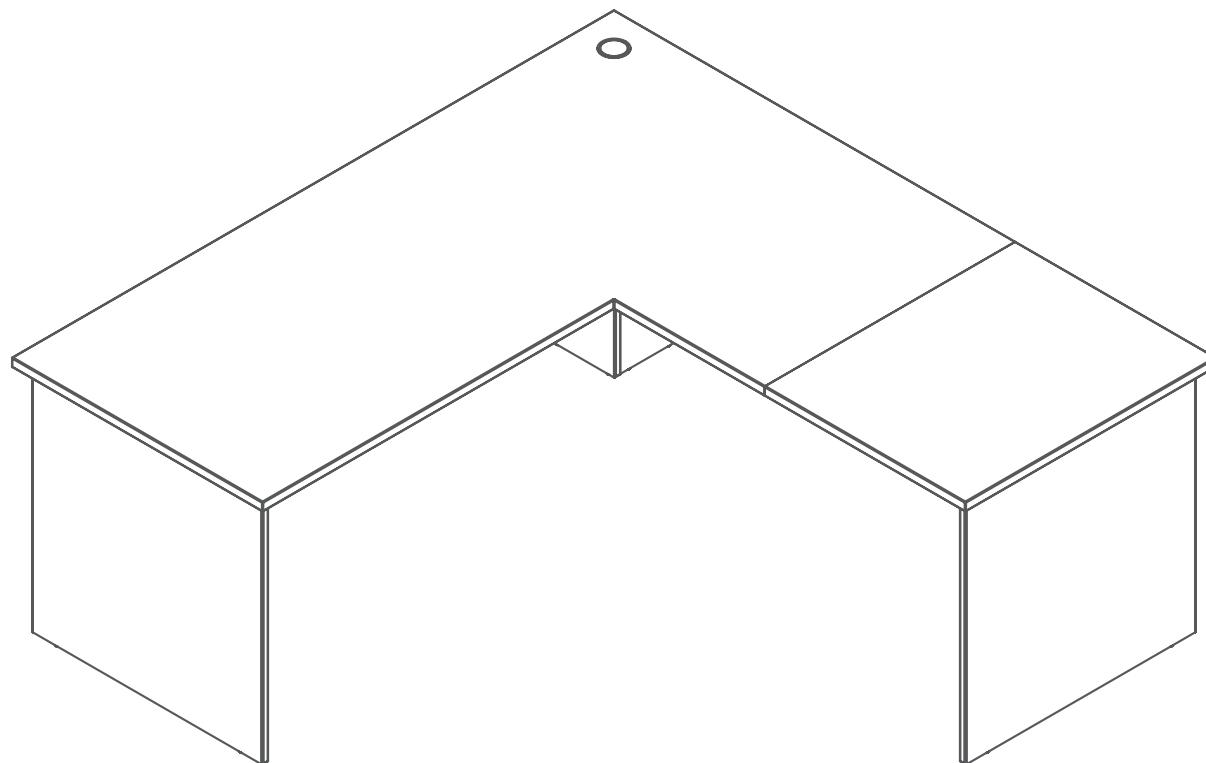



Sydney 02 8188 2732

Melbourne 03 9111 0315

Brisbane 07 3733 1923

Adelaide 08 7111 0810

Perth 08 9468 2707

info@olgoffice.com