


ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKB167

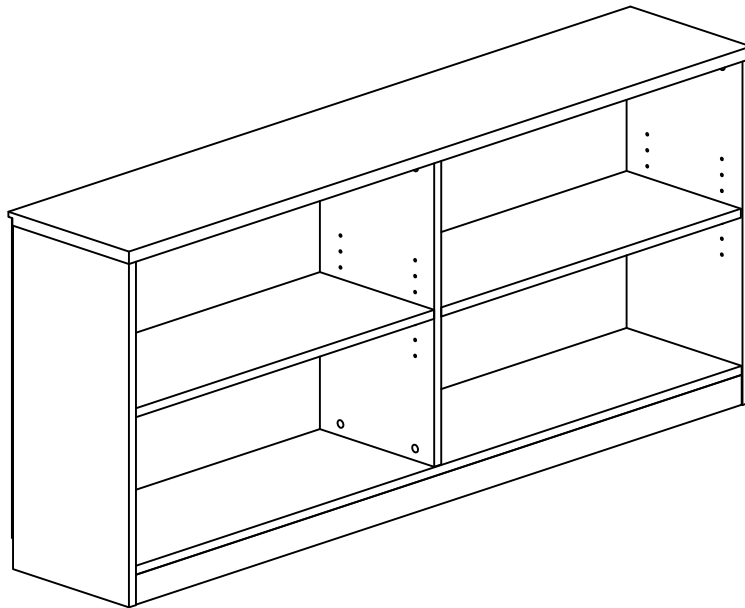




The turning direction of attaching



The arrow direction=front

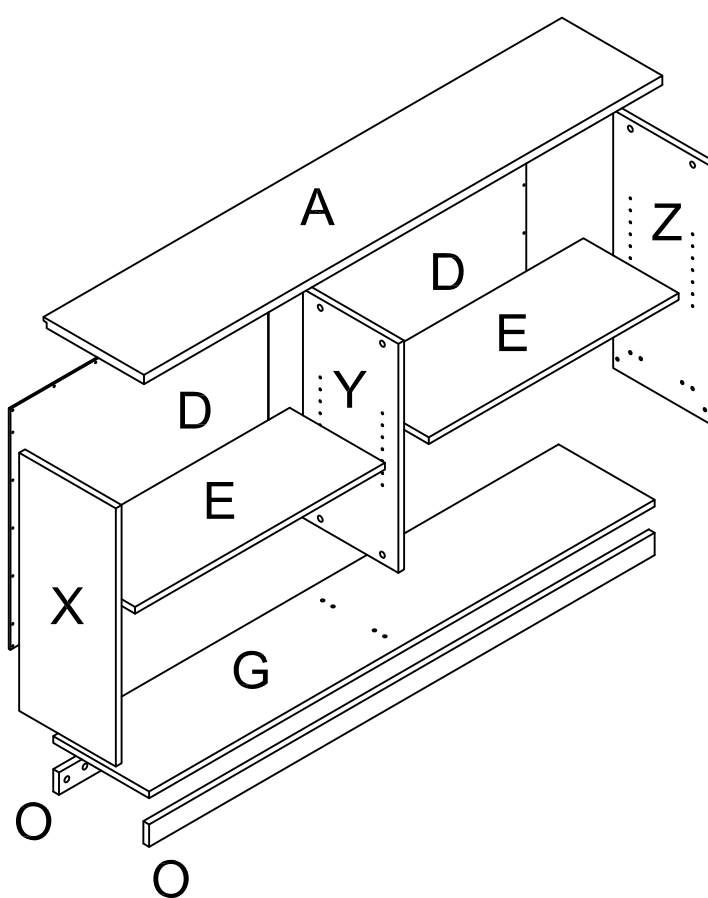

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	($\frac{5}{8}$ ") Cam Cover	24
X	Left side panel	1	(p1)	Threaded Dowel Pin	8
Z	Right side panel	1	(s1)	3.5*14 Screw	38
D	Back panel	2	(F1)	Ø12 Foot nail	3
G	Bottom panel	1			
E	Moveable shelf	2			
Y	Partition	1			
O	Batten	2			




(c2) ($\frac{5}{8}$ ") Cam Cover-24



(p1) Threaded Dowel Pin-8




(s1) 3.5*14 Screw-38




(F1) Ø12 Foot nail-3

Pre-installed parts



(c5) Cam


STEP 1

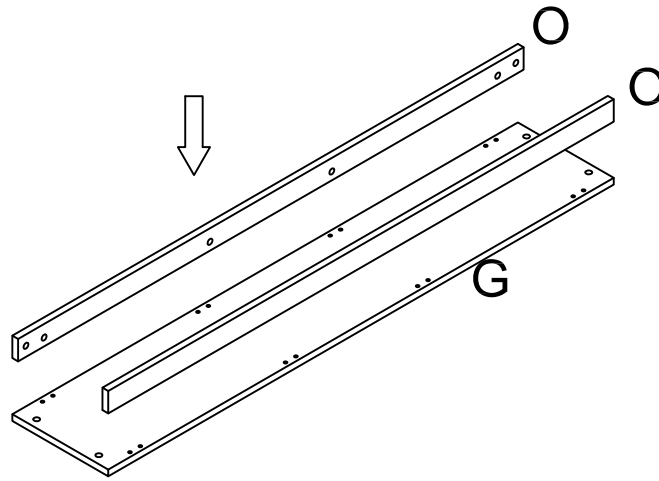

Preparation for Panels O and G.

1. Connect Cam bolts and dowels on panel O to the holes on panel G and tighten in a clockwise direction as illustrated above.

STEP 2

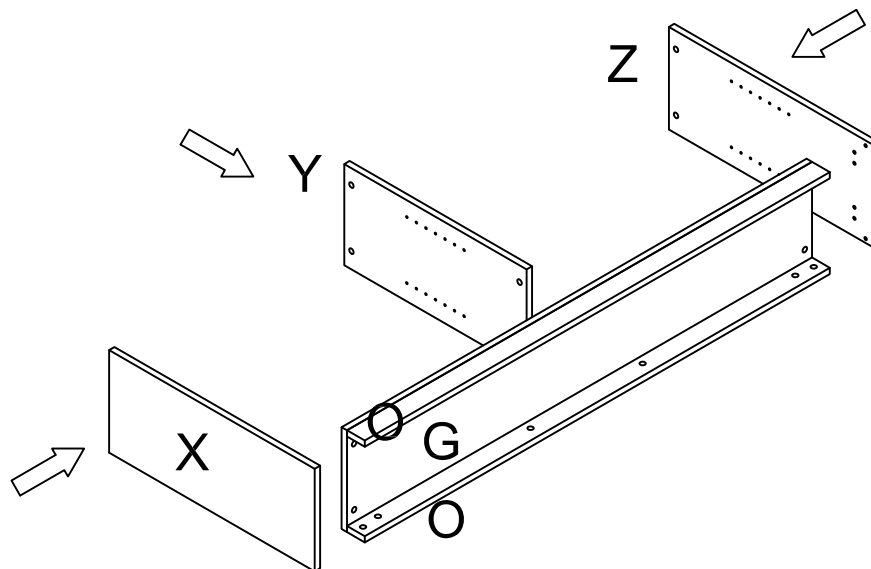


Preparation for Panels X,Z and Y.

1. Connect Cam bolts and dowels on panel Y to the holes on panel G and tighten in a clockwise direction as illustrated above.

2. Connect Cam bolts and dowels on panel O and G to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 3

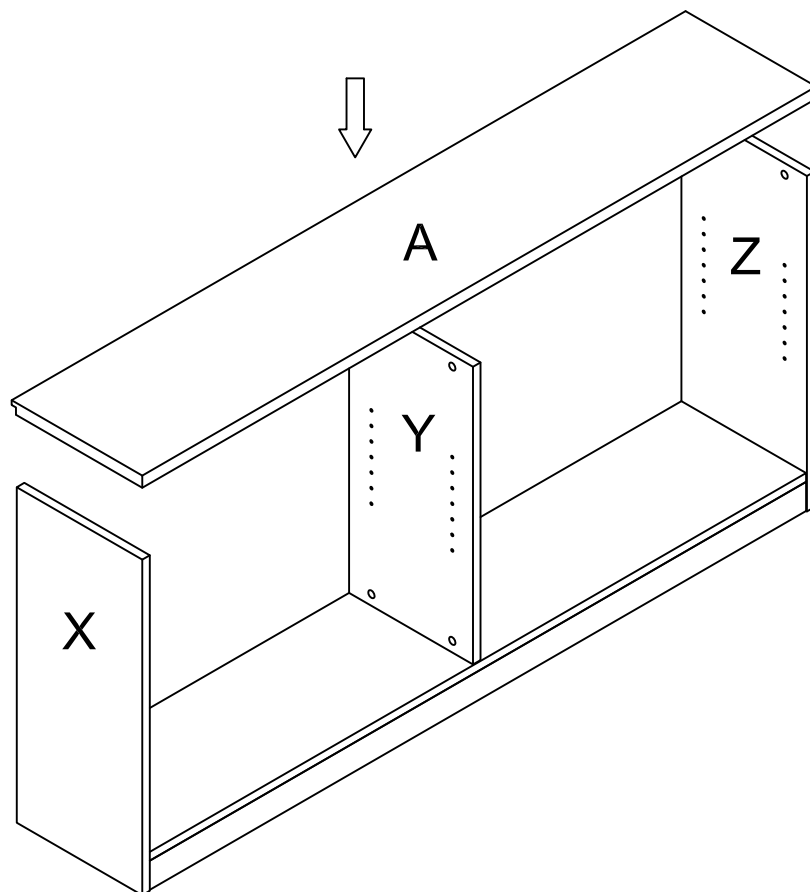

Preparation for Panels A.

1. Connect Cam bolts and dowels on panel X ,Z and Y to the holes on panel G and tighten in a clockwise direction as illustrated above.


STEP 4

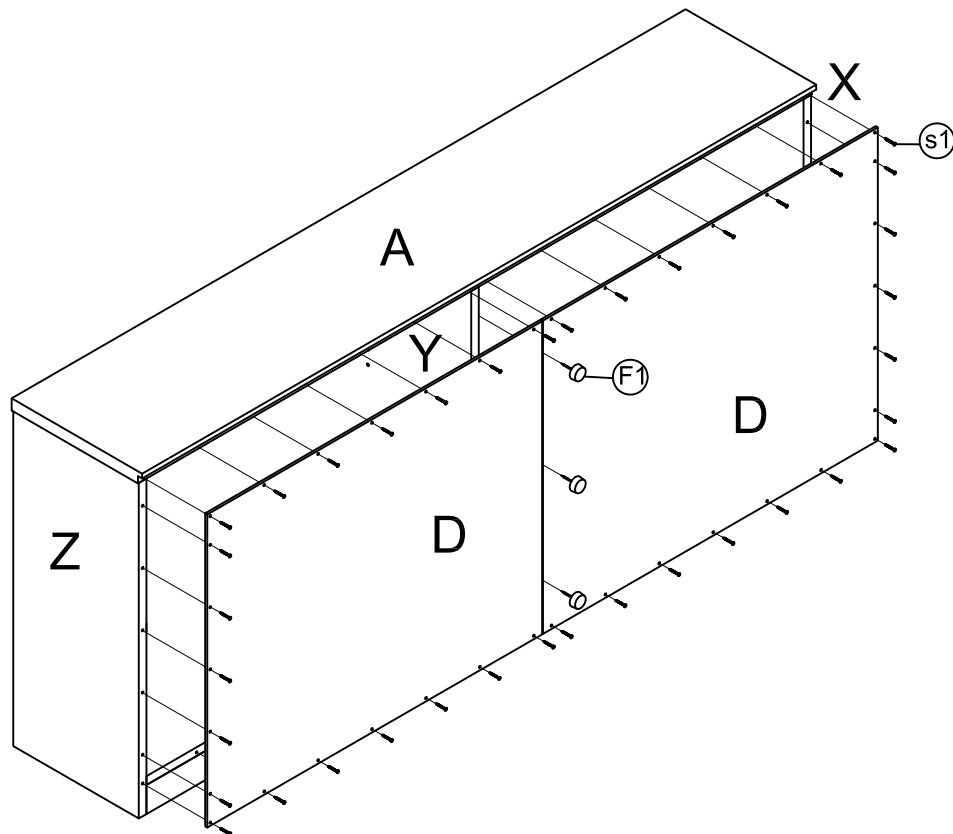

Preparation for Panels D.

1. Connect back panel D and panel X,Z,Y,G,A with screw (S1) as illustrated above.
2. Connect back panel D and panel Y with Foot nail (F1) as illustrated above.

STEP 5

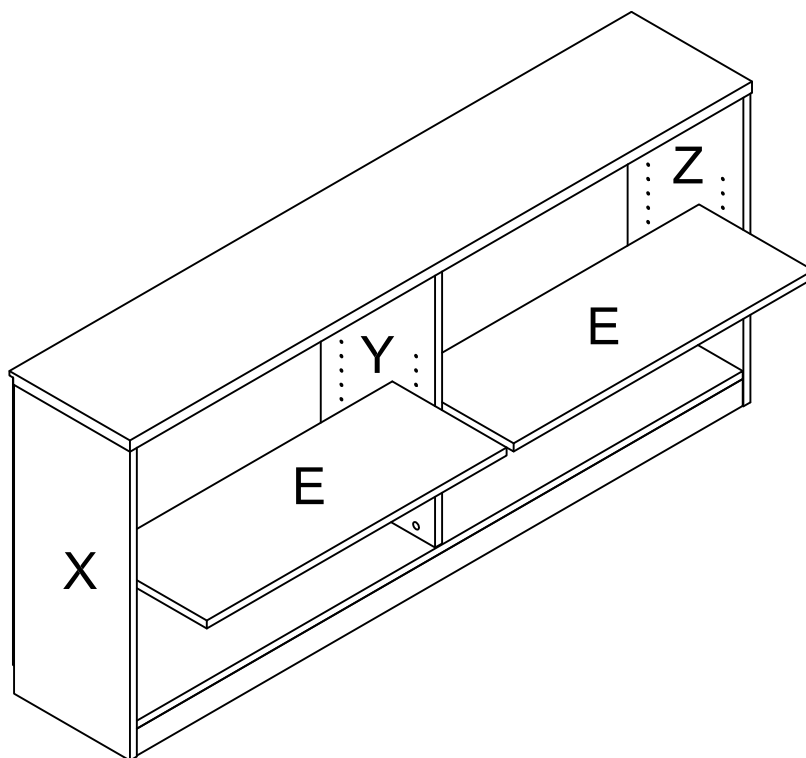


Moveable shelf E assembly.

1. Insert threaded dowel pins (p1) into panels X ,Z and ZY as illustrated above.
2. Put the three panels E on the top of threaded dowel pins (p1) as illustrated above.

You have now successfully completed the assembly on item:

Cupboard


ITEM NO. : OG-EKB167

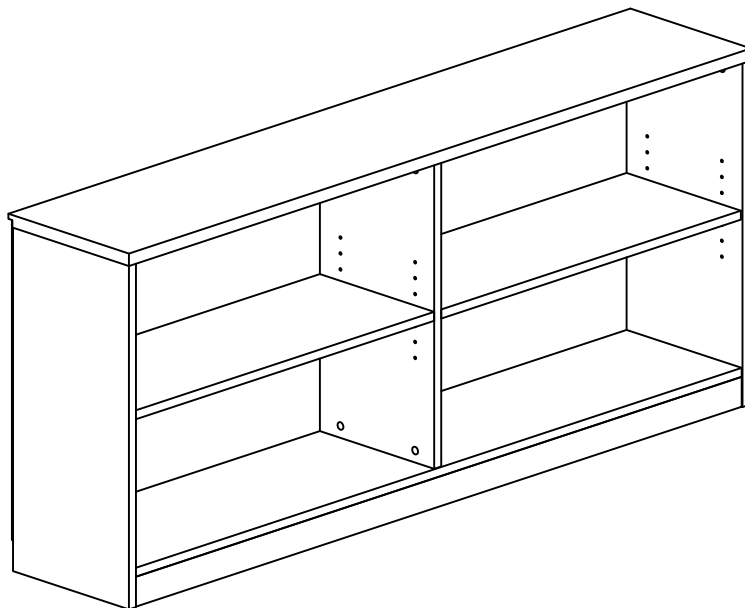


ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKB812

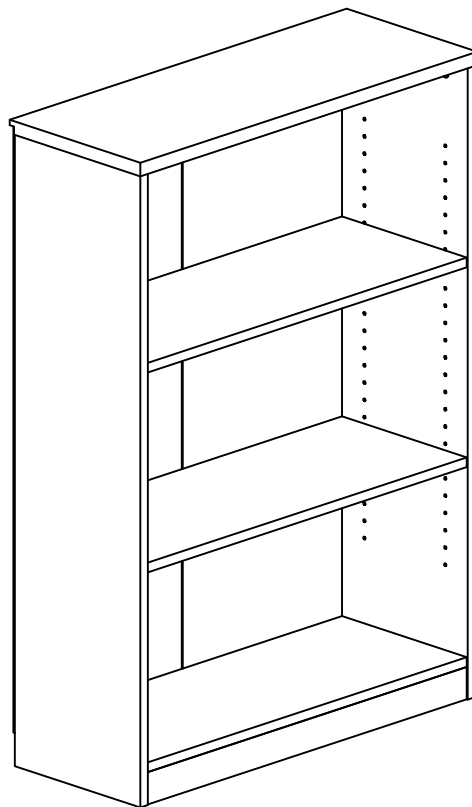


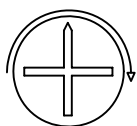

The turning direction of attaching



The arrow direction=front

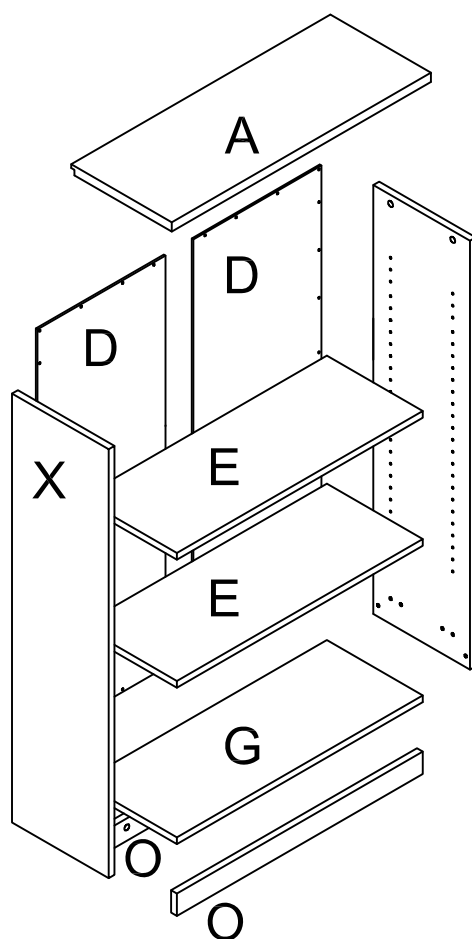

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	($\frac{5}{8}$ ") Cam Cover	16
X	Left side panel	1	(p1)	Threaded Dowel Pin	8
Z	Right side panel	1	(S1)	3.5*14 Screw	32
D	Back panel	2	(b1)	Backing Strip	1
G	Bottom panel	1			
E	Moveable shelf	2			
O	Batten	2			



(c2) ($\frac{5}{8}$ ") Cam Cover-16



(S1) 3.5*14 Screw-32




(p1) Threaded Dowel Pin-8




(b1) Backing Strip-1

Pre-installed parts



(c5) Cam


STEP 1

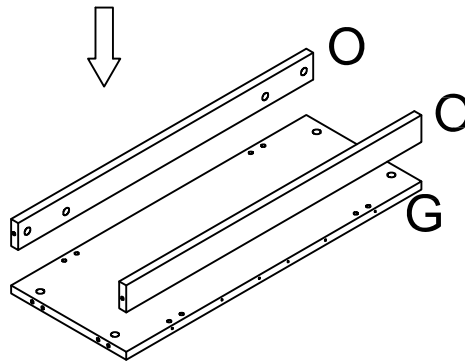

Preparation for Panels O and G.

1. Connect Cam bolts and dowels on panel O to the holes on panel G and tighten in a clockwise direction as illustrated above.


STEP 2

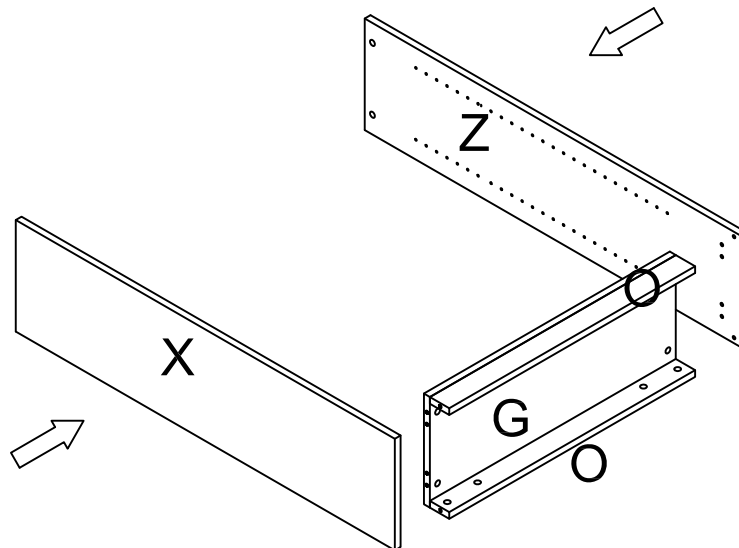

Preparation for Panels X and Z.

1. Connect Cam bolts and dowels on panel O and G to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 3

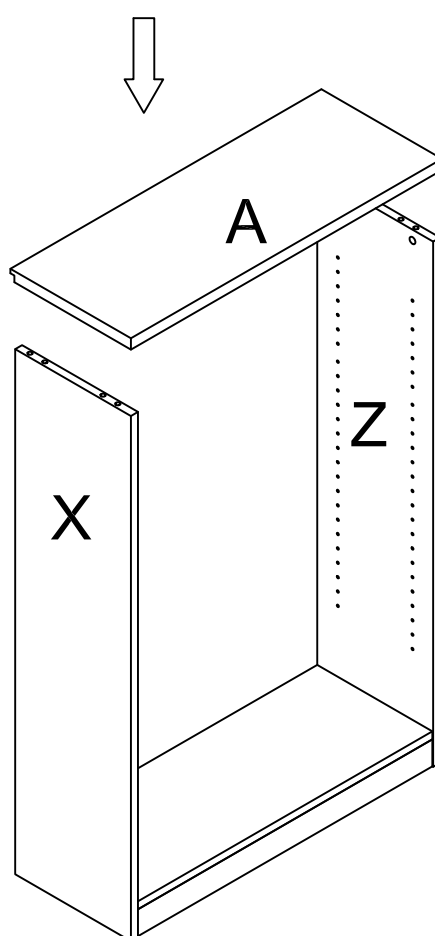

Preparation for Panels A.

1. Connect Cam bolts and dowels on panel X and Z to the holes on panel A and tighten in a clockwise direction as illustrated above.


STEP 4

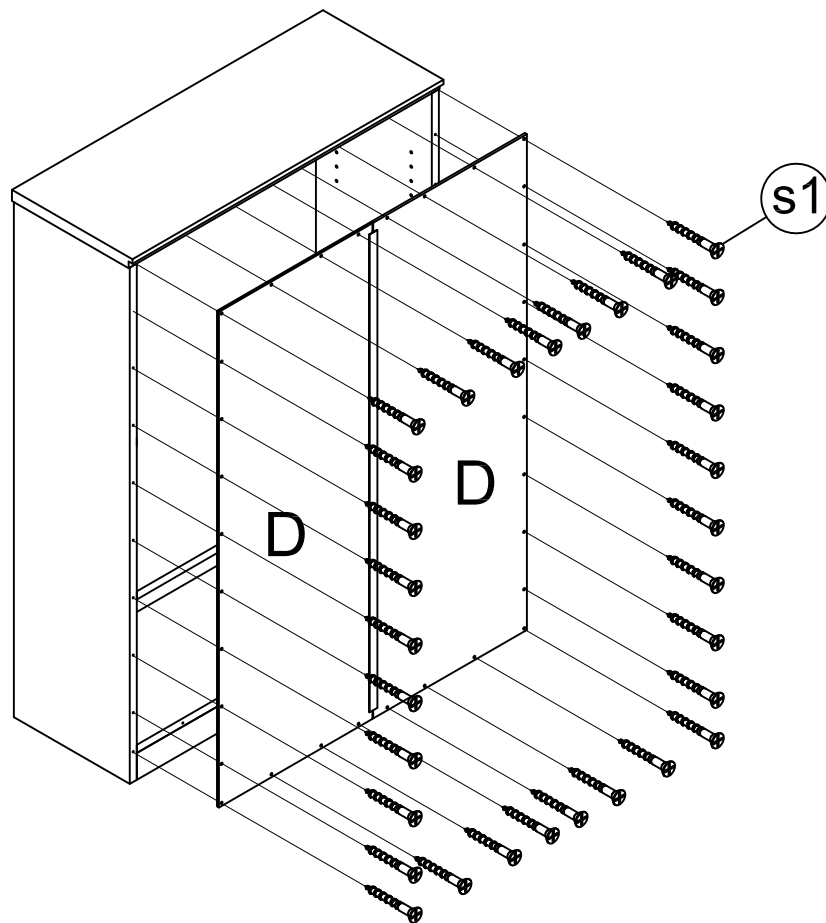

Bookcase back panel D assembly.

1. Connect back panel D and panel X,Z,G,A with screw (s1) as illustrated above.

STEP 5

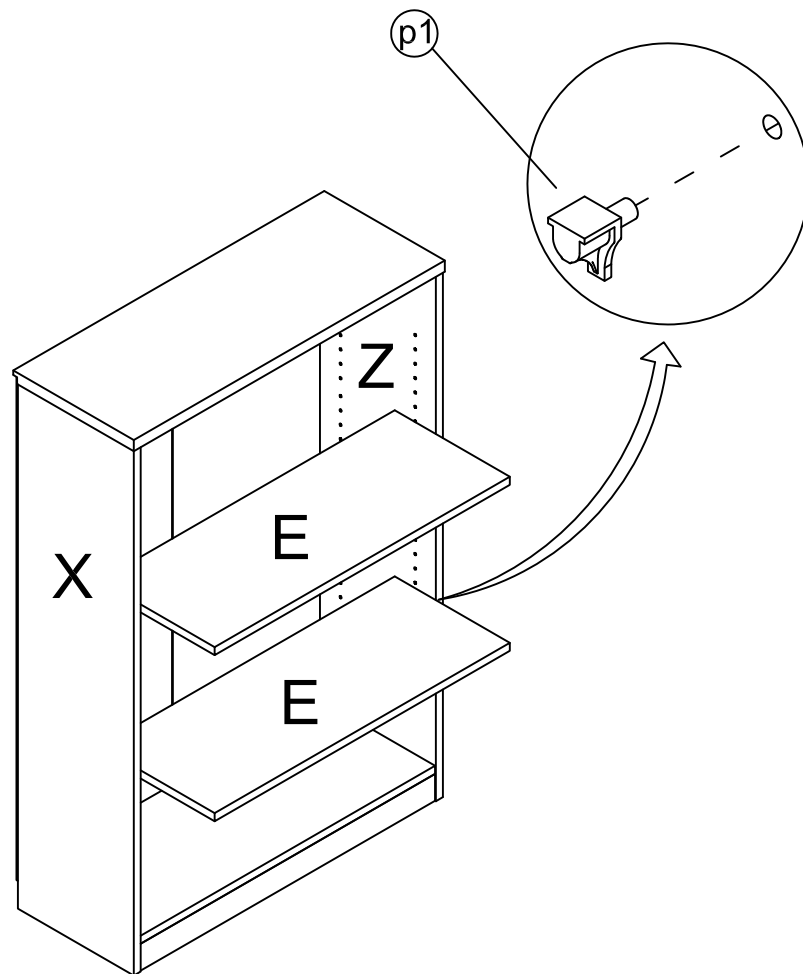


Moveable shelf E assembly.

1. Insert threaded dowel pins (p1) into panels X and Z as illustrated above.
2. Put the two panels E on the top of threaded dowel pins (p1) as illustrated above.

You have now successfully completed the assembly on item:

Cupboard


ITEM NO. : OG-EKB812

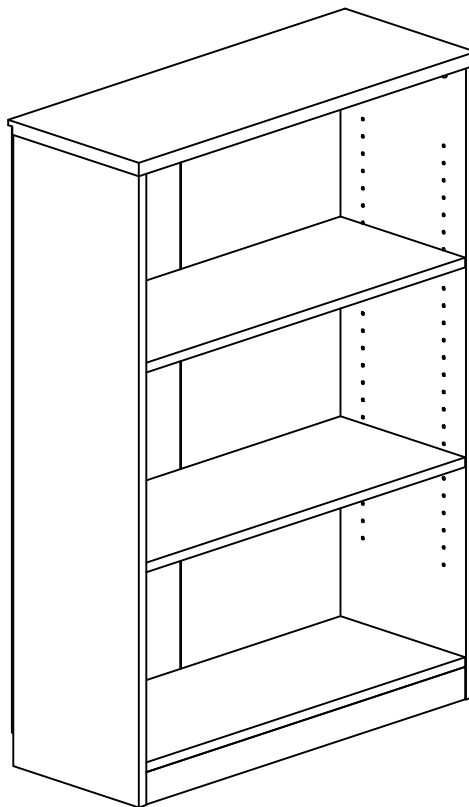


ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKB818

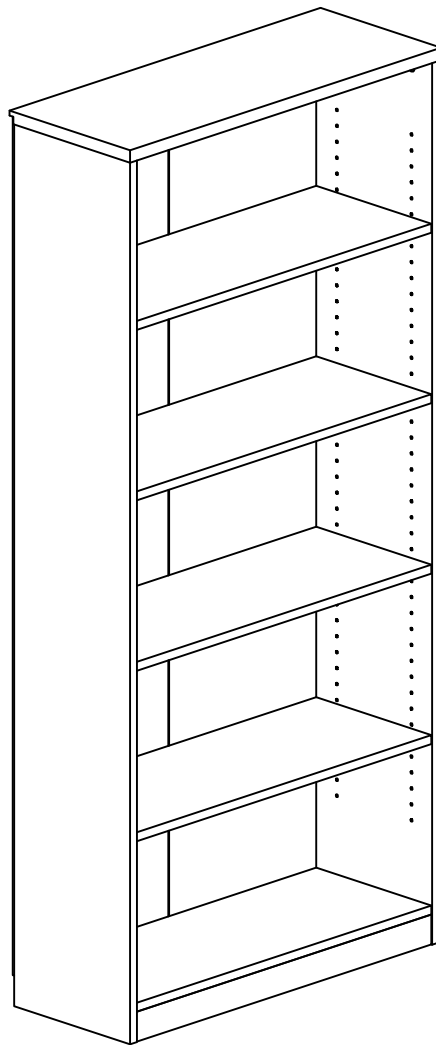


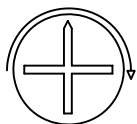

The turning direction of attaching



The arrow direction=front

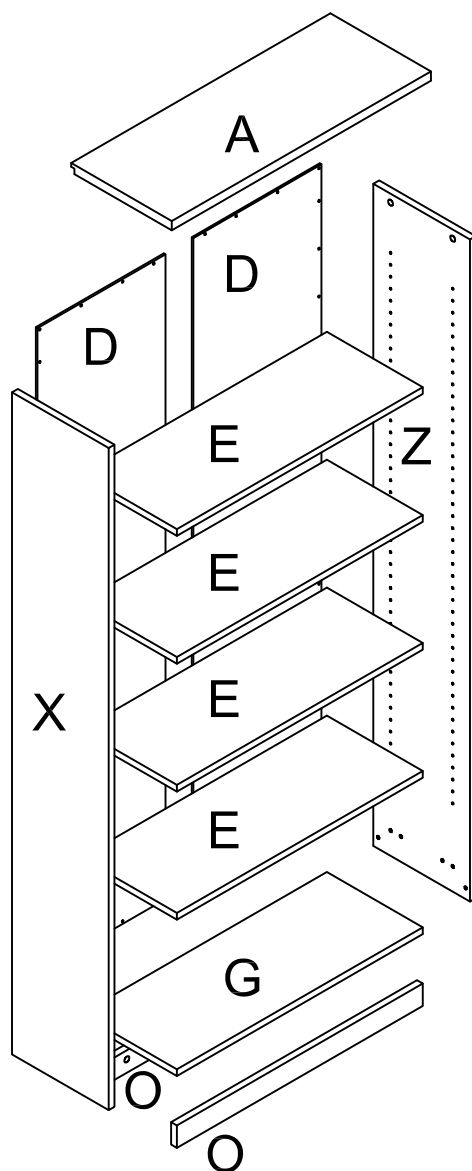

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	(5/8") Cam Cover	16
X	Left side panel	1	(p1)	Threaded Dowel Pin	16
Z	Right side panel	1	(s1)	3.5*14 Screw	42
D	Back panel	2	(b1)	Backing Strip	1
G	Bottom panel	1			
E	Moveable shelf	4			
O	Batten	2			



(c2) (5/8") Cam Cover-16



(s1) 3.5*14 Screw-42




(p1) Threaded Dowel Pin-16




(b1) Backing Strip-1

Pre-installed parts



(c5) Cam


STEP 1

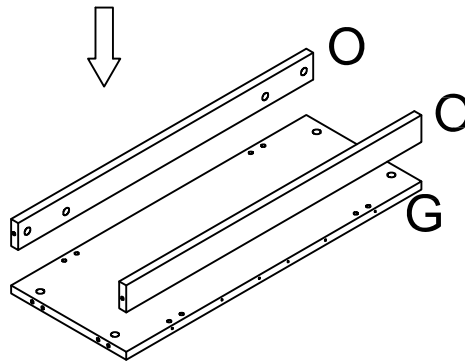

Preparation for Panels O and G.

1. Connect Cam bolts and dowels on panel O to the holes on panel G and tighten in a clockwise direction as illustrated above.


STEP 2

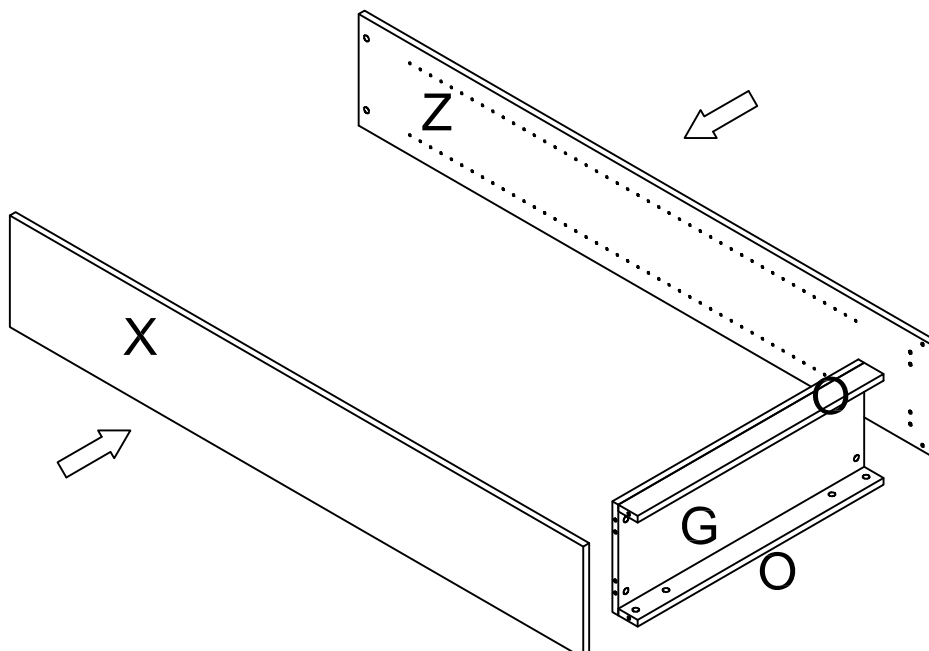

Preparation for Panels X and Z.

1. Connect Cam bolts and dowels on panel O and G to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 3

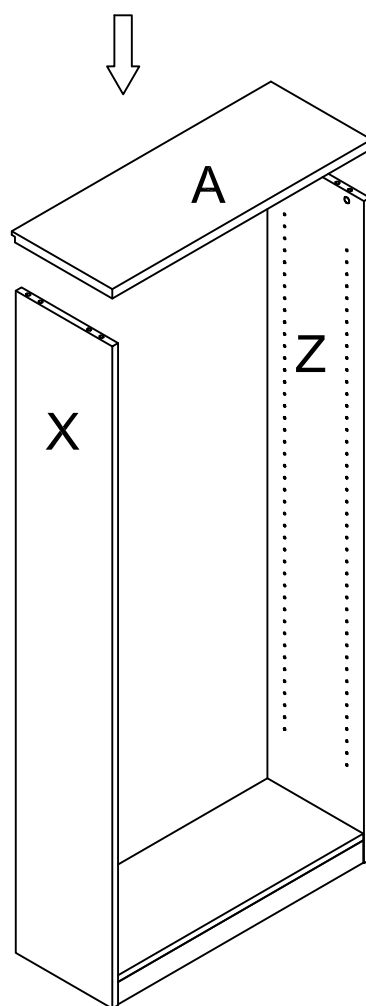

Preparation for Panels A.

1. Connect Cam bolts and dowels on panel X and Z to the holes on panel A and tighten in a clockwise direction as illustrated above.


STEP 4

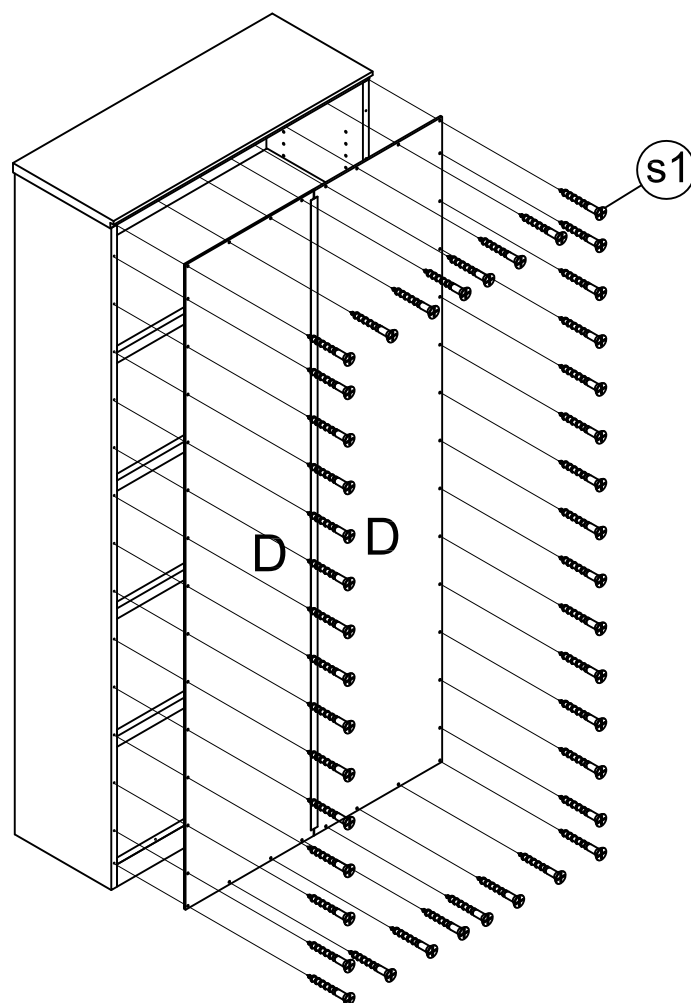

Bookcase back panel D assembly.

1. Connect back panel D and panel X,Z,G,A with screw (s1) as illustrated above.

STEP 5

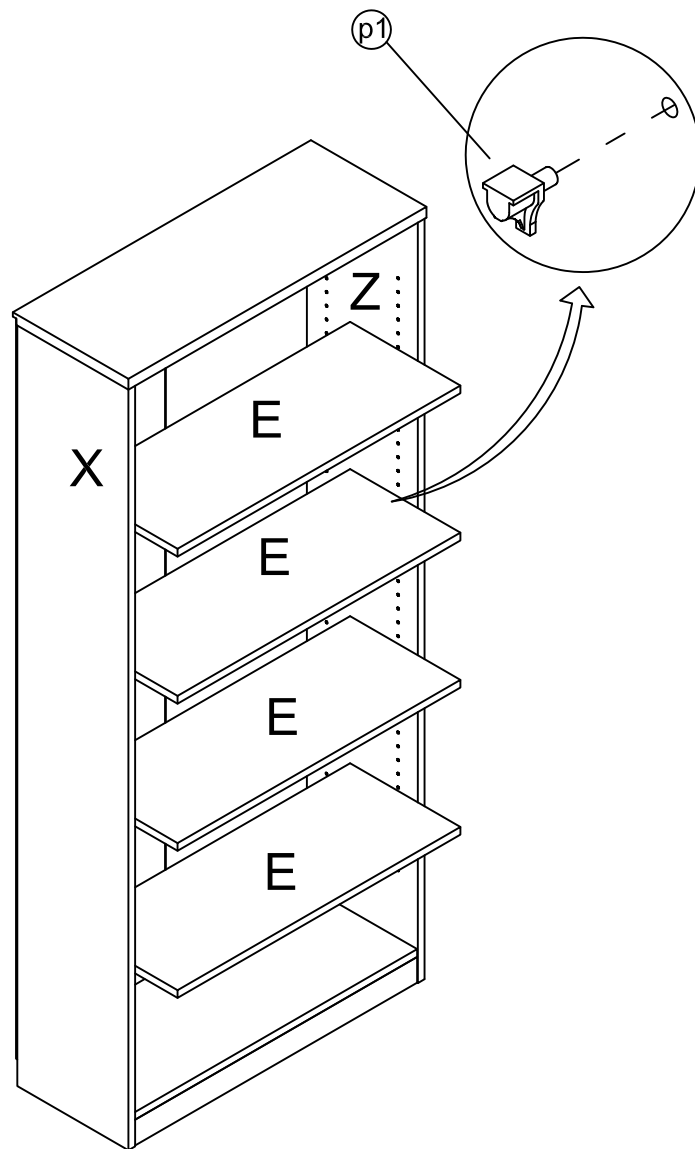


Moveable shelf E assembly.

1. Insert threaded dowel pins (p1) into panels X and Z as illustrated above.
2. Put the two panels E on the top of threaded dowel pins (p1) as illustrated above.

You have now successfully completed the assembly on item:

Cupboard


ITEM NO. : OG-EKB818

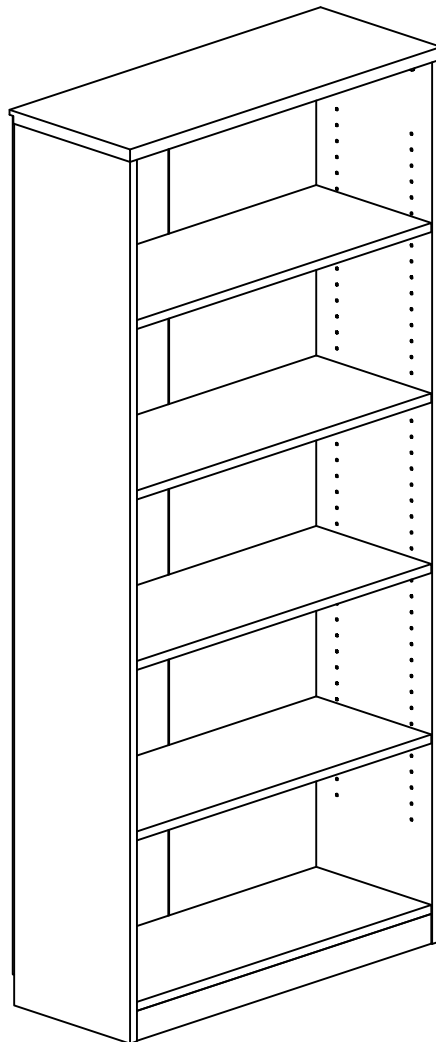

ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKC812

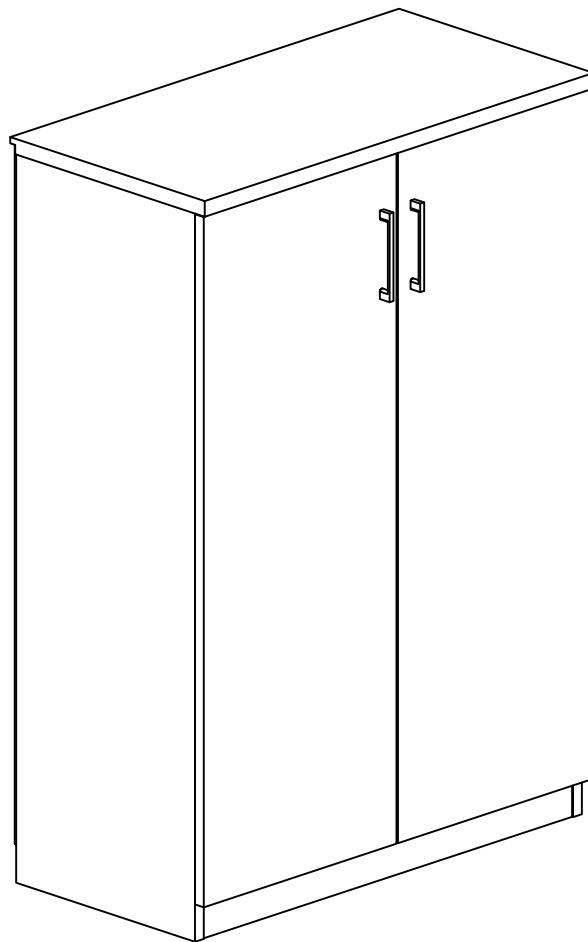




The turning direction of attaching



The arrow direction=front

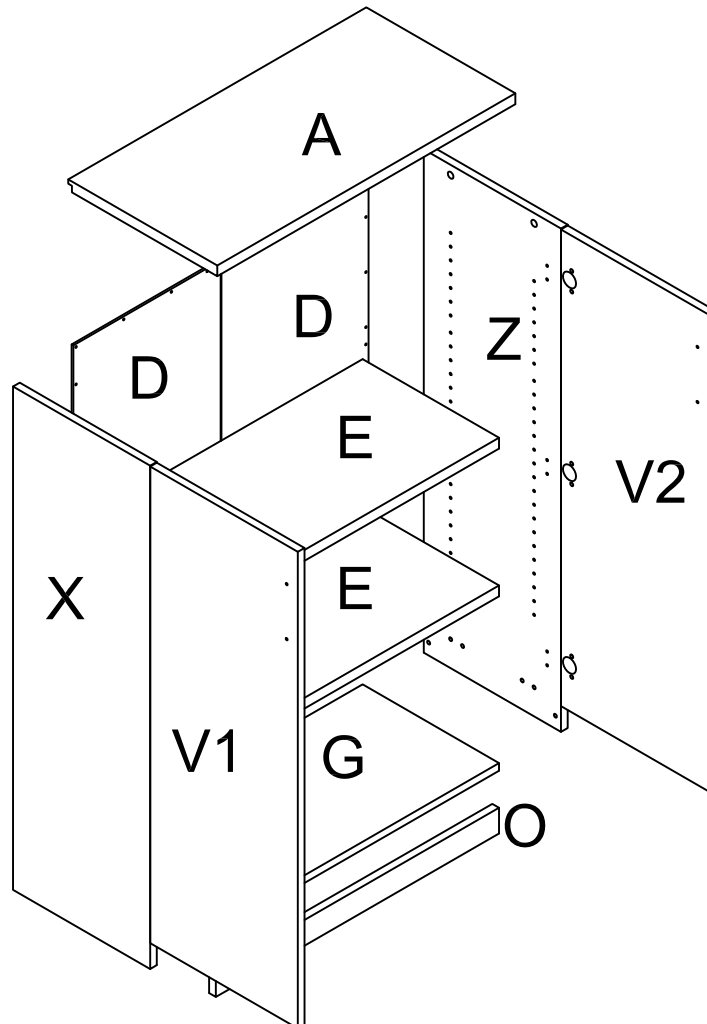

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	($\frac{5}{8}$ ") Cam Cover	16
X	Left side panel	1	(p1)	Threaded Dowel Pin	8
Z	Right side panel	1	(s1)	3.5*14 Screw	32
D	Back panel	2	(b1)	Backing Strip	1
G	Bottom panel	1	(s2)	4*16 Screw	24
E	Moveable shelf	2	(s3)	4*22 Fix Bolt	4
O	Batten	2	(g4)	Hinge Body	6
V1	Door panel	1	(g1)	Hinge Stand	6
V2	Door panel	1	(h4)	Handle	2



(c2) ($\frac{5}{8}$ ") Cam Cover-16



(s1) 3.5*14 Screw-32



(p1) Threaded Dowel Pin-8




(b1) Backing Strip-1




(s2) 4*16 Screw-24




(s3) 4*22 Fix Bolt-4



(h4) Handle-2

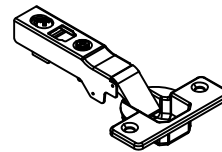


(g4) Hinge Body-6




(g1) Hinge Stand-6

Pre-installed parts



(c5) Cam


STEP 1

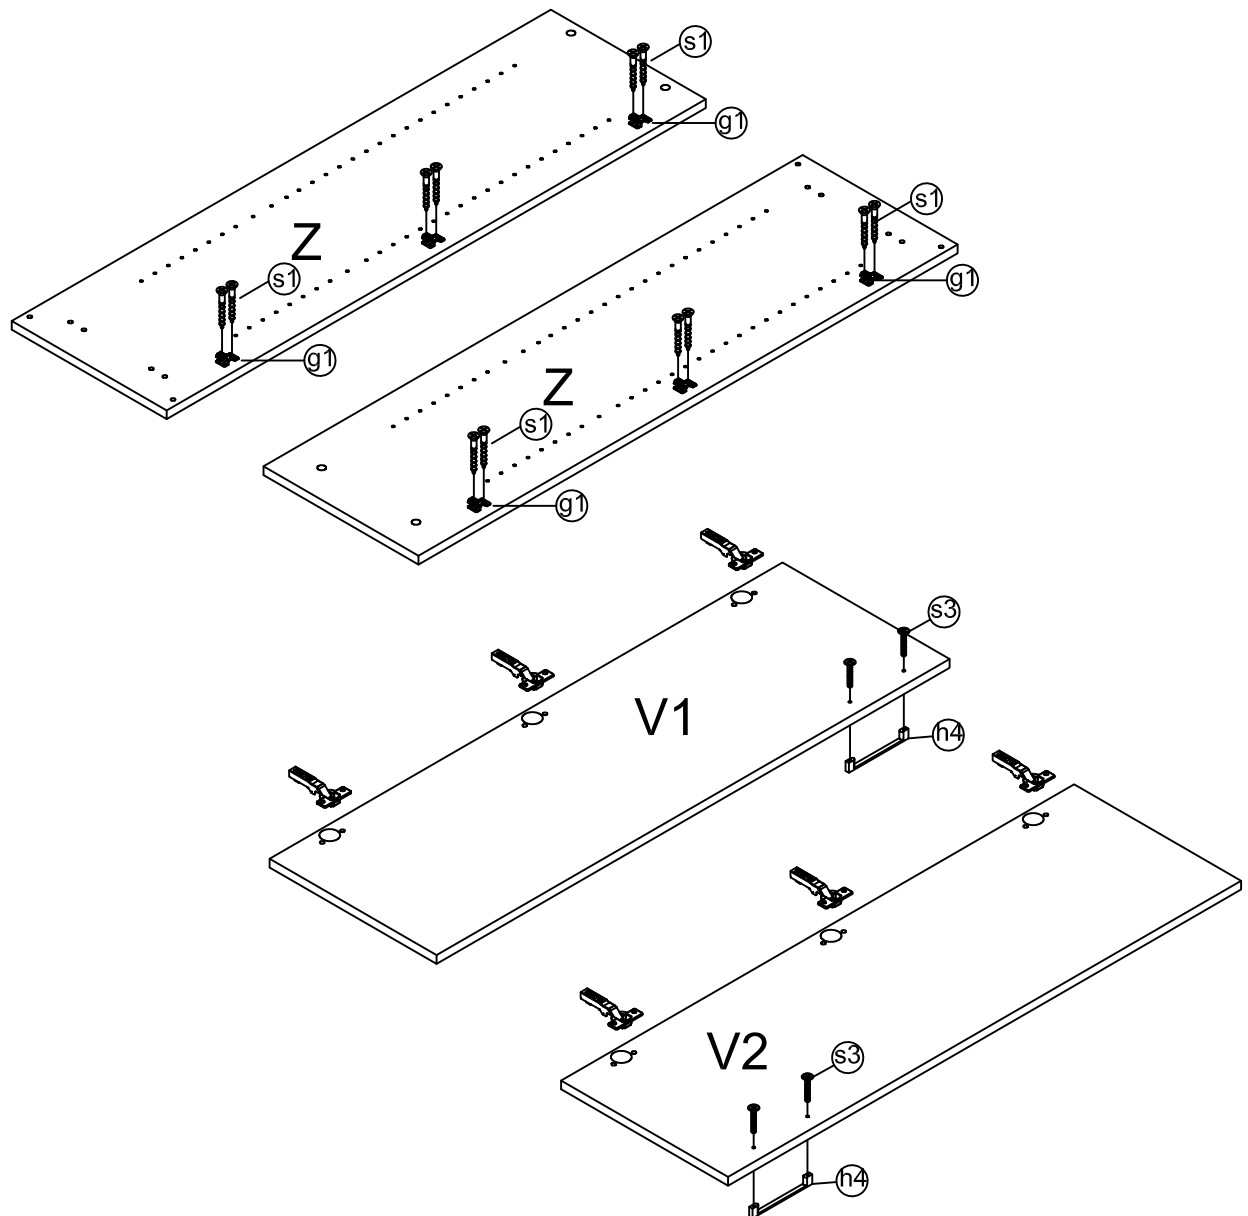

Preparation for Panels X, Z, V1 and V2.

2. Fix hinge stands (g1) to panels X, Z with screws (s1) as illustrated above.
3. Press the hinge (g4) with pre-installed screws onto panel V1 and V2 perforations using a tool making sure is aligned before fitting
4. Fix handles (h4) to panels V1 and V2 with fix bolts (s3) as illustrated above.


STEP 2

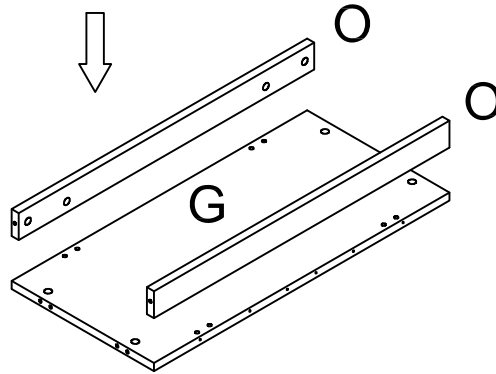

Preparation for Panels O and G.

1. Connect Cam bolts and dowels on panel O to the holes on panel G and tighten in a clockwise direction as illustrated above.


STEP 3

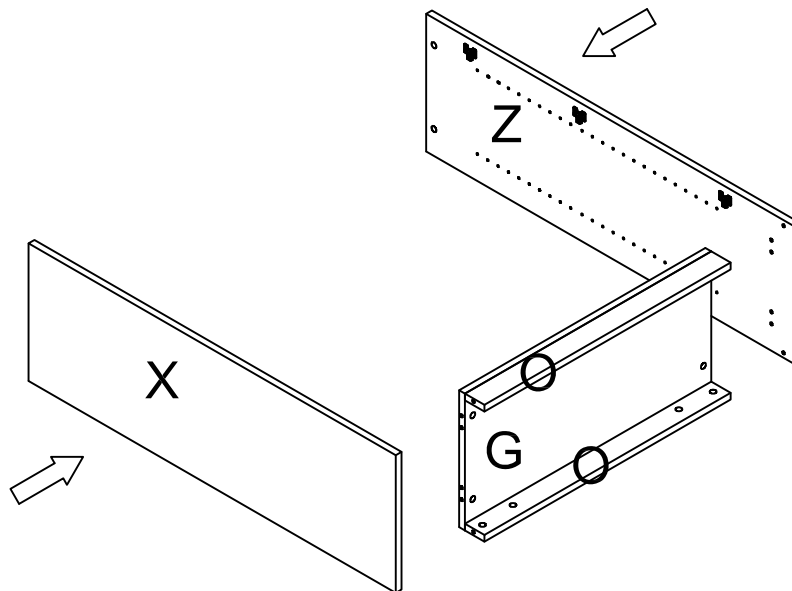

Preparation for Panels X and Z.

1. Connect Cam bolts and dowels on panel O and G to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 4

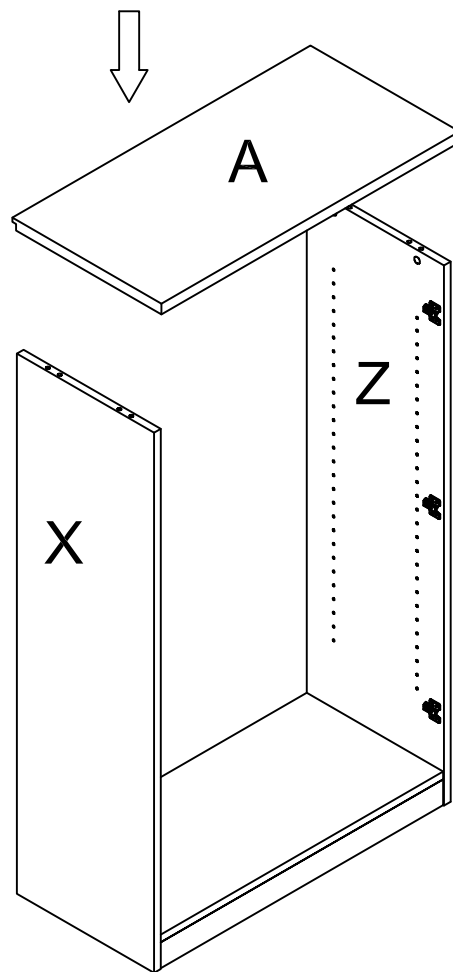

Preparation for Panels A.

1. Connect Cam bolts and dowels on panel X and Z to the holes on panel A and tighten in a clockwise direction as illustrated above.


STEP 5

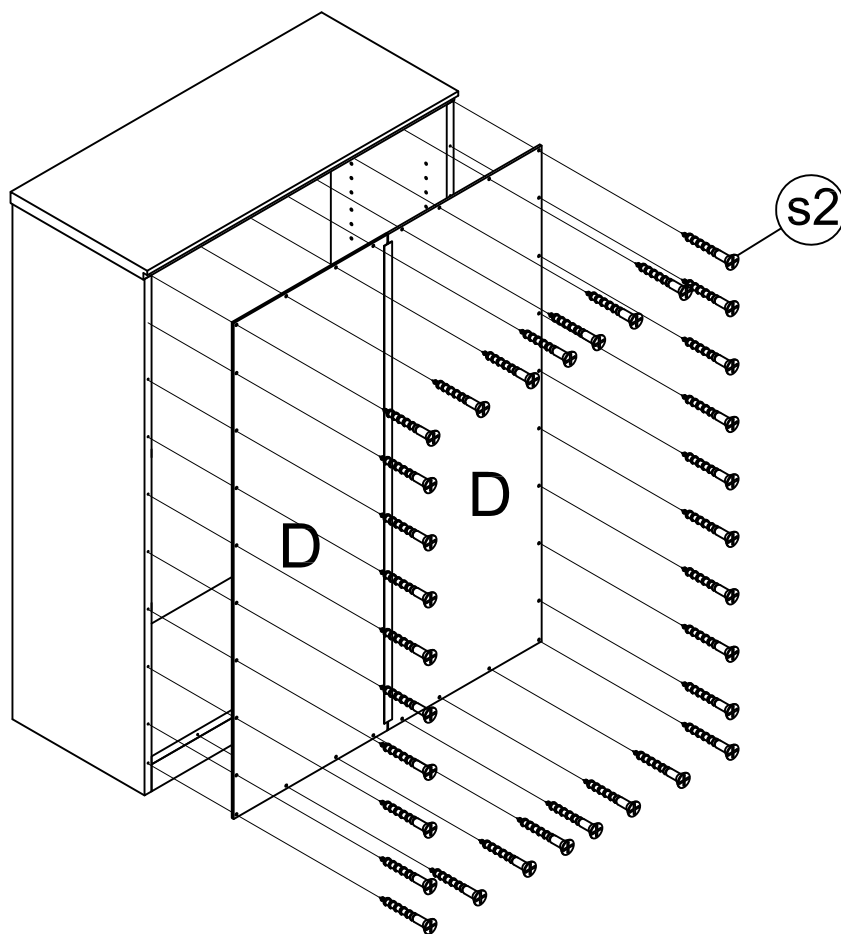

Bookcase back panel D assembly.

1. Connect back panel D and panel X,Z,G,A with screw (s1) as illustrated above.


STEP 6

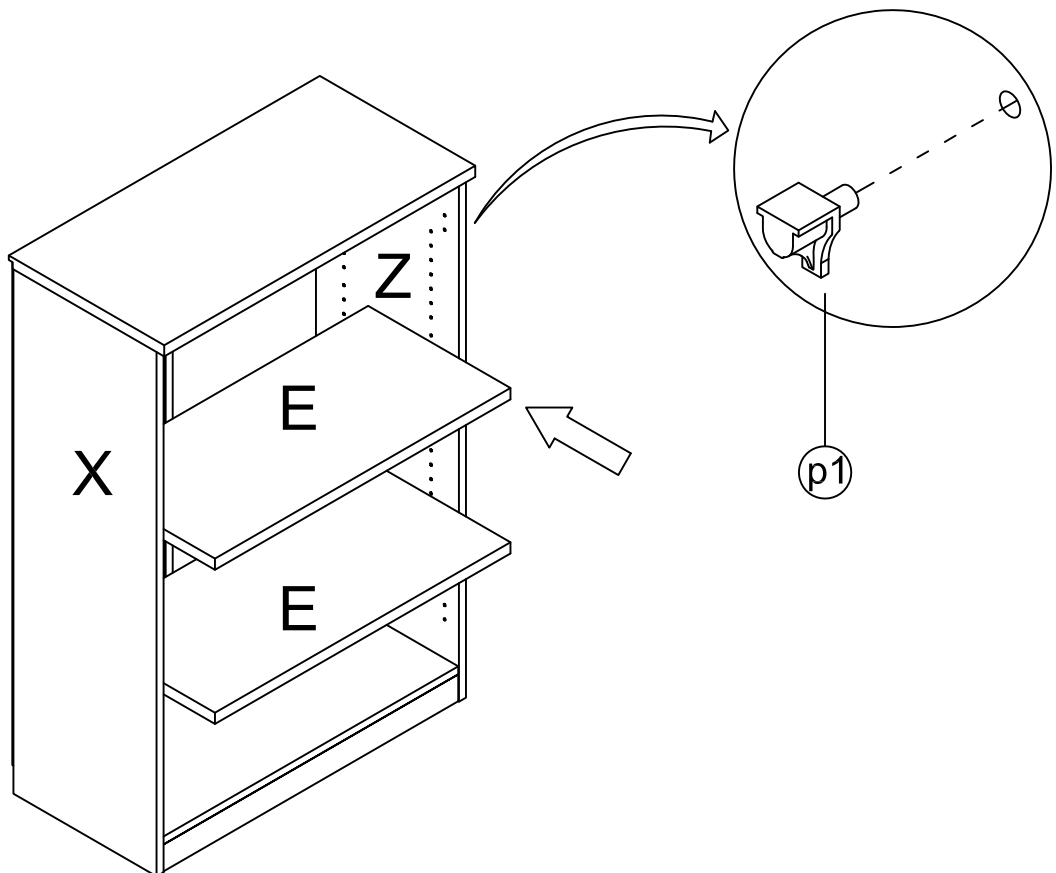

Moveable shelf E assembly.




1. Insert threaded dowel pins (p1) into panels X ,D and Z as illustrated above.
2. Put the three panels E on the top of threaded dowel pins (p1) as illustrated above.

STEP 7

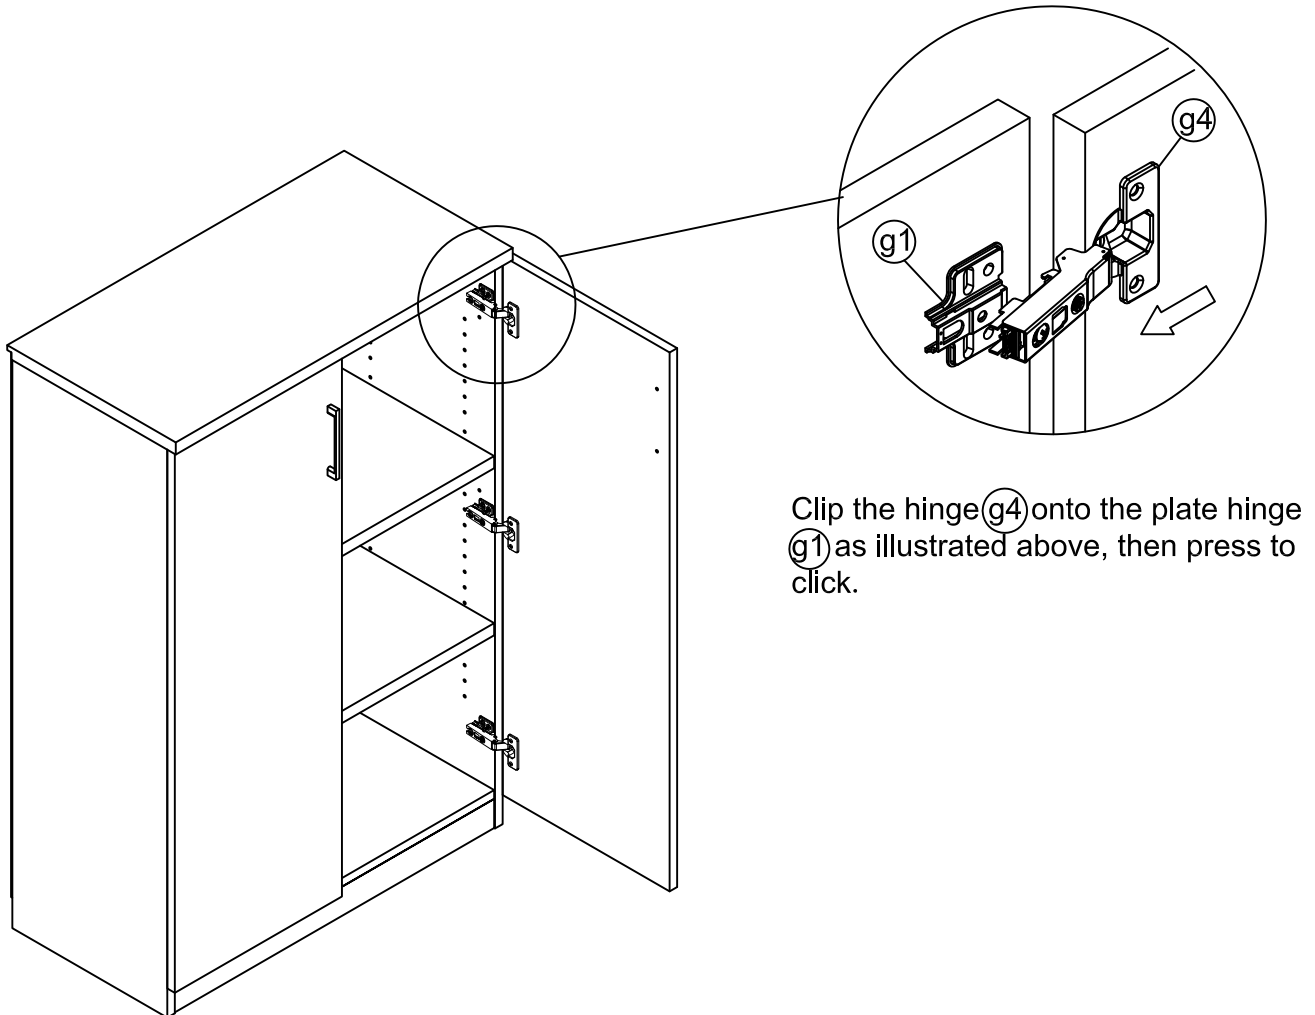

Door Panel V1 and V2 assembly


Hinge assembly detail as below
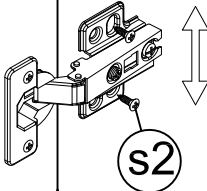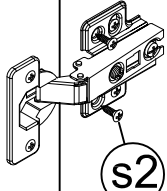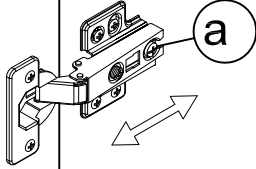
<p>1</p> 	<p>2</p> 	<p>3</p> 
<p>Fix the screws (s2) into the predrilled hole shown above, and then adjust the door panel upward and downward to the right location.</p>	<p>Fix the rest 2 pcs screws (s2) to the panel to consolidate the hinge shown above</p>	<p>Loosen the screw (a) to adjust the forward and backward of the door panel to the right location, and then tighten the screw (a).</p>

You have now successfully completed the assembly on item:

Cupboard


ITEM NO. : OG-EKC818

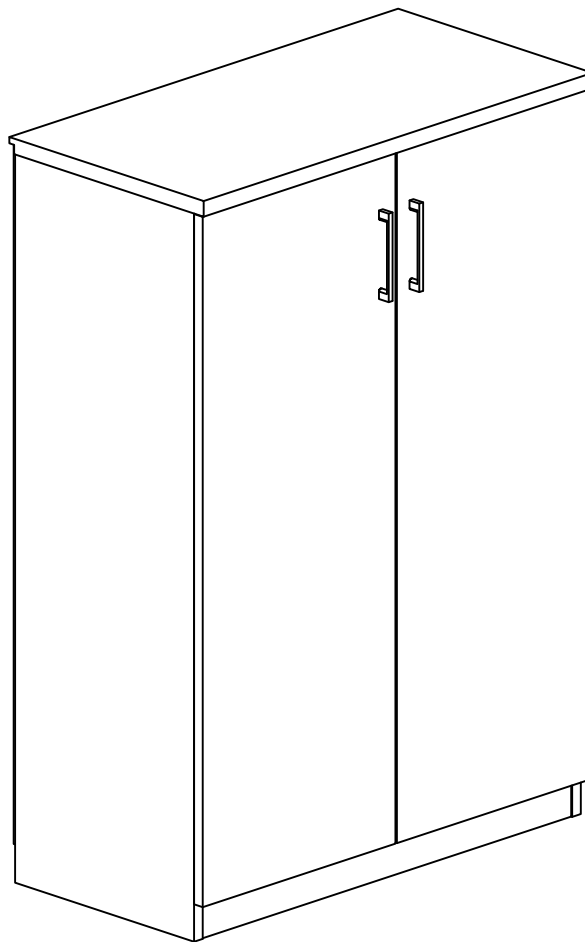

ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKC818

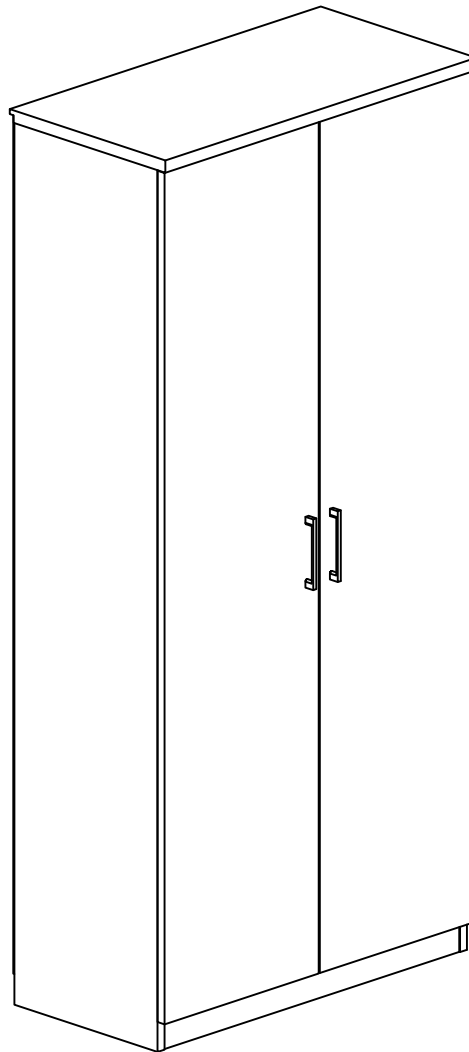




The turning direction of attaching



The arrow direction=front

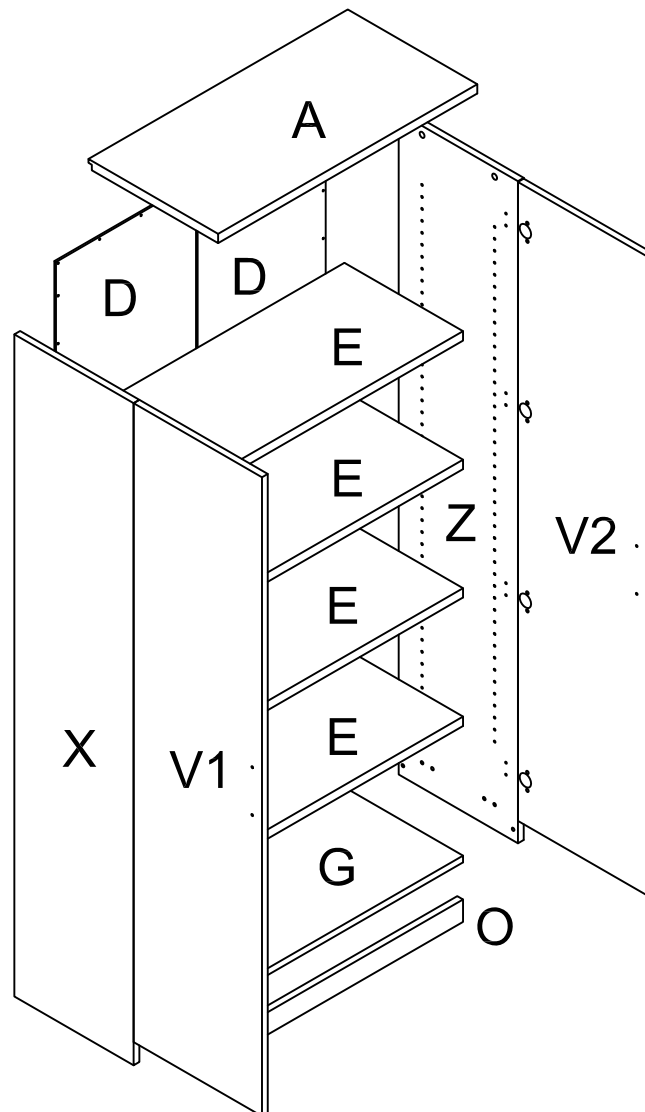

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	($\frac{5}{8}$ ") Cam Cover	16
X	Left side panel	1	(p1)	Threaded Dowel Pin	16
Z	Right side panel	1	(s1)	3.5*14 Screw	42
D	Back panel	2	(b1)	Backing Strip	1
G	Bottom panel	1	(s2)	4*16 Screw	32
E	Moveable shelf	4	(s3)	4*22 Fix Bolt	4
O	Batten	2	(g4)	Hinge Body	8
V1	Door panel	1	(g1)	Hinge Stand	8
V2	Door panel	1	(h4)	Handle	2



(c2) ($\frac{5}{8}$ ") Cam Cover-16



(s1) 3.5*14 Screw-42



(p1) Threaded Dowel Pin-16




(b1) Backing Strip-1




(s2) 4*16 Screw-32




(s3) 4*22 Fix Bolt-4



(h4) Handle-2

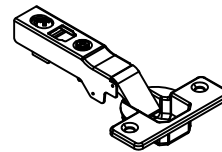


(g4) Hinge Body-8




(g1) Hinge Stand-8

Pre-installed parts



(c5) Cam


STEP 1

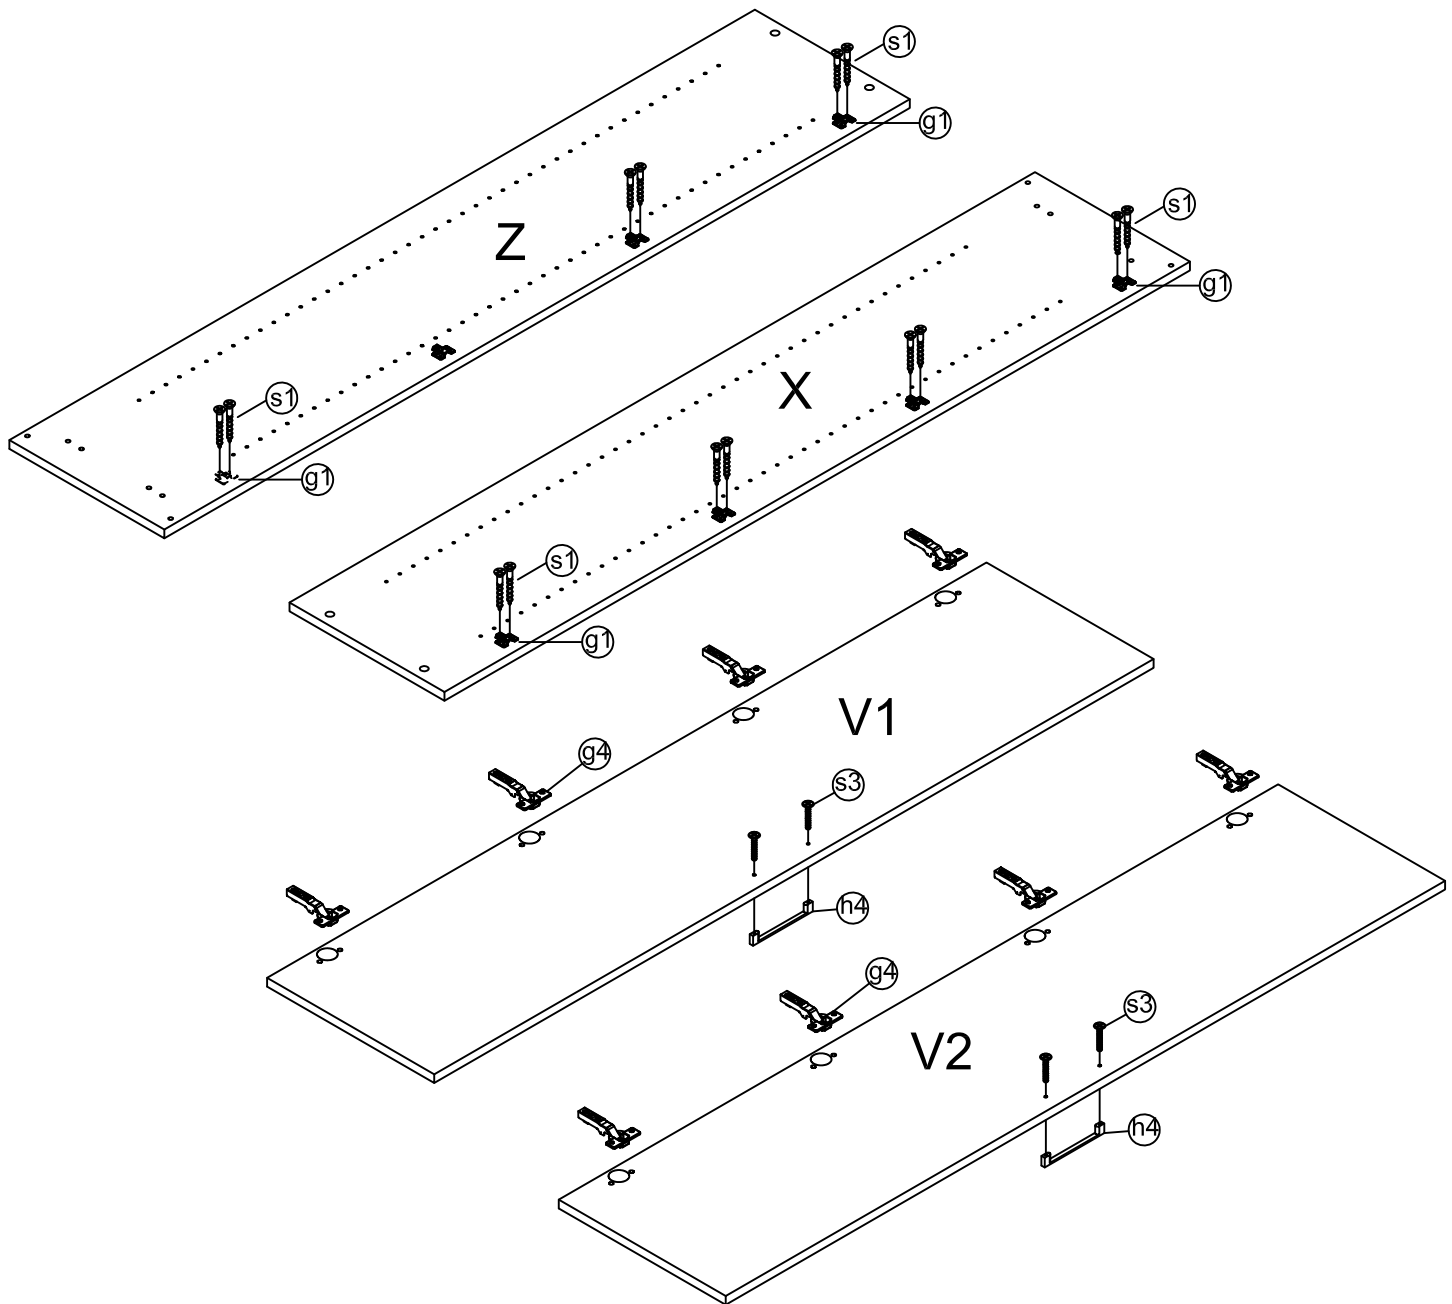

Preparation for Panels X, Z, V1 and V2.

2. Fix hinge stands (g1) to panels X, Z with screws (s2) as illustrated above.
3. Press the hinge (g4) with pre-installed screws onto panel V1 and V2 perforations using a tool making sure is aligned before fitting
4. Fix handles (h4) to panels V1 and V2 with fix bolts (s3) as illustrated above.


STEP 2

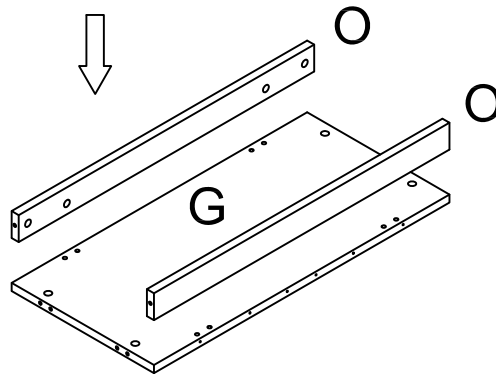

Preparation for Panels O and G.

1. Connect Cam bolts and dowels on panel O to the holes on panel G and tighten in a clockwise direction as illustrated above.


STEP 3

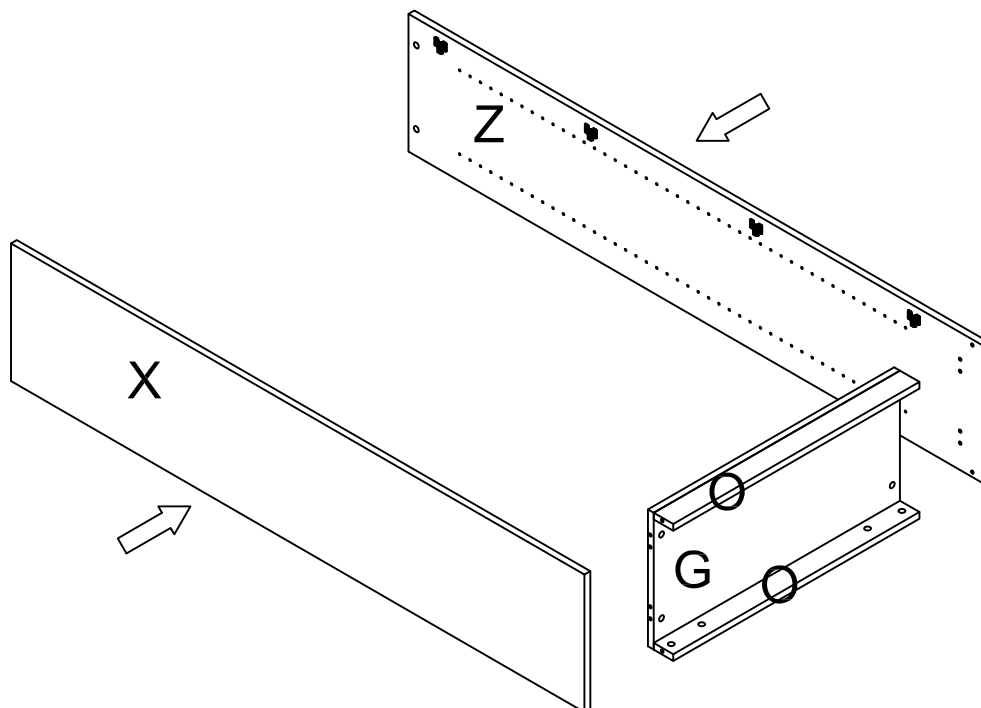

Preparation for Panels X and Z.

1. Connect Cam bolts and dowels on panel O and G to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 4

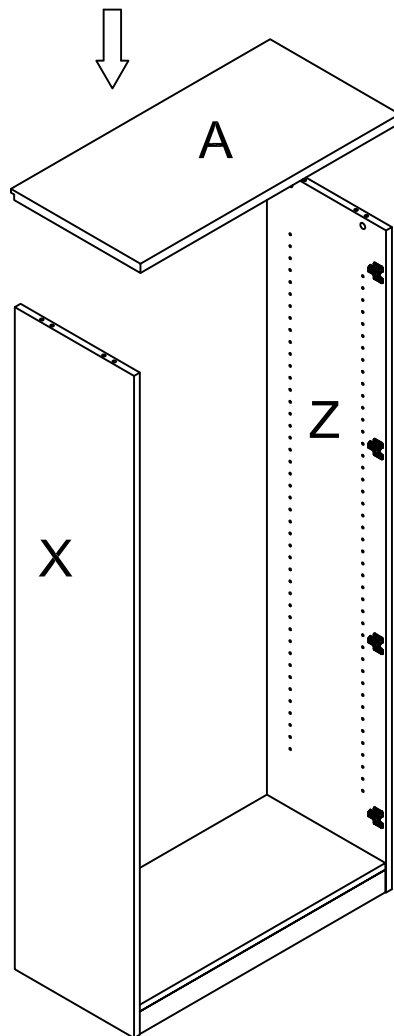

Preparation for Panels A.

1. Connect Cam bolts and dowels on panel X and Z to the holes on panel A and tighten in a clockwise direction as illustrated above.


STEP 5

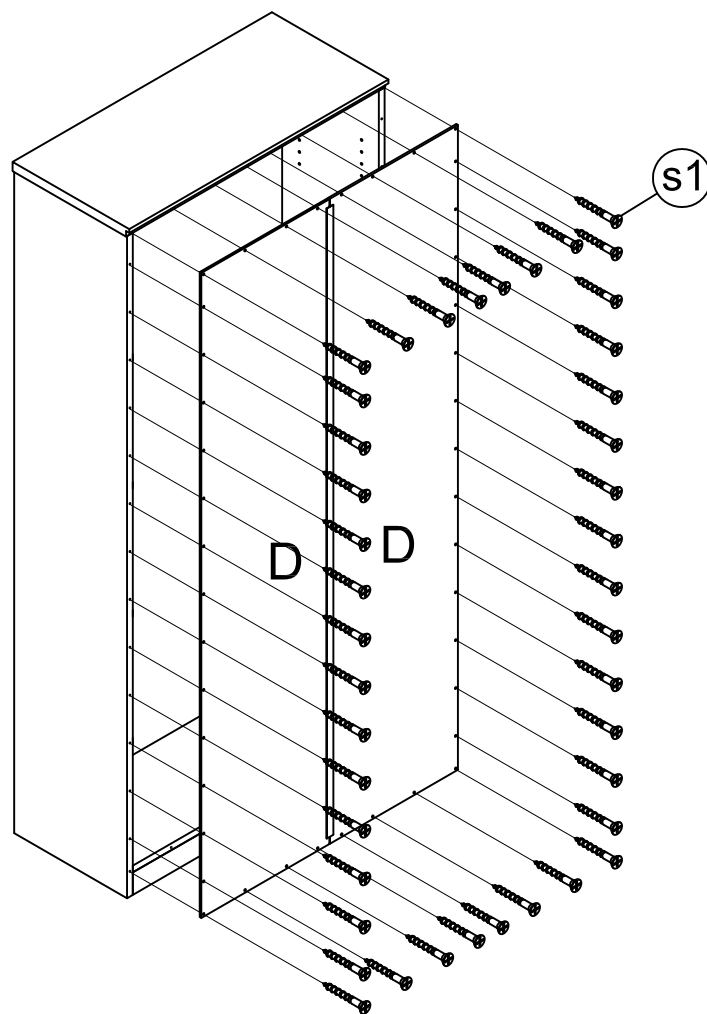

Bookcase back panel D assembly.

1. Connect back panel D and panel X,Z,G,A with screw (s1) as illustrated above.


STEP 6

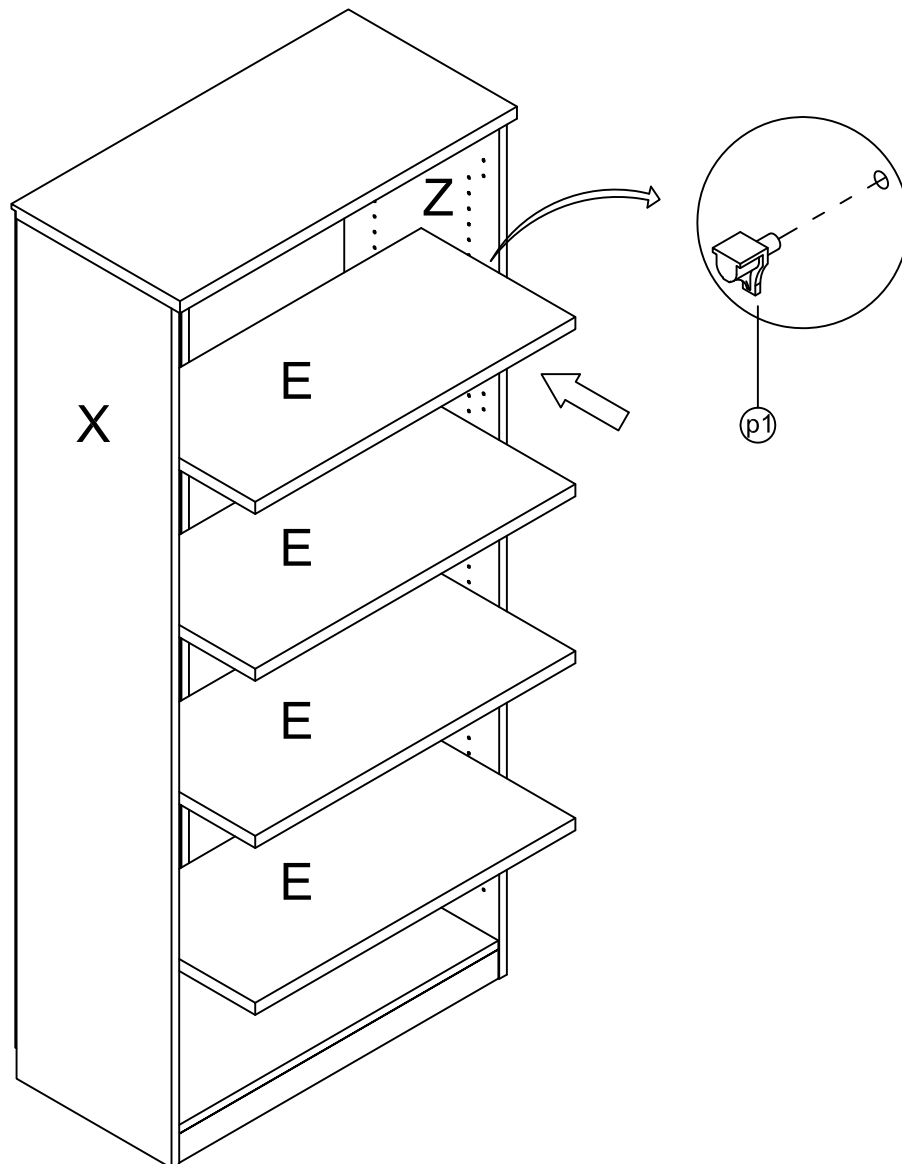

Moveable shelf E assembly.

1. Insert threaded dowel pins (p1) into panels X ,D and Z as illustrated above.
2. Put the three panels E on the top of threaded dowel pins (p1) as illustrated above.




STEP 7

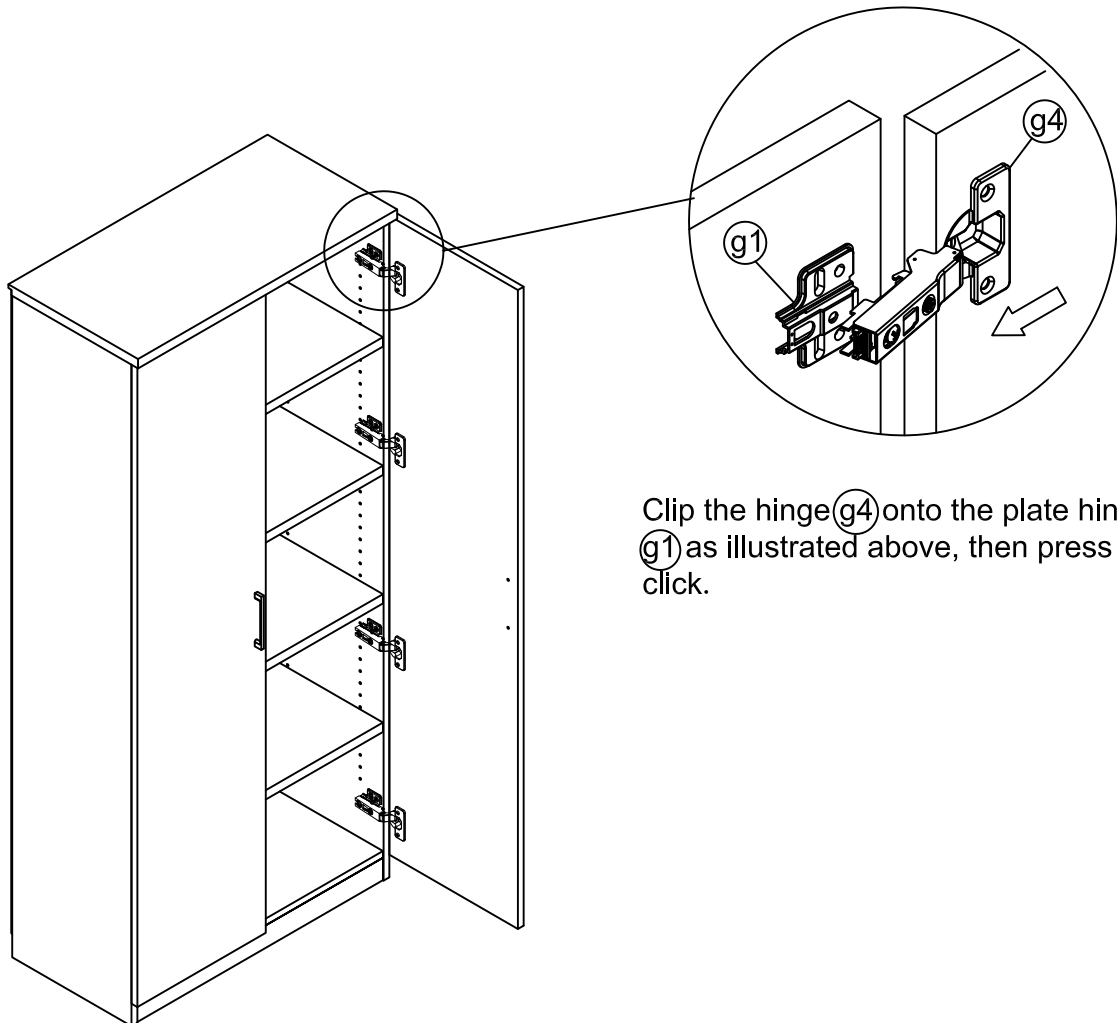

Clip the hinge (g4) onto the plate hinge (g1) as illustrated above, then press to click.

Door Panel V1 and V2 assembly


Hinge assembly detail as below
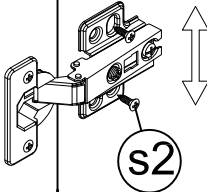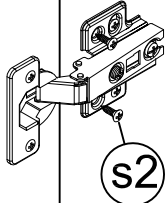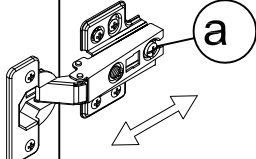
<p>1</p> 	<p>2</p> 	<p>3</p> 
<p>Fix the screws (s2) into the predrilled hole shown above, and then adjust the door panel upward and downward to the right location.</p>	<p>Fix the rest 2 pcs screws (s2) to the panel to consolidate the hinge shown above</p>	<p>Loosen the screw (a) to adjust the forward and backward of the door panel to the right location, and then tighten the screw (a).</p>

You have now successfully completed the assembly on item:

Cupboard


ITEM NO. : OG-EKC818

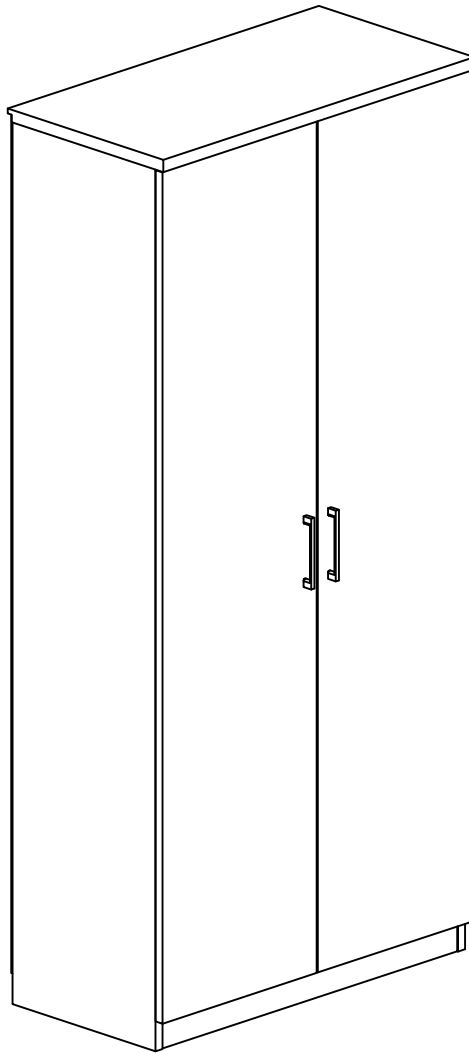


ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKMB

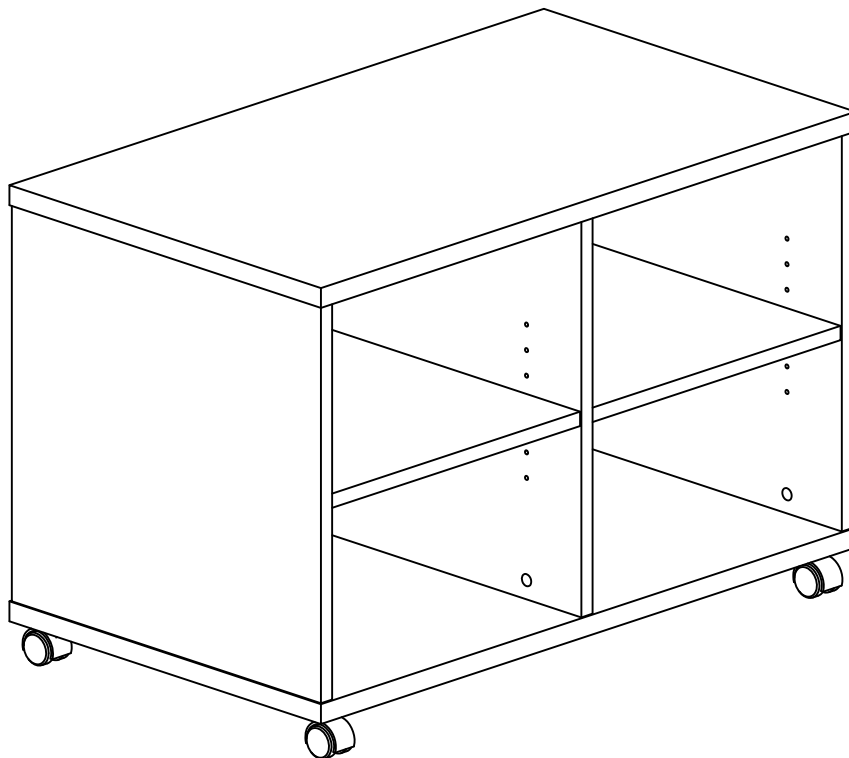


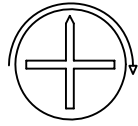

The turning direction of attaching




The arrow direction=front

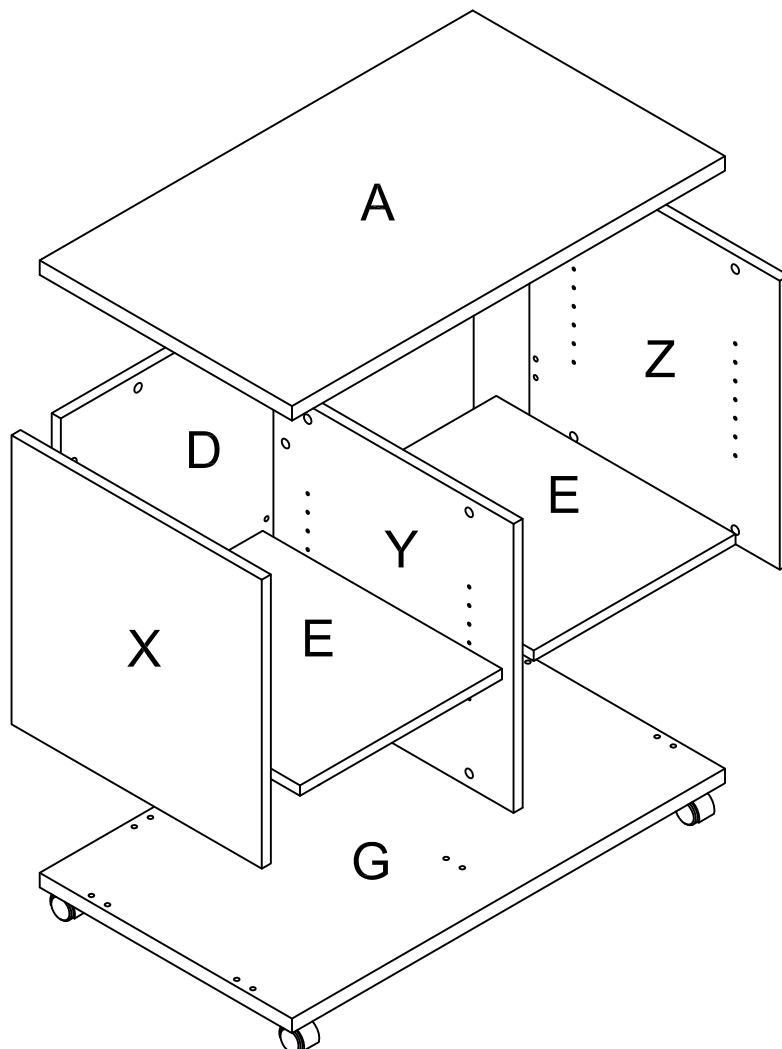

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	($\frac{5}{8}$ ") Cam Cover	22
X	Left side panel	1	(c3)	Castor	5
Z	Right side panel	1	(s1)	4*16 Screw	20
D	Back panel	1	(p1)	Threaded Dowel Pin	8
G	Bottom panel	1			
E	Moveable shelf	2			
Y	Partition	1			




(c2) ($\frac{5}{8}$ ") Cam Cover-22



(c3) Castor-5




(s1) 4*16 Screw-20

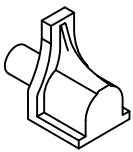


(p1) Threaded Dowel Pin-8

Pre-installed parts



(c5) Cam


STEP 1

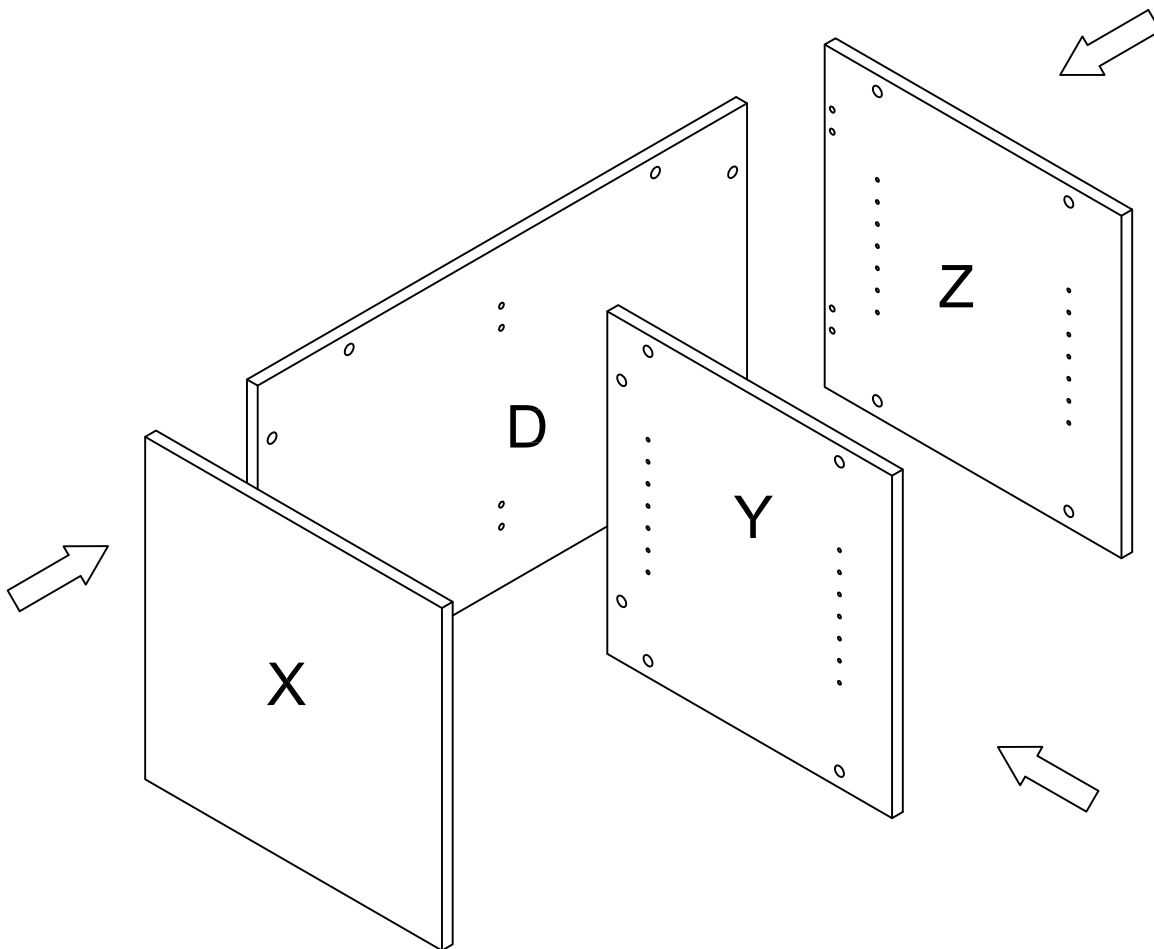

Preparation for Panels X,Z,Y and D.

- 1.Connect Cam bolts and dowels on panel Y to the holes on panel D and tighten in a clockwise direction as illustrated above.
- 2.Connect Cam bolts and dowels on panel D to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 2

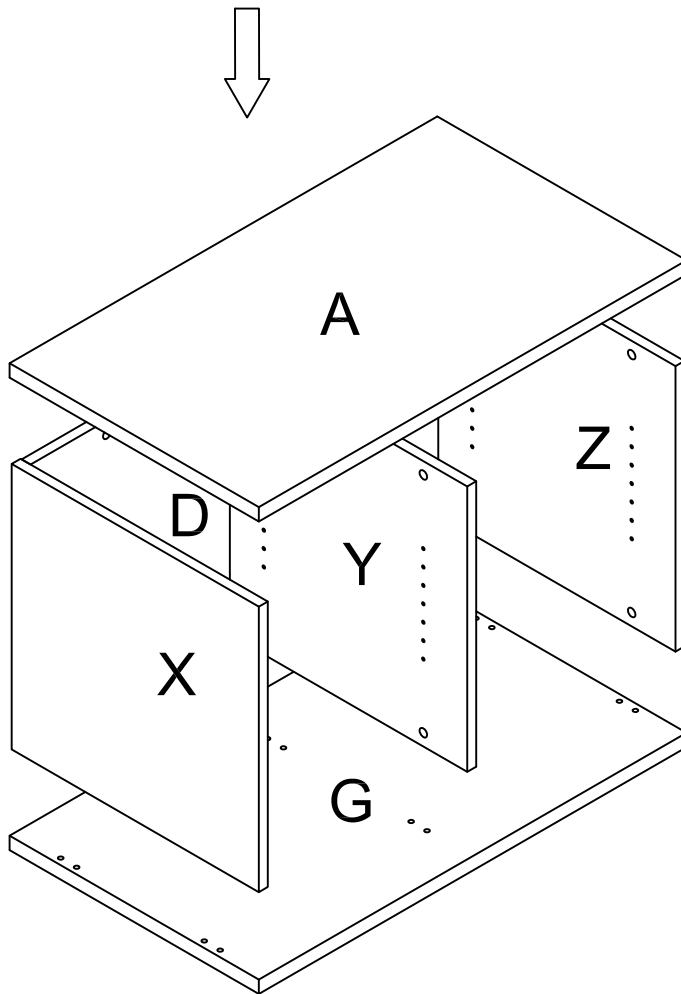

Preparation for Panels A and G.


1. Connect Cam bolts and dowels on panel X,Z,Y and D to the holes on panel A and G and tighten in a clockwise direction as illustrated above.

STEP 3

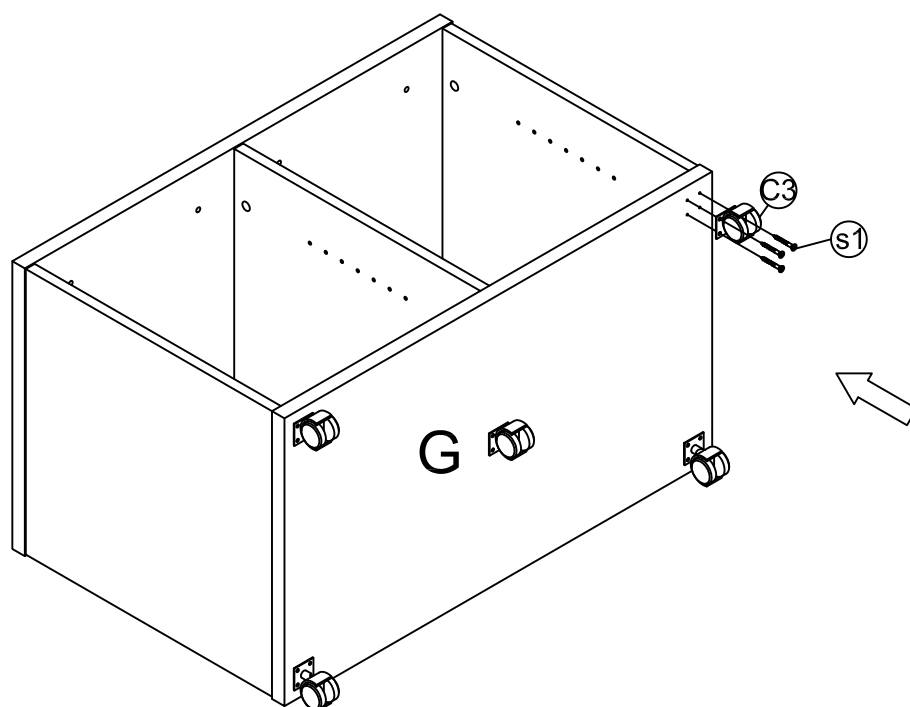

1. Assemble Castor (C3) with screws (S1) on bottom panel G as illustrated above.

STEP 4

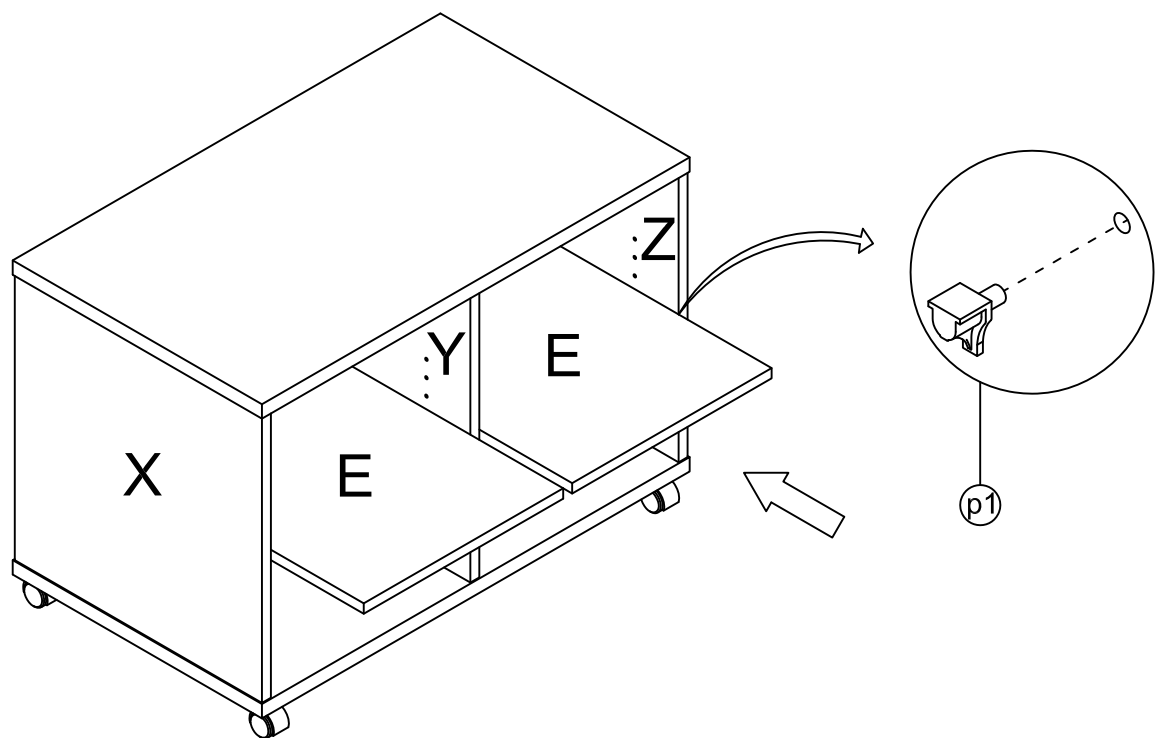


Moveable shelf E assembly.

1. Insert threaded dowel pins (p1) into panels X,Z and Y as illustrated above.
2. Put the three panels E on the top of threaded dowel pins (p1) as illustrated above.

You have now successfully completed the assembly on item:

Cupboard


ITEM NO. : OG-EKMB

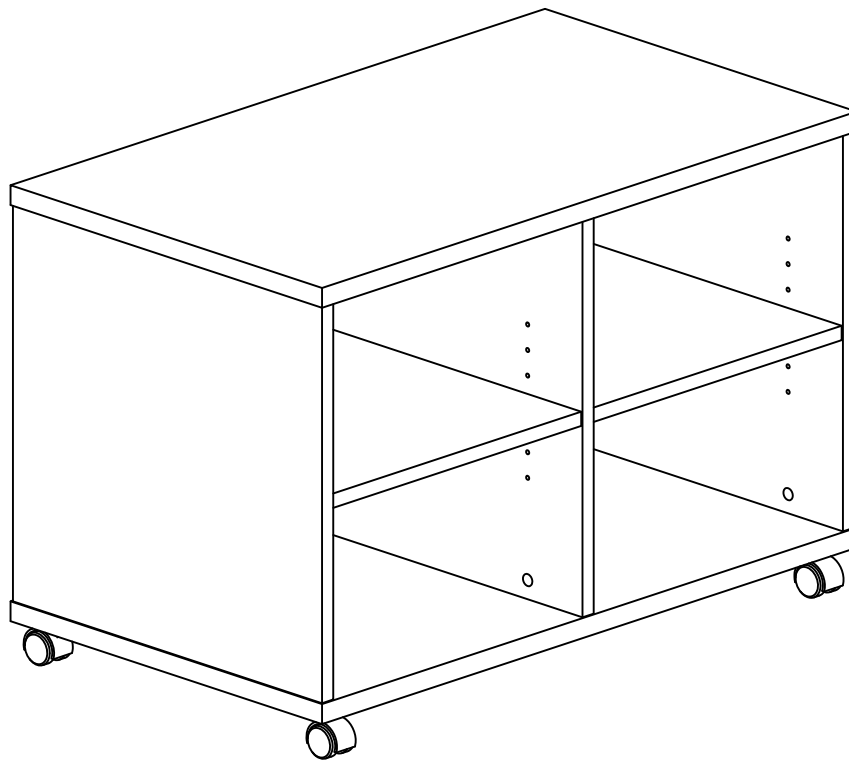


ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKCZ127

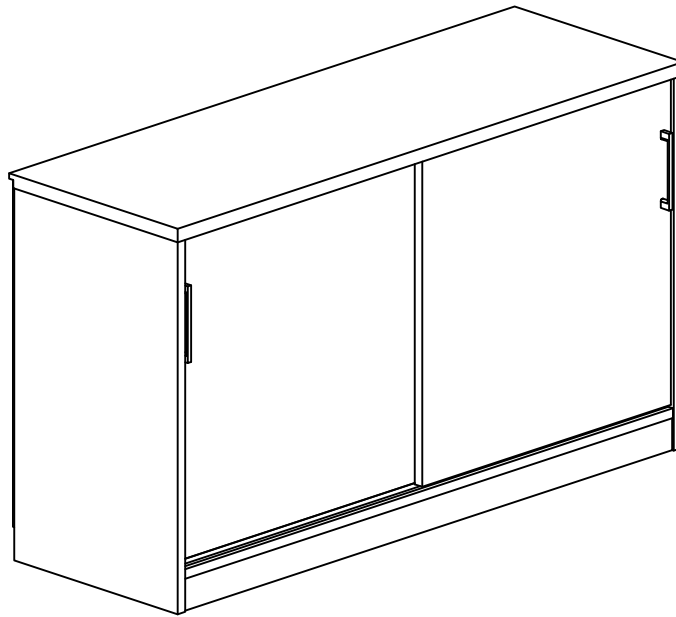


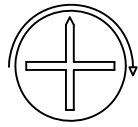

The turning direction of attaching



The arrow direction=front

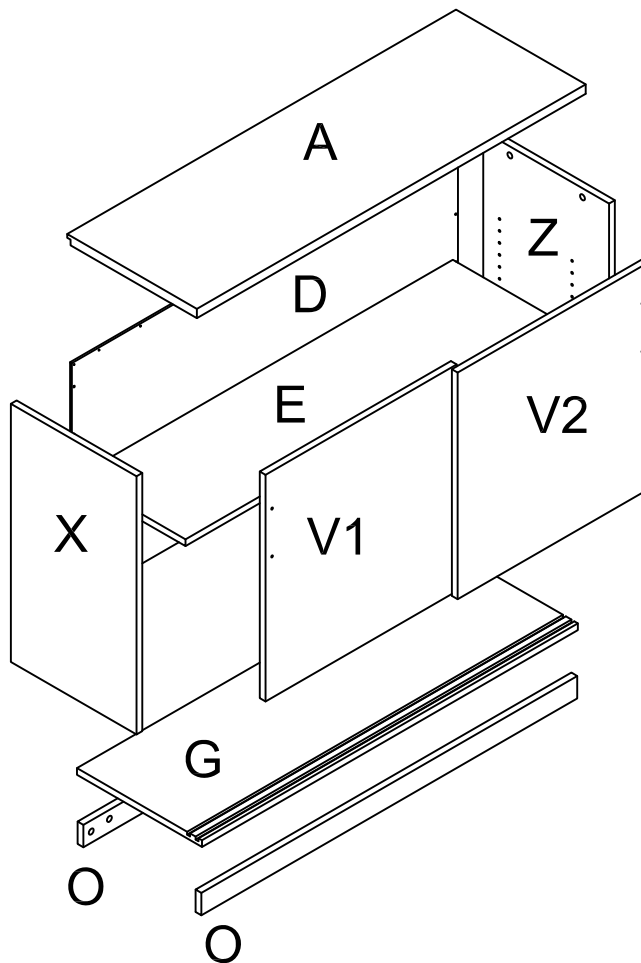

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	(5/8") Cam Cover	24
X	Left side panel	1	(p1)	Threaded Dowel Pin	8
Z	Right side panel	1	(S1)	3.5*14 Screw	38
D	Back panel	1	(S2)	4*22 Fix Bolt	4
G	Bottom panel	1	(h1)	Handle	2
E	Moveable shelf	1			
O	Batten	2			
V1	Door panel	1			
V2	Door panel	1			



(c2) (5/8") Cam Cover-20




(p1) Threaded Dowel Pin-4



(S1) 3.5*14 Screw-32




(S2) 4*22 Fix Bolt-4




(h1) Handle-2

Pre-installed parts



(c5) Cam


STEP 1

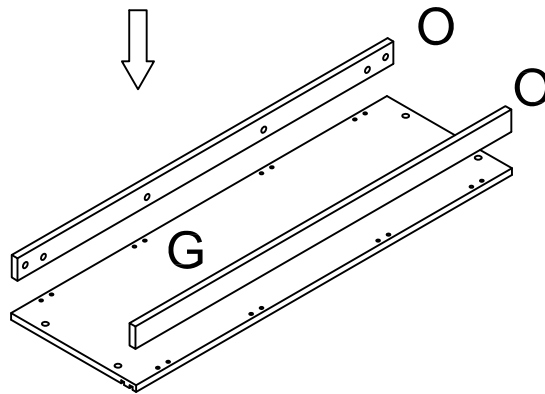

Preparation for Panels O and G.

1. Connect Cam bolts and dowels on panel O to the holes on panel G and tighten in a clockwise direction as illustrated above.


STEP 2

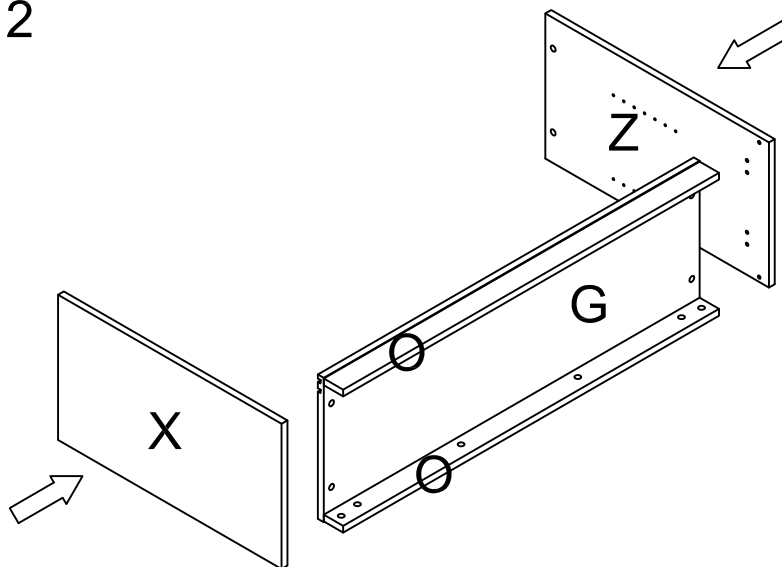

Preparation for Panels X and Z .

1. Connect Cam bolts and dowels on panel O and G to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 3

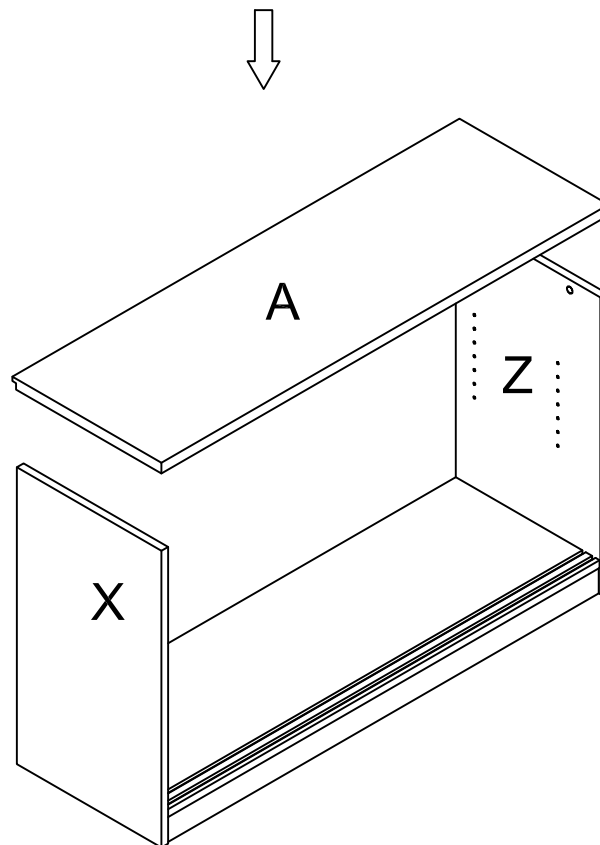

Preparation for Panels A.

1. Connect Cam bolts and dowels on panel X and Z to the holes on panel G and tighten in a clockwise direction as illustrated above.


STEP 4

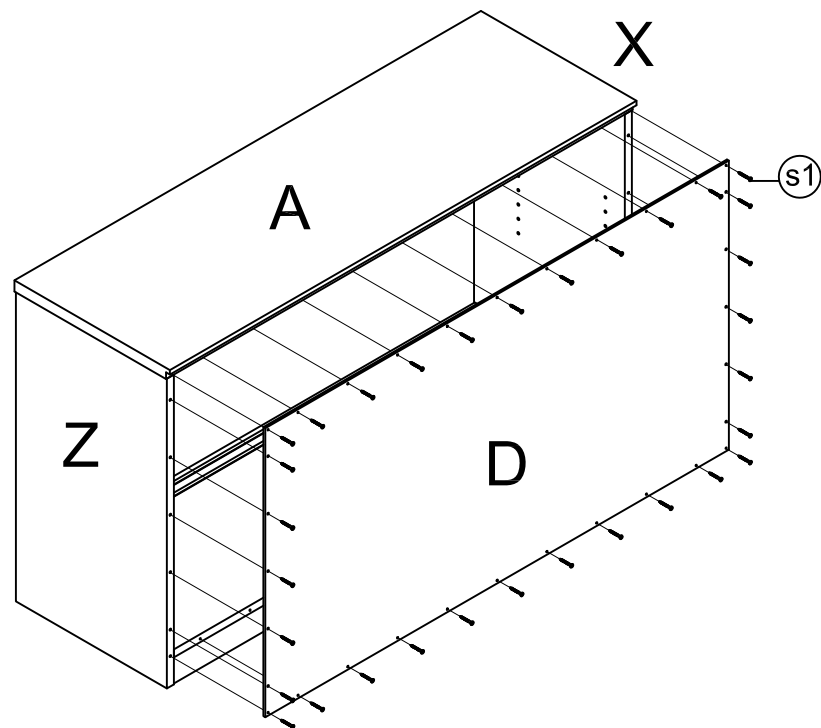

Preparation for Panels D.

1. Connect back panel D and panel X,Z,,G,A with screw (s1) as illustrated above.


STEP 5

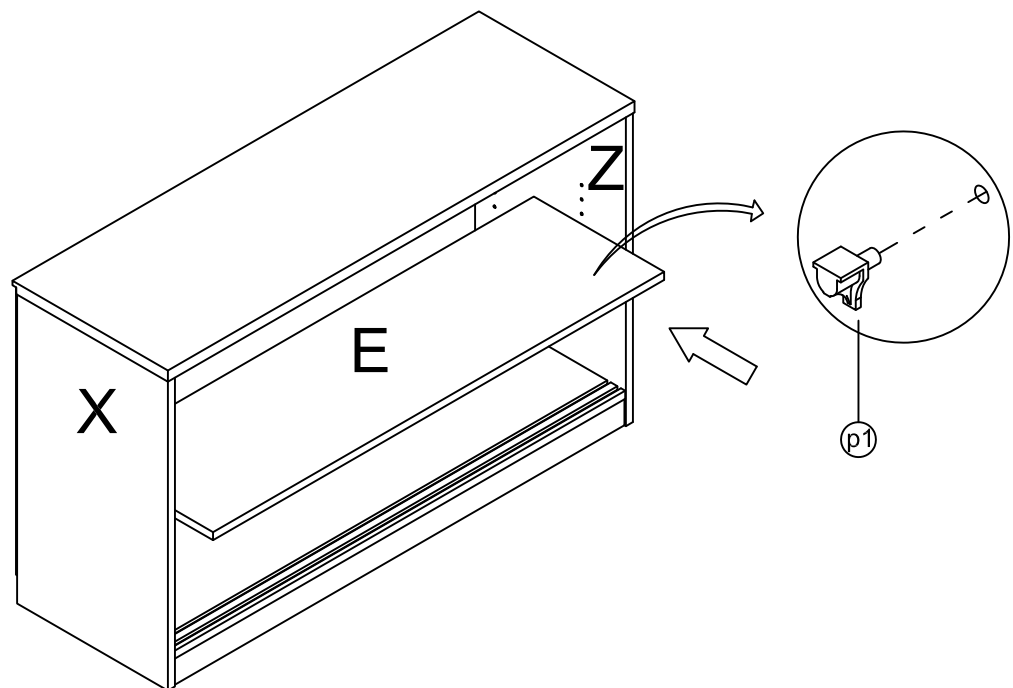

Moveable shelf E assembly.


1. Insert threaded dowel pins (p1) into panels X and Z as illustrated above.
2. Put the three panels E on the top of threaded dowel pins (p1) as illustrated above.

STEP 6

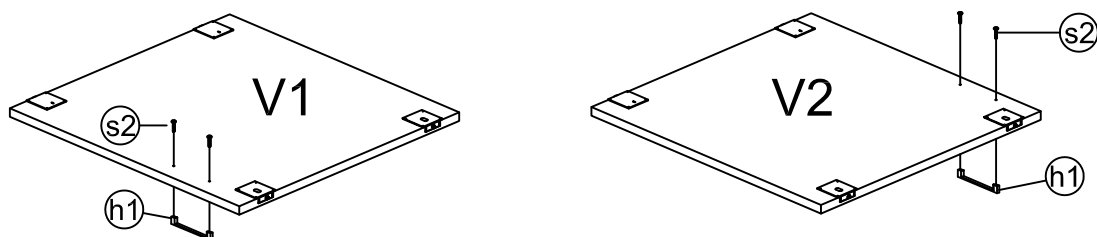

1. Fix handles (h1) to panels V1 and V2 with fix bolts (s2) as illustrated above.

STEP 7

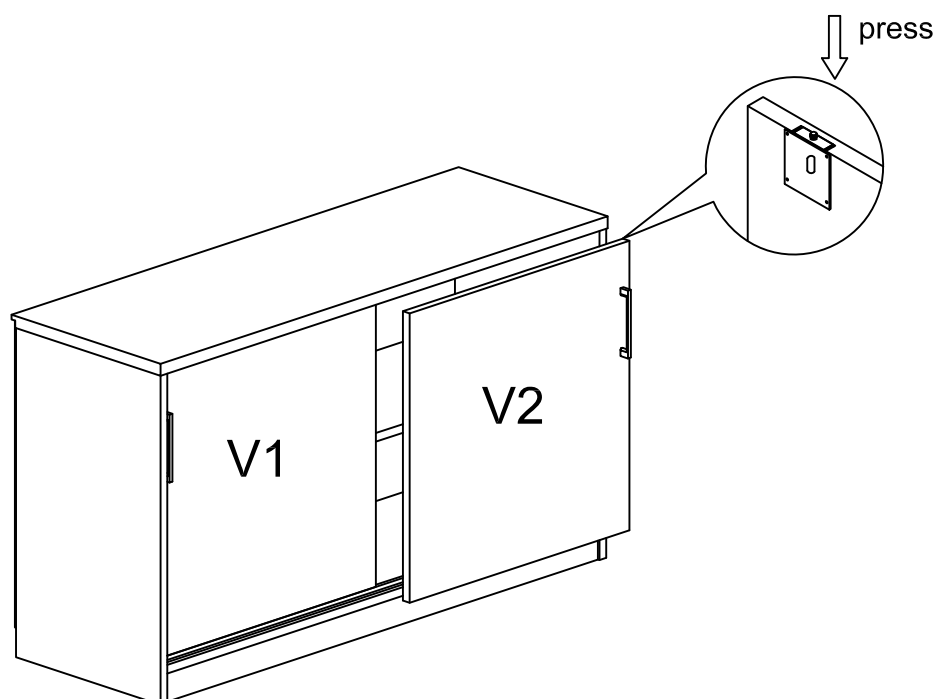


1. Credenza door V1 and V2 assembly.

You have now successfully completed the assembly on item:

Cupboard


ITEM NO. : OG-EKCZ127

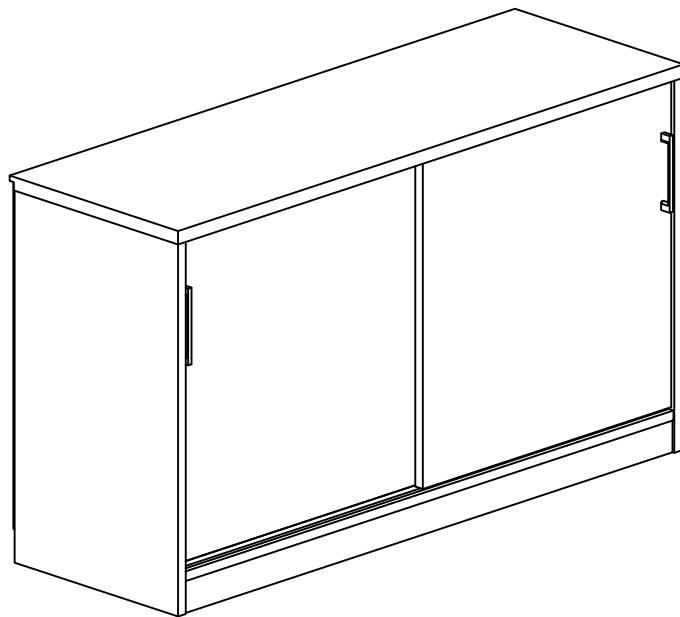


ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKCZ167

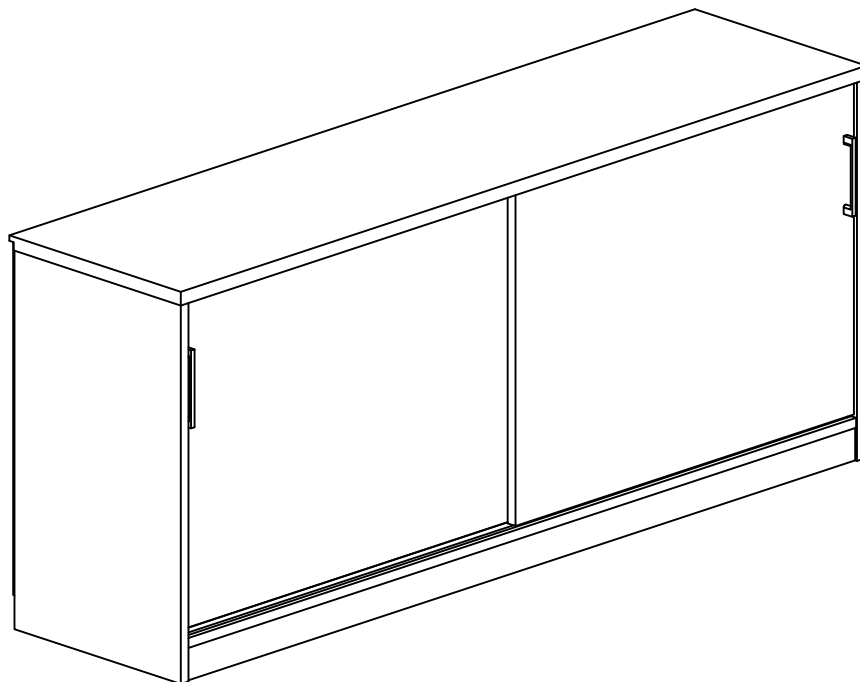


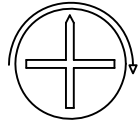

The turning direction of attaching



The arrow direction=front

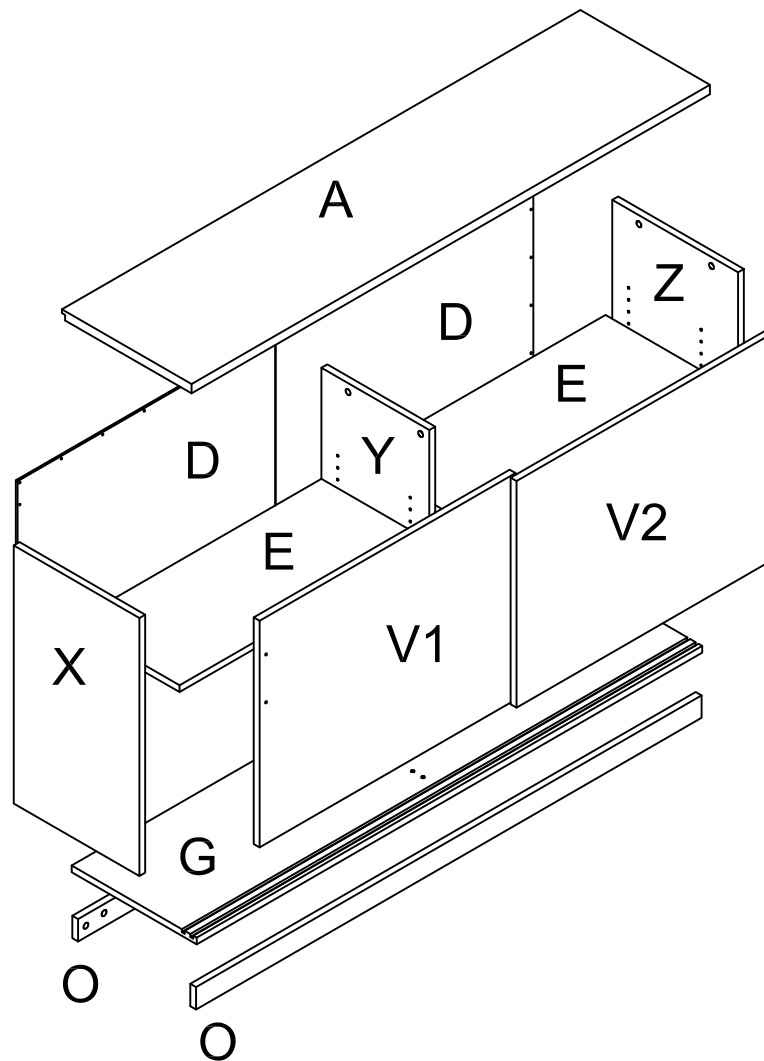

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	($\frac{5}{8}$ ") Cam Cover	24
X	Left side panel	1	(p1)	Threaded Dowel Pin	8
Z	Right side panel	1	(S ₁)	3.5*14 Screw	38
D	Back panel	2	(F ₁)	ø12 Foot nail	3
G	Bottom panel	1	(S ₂)	4*22 Fix Bolt	4
E	Moveable shelf	2	(h ₁)	Handle	2
Y	Partition	1			
O	Batten	2			
V1	Door panel	1			
V2	Door panel	1			




(c2) ($\frac{5}{8}$ ") Cam Cover-24



(p1) Threaded Dowel Pin-8




(S₁) 3.5*14 Screw-38



(F₁) ø12 Foot nail-3




(S₂) 4*22 Fix Bolt-4




(h₁) Handle-2

Pre-installed parts



(c5) Cam


STEP 1

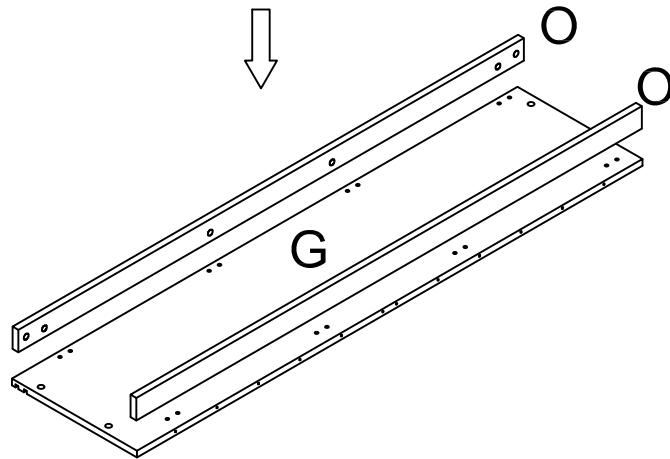

Preparation for Panels O and G.

1. Connect Cam bolts and dowels on panel O to the holes on panel G and tighten in a clockwise direction as illustrated above.

STEP 2

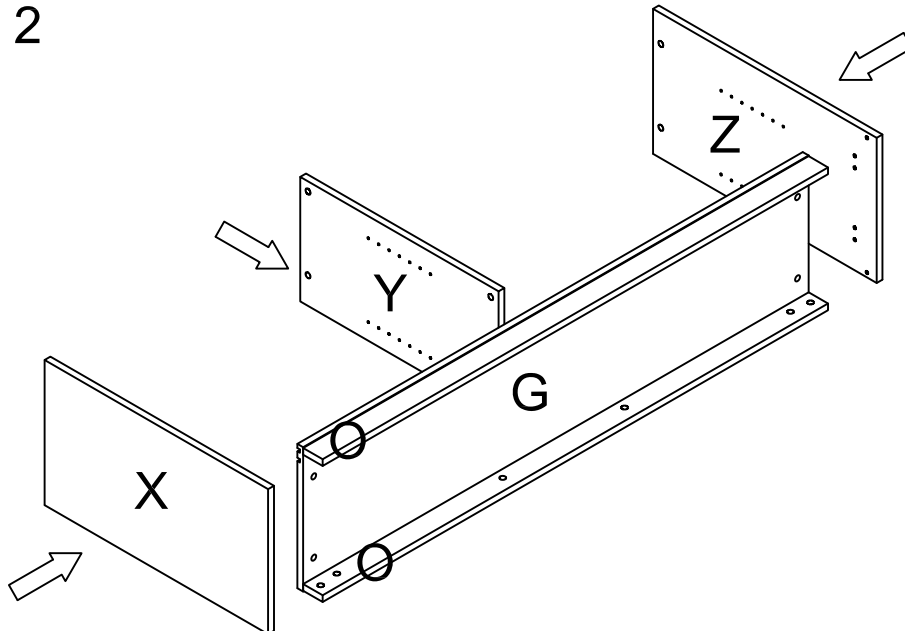


Preparation for Panels X,Z and Y.

1. Connect Cam bolts and dowels on panel Y to the holes on panel G and tighten in a clockwise direction as illustrated above.

2. Connect Cam bolts and dowels on panel O and G to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 3

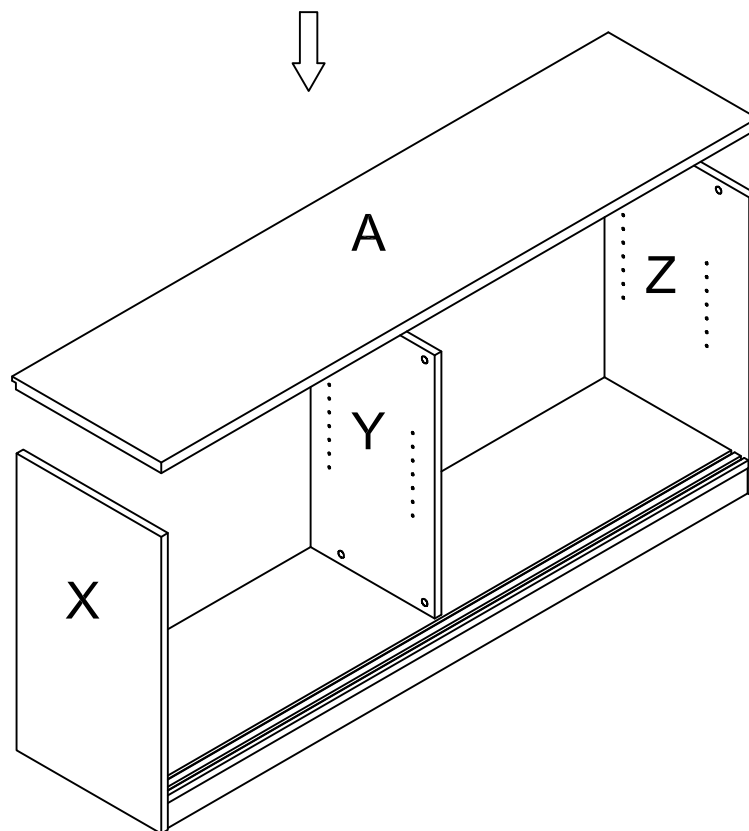

Preparation for Panels A.

1. Connect Cam bolts and dowels on panel X ,Z and Y to the holes on panel G and tighten in a clockwise direction as illustrated above.


STEP 4

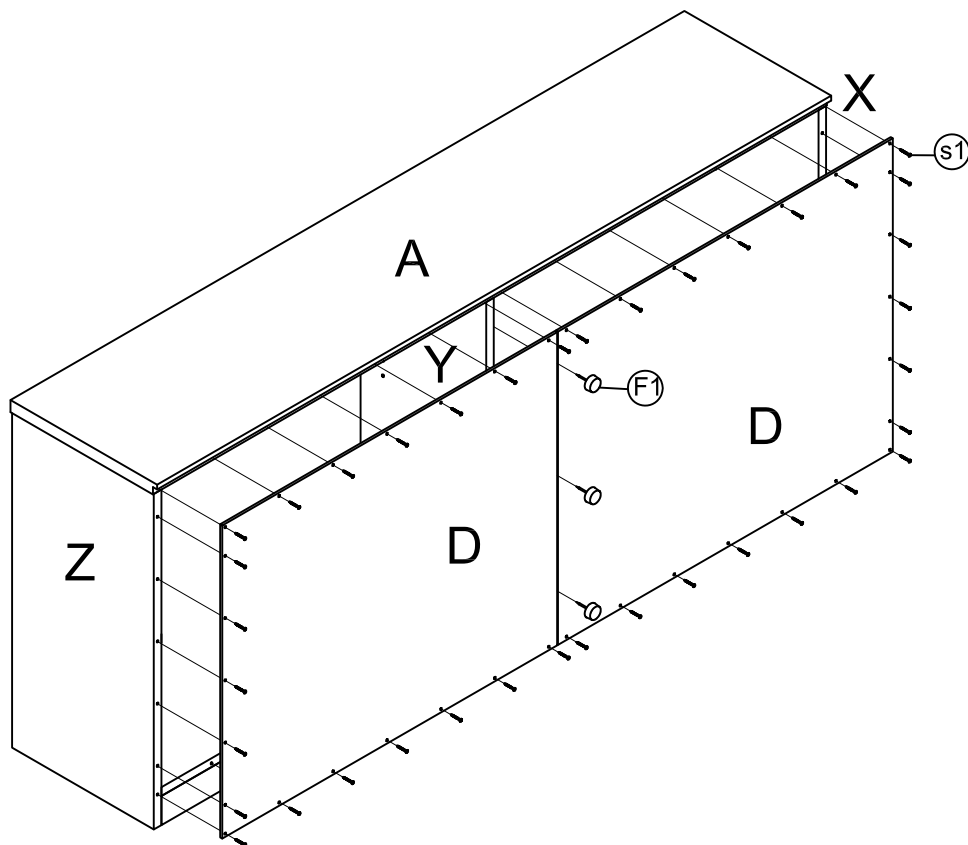

Preparation for Panels D.

1. Connect back panel D and panel X,Z,Y,G,A with screw (S1) as illustrated above.
2. Connect back panel D and panel Y with Foot nail (F1) as illustrated above.


STEP 5

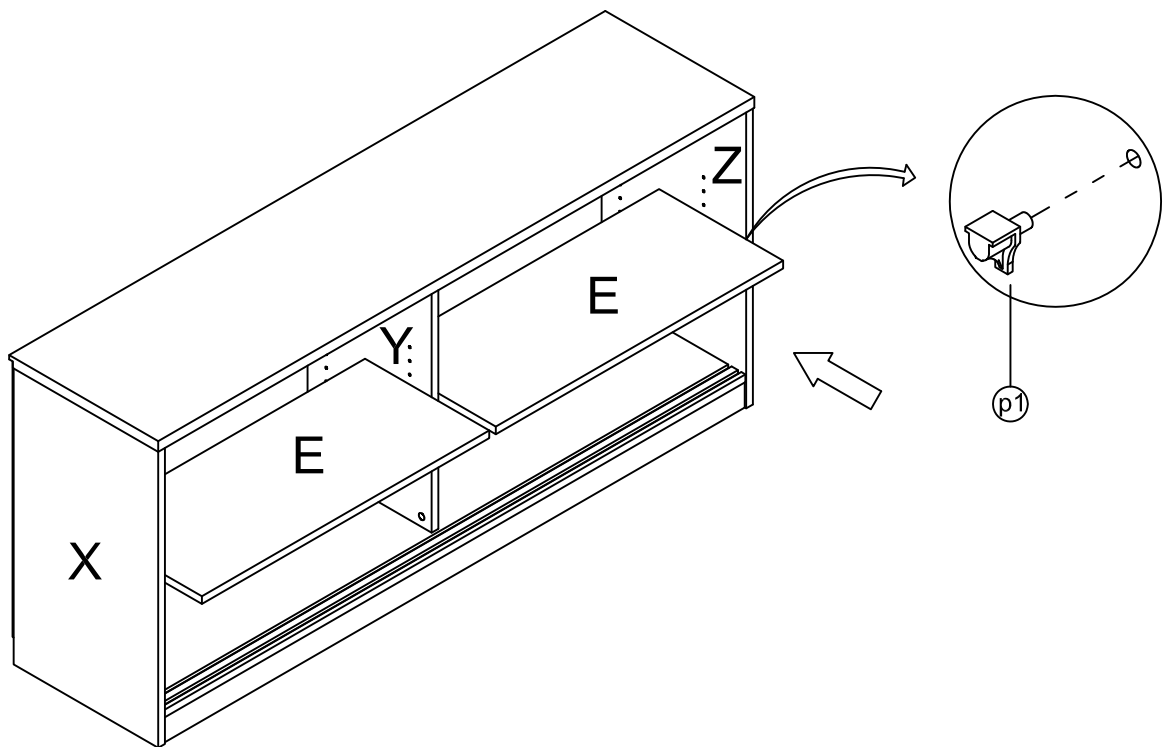

Moveable shelf E assembly.


1. Insert threaded dowel pins (p1) into panels X ,Z and Y as illustrated above.
2. Put the three panels E on the top of threaded dowel pins (p1) as illustrated above.

STEP 6

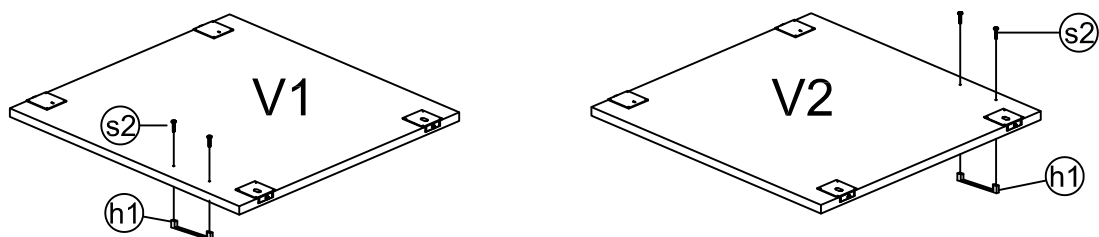

1. Fix handles (h1) to panels V1 and V2 with fix bolts (s2) as illustrated above.

STEP 7

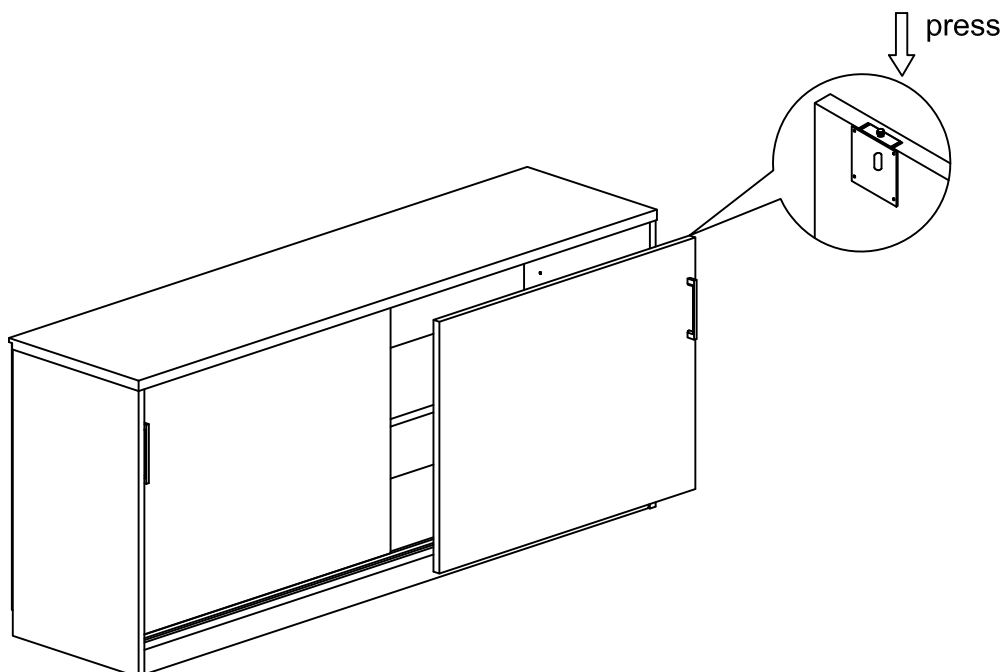


1. Credenza door V1 and V2 assembly.

You have now successfully completed the assembly on item:

Cupboard


ITEM NO. : OG-EKCZ167

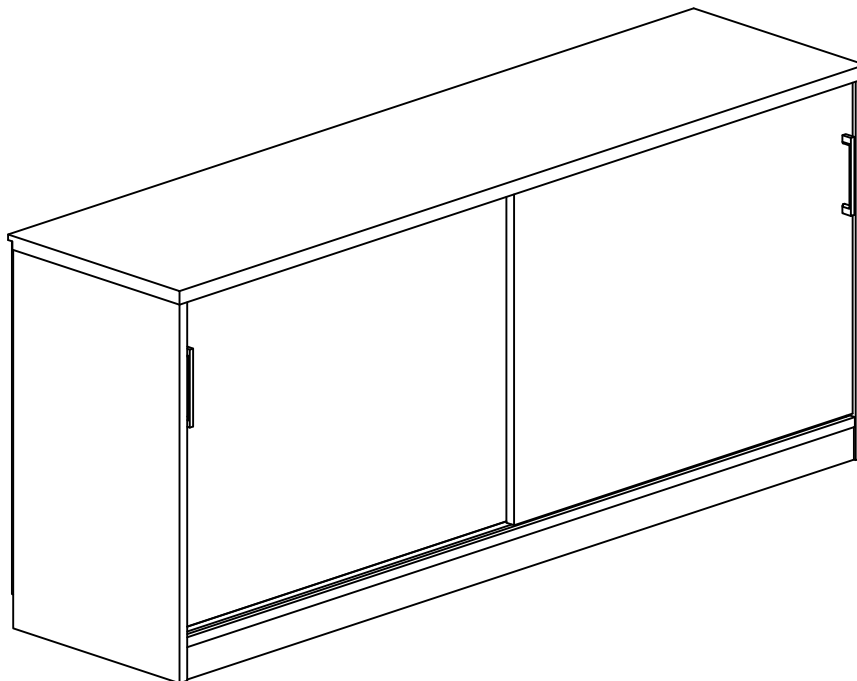


ASSEMBLY INSTRUCTION

Cupboard

ITEM NO. : OG-EKMB

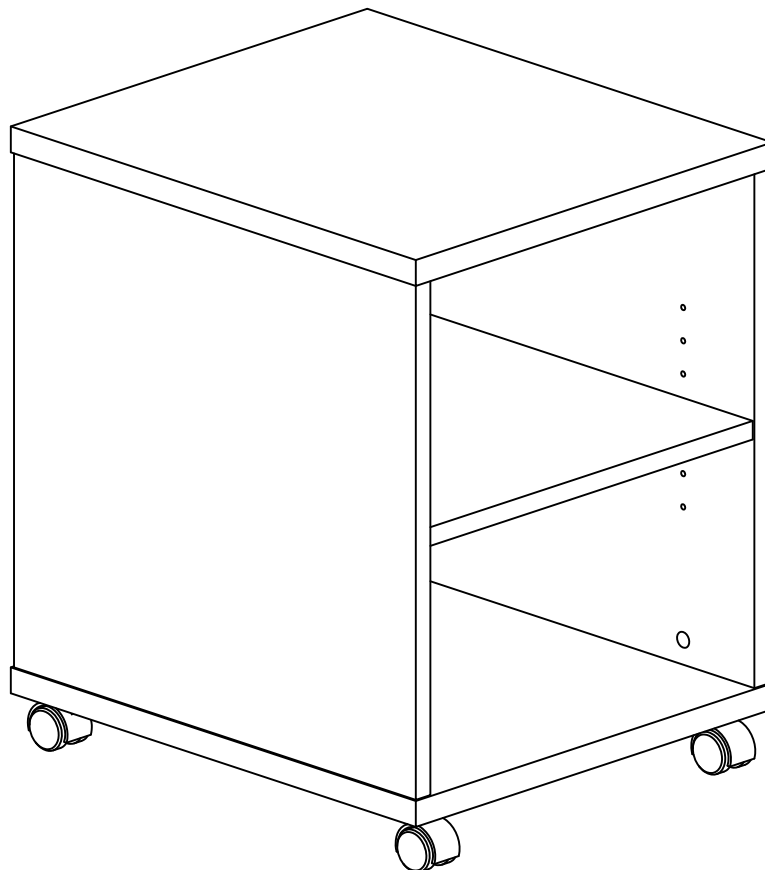


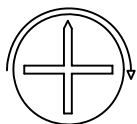

The turning direction of attaching



The arrow direction=front

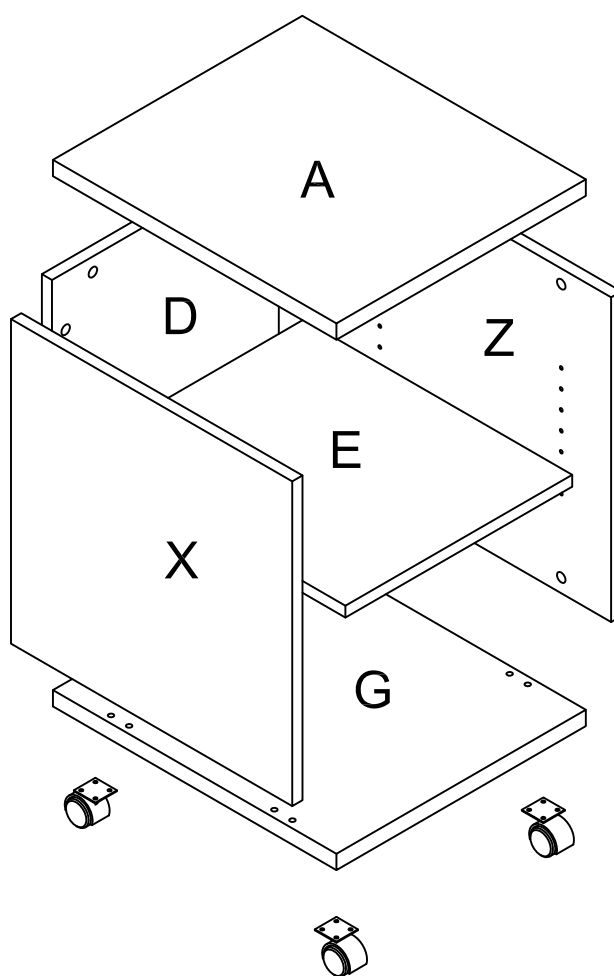

PARTS LIST

ITEM	DESCRIPTION	QTY.	ITEM	DESCRIPTION	QTY.
A	Top panel	1	(c2)	(5/8") Cam Cover	16
X	Left side panel	1	(c3)	Castor	4
Z	Right side panel	1	(S1)	3.5*14 Screw	16
D	Back panel	1	(p1)	Threaded Dowel Pin	4
G	Bottom panel	1			
E	Moveable shelf	1			




(c2) (5/8") Cam Cover-16



(c3) Castor-4




(S1) 4*16 Screw-16

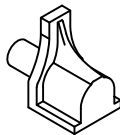


(p1) Threaded Dowel Pin-4

Pre-installed parts



(c5) Cam


STEP 1

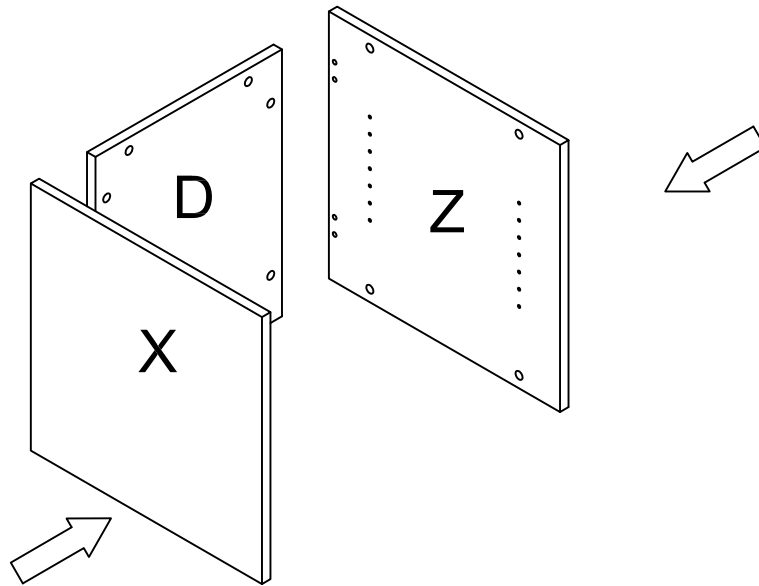

Preparation for Panels X,Z and D.

1.Connect Cam bolts and dowels on panel D to the holes on panel X and Z and tighten in a clockwise direction as illustrated above.


STEP 2

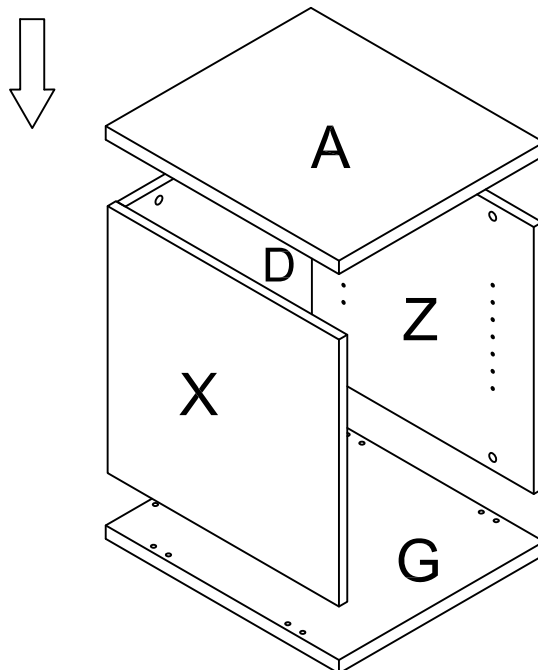

Preparation for Panels A and G.


1.Connect Cam bolts and dowels on panel X ,Z and D to the holes on panel A and G and tighten in a clockwise direction as illustrated above.

STEP 3

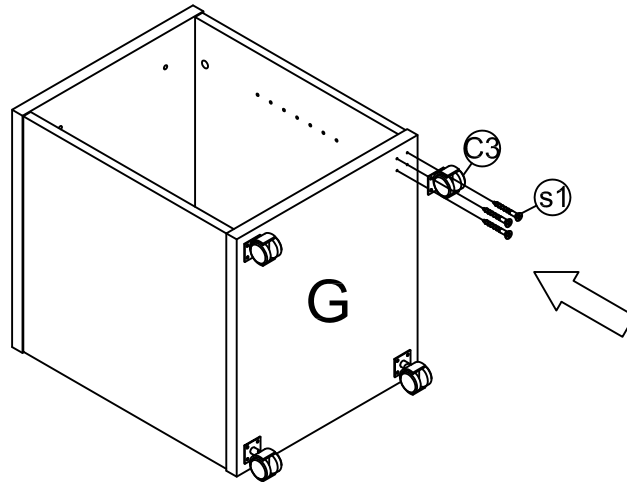

1. Assemble Castor (C3) with screws (S1) on bottom panel G as illustrated above.

STEP 4

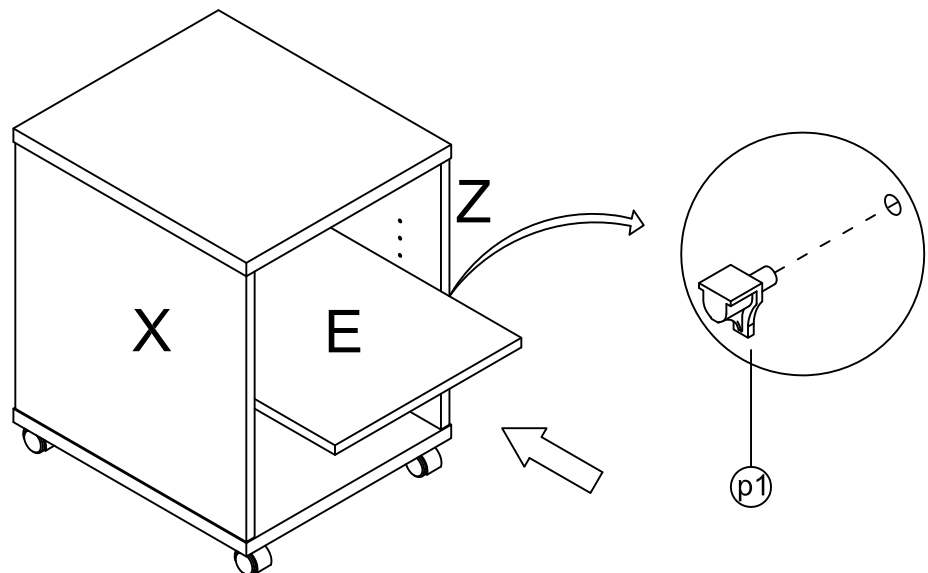

Moveable shelf E assembly.

1. Insert threaded dowel pins (p1) into panels X and Z as illustrated above.
2. Put the three panels E on the top of threaded dowel pins (p1) as illustrated above.

You have now successfully completed the assembly on item:

Cupboard

ITEM NO. : OG-EKMB

