


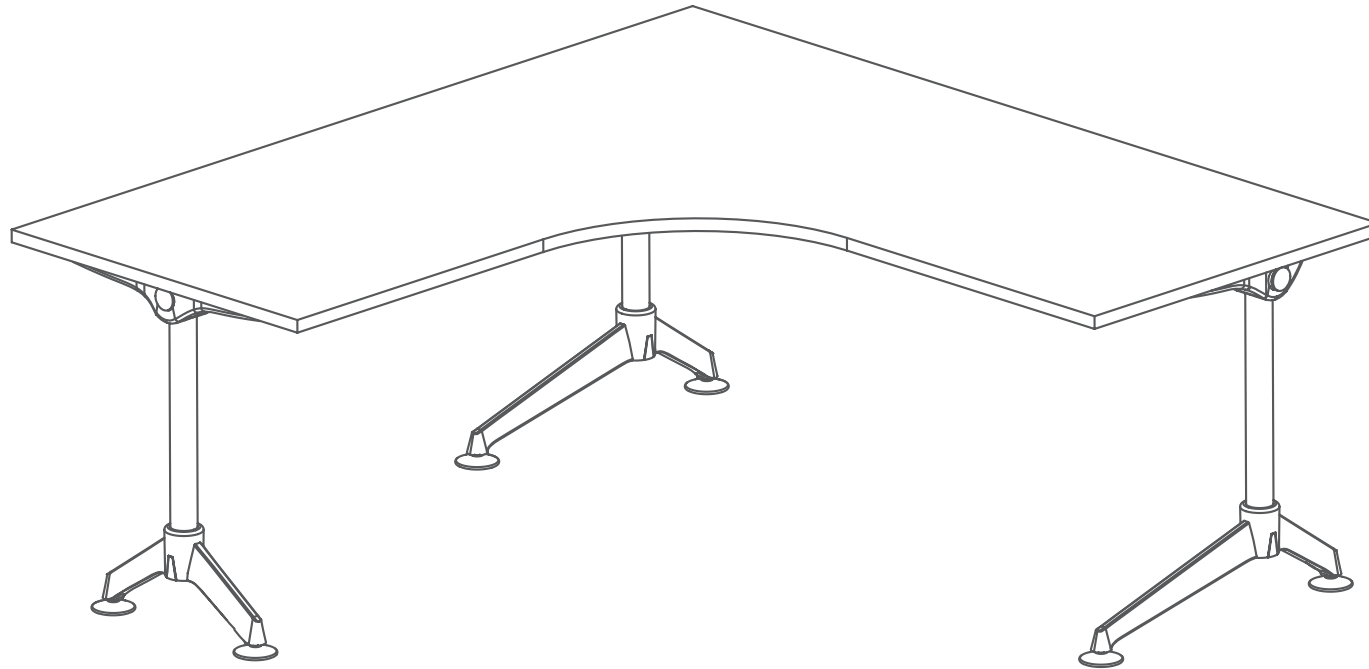

Modulus 90 Degree Workspace 1800 x 1800 x 750mm

Assembly Instructions

Modulus 90 Degree Workspace

Components List


STEP 2:

Components


1	Die Cast Upper Wrist (A)	x2	MODZA06
2	Die Cast Upper Wrist (B)	x1	MODZA05
3	Top Rail	x1	FWTOPRAIL
4	Top Rail	x1	FWTOPRAIL
5	Leg-pole Tube Ø51	x3	MODZA22-695
6	Top Rail Cap	x4	MODZA18
7	Large Foot	x2	MODZA12
8	Small Foot	x4	
9	Cross Connector	x3	MODZA01
10	Gasket	x3	
11	Collar Plug	x6	MODZA15
12	Foot Glide	x6	MODZA25
13	Plastic Support	x1	MODZA16

Screws


	QTY
14	M10 x 30mm
15	M8 x 25mm
16	M5 x 30mm Self Tapping
17	M5 x 20mm Self Tapping
18	M8 x 16mm Grub Screw
19	M10 x 110mm
20	M8 x 16mm

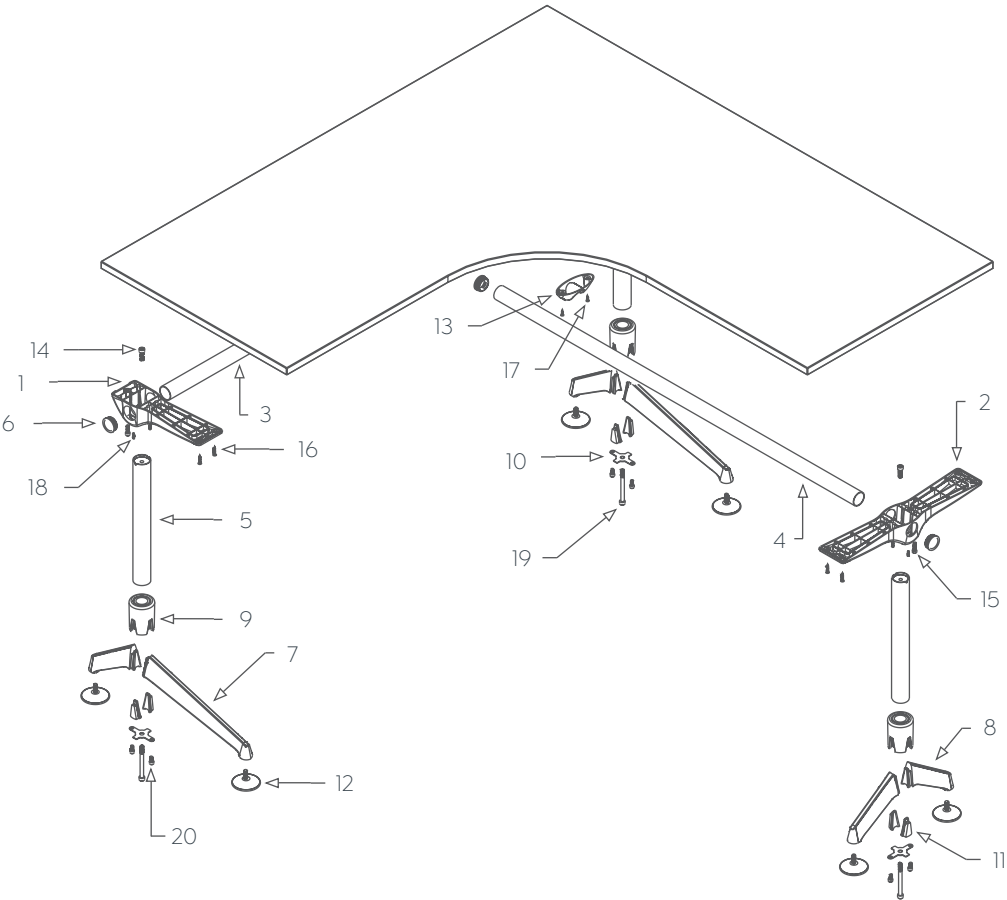

STEP 1:




4 - M8 x 16

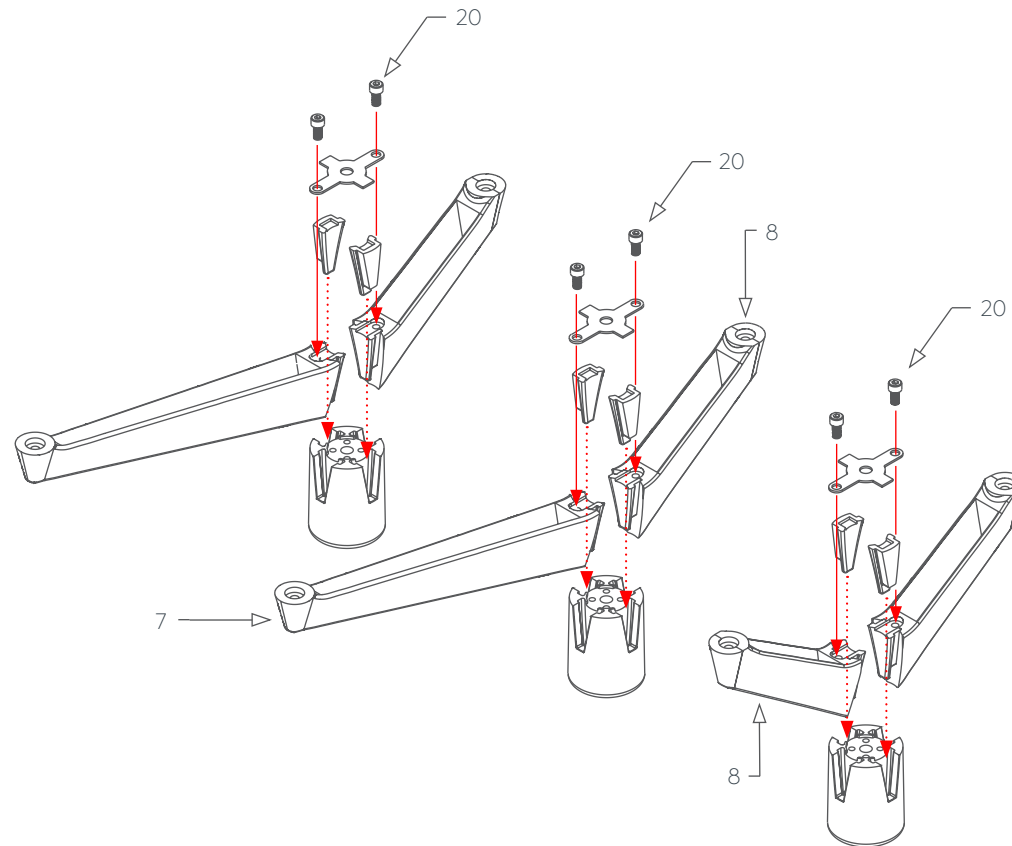


Modulus 90 Degree Workspace

Assembly Instructions



STEP 2:



8 - M8 x 16

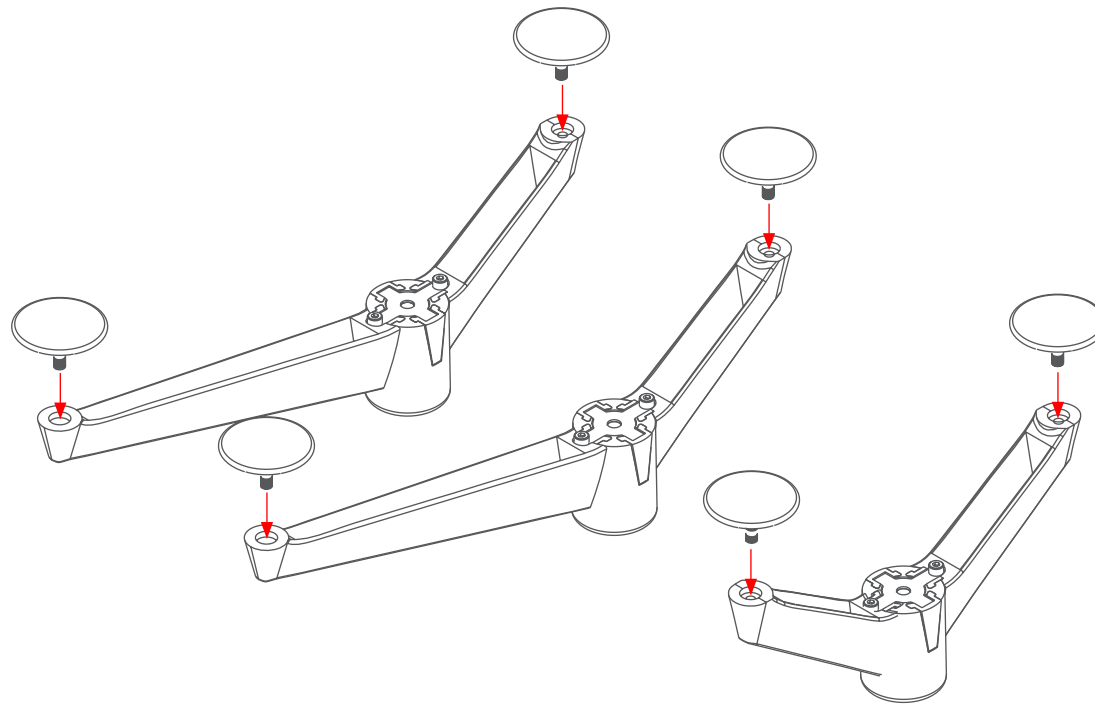



STEP 3:

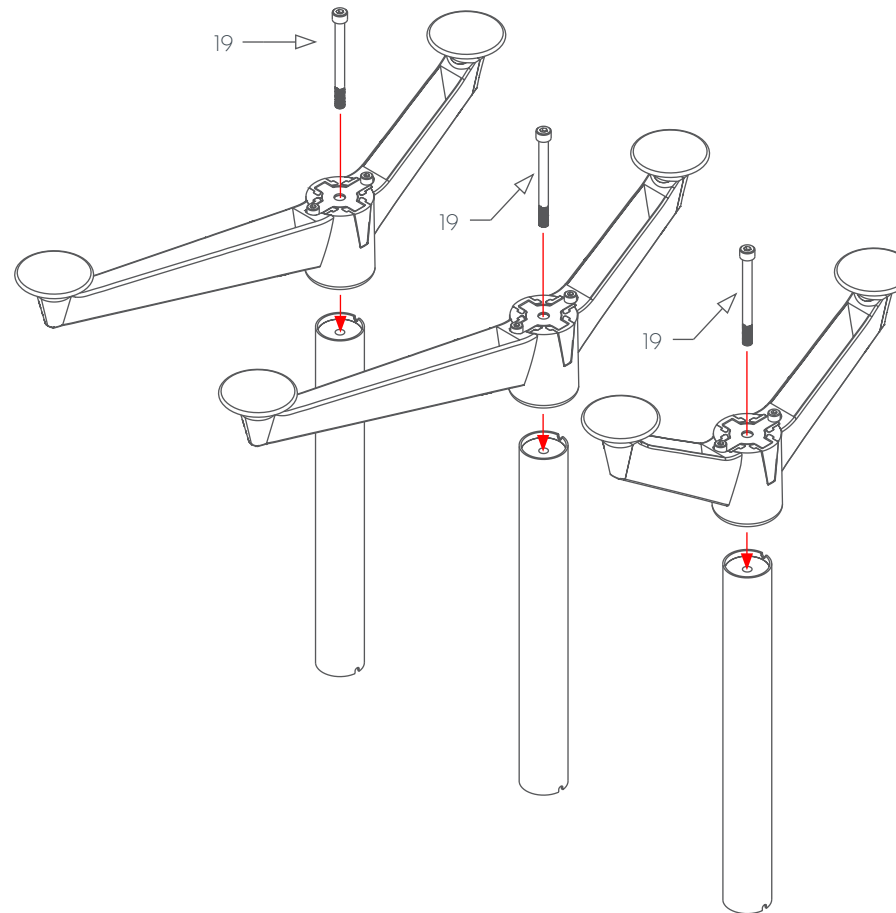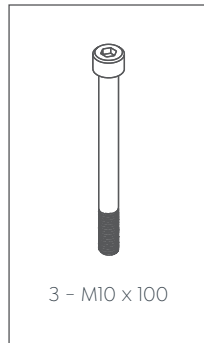


Modulus 90 Degree Workspace

Assembly Instructions


STEP 4:

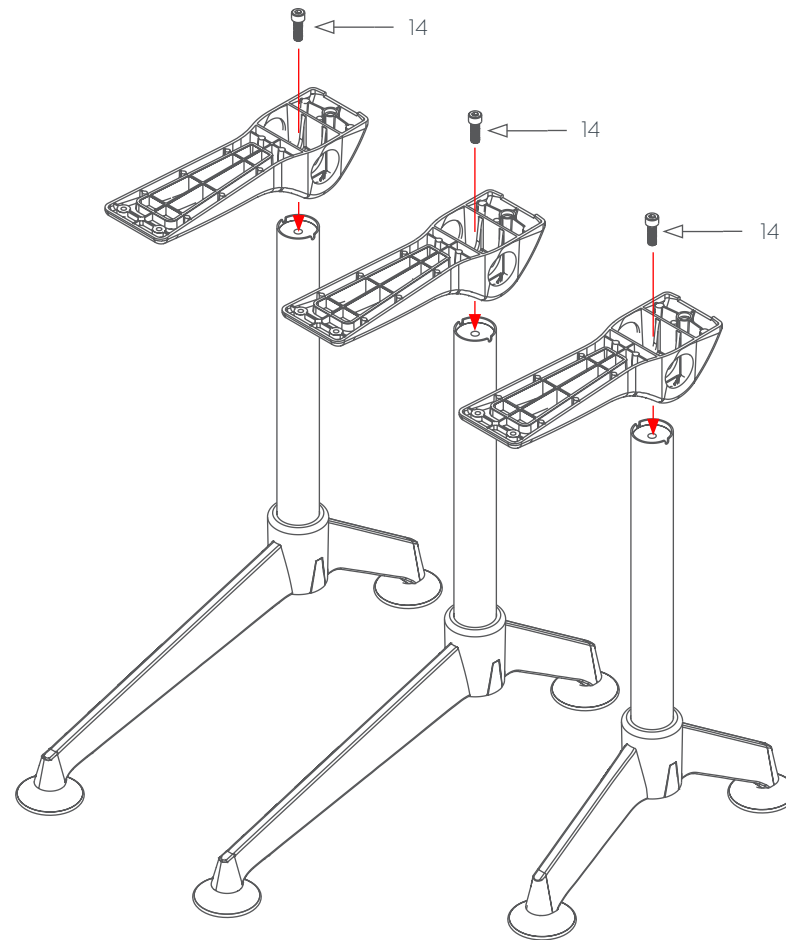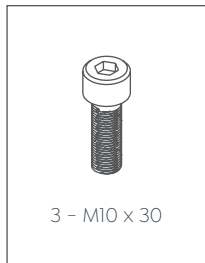

STEP 5:




4 - M8 x 16

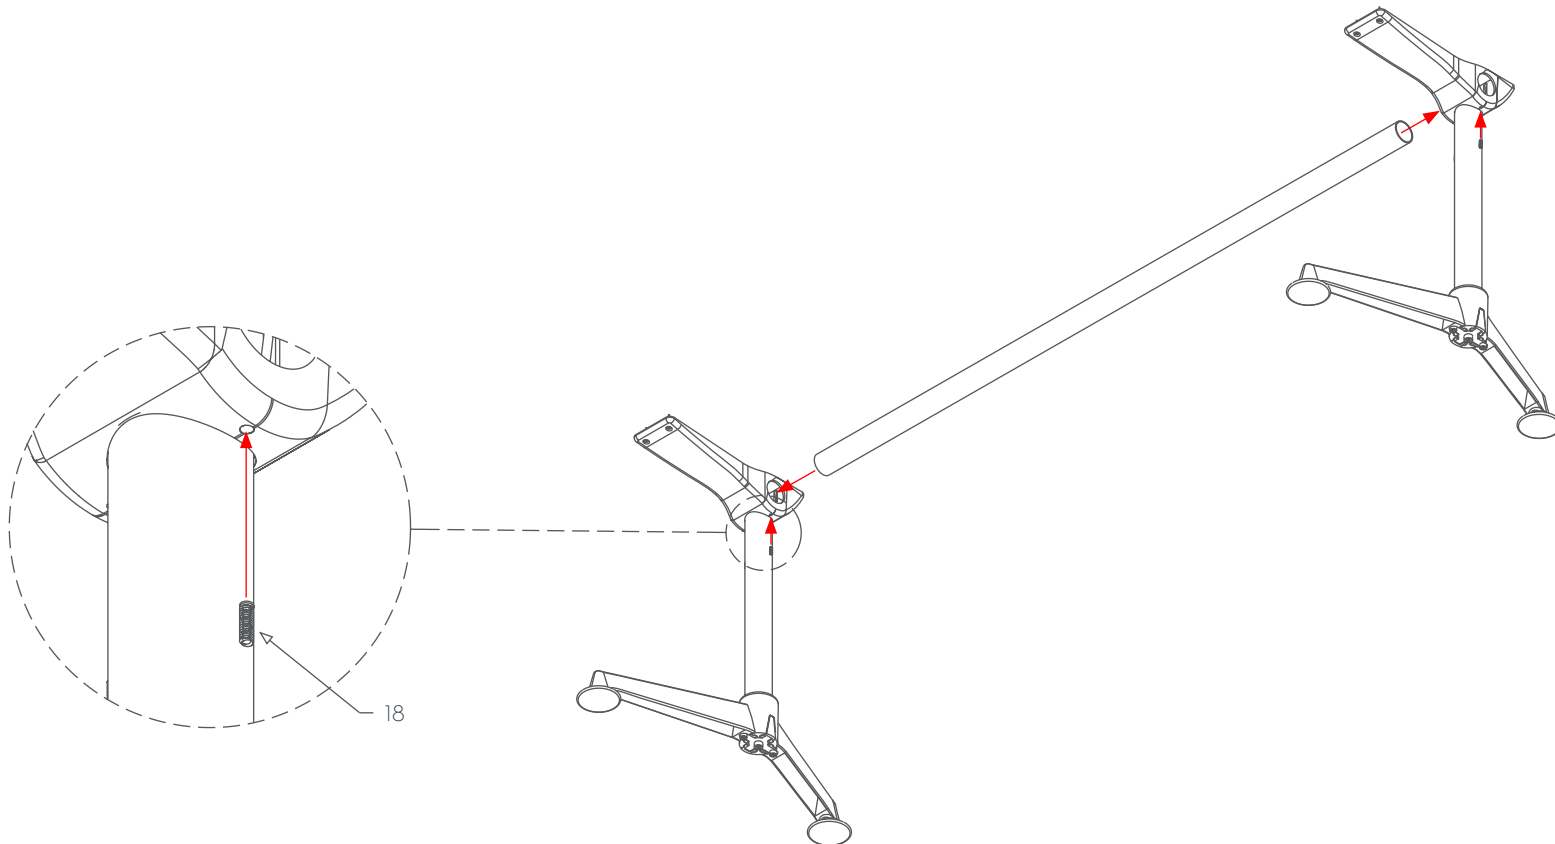


Modulus 90 Degree Workspace

Assembly Instructions


STEP 5.1:

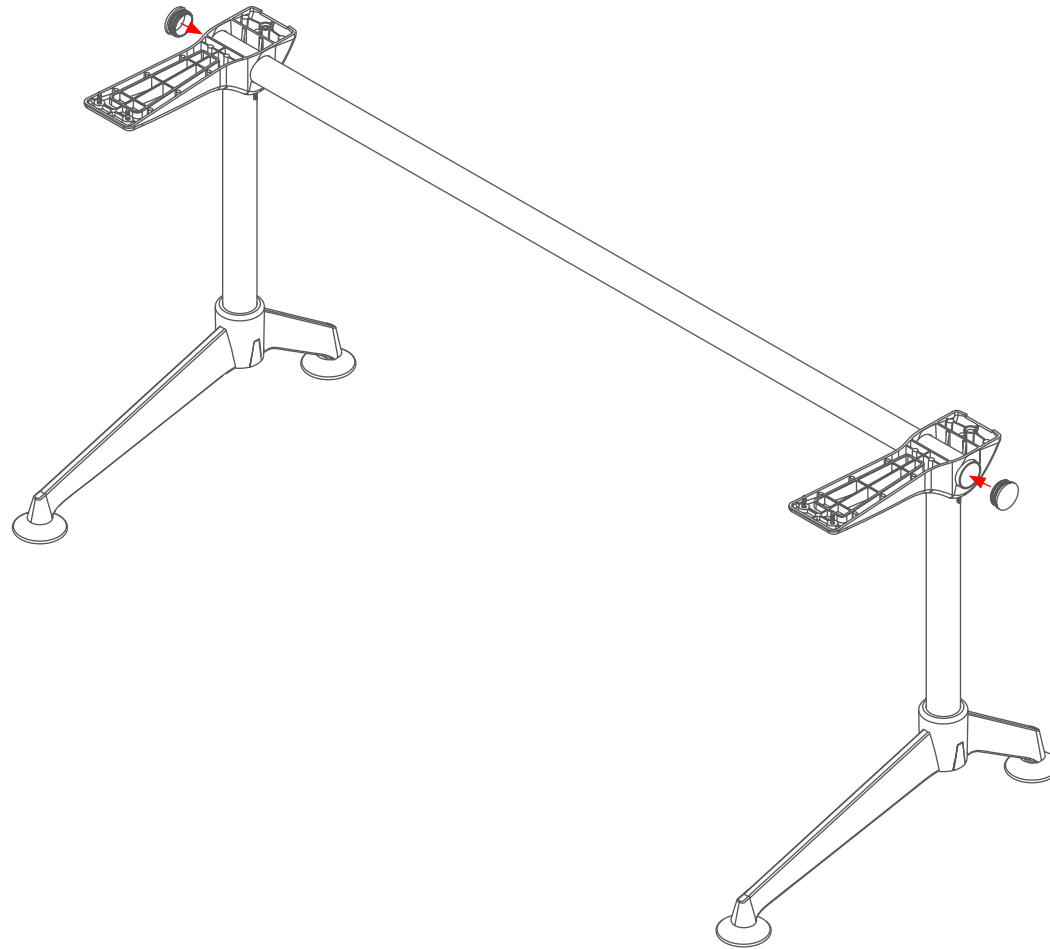

STEP 6:




2 - M8 x 16

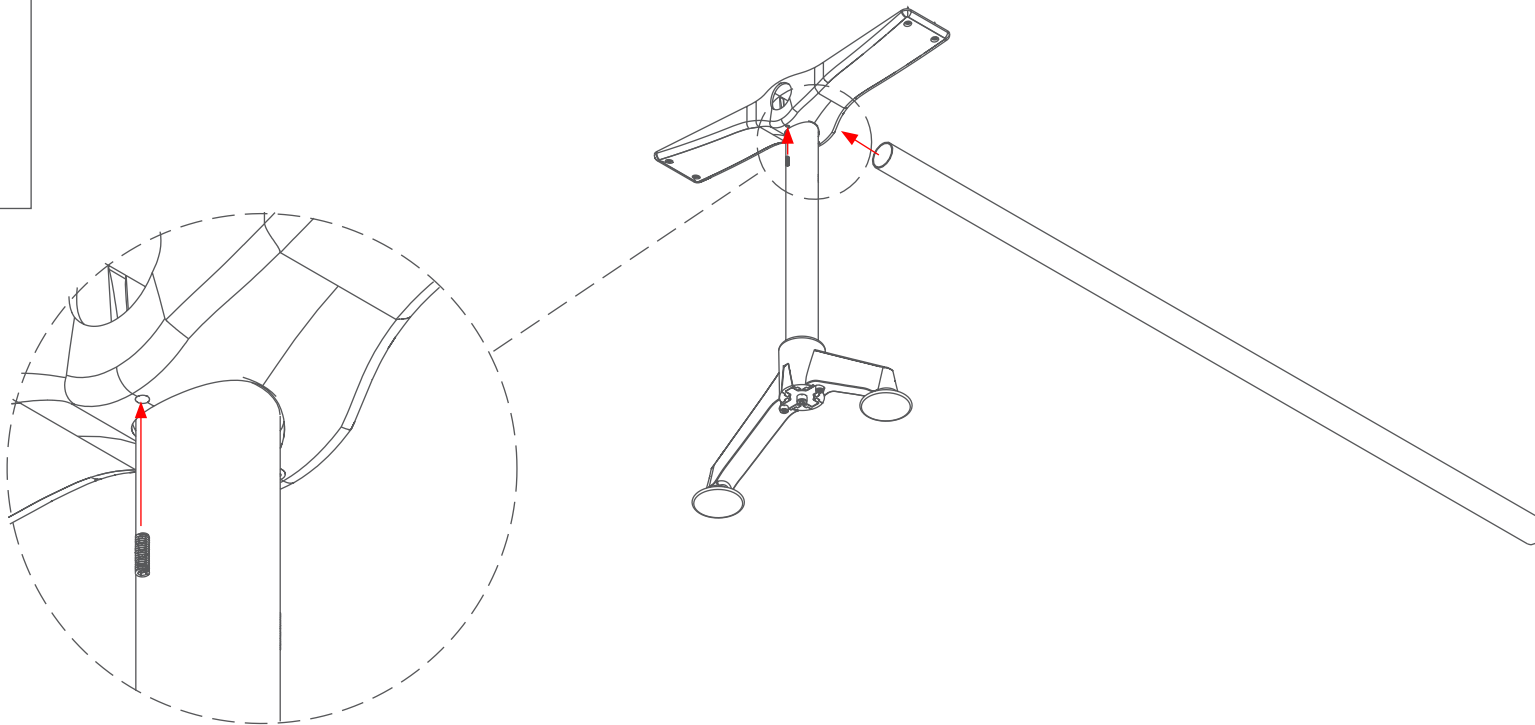


Modulus 90 Degree Workspace

Assembly Instructions


STEP 7:

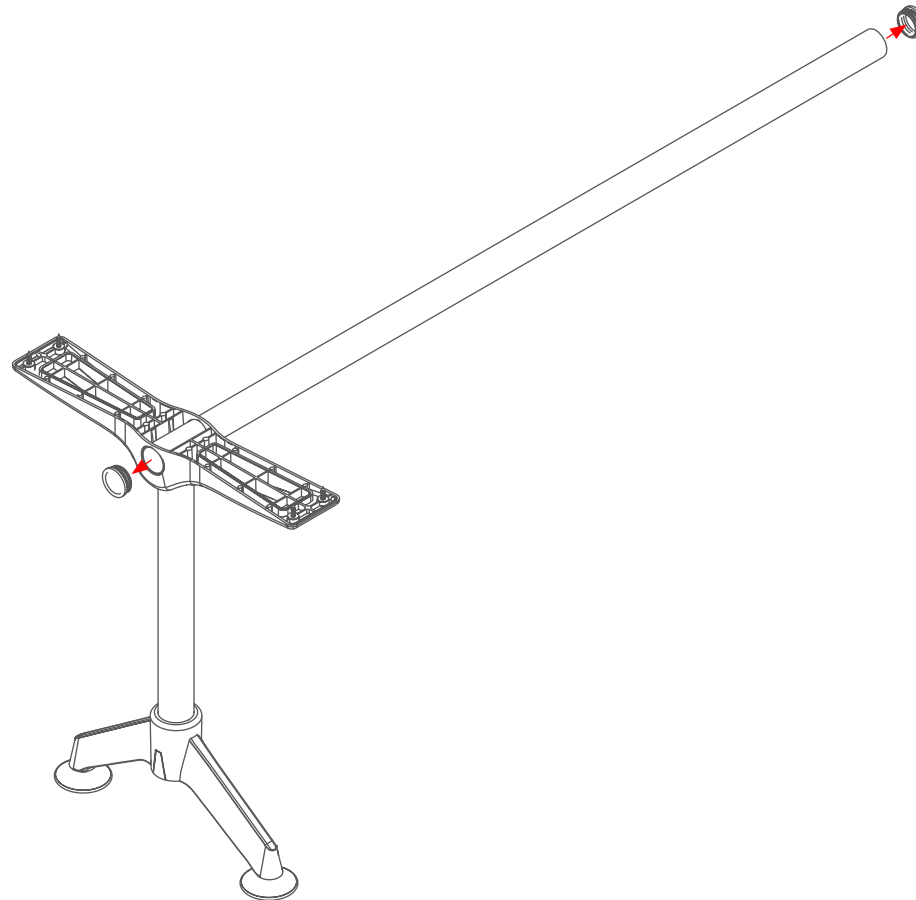

STEP 8:




2 - M8 x 25



8 - M5 x 30
Self Tapping




2 - M5 x 20
Self Tapping

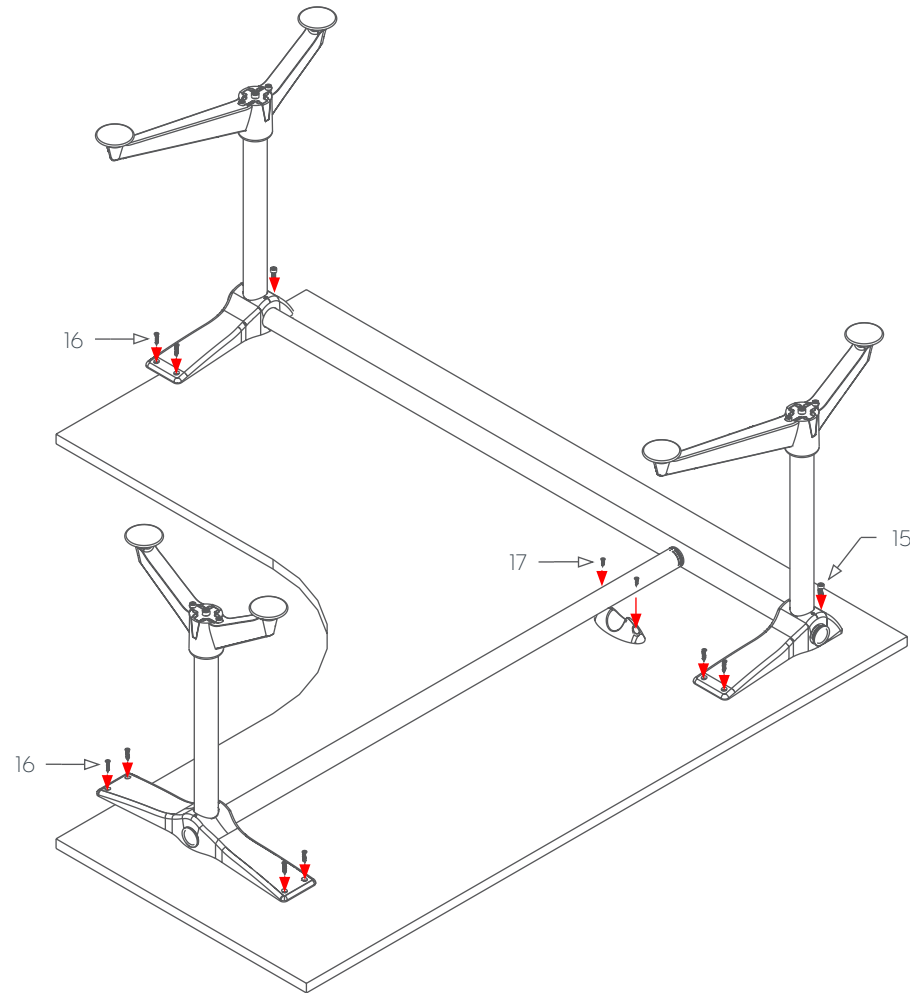

Modulus 90 Degree Workspace

Assembly Instructions

STEP 9:

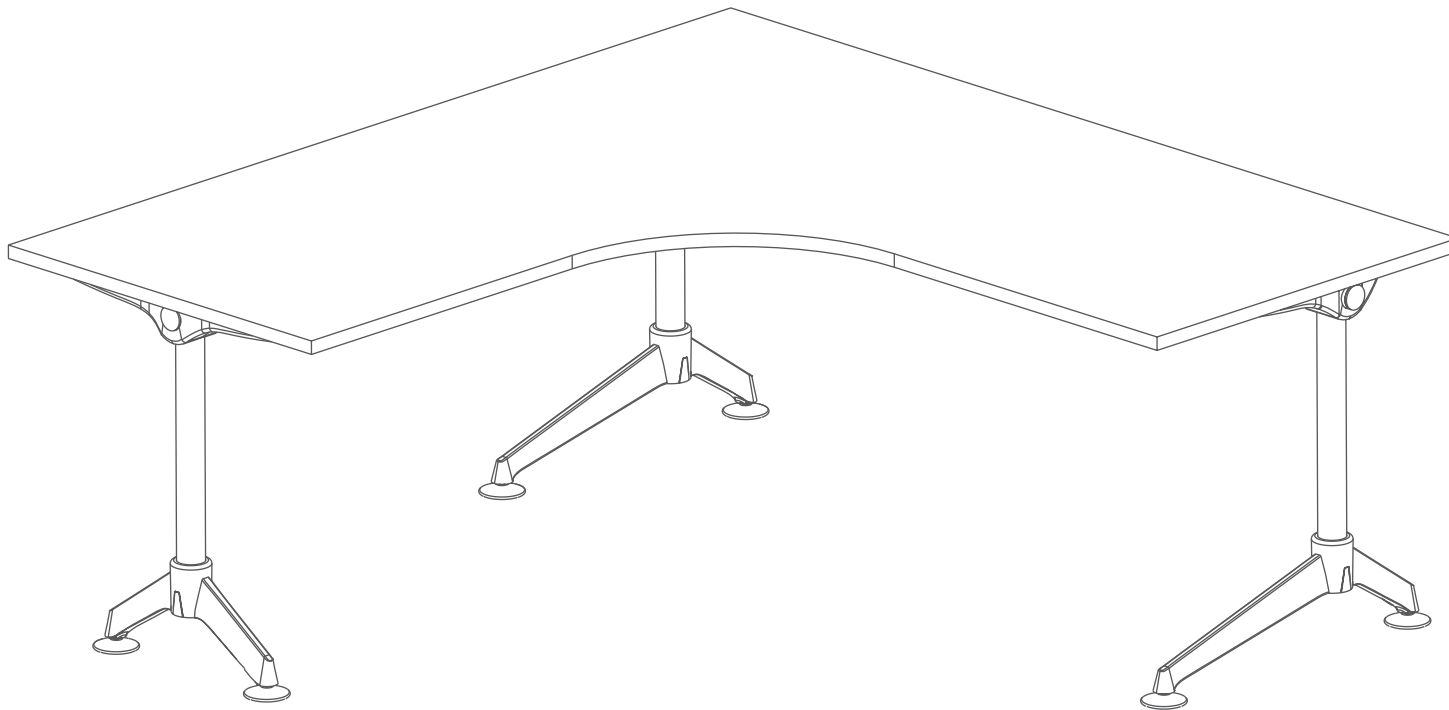



Sydney 02 8188 2732
Melbourne 03 9111 0315
Brisbane 07 3733 1923
Adelaide 08 7111 0810
Perth 08 9468 2707

info@olgoffice.com

myolg.online | olgoffice.com | officedesigner.net | motionoffice.com