

## AGILE DESKS

### Care and Maintenance

#### Annual Check

At least every 12 months, ensure all the mounting screws attaching table tops and all mechanisms (for flip tables) are still working correctly.

#### Top Care

Agile desks are supplied standard with melamine tops. Clean tops regularly by wiping them down with a damp cloth and a general purpose cleaner/detergent. For best results use streak free glass cleaner.

#### Stain and Mark Removal

- Stubborn marks or stains - apply Handy Andy or diluted Janola (1 part to 3 parts water), then wipe down with a warm damp cloth.
- Smearing, finger marks, marking from cold or hot dishes, stickiness - apply 1 or 2 applications of acetone (available at pharmacies) and wipe over with dry cloth.
- Felt pen or dry marker - use methylated spirits or acetone
- Paint - use acetone or thinners (from a paint shop)
- Glue - contact type - use Ados Solvent N (from a paint shop)

Follow on with streak free glass cleaner to remove any residues.

#### Frame Care

Keep the plastic and metal components of your table clean by wiping them down with a damp cloth and a general purpose cleaner/detergent. For best results use streak free glass cleaner.

## AGILE DESKS

### Directions for use

#### **IMPORTANT!**

Please carefully read the assembly manual and direction for use prior to instalment, use and maintenance of the table frame to gain a complete understanding of its contents. It provides you with important information about the safety, use, installation and maintenance of the table.

***WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.***

#### **SAFETY**

- The table must be used in a safe manner. Inappropriate use may cause damage to the table and/or cause bodily harm to the user or persons nearby.
- Do not tamper with electrical components as this may lead to serious bodily harm.
- Only connect the electric table frames to the prescribed mains power voltage.
- Do not use the table frame to lift people
- Please retain this operation manual and pass it on to any future owner.

#### **USAGE**


- The height-adjustable table is designed for use in dry work environments only.
- The table height is infinitely adjustable within its height range so that it can be set to the user's most ergonomic working height. The user should seek professional help to establish their optimum working height.
- The table has been designed as a devise to elevate the users work surface and associated office peripherals. Do not use the table frame for any other purposes than that which it has been designed for. Any other use is at user's own risk!
- Do not crawl, lie or move around under the table frame, and do not sit or stand on the table frame.
- CHILDREN should only use the table when supervised by adults.
- Liability: The manufacturer accepts under no circumstances warranty claims or liability claims for damages arising from improper use or handling of the table frame other than that described in this operation manual.

#### **SET UP AND INSTALLATION**

- Place the table in a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.
- Level the table with the adjustable feet ensuring that the table is stable
- Check that no cables can get jammed
- Connect the table to the 110 or 230 VAC power outlet.

## AGILE DESKS

### 2 Column Handset- Directions for use

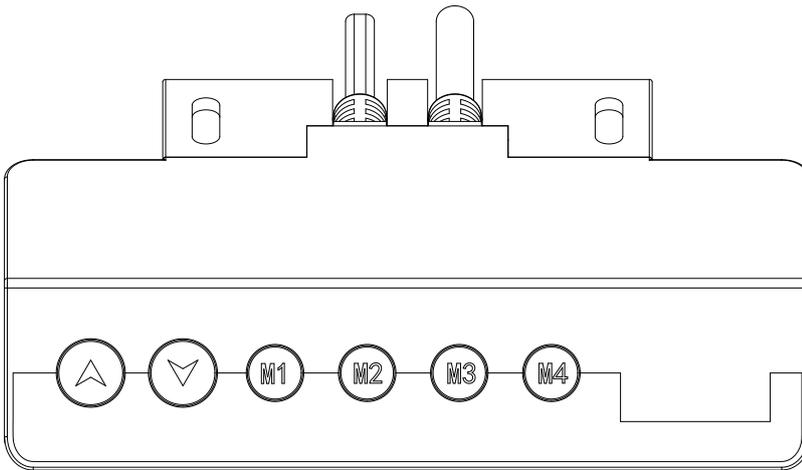

LCD Screen

M4 memory key.  
Adjust using  $\Delta$ / $\nabla$  keys. Press M4 for 5s to remember position

M3 memory key.  
Adjust using  $\Delta$ / $\nabla$  keys. Press M3 for 5s to remember position

M2 memory key.  
Adjust using  $\Delta$ / $\nabla$  keys. Press M2 for 5s to remember position

M1 memory key.  
Adjust height using  $\Delta$ / $\nabla$  keys. Press M1 for 5s to remember position

Down key.  
Press to move down. Release when desired position is reached

Up key.  
Press to move up. Release when desired position is reached